CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
CCD-TRV16E/TRV26E/TRV27E/TRV27EP/
TRV36E/TRV46E
RMT-708

SERVICE MANUAL

Self Diagnostics Supported model

Ver 1.0 1999.01

Photo : CCD-TR713E

Photo : CCD-TRV46E

Handycam
Handycam Vision™
Video 8 XR
video Hi8

B MECHANISM

AEP Model
UK Model
Russian Model
East European Model
North European Model
CCD-TR415E/TR425E/TR515E/TR713E
CCD-TRV26E/TRV27E/TRV36E/TRV46E

E Model
CCD-TR315E/TR516E
CCD-TRV16E/TRV27EP/TRV46E

Hong Kong Model
CCD-TR315E/TR516E
CCD-TRV16E/TRV46E

Australian Model
CCD-TR315E/TR516E
CCD-TRV16E/TRV46E

Chinese Model
CCD-TR315E/TR516E
CCD-TRV16E/TRV46E

Tourist Model
CCD-TR315E/TRV46E

PAL

For MECHANISM ADJUSTMENTS, refer to the "8mm Video MECHANICAL ADJUSTMENT MANUAL VII" (9-973-801-11).

SPECIFICATIONS

Video camera recorder
System

Video recording system
2 Rotary heads
Helical scanning FM system

Audio recording system
Rotary heads, FM system

Video signal
PAL color, CCIR standards

Usable cassette
8mm video format cassette
CCD-TR315E/TR415E/TR425E
CCD-TRV16E/TRV26E/TRV27E/
TRV27EP : standard 8

CCD-TR515E/TR516E/TR713E
CCD-TRV36E/TRV46E : Hi8

Recording / Playback time
(using 90 min. cassette)
SP mode: 1 hour and 30 minutes
LP mode: 3 hours

Fastforward/rewind time
(using 90 min. cassette)
Approx. 5 min.

Image device
1/4 inch CCD (Charge Coupled Device)
CCD-TR315E/TR415E/TR425E/
TR515E/TR516E
CCD-TRV16E/TRV26E/TRV27E/
TRV27EP/TRV36E : Approx. 320,000
pixels (Effective : approx 290,000 pixels)

CCD-TR713E
CCD-TRV46E : Approx. 380,000 pixels
(Effective : approx 230,000 pixels)

Viewfinder
Electronic viewfinder
CCD-TR315E/TR415E/TR425E/
TR515E/TR713E/TRV series :
Monochrome
CCD-TR516E : Color

Lens
Combined power zoom lens
Filter diameter 1 7/16 in. (37 mm)
CCD-TR415E : AEP*,UK
CCD-TRV26E : AEP*,UK
: 18 x (Optical), 36 x (Digital)

CCD-TR425E : AEP*,UK
TR515E : AEP*,UK
TR713E : AEP*,UK
CCD-TRV27E : AEP*,UK
TRV36E : AEP*,UK
TRV46E : AEP*,UK
: 18 x (Optical), 72 x (Digital)

CCD-TR315E
CCD-TRV16E
: 18 x (Optical), 180 x (Digital)

CCD-TR415E : AEP*,EE,NE.RU
CCD-TRV26E : AEP*,EE,NE.RU
: 18 x (Optical), 220 x (Digital)

CCD-TR425E : AEP*,EE,NE,RU
TR515E : AEP*,EE,NE,RU
TR516E
TR713E : AEP*,EE,NE,RU
CCD-TRV27E : AEP*,EE,NE,RU
TRV27EP
TRV36E : AEP*,EE,NE,RU
TRV46E : AEP*,E,EE,NE,RU,HK,
AUS,CN,JE
: 18 x (Optical), 330 x (Digital)
* There are two kinds of magnification of Digital Zoom only AEP model. Please make sure the magnification of your Handycam with reference to page 3.

Focal distance
3/16 - 8 in. (4.1 - 37.8 mm)
When converted to a 35 mm still camera
CCD-TR315E/TR415E/TR425E/
TR515E/TR516E
CCD-TRV16E/TRV26E/TRV27E/
TRV27EP/TRV36E
: 1 9/16 - 28 in. (39.4 - 709 mm)
CCD-TR713E
CCD-TRV46E
: 1 7/8 - 33 1/2 in. (47.2 - 850 mm)

— Continued on next page —

8 VIDEO CAMERA RECORDER
CCD-TR315E/TR415E/TR425E
CCD-TRV16E/TRV26E/TRV27E/TRV27EP
Hi 8 VIDEO CAMERA RECORDER
CCD-TR515E/TR516E/TR713E
CCD-TRV36E/TRV46E

MICROFILM

SONY®

Color temperature
Auto

Minimum illumination*
0.4 lux at F 1.4
0 lux (in NightShot mode)**

Illumination range
0.4 lux to 100,000 lux

Recommended illumination
More than 100 lux

* Minimum illumination expresses the light level a camcorder requires to produce a picture. Visible minimum low light expresses the light level to produce a visible signal.

**Object invisible for the dark can be shot with infrared lighting.

LCD screen (TRV series only)

Picture
2.5 inches measured diagonally
2 x 1 1/2 in.(50.3 x 37.4 mm)

On-screen display
TN LCD/TFT active matrix method

Total dot number
61,380 (279 x 220)

Input and output connectors

Video output
Phono jack, 1 Vp-p, 75 ohms, unbalanced

Audio output
Monaural, Phone jack, 327 mV
(at output impedance 47 kilohms)
impedance less than 2.2 kilohms

RFU DC OUT
Special minijack, DC 5V

Earphone jack (TRV series only)
Monaural minijack (ø 3.5 mm)

LANC control jack
Stereo mini-minijack (ø 2.5 mm)

MIC jack
Mini jack, 0.388mV low impedance with 2.5 to 3.0 V DC, output impedance 6.8 kilohms (ø 3.5 mm) : Monaural type

Speaker (TRV series only)
Dynamic speaker

General

Power requirements
7.2 V (battery pack)
8.4 V (AC power adaptor)

Average power consumption
(when using the battery pack)
During camera recording
CCD-TR516E : 2.4 W
CCD-TR315E/TR415E/TR425E/
TR515E : 2.5 W
CCD-TR713E : 2.6 W
During camera recording using
LCD
CCD-TRV16E/TRV26E/TRV27E/
TRV27EP/TRV36E : 3.1 W
CCD-TRV46E : 3.2 W
Viewfinder
CCD-TRV16E/TRV26E/TRV27E/
TRV27EP/TRV36E : 2.5 W
CCD-TRV46E : 2.6 W

Operating temperature
32°FC to 104°F (C0°C to 40°C)

Storage temperature
-4°FC to 140°F (-20°C to +60°C)

Dimensions (Approx.)
4 1/4 x 4 1/4 x 7 5/8 in.
107 x 107 x 193 mm)(w/h/d)

Mass (Approx.)
CCD-TR516E : 1 lb 11 oz (780 g)
CCD-TR315E : 1 lb 11 oz (790 g)
CCD-TR415E/TR425E/TR515E :
1 lb 12 oz (810 g)
CCD-TR713E : 1 lb 12 oz (820 g)
CCD-TRV16E/TRV27EP : 1 lb 14 oz (870 g)
CCD-TRV46E ; E,HK,AUS,CN,JE :
1 lb 15 oz (880 g)
CCD-TRV26E/TRV27E/TRV36E :
1 lb 15 oz (890 g)
CCD-TRV46E ;AEP,UK,EE,NE,RU :
1 lb 15 oz (900 g)
excluding the battery pack, lithium battery, cassette and shoulder strap
2 lb 3 oz (1 kg) (TRV series)
CCD-TR516E : 2 lb 1 oz (920g)
CCD-TR315E : 2 lb 1 oz (930g)
CCD-TR415E/TR425E/TR515E :
2 lb 1 oz (950g)
CCD-TR713E : 2 lb 1 oz (960g)
including the battery pack NP-F330, lithium battery CR2025, cassette and shoulder strap

Microphone
Monaural type

Supplied accessories
See page 4.

AC power adaptor

Power requirements
100 -240 V AC, 50/60 Hz

Power consumption
23 W

Output voltage
DC OUT: 8.4 V, 1.5 A in operating mode

Operating temperature
32°F to 104°F(0°C to 40°C)

Storage temperature
-4°F to +140°F(-20°C to +60°C)

Dimensions (Approx.)
5 x 1 9/16 x 2 1/2 in. (125 x 39 x 62 mm)(w/h/d) excluding projecting parts

Mass (Approx.)
9.8 oz (280 g) excluding power cord

Design and specifications are subject to change without notice.

• Abbreviation
East European model is abbreviated as EE.
North European model is abbreviated as NE.
Russian model is abbreviated as RU.
Hong Kong model is abbreviated as HK.
Australian model is abbreviated as AUS.
Chinese model is abbreviated as CN.
Tourist model is abbreviated as JE.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.

2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.

3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

6. Flexible Circuit board Repairing
   - Keep the temperature of the soldering iron around 270°C during repairing.
   - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
   - Be careful not to apply force on the conductor when soldering or unsoldering.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

Table for difference of function

Model	CCD-TR315E	CCD-TR415E	CCD-TR415E	CCD-TR425E	CCD-TR425E	CCD-TR515E	CCD-TR515E	CCD-TR516E	CCD-TR713E	CCD-TR713E	Remark
Destination	E,HK,AUS, CN,JE	AEP,UK	EE,NE,RU	AEP,UK	EE,NE,RU	AEP,UK	EE,NE,RU	E,HK,AUS, CN	AEP,UK	EE,NE,RU	
View finder	B/W	B/W	B/W	B/W	B/W	B/W	B/W	Color	B/W	B/W	
Remote commander (RMT-708)	×	×	×	O	O	O	O	O	O	O	
Hi8	×	×	×	×	×	O	O	O	O	O	
Standard 8	O	O	O	O	O	×	×	×	×	×	
Lens (Digital ZOOM)	180x	36x/220x	220x	72x/330x	330x	72x/330x	330x	330x	72x/330x	330x	**Note : Refer to lower figure.**
Video light	×	×	×	×	×	O	O	O	O	O	
Steady shot	×	×	×	×	×	×	×	×	O	O	O : with SE-80/81board SE451,452,IC451
Laser Link	×	×	×	×	×	×	×	×	O	O	O : with VC-215 board IC751
LCD panel	×	×	×	×	×	×	×	×	×	×	2.5 inch : TRV series only

Model	CCD-TRV16E	CCD-TRV26E	CCD-TRV26E	CCD-TRV27E	CCD-TRV27E	CCD-TRV27EP	CCD-TRV36E	CCD-TRV36E	CCD-TRV46E	CCD-TRV46E	Remark
Destination	E,HK,AUS, CN	AEP,UK	EE,NE,RU	AEP,UK	EE,NE,RU	E	AEP,UK	EE,NE,RU	AEP,UK	E,EE,NE,RU HK,AUS,CN,JE	
View finder	B/W	B/W	B/W	B/W	B/W	B/W	B/W	B/W	B/W	B/W	
Remote commander (RMT-708)	×	×	×	O	O	O	O	O	O	O	
Hi8	×	×	×	×	×	×	O	O	O	O	
Standard 8	O	O	O	O	O	O	×	×	×	×	
Lens (Digital ZOOM)	180x	36x/220x	220x	72x/330x	330x	330x	72x/330x	330x	72x/330x	330x	**Note : Refer to lower figure.**
Video light	×	×	×	×	×	×	O	O	O	O	
Steady shot	×	×	×	×	×	×	×	×	O	O	O : with SE-80/81board SE451,452,IC451
Laser Link	×	×	×	×	×	×	×	×	O	O	O : with VC-215board IC751
LCD panel	2.5 inch	2.5 inch	2.5 inch	2.5 inch	2.5 inch	2.5 inch	2.5 inch	2.5 inch	2.5 inch	2.5 inch	2.5 inch : TRV series only

• Abbreviation
East European model is abbreviated as EE.
North European model is abbreviated as NE.
Russian model is abbreviated as RU.
Hong Kong model is abbreviated as HK.
Australian model is abbreviated as AUS.
Chinese model is abbreviated as CN.
Tourist model is abbreviated as JE.

About the magnification display of section

There are two kinds of magnification of Digital zoom only for the AEP model. Please make sure the magnification of your Handycam with reference to the right figure.

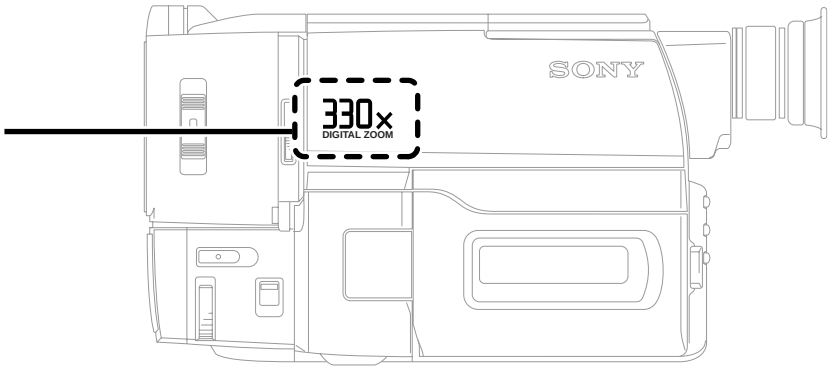

Supplied accessories

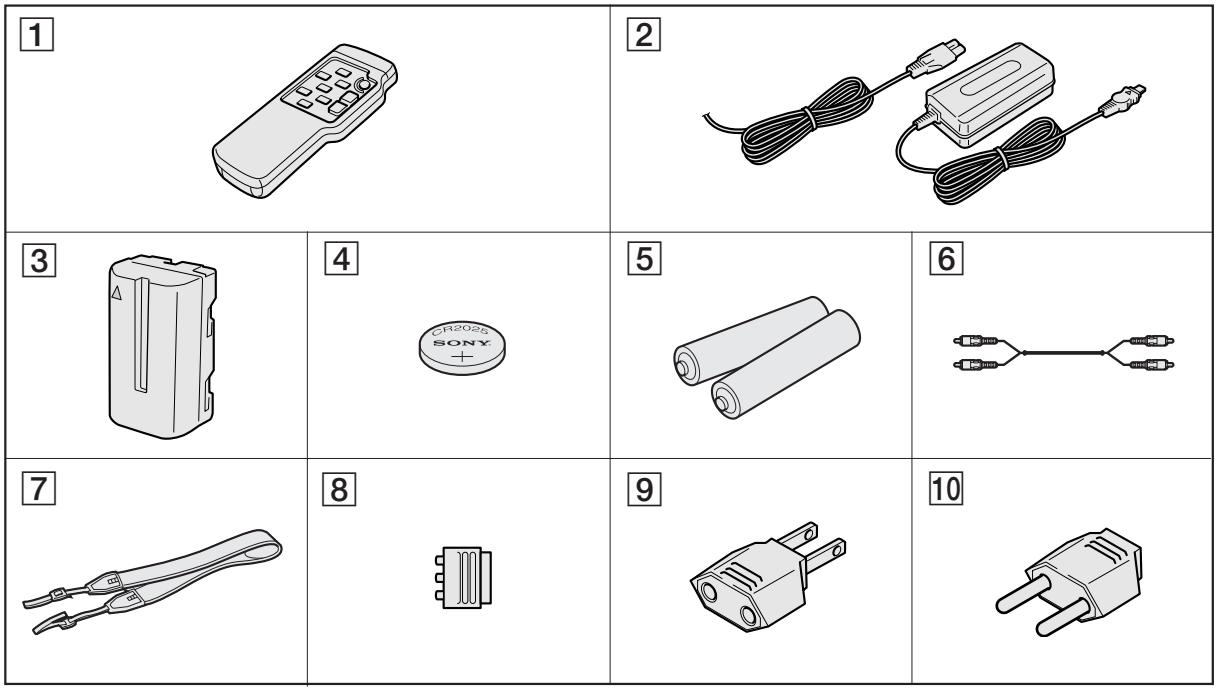

1 **RMT-708 Wireless Remote Commander (1)**
CCD-TR425E/TR515E/TR516E/TR713E
CCD-TRV27E/TRV27EP/TRV36E/TRV46E

2 **AC-L10A/L10B/L10C AC power adaptor**

3 **NP-F330 Battery pack (1)**

4 **CR2025 Lithium Battery (1)**
The lithium battery is already installed in your camcorder.

5 **Size AA (R6) battery for Remote Commander (2)**
CCD-TR425E/TR515E/TR516E/TR713E
CCD-TRV27E/TRV27EP/TRV36E/TRV46E

6 **A / V connecting cable (1)**

7 **Shoulder strap (1)**

8 **21 pin adaptor (1)**
CCD- TR415E/TR425E/TR515E/TR713E
CCD- TRV26E/TRV27E/TRV36E
TRV46E:AEP,UK,EE,NE,RU

9 **2 pin conversion adaptor (1)**
CCD- TR315E:E,HK/TR516E:E,HK
CCD- TRV16E:E,HK/TRV27EP/TRV46E:E,HK

10 **2 pin conversion adaptor (1)**
CCD- TR315E:JE
CCD- TRV46E:JE

• Abbreviation
East European model is abbreviated as EE.
North European model is abbreviated as NE.
Russian model is abbreviated as RU.
Hong Kong model is abbreviated as HK.
Tourist model is abbreviated as JE.

SERVICE NOTE

1. POWER SUPPLY DURING REPAIRS

In this unit, about 10 seconds after power is supplied (8.4V) to the battery terminal using the service power cord (J-6082-223-A), the power is shut off so that the unit cannot operate.
This following three methods are available to prevent this. Take note of which to use during repairs.

Method 1.
Connect the servicing remote commander RM-95 (J-6082-053-B) to the LANC jack, and set the remote commander switch to the "ADJ" side.

Method 2.
Press the battery switch of the battery terminal using adhesive tape, etc.

Method 3.
Use the DC IN terminal. (Use the AC power adaptor.)

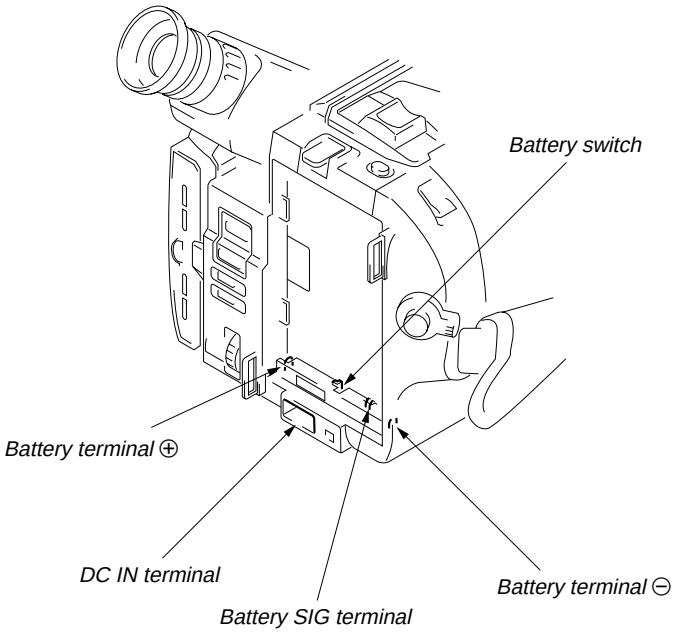

2. TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT)

① Refer to 2-1. to remove the front panel block.
② Refer to 2-4. to remove the cabinet (R) assembly.
③ Refer to 2-6. to remove the battery panel block.
④ Refer to 2-7. to remove the cabinet (L) block.
⑤ Add +5V from the DC POWER SUPPLY and unload with a pressing the cassette lid.

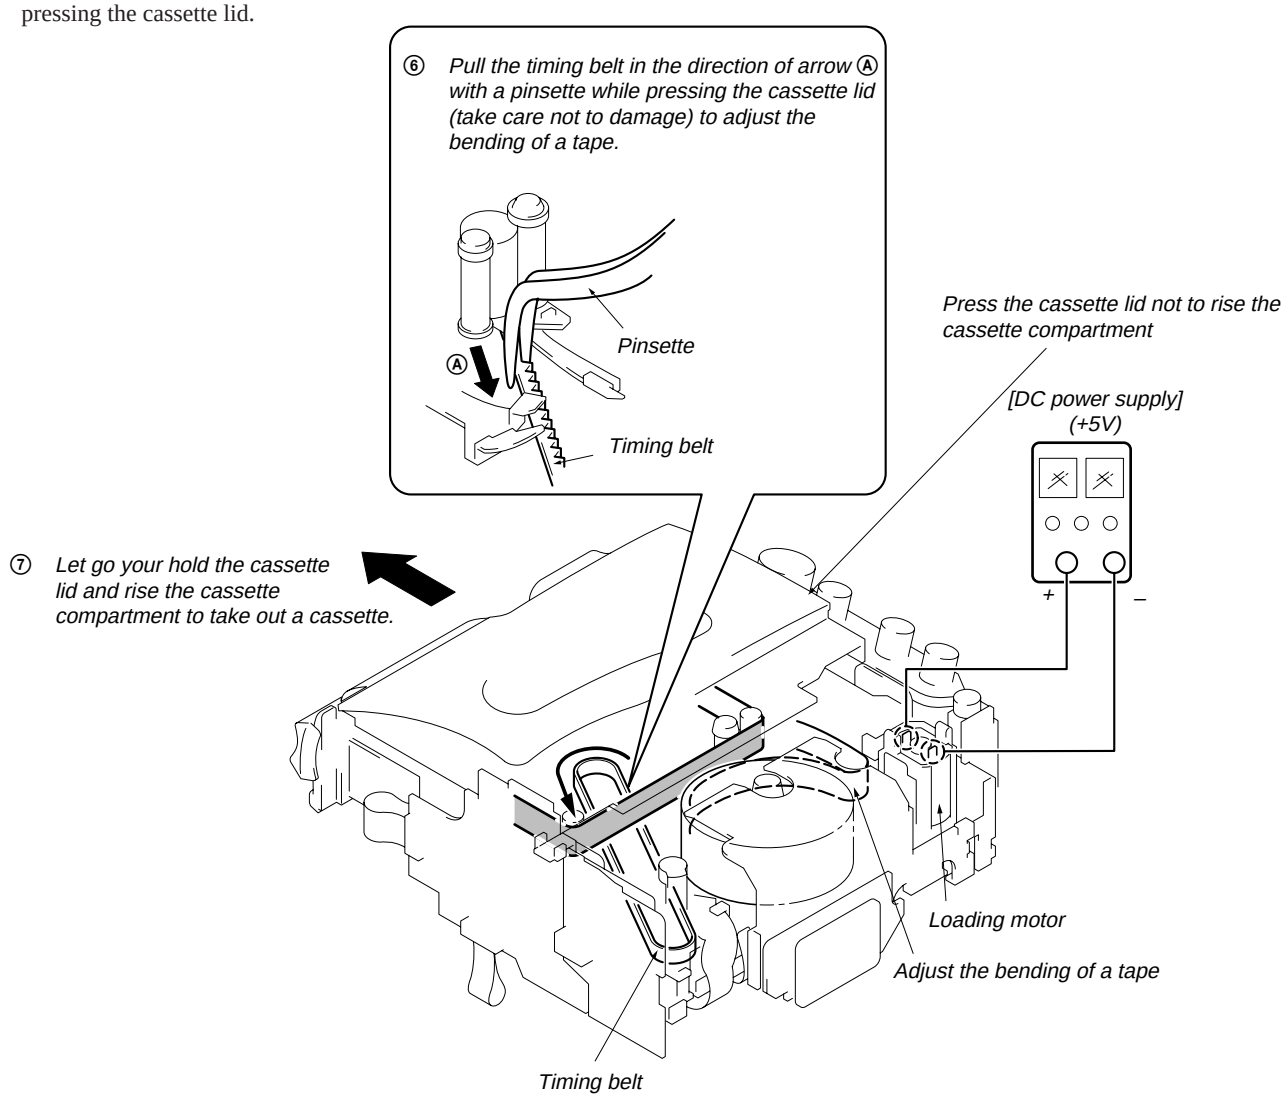
⑥ Pull the timing belt in the direction of arrow Ⓐ with a pinsette while pressing the cassette lid (take care not to damage) to adjust the bending of a tape.
Pinsette
Ⓐ
Timing belt
Press the cassette lid not to rise the cassette compartment
[DC power supply]
(+5V)
+
–
⑦ Let go your hold the cassette lid and rise the cassette compartment to take out a cassette.
Loading motor
Adjust the bending of a tape
Timing belt

SELF-DIAGNOSIS FUNCTION

1. Self-diagnosis Function

When problems occur while the unit is operating, the self-diagnosis function starts working, and displays on the viewfinder or Display window what to do. This function consists of two display; self-diagnosis display and service mode display.
Details of the self-diagnosis functions are provided in the Instruction manual.

2. Self-diagnosis display

When problems occur while the unit is operating, the counter of the viewfinder or Display window shows a 4-digit display consisting of an alphabet and numbers, which blinks at 3.2 Hz. This 5-character display indicates the "repaired by:", "block" in which the problem occurred, and "detailed code" of the problem.

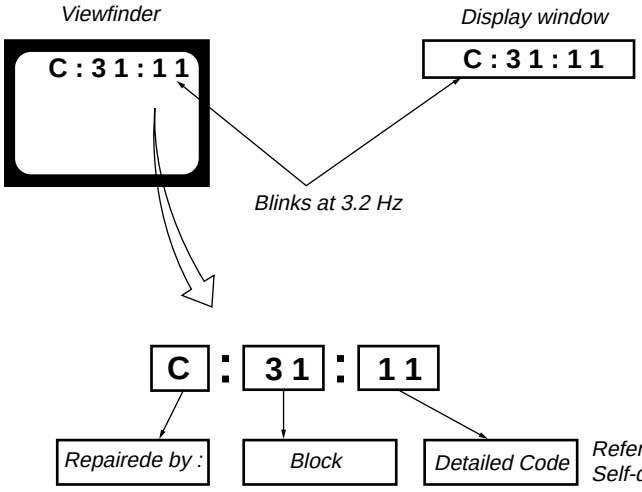

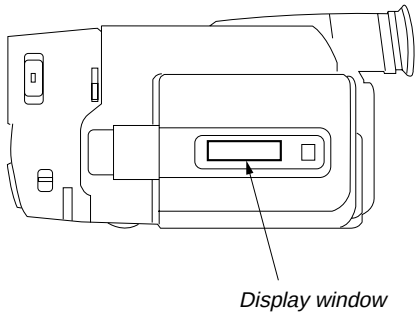

C : Corrected by customer
H : Corrected by dealer
E : Corrected by service engineer

Indicates the appropriate step to be taken
E. g.
31 ... Reload the tape.
32 ... Turn on power again.

3. Service Mode Display

The service mode display shows up to six self-diagnosis codes shown in the past.

3-1. Display Method

While pressing the "STOP" key, set the switch from OFF to "VTR or PLAYER", and continue pressing the "STOP" key for 5 seconds continuously. The service mode will be displayed, and the counter will show the backup No. and the 5-character self-diagnosis codes.

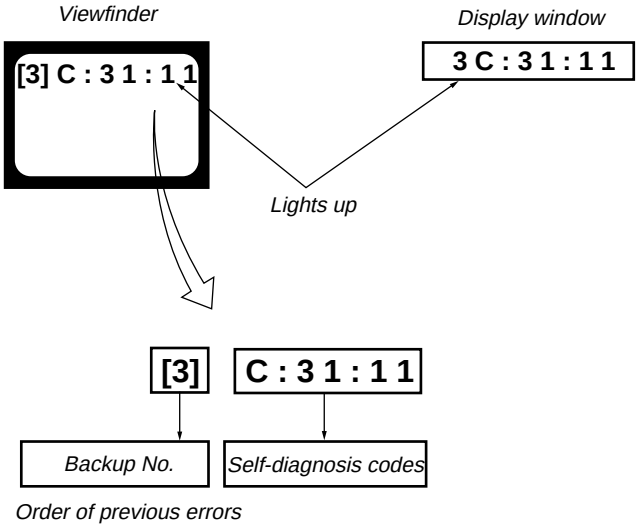

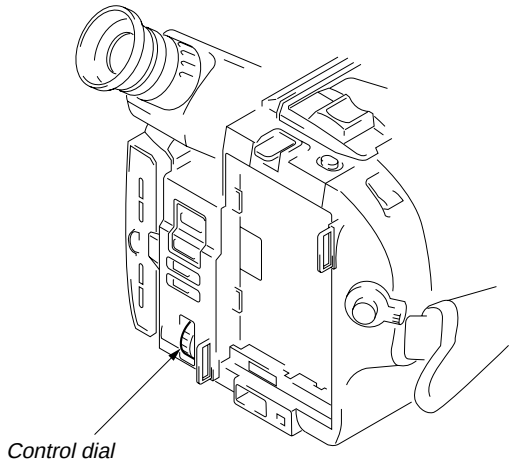

3-2. Switching of Backup No.

By rotating the control dial, past self-diagnosis codes will be shown in order. The backup No. in the [] indicates the order in which the problem occurred. (If the number of problems which occurred is less than 6, only the number of problems which occurred will be shown.)

[1] : Occurred first time
[2] : Occurred second time
[3] : Occurred third time
[4] : Occurred fourth time
[5] : Occurred fifth time
[6] : Occurred the last time

3-3. End of Display

Turning OFF the power supply will end the service mode display.

Note: The self-diagnosis display data will be backed up by the coin-type lithium battery. When this coin-type lithium battery is disconnected, the self-diagnosis data will be lost by initialization.

4. Self-diagnosis Code Table

Self-diagnosis Code					Symptom/State	Correction
Repaired by:	Block Function		Detailed Code			
C	2	1	0	0	Condensation.	Remove the cassette, and insert it again after one hour.
C	2	2	0	0	Video head is dirty.	Clean with the optional cleaning cassette.
C	2	3	0	0	Non-standard battery is used.	Use the InfoLITHIUM battery.
C	3	1	1	0	LOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
C	3	1	1	1	UNLOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
C	3	1	2	0	T reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
C	3	1	2	1	S reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
C	3	1	2	2	T reel fault	Load the tape again, and perform operations from the beginning.
C	3	1	2	3	S reel fault	Load the tape again, and perform operations from the beginning.
C	3	1	3	0	FG fault when starting capstan	Load the tape again, and perform operations from the beginning.
C	3	1	3	1	FG fault during normal capstan operations	Load the tape again, and perform operations from the beginning.
C	3	1	4	0	FG fault when starting drum	Load the tape again, and perform operations from the beginning.
C	3	1	4	1	PG fault when starting drum	Load the tape again, and perform operations from the beginning.
C	3	1	4	2	FG fault during normal drum operations	Load the tape again, and perform operations from the beginning.
C	3	1	4	3	PG fault during normal drum operations	Load the tape again, and perform operations from the beginning.
C	3	1	4	4	Phase fault during normal drum operations	Load the tape again, and perform operations from the beginning.
C	3	2	1	0	LOAD direction loading motor time-out	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	1	1	UNLOAD direction loading motor time-out	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	2	0	T reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	2	1	S reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	2	2	T reel fault	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	2	3	S reel fault	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	3	0	FG fault when starting capstan	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	3	1	FG fault during normal capstan operations	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	4	0	FG fault when starting drum	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	4	1	PG fault when starting drum	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	4	2	FG fault during normal drum operations	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	4	3	PG fault during normal drum operations	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3	2	4	4	Phase fault during normal drum operations	Remove the battery or power cable, connect, and perform operations from the beginning.
E	6	1	0	0	Difficult to adjust focus (Cannot initialize focus.)	Inspect the lens block focus reset sensor (Pin ⑲ of CN551 of VC-215 board) when focusing is performed when the focus dial is rotated in the focus manual mode and the focus motor drive circuit (IC552 of VC-215 board) when the focusing is not performed. Note : Use the remote commander RM-95 only for the model without the focus dial.
E	6	1	1	0	Zoom operations fault (Cannot initialize zoom lens.)	Inspect the lens block zoom reset sensor (Pin ㉑ of CN551 of VC-215 board) when zooming is performed when the zoom lens is operated and the zoom motor drive circuit (IC552 of VC215 board) when zooming is not performed.
E	6	2	0	0	Handshake correction function does not work well.(With pitch angular velocity sensor output stopped)	Inspect yaw angular velocity sensor (SE451 of SE-80/81 board) peripheral circuits.
E	6	2	0	1	Handshake correction function does not work well.(With yaw angular velocity sensor output stopped)	Inspect pitch angular velocity sensor (SE452 of SE-80/81 board) peripheral circuits.

TABLE OF CONTENTS

SERVICE NOTE

1. Power Supply During Repairs 5
2. To Take out a Cassette when not Eject (Force Eject) 5

Self-Diagnosis Function

1. Self-diagnosis Function 6
2. Self-diagnosis Display 6
3. Service Mode Display 6
   3-1. Display Method 6
   3-2. Switching of Backup No. 6
   3-3. End of Display 6
4. Self-diagnosis Code Table 7

1. GENERAL

This section is extacked from instruction manual of CCD-TRV16E/TRV27E/TRV46E.

Using this Manual 1-1
Checking Supplied Accessories 1-1
Installing and Charging the Battery Pack 1-1
Inserting a Cassette 1-3
Camera Recording 1-3
Hints for Better Shooting 1-5
Checking the Recorded Picture 1-5
Playing Back a Tape 1-6
Searching for the End of the Picture 1-7
Using Alternative Power Sources 1-7
Changing the Mode Settings 1-7
Shooting with Backlighting 1-9
Using the FADER Function 1-9
Shooting in the Dark (NightShot) 1-10
Using the Wide Mode Function 1-10
Using the PROGRAM AE Function 1-11
Focusing Manually 1-11
Enjoying Picture Effect 1-12
Adjusting the Exposure 1-12
Superimposing a Title 1-13
Making your own Titles 1-13
Recording with the Date/Time 1-14
Optimizing the Recording Condition 1-14
Using the Built-in Light 1-14
Releasing the STEADYSHOT Function 1-15
Watching on a TV Screen 1-15
Editing onto Another Tape 1-16
Changing the Lithium Battery in the Camcoder 1-16
Resetting the Date and Time 1-16
Simple Setting of Clock by Time Difference 1-17
Usable Cassettes and Playback Modes 1-17
Tips for Using the Battery Pack 1-17
Maintenance Information and Precautions 1-18
Using your Camcorder Abroad 1-20
Trouble Check 1-20
Self-Diagnosis Display 1-22
Identifying the Parts 1-22
Warning Indicators 1-25

2. DISASSEMBLY

2-1. Removal of Front Panel Block and Video Light Block 2-1
2-2. Removal of LB-54, VF-119 and VF-120 Boards (Color View Finder Models) 2-2
2-3. Removal of VF-99 Board and CRT Assembly (B/W View Finder Models) 2-2
2-4. Removal of Cabinet (R) Block 2-3
2-5. Removal of Cassette Lid Assembly 2-3
2-6. Removal of Battery Panel Block 2-3
2-7. Removal of Cabinet (L) Block 2-4
2-8. Removal of Control Switch Block (FK-8500) 2-4
2-9. Removal of Zoom Lens Block and VL-20/21 Board 2-4
2-10. Removal of VC-215, SE-80/81, DD-117 and PJ-90/91 Boards 2-5
2-11. Removal of View Finder Block 2-5
2-12. Removal of TR Cover, CF-60 Board and Display Panel (TR series) 2-6
2-13. Removal of IR Cover, CF-61 Board and LCD Panel (TRV series) 2-6
2-14. Service Position 2-7
2-15. Circuit Boards Location 2-8
2-16. Flexible Boards and Flat Cables Location 2-8

3. BLOCK DIAGRAMS

3-1. Overall Block Diagram 3-1
3-2. Camera/Video 1 Block Diagram 3-5
3-3. VTR/Camera Control Block Diagram 3-9
3-4. Servo Block Diagram 3-12
3-5. Mode Control Block Diagram 3-15
3-6. Audio Block Diagram 3-19
3-7. LCD Block Diagram (TRV series) 3-23
3-8. Color EVF Block Diagram (Color EVF model) 3-26
3-9. B/W EVF Block Diagram (B/W EVF model) 3-29
3-10. Power Block Diagram 3-33

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. Frame Schematic Diagram (1) 4-1
• Frame Schematic Diagram (2) 4-4
4-2. Printed Wiring Boards and Schematic Diagrams 4-7
• CD-210/211 (CCD Imager) Board 4-8
• VC-215 (Camera, Y/C Processor, IN/OUT, REC/PB Head Amp, Servo/System Control, Servo, Audio, IR Transmitter, Mode Control) Board 4-10
• VC-215 (Camera 1) Board 4-17
• VC-215 (Camera 2) Board 4-19
• VC-215 (Y/C Processor) Board 4-23
• VC-215 (IN/OUT) Board 4-27
• VC-215 (REC/PB Head Amp) Board 4-31
• VC-215 (Servo/System Control) Board 4-35
• VC-215 (Servo) Board 4-38
• VC-215 (Audio) Board 4-41
• VL-20/21 (Video Light) Board (Video Light model) 4-45
• VC-215 (IR Transmitter) Board 4-46
• VC-215 (Mode Control) Board 4-49
• SE-80/81 (Steady Shot) Board (TR713E & TRV series) . 4-52
• PJ-90/91 (AV OUT) Board 4-55
• MA-345/346 (Mic, Laser Link) Board 4-59
• CF-60 (Control (TR series)) Board 4-65
• CF-61 (Control (TRV series)) Board 4-72
• Control Switch Block (FK-8500/SS-8500) 4-79
• PD-107 (RGB Decorder, LCD Drive, Back Light, LCD (TRV series)) Board 4-81
• PD-107 (RGB Decorder (TRV series)) Board 4-83
• PD-107 (LCD Drive (TRV series)) Board 4-86
• PD-107 (Back Light (TRV series)) Board 4-89
• PD-107 (LCD (TRV series)) Board 4-90
• VF-99 (B/W EVF (B/W EVF Model)) Board 4-92
• VF-119 (COLOR EVF (COLOR EVF Model)) Board 4-95
• VF-120 (COLOR EVF (COLOR EVF Model)) Board 4-100
• LB-54 (Back Light (Color EVF model)) Board 4-102
• DD-117 (Power) Board 4-109

5. ADJUSTMENTS

5-1. Camera Section Adjustments 5-1
1-1. Preparations before Adjustment (Camera Section) 5-1
1-1-1. List of Service Tools 5-1
1-1-2. Adjusting Items when Repacing Main Parts 5-2
1-1-3. Preparations 5-3
1-1-4. Precautions 5-6
1. Setting the Switch 5-6
2. Adjusting Procedure 5-6
3. Subject 5-6
1-1-5. Adjusting Remote Commander 5-7
1. Using the Adjusting Remote Commander 5-7
2. Precautions Upon Using the Adjusting Remote Commander 5-7
1-1-6. Data Processing 5-8
1-2. Initialization of D, E, F Page Data 5-9
1. Initializing the D, E, F Page Data 5-9
2. Modification of D, E, F Page Data 5-9
3. D Page Table 5-10
4. F Page Table 5-11
5. E Page Table 5-13
1-3. Camera System Adjustments 5-15
1. G-CAM Flip Adjustment 5-15
2. Hall Adjustment 5-16
3. Flange Back Adjustment 5-17
3-1. Flange Back Adjustment (1) 5-17
3-2. Flange Back Adjustment (2) 5-17
4. Flange Back Check 5-18
5. Picture Frame Setting 5-18
6. Color Reproduction Adjustment 5-19
7. IRIS IN/OUT Adjustment 5-20
8. MAX GAIN Adjustment 5-20
9. Auto White Balance Standard Data Input 5-21
10. Auto White Balance Adjustment 5-21
11. White Balance Check 5-22
12. Angular Velocity Sensor Sensitivity Check (CCD-TR713E/TRV46E) 5-23
1-4. Color Electronic Viewfinder System Adjustments (CCD-TR516E) 5-24
1. EVF Initial Data Input 5-24
2. VCO Adjustment (VF-119 board) 5-25
3. Bright Adjustment (VF-119 board) 5-25
4. Contrast Adjustment (VF-119 board) 5-26
5. Backlight Consumption Current Adjustment (VF-120 board) 5-26
6. White Balance Adjustment (VF-119 board) 5-26
1-5. Monochrome Electronic Viewfinder System Adjustments (B/W EVF model) 5-27
1-5-1. Horizontal Slant Check 5-27
1-5-2. Centering Adjustment 5-27
1-5-3. Focus Adjustment 5-27
1-5-4. Aberration Adjustment 5-28
1-5-5. Horizontal Amplitude Adjustment (VF-99 board) .. 5-28
1-5-6. Vertical Amplitude Adjustment (VF-99 board) 5-29
1-5-7. Brightness Adjustments (VF-99 board) 5-29
1-5-8. Horizontal Amplitude, Vertical Amplitude, Focus Check 5-29
1-6. LCD System Adjustment (TRV series) 5-30
1. LCD Initial Data Input 5-30
2. VCO Adjustment (PD-107 board) 5-31
3. D Range Adjustment (PD-107 board) 5-31
4. Bright Adjustment (PD-107 board) 5-32
5. Contrast Adjustment (PD-107 board) 5-32
6. V-COM Level Adjustment (PD-107 board) 5-33
7. Color Adjustment (PD-107 board) 5-33
8. V-COM Adjustment (PD-107 board) 5-34
9. White Balance Adjustment (PD-107 board) 5-34

5-2. Mechanical Section Adjustment 5-35
2-1. Operating without a Cassette 5-35
2-2. Tape Path Adjustment 5-35
1. Preparations for Adjustments 5-35

5-3. Video Section Adjustment 5-36
3-1. Preparations before Adjustment 5-36
3-1-1. Equipments to be Used 5-36
3-1-2. Precautions on Adjusting 5-37
3-1-3. Adjusting Connectors 5-37
3-1-4. Connecting the Equipments 5-38
3-1-5. Alignment Tape 5-38
3-1-6. Input/Output Level and Impedance 5-40
3-1-7. Recording Mode (Standard 8/Hi8) Switching (Hi8 model) 5-40
3-1-8. Service Mode 5-40
1. Test Mode Setting 5-40
2. Emergency Memory Address 5-41
2-1. EMG CODE (Emergency Code) 5-41
2-2. MSW Codes 5-42
3. Bit Value Discrimination 5-43
4. Switch Check (1) 5-43
5. Switch Check (2) 5-44
6. Headphone Jack Check 5-44
7. Input/Output Selection Check 5-44
8. LED, LCD (Display Window) Check 5-45
9. Record of Use Check 5-45
3-2. System Control System Adjustment 5-46
1. Initialization of D, E, F Page Data 5-46
2. Battery End Adjustment (VC-215 board) 5-46
3-3. Servo System Adjustments 5-47
1. CAP FG Offset Adjustment (VC-215 board) 5-47
2. RF Switching Position Adjustment (VC-215 board) 5-47
3-4. Video System Adjustments 5-48
1. 28 MHz Origin Oscillation Adjustment (VC-215 board) 5-48
2. AFC f0 Adjustment (VC-215 board) 5-48
3. Filter f0 Adjustment (VC-215 board) 5-49
4. Y OUT Level Adjustment (VC-215 board) 5-49
5. C OUT Level Adjustment (VC-215 board) 5-50
6. RP Filter f0 Adjustment (VC-215 board) 5-50
7. Hi8 REC Y Current Adjustment (VC-215 board) (CCD-TR515E/TR516E/TR713E CCD-TRV36E/TRV46E) 5-51
8. Standerd8 REC Y Current Adjustment (VC-215 board) (CCD-TR315E/TR415E/TR425E CCD-TRV16E/TRV26E/TRV27E/TRV27EP) 5-52
9. Hi8 REC L Level Adjustment (VC-215 board) (CCD-TR515E/TR516E/TR713E CCD-TRV36E/TRV46E) 5-53
10. Standard8 REC L Level Adjustment (VC-215 board) (CCD-TR315E/TR415E/TR425E CCD-TRV16E/TRV26E/TRV27E/TRV27EP) 5-54
11. REC C Current Adjustment (VC-215 board) 5-55
3-5. IR Transmitter Adjustments (CCD-TR713E/TRV46E) 5-56
1. IR Video Carrier Frequency Adjustment (VC-215 board) 5-56
2. IR Video Deviation Adjustment (VC-215 board) 5-56
3. IR Audio Deviation Adjustment (VC-215 board) 5-57
3-6. Audio System Adjustment 5-58
1. 1.5 MHz Deviation Adjustment (VC-215 board) 5-58
2. BPF Adjustment (VC-215 board) 5-58
3-7. Arrangement Diagram for Adjustment Parts 5-60

6. REPAIR PARTS LIST

6-1. Exploded Views 6-1
6-1-1. Remote Commander and Cassette Lid Assembly 6-1
6-1-2. Cabinet (L) and Battery Panel Assembly 6-2
6-1-3. Front Panel Block Assembly 6-3
6-1-4. Cabinet (R) Block Assembly (TR series) 6-4
6-1-5. Cabinet (R) Block Assembly (TRV series) 6-5
6-1-6. Main Boards Block Assembly 6-6
6-1-7. Clolor EVF Block Assembly (CCD-TR516E) 6-7
6-1-8. B/W EVF Block Assembly (CCD-TR315E/TR415E/TR425E/TR515E/TR713E S and TRV series) 6-8
6-1-9. LCD Block Assembly (TRV series) 6-9
6-1-10. Zoom Lens Block Assembly 6-10
6-1-11. Cassette Compartment Assembly 6-11
6-1-12. LS Chassis Assembly 6-12
6-1-13. Mechanism Chassis Assembly 6-13
6-2. Electrical Parts List 6-14

SECTION 1
GENERAL

This section is extracted from instruction manual of CCD-TRV16E/TRV27E/TRV46E.

Before you begin

Using this manual

The instructions in this manual are for the three models listed below. Before you start reading this manual and operating the unit, check your model number by looking at the bottom of your camcorder. The CCD-TRV46E is the model used for illustration purposes. Otherwise, the model name is indicated in the illustrations. Any differences in operation are clearly indicated in the text, for example, "CCD-TRV46E only."
As you read through this manual, buttons and settings on the camcorder are shown in capital letters.
e.g. Set the POWER switch to CAMERA.
You can hear the beep sound to confirm your operation.

Перед началом эксплуатации

Использование данного руководства

Инструкции в данном руководстве касаются трех нижеперечисленных моделей. Перед тем, как Вы начнете читать данное руководство и эксплуатировать аппарат, проверьте номер Вашей модели, посмотрев на нижнюю панель Вашей видеокамеры. Модель CCD-TRV46E используется в иллюстративных целях. В противном случае наименование модели указывается на рисунках. Любые различия в работе четко указаны в тексте, как например, "Только CCD-TRV46E".
Когда Вы будете читать данное руководство, учитывайте, что кнопки и установки на видеокамере показаны в тексте прописными буквами.
Прим. Установите выключатель POWER в положение CAMERA.
Вы можете слышать зуммерный звуковой сигнал, подтверждающий выполнение соответствующей операции.

Types of differences

Типы различий

CCD-	TRV16E	TRV27E	TRV46E
System/ Система	8	8	Hi8
Digital zoom/ Цифровой трансфокатор	180×	330×	330×
SteadyShot/ Устойчивая съемка	—		●
Remote sensor/ Датчик дистанционного управления	—	●	●
Laser link/ ИК аудио/видеоприемник	—	—	●
Built-in light/ Встроенная подсветка			●

Using this manual

Использование данного руководства

Note on TV colour systems

TV colour systems differ from country to country. To view your recordings on a TV, you need a PAL system-based TV.

Precaution on copyright

Television programmes, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright laws.

Precautions on camcorder care

- **The LCD screen is manufactured using high-precision technology. However, there may be some tiny black points and/or bright points (red, blue or green in colour) that constantly appear on the LCD screen. These points are normal in the manufacturing process and do not affect the recorded picture in any way. Over 99.99% are operational for effective use.**
- Do not let the camcorder get wet. Keep the camcorder away from rain and sea water. Letting the camcorder get wet may cause the unit to malfunction, and sometimes this malfunction cannot be repaired **[a]**.
- Never leave the camcorder exposed to temperatures above 60°C, such as in a car parked in the sun or under direct sunlight **[b]**.

Примечание к системам цветного телевидения

Системы цветного телевидения отличаются в зависимости от страны. Для просмотра Ваших записей по телевизору Вам необходимо использовать телевизор, основанный на системе PAL.

Предостережение об авторском праве

Телевизионные программы, кинофильмы, видеоленты и другие материалы могут быть защищены авторским правом. Неправомочная запись таких материалов может противоречить условиям закона об авторском праве.

Предосторожности по уходу за видеокамерой

- **Дисплей на жидких кристаллах изготовлен с применением высокопрецизионной технологии. Тем не менее на нем в отдельных местах могут постоянно появляться маленькие черные точки и/или яркие цветные точки (красные, синие или зеленые). Наличие этих точек — нормальный результат производственного процесса, и оно никоим образом не сказывается на качестве записываемого изображения. Свыше 99,99% поверхности дисплея пригодны для эффективной эксплуатации.**
- Не позволяйте видеокамере намокать. Предохраняйте видеокамеру от дождя или морской воды. Если Вы намочите видеокамеру, то это может вызвать неисправность аппарата, и в некоторых случаях эта неисправность не подлежит ремонту **[a]**.
- Никогда не оставляйте видеокамеру в месте с температурой свыше 60°C, как например, в автомобиле, оставленном на солнце или под прямыми солнечными лучами **[b]**

[a]

[b]

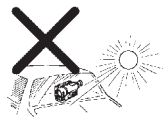

Checking supplied accessories

Проверка прилагаемых принадлежностей

Check that the following accessories are supplied with your camcorder.

Проверьте, что следующие принадлежности прилагаются к Вашей видеокамере.

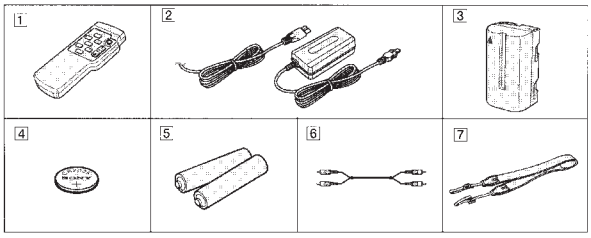

1 **Wireless Remote Commander** (1) (p. 98)
CCD-TRV27L/TRV46L only
2 **AC-L10A/L10B/L10C AC power adaptor** (1), **Mains lead** (1) (p. 9, 31)
3 **NP-F330 battery pack** (1) (p. 8, 30)
4 **CR2025 lithium battery** (1) (p. 66)
The lithium battery is already installed in your camcorder.
5 **R6 (size AA) battery for Remote Commander** (2) (p. 99)
CCD-TRV27L/TRV46L only
6 **A/V connecting cable** (1) (p. 63)
7 **Shoulder strap** (1) (p. 100)

Contents of the recording cannot be compensated if recording or playback is not made due to a malfunction of the camcorder, video tape, etc.

1 **Беспроводный пульт дистанционного управления** (1) (стр. 98)
Только CCD-TRV27E/TRV46E
2 **Сетевой адаптер перем. тока AC-L10A/L10B/L10C** (1), **Сетевой провод** (1) (стр. 9, 31)
3 **Батарейный блок NP-F330** (1) (стр. 8, 30)
4 **Литиевая батарейка CR2025** (1) (стр. 66)
Литиевая батарейка уже установлена в Вашей видеокамере.
5 **Батарейка R6 (размером AA) для пульта дистанционного управления** (2) (стр. 99)
Только CCD-TRV27E/TRV46E
6 **Соединительный кабель аудио/видео** (1) (стр. 63)
7 **Плечевой ремень** (1) (стр. 100)

Содержимое записи не может быть компенсировано, если запись или воспроизведение не выполняется вследствие повреждения видеокамеры, видеоленты и т.д.

Getting started

Installing and charging the battery pack

Подготовка к эксплуатации

Установка и зарядка батарейного блока

Before using your camcorder, you first need to install and charge the battery pack.
This camcorder operates only with the "InfoLITHIUM" battery pack (L series).
"InfoLITHIUM" is a trademark of Sony Corporation.

Installing the battery pack

Install the battery pack in the direction of the ▼ mark on the battery pack. Slide the battery pack down until it catches on the battery release lever and clicks.
Attach the battery pack to the camcorder securely.

Перед использованием Вашей видеокамеры Вам нужно сперва зарядить и установить батарейный блок.
Данная видеокамера работает только от батарейного блока "InfoLITHIUM" (серия L).
"InfoLITHIUM" является товарным знаком корпорации Sony.

Установка батарейного блока

Установите батарейный блок в направлении знака ▼ на батарейном блоке. Двигайте батарейный блок вниз до тех пор, пока он не будет захвачен рычагом освобождения батарейного блока и не защелкнется.
Надежно присоедините батарейный блок к видеокамере.

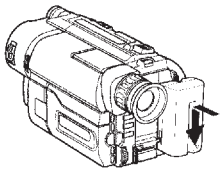

Note on the battery pack
Do not carry the camcorder by grasping the battery pack.

Примечание к батарейному блоку
Не носите видеокамеру, держа ее за батарейный блок.

Charging the battery pack

Charge the battery pack on a flat surface without vibration. The battery pack is charged a little in the factory.

(1) Open the DC IN jack cover and connect the supplied AC power adaptor to the DC IN jack with the plug's ▲ mark up.
(2) Connect the mains lead to the AC power adaptor.
(3) Connect the mains lead to the mains.
(4) Slide the POWER switch to OFF. Remaining battery time is indicated by the minutes on the display window. Charging begins.

When the remaining battery indicator becomes ▬, **normal charge** is completed. For **full charge**, which allows you to use the battery longer than usual, leave the battery pack attached for about 1 hour after normal charge is completed until **FULL** appears in the display window.

Before using the camcorder with the battery pack, unplug the AC power adaptor from the DC IN jack of the camcorder. You can also use the battery pack before it is completely charged.

Зарядка батарейного блока

Заряжайте батарейный блок на плоской поверхности, неподверженной вибрации. Батарейный блок заряжен немного на заводе.

(1) Откройте крышку гнезда DC IN и подсоедините прилагаемый сетевой адаптер переменного тока к гнезду DC IN так, чтобы метка ▲ на штекере была расположена сверху.
(2) Подсоедините сетевой провод к сетевому адаптеру переменного тока.
(3) Подсоедините сетевой провод к сети.
(4) Передвиньте выключатель POWER в положение OFF. Оставшееся время заряда батарейного блока будет отображаться в минутах в окошке дисплея. Начнется зарядка.

Если индикатор оставшегося заряда батарейного блока будет иметь вид ▬, это значит, что завершена **нормальная зарядка**. Для **полной зарядки**, которая позволяет Вам использовать батарейный блок дольше, чем обычно, оставьте батарейный блок присоединненым примерно на один час после завершения нормальной зарядки, пока в окошке дисплея не появится индикация **FULL**.

Перед использованием видеокамеры с батарейным блоком отсоедините сетевой адаптер переменного тока от гнезда DC IN на видеокамере. Вы можете также использовать батарейный блок до того, как он полностью зарядится.

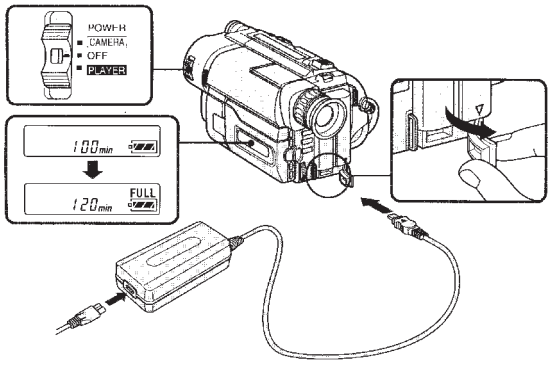

Notes

- "– – – min" appears in the display window until the camcorder calculates remaining battery time.
- Remaining battery time indication in the display window roughly indicates the recording time with the viewfinder. Use it as a guide. It may differ from the actual recording time.
- If there is a slight difference in shape between the plug of mains lead and the terminal of AC power adaptor, it is ignorable for their mutual connection and power supply.
- Be sure to plug the mains lead deeply into the terminal of AC power adaptor so that it is firmly locked. If there is a gap between the plug of mains lead and the terminal of AC power adaptor, it does not affect the efficiency of the AC power adaptor.

Charging time

Battery pack (NP-)	Charging time* (min.)
F330 (supplied)	150 (90)
F530/F550	210 (150)
F730/F750	300 (240)
F930/F950	390 (330)

The time required for a normal charge is indicated in parentheses.

* Approximate minutes to charge an empty battery pack using the supplied AC power adaptor. (Lower temperatures require a longer charging time.)

Примечания

- "– – – min" появляется на дисплее, пока видеокамера вычисляет время оставшегося заряда батарейного блока.
- Индикация времени оставшегося заряда батарейного блока в окошке дисплея указывает приблизительное время записи с помощью видоискателя. Используйте ее в качестве руководства. Это время может несколько отличаться от действительного времени записи.
- Если существует небольшое различие по форме между штепсельным разъемом сетевых проводов и гнездом сетевого адаптера переменного тока, то это не влияет на их взаимное соединение и подачу питания.
- Обязательно вставьте разъем сетевого провода глубоко в гнездо сетевого адаптера переменного тока так, чтобы он был надежно зафиксирован. Если остается зазор между разъемом сетевого провода и гнездом сетевого адаптера переменного тока, то это не влияет на эффективность сетевого адаптера переменного тока.

Время зарядки

Батарейный блок (NP-)	Время зарядки* (мин.)
F330 (прилагается)	150 (90)
F530/F550	210 (150)
F730/F750	300 (240)
F930/F950	390 (330)

Числа в скобках указывают время для нормальной зарядки.

* Приблизительное время в минутах для зарядки полностью разряженного батарейного блока с использованием прилагаемого сетевого адаптера переменного тока. (При более низких температурах потребуется более длительное время зарядки.)

Battery life

Upper numbers are the time when recording with the viewfinder. Lower numbers are the time when recording with the LCD screen. Using both will further reduce recording time.

CCD-TRV16E/TRV27E

Battery pack (NP-)	Continuous recording time*	Typical recording time**	Playing time on LCD
F330 (supplied)	130 (115) 100 (90)	65 (60) 55 (45)	100 (90)
F530	225 (200) 170 (155)	115 (105) 90 (85)	165 (150)
F550	260 (230) 205 (185)	135 (120) 110 (100)	200 (180)
F730	450 (405) 350 (310)	235 (210) 190 (170)	335 (300)
F750	530 (480) 425 (380)	280 (250) 230 (205)	410 (365)
F930	710 (640) 555 (500)	375 (335) 305 (275)	535 (480)
F950	815 (730) 650 (590)	430 (385) 355 (320)	630 (570)

Срок службы заряда батарейного блока

Верхние цифры указывают время при записи с помощью видоискателя. Нижние цифры указывают время при записи с помощью экрана ЖКД. Использование их обоих значительно снижает время записи.

CCD-TRV16E/TRV27E

Батарейный блок (NP-)	Время непрерывной записи*	Время типичной записи**	Время воспроизведения на ЖКД
F330 (прилагается)	130 (115) 100 (90)	65 (60) 55 (45)	100 (90)
F530	225 (200) 170 (155)	115 (105) 90 (85)	165 (150)
F550	260 (230) 205 (185)	135 (120) 110 (100)	200 (180)
F730	450 (405) 350 (310)	235 (210) 190 (170)	335 (300)
F750	530 (480) 425 (380)	280 (250) 230 (205)	410 (365)
F930	710 (640) 555 (500)	375 (335) 305 (275)	535 (480)
F950	815 (730) 650 (590)	430 (385) 355 (320)	630 (570)

CCD-TRV46E

Battery pack (NP-)	Continuous recording time*	Typical recording time**	Playing time on LCD
F330 (supplied)	125 (110) 100 (90)	65 (55) 55 (45)	100 (90)
F530	215 (190) 165 (150)	110 (100) 90 (80)	165 (150)
F550	250 (220) 200 (180)	130 (115) 110 (95)	200 (180)
F730	430 (385) 335 (300)	225 (200) 185 (165)	335 (300)
F750	510 (460) 410 (365)	270 (240) 225 (200)	410 (365)
F930	680 (610) 535 (480)	360 (320) 290 (260)	535 (480)
F950	780 (700) 630 (570)	410 (370) 345 (310)	630 (570)

Numbers in parentheses indicate the time when you use a normally charged battery.

Battery life will be shorter if you use the camcorder in a cold environment.

* Approximate continuous recording time at 25°C.

** Approximate minutes when recording while you repeat recording start/stop, zooming and turning the power on/off. The actual battery life may be shorter.

Notes on remaining battery time indication during recording

- Remaining battery time is displayed in the viewfinder or on the LCD screen. However, the indication may not be displayed properly, depending on using conditions and circumstances.
- When you close the LCD panel and open it again, it takes about 1 minute for the correct remaining time to be displayed.

CCD-TRV46E

Батарейный блок (NP-)	Время непрерывной записи*	Время типичной записи**	Время воспроизведения на ЖКД
F330 (прилагается)	125 (110) 100 (90)	65 (55) 55 (45)	100 (90)
F530	215 (190) 165 (150)	110 (100) 90 (80)	165 (150)
F550	250 (220) 200 (180)	130 (115) 110 (95)	200 (180)
F730	430 (385) 335 (300)	225 (200) 185 (165)	335 (300)
F750	510 (460) 410 (365)	270 (240) 225 (200)	410 (365)
F930	680 (610) 535 (480)	360 (320) 290 (260)	535 (480)
F950	780 (700) 630 (570)	410 (370) 345 (310)	630 (570)

Числа в скобках указывают время, когда Вы используете нормально заряженный батарейный блок.

Срок службы заряда батарейного блока будет короче, если Вы используете видеокамеру в холодных условиях.

* Приблизительное время непрерывной записи при 25°C.

** Приблизительное время в минутах при записи с повторным началом/остановкой записи, режимом готовности, наездом видеокамеры и включением/выключением питания. Фактический срок службы заряда батарейного блока может быть короче.

Примечания к индикации оставшегося времени работы батарейного блока во время записи.

- Оставшееся время работы батарейного блока отображается в видоискателе или на экране ЖКД. Однако, индикация может отображаться неправильно в зависимости от условий и обстоятельств использования.
- Когда Вы закрываете панель ЖКД и открываете ее снова, требуется приблизительно 1 минута для правильного отображения оставшегося времени.

Installing and charging the battery pack

To remove the battery pack

While pressing BATT RELEASE, slide the battery pack in the direction of the arrow.

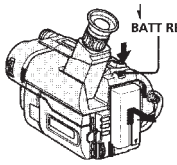

You can look at the demonstration of the functions available with this camcorder (p. 35).

Установка и зарядка батарейного блока

Для снятия батарейного блока

Нажимая BATT RELEASE, передвиньте батарейный блок в направлении стрелки.

Вы можете просмотреть демонстрацию функций, имеющихся в наличии у данной видеокамеры (стр. 35).

Inserting a cassette

Make sure that the power source is installed.
When you want to record in the Hi8 system, use Hi8 video cassette **Hi8** (CCD-TRV46E only).

(1) While pressing the small blue button on the EJECT switch, slide it in the direction of the arrow. The cassette compartment automatically lifts up and opens.
(2) Insert a cassette with the window facing out.
(3) Close the cassette compartment by pressing the "PUSH" mark on the cassette compartment. The cassette compartment automatically goes down.

Вставка кассеты

Убедитесь, что источник питания установлен. Если Вы хотите выполнить запись в системе Hi8, то используйте Hi8-видеокассету **Hi8** (только CCD-TRV46E).

(1) Нажимая маленькую синюю кнопку на выключателе EJECT, сдвиньте его в направлении стрелки. Кассетный отсек автоматически поднимается и открывается.
(2) Вставьте кассету окошком, обращенным наружу.
(3) Закройте кассетный отсек путем нажатия знака "PUSH" на кассетном отсеке. Кассетный отсек автоматически опустится вниз.

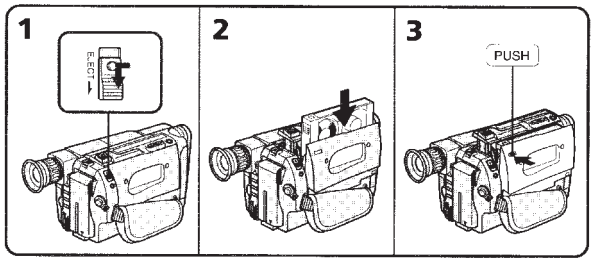

To eject the cassette

While pressing the small blue button on the EJECT switch, slide it in the direction of the arrow.

To prevent accidental erasure

Slide the tab on the cassette to expose the red mark. If you insert the cassette with the red mark exposed and close the cassette compartment, the beeps sound for a while. If you try to record with the red mark exposed, the [rec] and ⏏ indicators flash, and you cannot record.
To re-record on this tape, slide the tab back out covering the red mark.

Для выталкивания кассеты

Нажимая маленькую синюю кнопку на выключателе EJECT, сдвиньте его в направлении стрелки. Кассетный отсек автоматически поднимается и открывается.

Для предотвращения случайного стирания

Сдвиньте лепесток на кассете, чтобы было видно красную метку. Если Вы вставите кассету, на которой видна красная метка, и закроете кассетный отсек, зуммерный сигнал будет звучать в течение некоторого времени. Если Вы попытаетесь выполнить запись с выставленной красной меткой, то индикаторы [rec] и ⏏ будут мигать в видоискателе и Вы не сможете произвести запись.
Для выполнения новой записи на такую ленту сдвиньте лепесток назад для закрывания красной метки.

Basic operations
Camera recording

Make sure that the power source is installed and a cassette is inserted and that the START/STOP MODE switch inside the LCD panel is set to ⏏.
Before you record one-time events, you may want to make a trial recording to make sure that the camcorder is working correctly.
When you use the camcorder for the first time, power on it and reset the date and time to your time before you start recording (p. 68). The date is automatically recorded for 10 seconds after you start recording **(AUTO DATE feature)**. This feature works only once a day.

(1) While pressing the small green button on the POWER switch, set it to CAMERA.
(2) Turn STANDBY up to STANDBY.
(3) Press START/STOP. The camcorder starts recording. The "REC" indicator appears. The red lamp lights up in the viewfinder when you record with the viewfinder. The camera recording/battery lamp located on the front of the camcorder also lights up.

Основные операции
Запись с помощью видеокамеры

Убедитесь, что источник питания установлен,кассета вставлена и переключатель START/STOP MODE внутри панели ЖКД установлен в положение ⏏.
Перед тем как Вы начнете запись одноразовых событий, Вы можете захотеть сделать пробную запись для подтверждения, что видеокамера работает правильно.
Если Вы используете видеокамеру в первый раз, то включите ее и установите дату и время на Ваше местное время перед началом записи (стр. 68) Дата автоматически будет записываться в течение 10 секунд после начала записи **(функция AUTO DATE)**.
Данная функция работает один раз в день.

(1) Нажимая маленькую зеленую кнопку на выключателе POWER, установите его в положение CAMERA.
(2) Поверните STANDBY вверх в положение STANDBY.
(3) Нажмите START/STOP. Видеокамера начинает запись. Появляется индикатор "REC". Когда Вы осуществляете запись с помощью видоискателя, в видоискателе загорается красная лампочка. Лампочка записи камерой/батареи, расположенная на передней панели видеокамеры, также будет гореть.

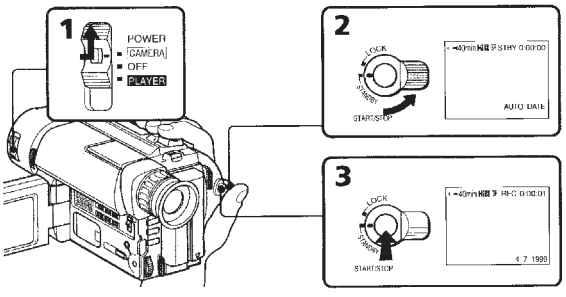

Camera recording

To stop recording momentarily [a]

Press START/STOP again. The "STBY" indicator appears in the viewfinder **(Standby mode)**.

To finish recording [b]

Press START/STOP again. Turn STANDBY down to LOCK and set the POWER switch to OFF. Then, eject the cassette.

[a]



[b]



Note

Be sure to remove the battery pack from the camcorder after using.

To focus the viewfinder lens

If you cannot see the indicators in the viewfinder clearly, focus the viewfinder lens. Turn the viewfinder lens adjustment ring so that the indicators in the viewfinder come into sharp focus.

Запись с помощью видеокамеры

Для временной остановки записи [a]

Снова нажмите START/STOP. Индикатор "STBY" появляется в видоискателе **(режим готовности)**.

Для окончания записи [b]

Снова нажмите START/STOP. Поверните STANDBY вниз в положение LOCK и установите выключатель POWER в положение OFF. Затем вытолкните кассету.

Примечание

Не забудьте отсоединить батарейный блок от видеокамеры после импользования.

Для фокусировки объектива видоискателя

Если индикаторы в видоискателе Вам видны нечетко, выполните фокусировку объектива видоискателя. Поверните кольцо регулировки объектива видоискателя так, чтобы индикаторы в видоискателе были четко сфокусированы.

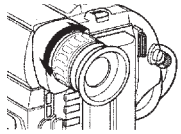

Note on Standby mode

If you leave the camcorder in Standby mode for 5 minutes while the cassette is inserted, the camcorder turns off automatically for saving battery power as well as for preventing the battery and tape from wearing down. To resume Standby mode, turn STANDBY down and up again. To start recording, press START/STOP.

Примечание к режиму готовности

Если Вы оставляете видеокамеру в режиме готовности на 5 минут при вставленной кассете, видеокамера выключится автоматически в целях как для экономии заряда батарейного блока, так и для предотвращения износа ленты. Для восстановления режима готовности поверните STANDBY вниз, а затем снова вверх. Для начала записи нажмите START/STOP.

Note on recording
When you record from the beginning of a tape, run the tape for about 15 seconds before starting the actual recording. Passing the tape lead will ensure that you will not miss any start-up scenes when you play back the tape.

Notes on the tape counter
- The tape counter indicates the recording or playback time. Use it as a guide. There will be a time lag of several seconds from the actual time. To set the counter to zero, press COUNTER RESET.
- If the tape is recorded in SP and LP modes mixed, the tape counter shows incorrect recording time. When you intend to edit the tape using the tape counter as a guide, record in same (SP or LP) mode.

Note on the beep sound
The beep sounds when you operate the camcorder. Several beeps also sound as a warning of any unusual condition of the camcorder.
Note that the beep sound is not recorded on the tape. If you do not want to hear the beep sound, select "OFF" in the menu system.

Note on the AUTO DATE feature
The clock is set at the factory to Sydney time for Australia and New Zealand models, to Tokyo time for the models sold in Japan, and to Hong Kong time for other models. You can reset the clock in the menu system. You can change the AUTO DATE settings by selecting ON or OFF in the menu system. The AUTO DATE feature shows the date automatically once a day. However, the date may automatically appear more than once a day when:
– you reset the date and time.
– you eject and insert the tape again.
– you stop recording within 10 seconds.
– you set AUTO DATE to OFF once and set it to ON again in the menu system.

Примечание к записи
Когда Вы начинаете запись от начала ленты, перематывайте ленту в течение 15 секунд перед началом фактической записи. Благодаря прогону вперед начального отрезка ленты Вы сможете быть уверены в том, что при ее воспроизведении Вы не обнаружите отсутствие в записи какой-либо из самых первых сцен.

Примечания к счетчику ленты
- Счетчик ленты указывает время записи или воспроизведения. Используйте его в качестве руководства. Существует отставание по времени на несколько секунд от фактического времени. Для установки счетчика на нуль нажмите COUNTER RESET.
- Если лента записана с чередованием режимов SP и LP, то счетчик ленты будет показывать неправильное время записи. Если Вы намереваетесь производить монтаж ленты с использованием счетчика ленты в качестве указателя, то выполняйте запись в одном и том же режиме (SP или LP).

Примечания к зуммерному звуковому сигналу
Зуммерный сигнал звучит, когда Вы работаете с видеокамерой. Несколько зуммерных сигналов также будет звучать в качестве предупреждения какого-нибудь необычного состояния видеокамеры. Заметьте, что зуммерный сигнал не записывается на ленту. Если Вы не хотите слушать зуммерный сигнал, то выберите "OFF" в системе меню.

Примечание к функции AUTO DATE
Часы установлены на заводе на сиднейское время для моделей для Австралии и Новой Зеландии, на токийское время для моделей, продаваемых в Японии, и на гонконгское время для других моделей. Вы можете переустановить часы в системе меню. Вы можете изменить установки AUTO DATE путем выбора ON или OFF в системе меню. Функция AUTO DATE показывает дату автоматически один раз в день. Однако, дата может автоматически появится более одного раза в день, когда:
– Вы заново устанавливаете дату и время.
– Вы вытолкнули ленту и вставили ее снова.
– Вы остановили запись в пределах 10 секунд.
– Вы установили функцию AUTO DATE в системе меню на OFF, а затем снова на ON.

Using the zoom feature

Zooming is a recording technique that lets you change the size of the subject in the scene. For more professional-looking recordings, use the zoom function sparingly.
"T" side: for telephoto (subject appears closer)
"W" side: for wide-angle (subject appears further away)

Zooming speed (Variable speed zooming)
Move the power zoom lever a little for a slower zoom, move it further for a faster zoom.

When you shoot a subject using a telephoto zoom
If you cannot get a sharp focus while in extreme telephoto zoom, move the power zoom lever to the "W" side until the focus is sharp. You can shoot a subject that is at least about 80 cm away from the lens surface in the telephoto position, or about 1 cm away in the wide-angle position.

Notes on the digital zoom
- More than 18× zoom is performed digitally, but the picture quality deteriorates as you move the lever toward the "T" side. If you do not want to use the digital zoom, set the D ZOOM function to OFF in the menu system.
- The right side **[a]** of the power zoom indicator shows the digital zooming zone, and the left side **[b]** shows the optical zooming zone. If you set the D ZOOM function to OFF, the **[a]** zone disappears.

Использование функции наезда видеокамеры

Наезд видеокамеры является техническим приемом записи, который позволяет Вам изменять размер объекта в кадре. Для более профессионального вида записей умеренно используйте функцию наезда видеокамеры.
Сторона "T": для телефото (объект приближается)
Сторона "W": для широкого угла съемки (объект удаляется)

Скорость наезда видеокамеры (наезд с различной скоростью)
Передвиньте рычаг приводного трансфокатора немного для сравнительно медленного наезда видеокамеры; передвиньте его еще дальше для наезда на высокой скорости.

Когда Вы снимаете объект, используя наезд в режиме телефото
Если Вы не можете получить четкой фокусировки во время крайнего наезда в режиме телефото, перемещайте рычаг приводного трансфокатора в сторону "W" до тех пор, пока Вы не получите четкой фокусировки. Вы можете снимать объект, который по меньшей мере на 80 см удален от поверхности объектива в положении телефото, или удален приблизительно на 1 см в положении широкого угла.

Примечания к цифровому трансфокатору
- Посредством цифровой трансфокации осуществляется более чем 18-кратное увеличение, причем качество изображения ухудшается по мере смещения трансфокаторного регулятора в сторону "T". Если Вы не хотите использовать цифровой трансфокатор, установите функцию D ZOOM в системе меню на OFF.
- Правая сторона **[a]** индикатора приводного трансфокатора показывает зону цифровой трансфокации, а левая сторона **[b]** показывает зону оптической трансфокации. Если Вы установите функцию D ZOOM на OFF, то зона **[a]** исчезнет.



Selecting the START/STOP mode

Your camcorder has three modes. These modes enable you to take a series of quick shots resulting in a lively video.
(1) While pressing OPEN, open the LCD panel.
(2) Set START/STOP MODE to the desired mode.
: Recording starts when you press START/STOP, and stops when you press it again (factory setting).
ANTI GROUND SHOOTING : The camcorder records only while you press down START/STOP so that you can avoid recording unnecessary scenes.
5SEC: When you press START/STOP, the camcorder records for 5 seconds and then stops automatically.
(3) Turn STANDBY up to STANDBY and press START/STOP.
Recording starts.
If you selected 5SEC, the tape counter disappears and five dots appear. The dots disappear at a rate of one per second as illustrated below.

Выбор режима START/STOP

Ваша видеокамера имеет три режима. Эти режимы позволяют Вам снять серию коротких кадров, создавая в результате оживленную видеопрограмму.
(1) Нажимая OPEN, откройте панель ЖКД.
(2) Установите переключатель START/STOP MODE на желаемый режим.
: Запись начинается когда Вы нажимаете START/STOP и заканчивается, когда Вы нажимаете эту кнопку снова (Заводская установ ка).
ANTI GROUND SHOOTING : Видеокамера производит запись только тогда, когда Вы держите START/STOP в нажатом состоянии, так что Вы можете избежать записи ненужных сцен.
5SEC: Когда Вы нажимаете START/STOP, видеокамера производит запись в течение 5 секунд, а затем останавливается автоматически.
(3) Поверните STANDBY вверх в положение STANDBY и нажмите START/STOP.
Запись начинается.
Если Вы выбрали 5SEC, счетчик ленты исчезает и появляются пять точек. Точки исчезают со скоростью по одной за секунду, как показано ниже на рисунке.

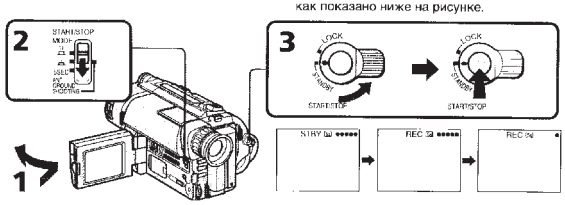

To extend the recording time in 5SEC mode
Press START/STOP again before all the dots disappear. Recording continues for about 5 seconds from the moment you press START/STOP.

Notes on START/STOP mode
- If you have turned off the indicators on the LCD screen, the dots do not appear.
- You cannot use the fader function in the 5SEC or ANTI GROUND SHOOTING mode.

Для продления времени записи в режиме 5SEC
Нажмите START/STOP снова до того, как все точки исчезнут. Запись продолжается еще в течение 5 секунд с момента нажатия START/STOP.

Примечания к режиму START/STOP
- Если Вы выключили индикаторы на экране ЖКД, точки появляться не будут.
- Вы не можете использовать функцию Fader в режиме 5 SEC или ANTI GROUND SHOOTING .

Shooting with the LCD screen

You can also record the picture while looking at the LCD screen.
When using the LCD screen, the viewfinder turns off automatically. You cannot monitor the sound from the speaker during recording.
(1) While pressing OPEN, open the LCD panel.
(2) Adjust the angle of the LCD panel.
The LCD panel moves about 90 degrees to this side and about 210 degrees to the other side.
To adjust the brightness of the LCD screen, press LCD BRIGHT.
+ side: to brighten the LCD screen
– side: to dim the LCD screen
The battery life is longer when the LCD panel is closed. Use the viewfinder instead of the LCD screen to save the battery power.

Съемка с использованием экрана ЖКД

Вы можете также производить запись изображения, глядя на экран ЖКД.
При использовании экрана ЖКД экран видоискателя выключается автоматически. Вы не можете слышать звук от громкоговорителя во время записи.
(1) Нажимая OPEN, откройте панель ЖКД.
(2) Отрегулируйте угол панели ЖКД.
Панель ЖКД перемещается приблизительно на 90 градусов в эту сторону и приблизительно на 210 градусов в другую сторону.
Для регулировки яркости экрана ЖКД нажмите LCD BRIGHT.
Сторону +: для получения более яркого экрана ЖКД
Сторону –: Для получения более тусклого экрана ЖКД
Срок службы заряда батарейного блока будет длинее, когда панель ЖКД закрыта. Используйте видоискатель вместо экрана ЖКД для экономии заряда батарейного блока.

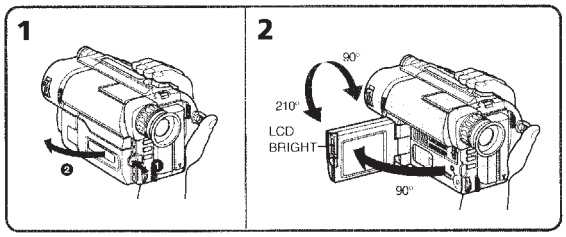

Backlighting the LCD screen
If the LCD screen is insufficiently illuminated even after adjusting LCD BRIGHT, select LCD B. L. in the menu system and set to BRIGHT. You can select LCD B. L. only while using the battery pack as a power source.

Задняя подсветка экрана ЖКД
Если экран ЖКД недостаточно освещен даже после регулировки LCD BRIGHT, то выберите LCD B. L. в системе меню и установите BRIGHT. Вы можете выбрать LCD B. L. только при использовании батарейного блока в качестве источника питания.

Camera recording

Запись с помощью видеокамеры

Notes on the LCD panel

- When closing the LCD panel, turn it vertically until it clicks **[a]**.
- When turning the LCD panel, turn it always vertically; otherwise, the camcorder body may be damaged or the LCD panel may not close properly **[b]**.
- Close the LCD panel completely when not in use.

[a]

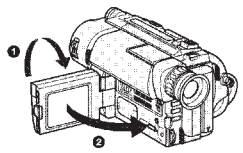

[b]

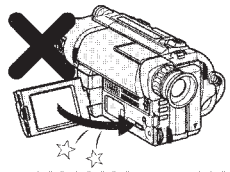

Letting the subject monitor the shot (Mirror mode)

You can turn the LCD panel over so that it faces the other way and you can let the subject monitor the shot while shooting with the viewfinder.

Turn the LCD panel vertically first until it clicks, then turn it over. The ◌ indicator appears on the LCD screen **(Mirror mode)** and the date and remaining tape indicators disappear.

To cancel mirror mode

Turn the LCD panel back toward the viewfinder.

Notes on mirror mode

- The picture on the LCD looks as a mirror-image while recording in mirror mode. The STBY indicator appears as ❚❚● and REC as ●. The other indicators may not appear in mirror mode.
- While recording in mirror mode, you cannot operate the following buttons: TITLE, DATE, TIME and MENU.
- The date appears in reverse when the AUTO DATE feature is turned on. When recorded, it will be normal.

Примечания к панели ЖКД

- При закрывании панели ЖКД поворачивайте ее вертикально до тех пор, пока она не защелкнется **[a]**.
- При вращении панели ЖКД двигайте ее всегда вертикально; в противном случае корпус видеокамеры может быть поврежден или панель ЖКД может быть закрыта неправильно **[b]**.
- Полностью закройте панель ЖКД, когда она не используется.

Возможность для снимаемого человека наблюдать съемку (зеркальный режим)

Вы можете перевернуть панель ЖКД, так, что она будет обращена в другую сторону и Вы позволите снимаемому человеку наблюдать съемку, контролируя запись в видоискателе.

Сперва поворачивайте панель ЖКД, держа ее вертикально, пока она не защелкнется, а затем переверните ее. Индикатор ◌ появится на экране ЖКД **(зеркальный режим)** и индикаторы даты и оставшейся ленты исчезнут.

Для отмены зеркального режима

Поверните панель ЖКД назад в направлении видоискателя.

Примечания к зеркальному режиму

- Изображение на экране ЖКД появляется в зеркальном отображении во время записи в зеркальном режиме. Индикатор STBY появляется в виде ❚❚●, а REC в виде ●. Другие индикаторы появляются, как зеркальные отображения. Некоторые индикаторы могут не появляться в зеркальном режиме.
- Во время записи в зеркальном режиме Вы не можете использовать следующие кнопки: TITLE, DATE, TIME и MENU.
- Дата появляется в обратном порядке, когда включена функция AUTO DATE. После записи она будет выглядеть нормально.

Hints for better shooting

Советы для лучшей съемки

For hand-held shots, you'll get better results by holding the camcorder according to the following suggestions:

- Hold the camcorder firmly and secure it with the grip strap so that you can easily manipulate the controls with your thumb.

Для кадров при удержании видеокамеры в руках Вы получите лучшие результаты, если будете держать видеокамеру в соответствии со следующими рекомендациями:

- Держите видеокамеру крепко и закрепите ее с помощью ременного захвата так, чтобы Вы легко могли манипулировать регуляторами с помощью большого пальца.

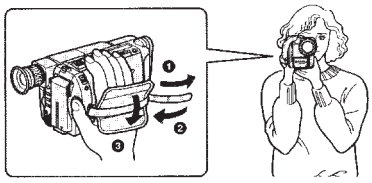

- Place your right elbow against your side.
- Place your left hand under the camcorder to support it. Be sure to not touch the built-in microphone.
- Place your eye firmly against the viewfinder eyecup.
- Use the viewfinder frame as a guide to determine the horizontal plane.
- You can also record in a low position to get an interesting angle. Lift the viewfinder up for recording from a low position **[a]**.
- You can also record in a low position or even in a high position using the LCD panel **[b]**.
- When you use the LCD screen outdoors in direct sunlight, the LCD screen may be difficult to see. If this happens, we recommend that you use the viewfinder.

- Прижмите правый локоть к боку.
- Расположите Вашу левую руку под видеокамерой для ее поддержки. Ни в коем случае не трогайте встроенный микрофон.
- Надежно прижмите Ваш глаз к окуляру видоискателя.
- Используйте визирную рамку видоискателя в качестве руководства для определения горизонтального плана.
- Вы также можете записывать из низкого положения для получения интересного угла записи. Поднимите видоискатель вверх для записи из низкого положения **[a]**.
- Вы также можете записывать из низкого положения или даже из высоко положения с использованием панели ЖКД **[b]**.
- Когда Вы используете экран ЖКД на улице под прямым солнечным светом, то изображение на экране ЖКД может быть трудным для просмотра. Если это случится, то мы рекомендуем Вам использовать видоискатель.

[a]

[b]

Hints for better shooting

Советы для лучшей съемки

Place the camcorder on a flat surface or use a tripod

Try placing the camcorder on a table top or any other flat surface of suitable height. If you have a tripod for a still camera, you can also use it with the camcorder.

When attaching a non-Sony tripod, make sure that the length of the tripod screw is less than 6.5 mm. Otherwise, you cannot attach the tripod securely and the screw may damage the camcorder.

Cautions on the viewfinder and the LCD

- Do not pick up the camcorder by the viewfinder or by the LCD panel **[c]**.
- Do not place the camcorder so as to point the viewfinder or the LCD screen toward the sun. The inside of the viewfinder or the LCD screen may be damaged. Be careful when placing the camcorder under sunlight or by a window **[d]**.

Располагайте видеокамеру на плоской поверхности или используйте треногу

Постарайтесь расположить видеокамеру сверху на столе или любой другой плоской поверхности подходящей высоты. Если у Вас есть тренога для фотоаппарата, Вы также можете использовать ее и для видеокамеры. При прикреплении треноги не фирмы Sony убедитесь, что длина винта треноги менее 6,5 мм. В противном случае винт может повредить внутренние части видеокамеры.

Предосторожности к панели ЖКД и видоискателю

- Не поднимайте видеокамеру за видоискатель или панель ЖКД **[c]**.
- Не располагайте видеокамеру так, чтобы видоискатель или экран ЖКД были направлены в сторону солнца, поскольку это может привести к повреждению их внутренних частей. Проявляйте осторожность, располагая видеокамеру под солнечными лучами или возле окна **[d]**.

[c]

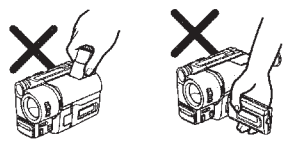

[d]

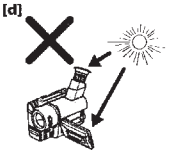

Checking the recorded picture

Проверка записанного изображения

Using EDITSEARCH, you can review the last recorded scene or check the recorded picture in the viewfinder or on the LCD screen.

(1) While pressing the small green button on the POWER switch, set it to CAMERA.
(2) Turn STANDBY up to STANDBY.
(3) Press the – (⏪) side of EDITSEARCH momentarily; the last few seconds of the recorded portion play back **(Rec Review)**. You can monitor the sound from the speaker or an earphone.
Hold down the – side of EDITSEARCH until the camcorder goes back to the scene you want. The last recorded portion is played back. To go forward, hold down the + side **(Edit Search)**.

Используя EDITSEARCH, Вы можете пересмотреть последнюю записанную сцену или проверить записанное изображение через видоискатель или на экране ЖКД.

(1) Нажимая маленькую зеленую кнопку на выключателе POWER, установите его в положение CAMERA.
(2) Поверните STANDBY вверх в положение STANDBY.
(3) На мгновение нажмите сторону – (⏪) кнопки EDITSEARCH; последние несколько секунд записанной части будут воспроизведены **(пересмотр записи)**. Вы можете контролировать звук через встроенный громкоговоритель или наушники.
Держите нажатой сторону – кнопки EDITSEARCH до тех пор, пока видеокамера не вернется к желаемой сцене. Последняя записанная часть будет воспроизведена. Для продвижения вперед держите нажатой сторону + **(монтажный поиск)**.

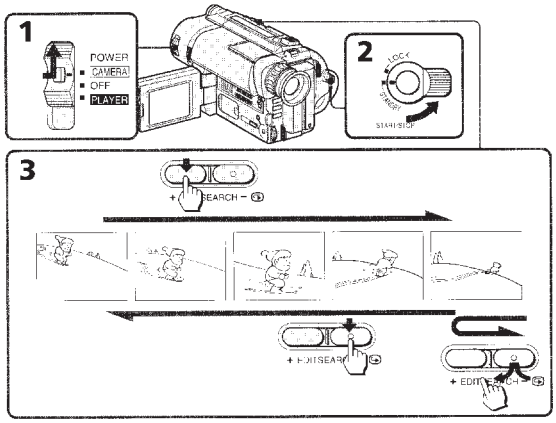

Checking the recorded picture

Проверка записанного изображения

To stop playback
Release EDITSEARCH.

To go back to the last recorded point after edit search
Press END SEARCH. The last recorded point is played back for about 5 seconds (10 seconds in LP mode) and stops. Note that this function does not work once you eject the cassette after you recorded on the tape.

To begin re-recording
Press START/STOP. Re-recording begins from the point you released EDITSEARCH. Provided you do not eject the cassette, the transition between the last scene you recorded and the next scene you record will be smooth.

Для остановки воспроизведения
Отпустите EDITSEARCH.

Для возвращения к последней записанной точке после выполнения монтажного поиска
Нажмите END SEARCH. Воспроизведение последнего записанного места будет выполнено приблизительно в течение 5 секунд (10 секунд в режиме LP) и остановлено. Заметьте, что данная функция не работает, если Вы вытолкнете кассету после выполнения записи на ленте.

Снова для начала записи
Нажмите START/STOP. Запись начинается от точки, где Вы отпустили EDITSEARCH. При условии, что Вы не вытолкнете кассету, переход между последней сценой, которую Вы записали, и следующей сценой, которую Вы записываете, будет плавным.

Playing back a tape

Воспроизведение ленты

You can monitor the playback picture on the LCD screen.
(1) While pressing the small green button on the POWER switch, set it to PLAYER.
(2) Insert the recorded tape with the window facing out.
(3) While pressing OPEN, open the LCD panel. Adjust the angle of the LCD panel or the brightness of the LCD screen if necessary.
(4) Press ◄◄ to rewind the tape.
(5) Press ► to start playback.
(6) Adjust the volume using VOLUME and adjust the brightness of the LCD screen using LCD BRIGHT.
You can also monitor the picture on a TV screen, after connecting the camcorder to a TV or VCR.

Вы можете просматривать изображение на экране ЖКД.
(1) Нажимая маленькую зеленую кнопку на выключателе POWER , установите его в положение PLAYER.
(2) Вставьте записанную ленту окошком, обращенным наружу.
(3) Нажимая OPEN, откройте панель ЖКД. Отрегулируйте угол панели ЖКД или яркость экрана ЖКД, если это требуется.
(4) Нажмите ◄◄ для ускоренной перемотки ленты назад.
(5) Нажмите ► для начала воспроизведения.
(6) Отрегулируйте громкость с использованием VOLUME и отрегулируйте яркость экрана ЖКД с использованием LCD BRIGHT.
Вы можете также просмотреть изображение на экране телевизора после подсоединения видеокамеры к телевизору или КВМ.

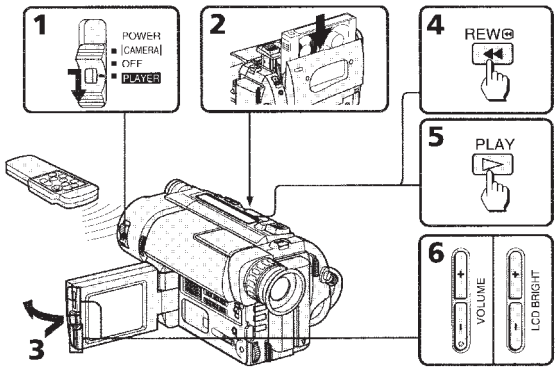

To stop playback, press ■.
To rewind the tape, press ◄◄.
To fast-forward the tape rapidly, press ►►.

Для остановки воспроизведения нажмите ■.
Для ускоренной перемотки ленты назад нажмите ◄◄.
Для ускоренной перемотки ленты вперед нажмите ►►.

Playing back a tape

Воспроизведение ленты

When monitoring on the LCD screen
You can turn the LCD panel over and move back to the camcorder with the LCD screen facing out **[a]**. You can adjust the angle of the LCD screen by turning the LCD screen up to 15 degrees **[b]**.

При просмотре на экране ЖКД
Вы можете перевернуть панель ЖКД и придвинуть ее назад к видеокамере с экраном ЖКД, обращенным наружу **[a]**. Вы можете отрегулировать угол экрана ЖКД, поворачивая экран ЖКД вверх до 15 градусов **[b]**.

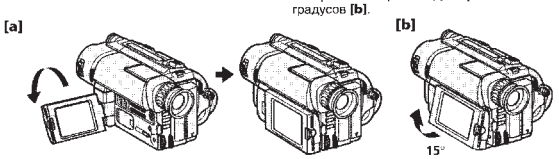

Using the remote commander
– CCD-TRV27E/TRV46E only
You can control playback using the supplied Remote Commander. Before using the Remote Commander, insert the R6 (size AA) batteries.

Note on DISPLAY button
Press DISPLAY to display the screen indicators on the LCD screen. To erase the indicators, press DISPLAY again. If the POWER switch is set to CAMERA, you can erase the indicator by pressing DISPLAY.

Using an earphone
Connect an earphone (not supplied) to the 🎧 jack. You can adjust the volume using VOLUME. When you use an earphone, the sound does not come from the speaker.

To view the playback picture in the viewfinder
Close the LCD panel. The viewfinder turns on automatically. When using the viewfinder, you can monitor sound only by using an earphone. To view on the LCD screen again, open the LCD panel. The viewfinder turns off automatically.

Использование пульта дистанционного управления
– Только CCD-TRV27E/TRV46E
Вы можете управлять воспроизведением с помощью прилагаемого пульта дистанционного управления. Перед использованием пульта дистанционного управления вставьте в него батарейки R6 (размером AA).

Примечание к кнопке DISPLAY.
Нажмите DISPLAY для отображения экранных индикаторов на экране ЖКД. Для стирания индикаторов нажмите DISPLAY снова. Если выключатель POWER установлен в положение CAMERA, Вы можете стереть индикаторы путем нажатия DISPLAY.

Использование наушников
Подсоедините наушники (не прилагаются) к гнезду 🎧. Громкость Вы можете регулировать с помощью VOLUME. Когда Вы пользуетесь наушниками, из громкоговорителя звук не поступает.

Для воспроизведения изображения в видоискателе
Закройте панель ЖКД. Видоискатель включится автоматически. При использовании видоискателя Вы можете прослушивать звук только с помощью наушников.
Для просмотра на экране ЖКД снова откройте панель ЖКД. Видоискатель выключится автоматически.

Playing back a tape

Воспроизведение ленты

Note on the lens cover
The lens cover does not open when the POWER switch is set to PLAYER. Do not open the lens cover manually. It may cause malfunction.

Various playback modes

You can enjoy clear pictures on the LCD screen during still, slow and picture search.
(Crystal-clear still/slow/picture search)

To view a still picture (playback pause)
Press ❚❚ during playback. To resume playback, press ❚❚ or ►.

To locate a scene (picture search)
Keep pressing ◄◄ or ►► during playback. To resume normal playback, release the button.

To monitor the high-speed picture while advancing the tape or rewinding (skip scan)
Keep pressing ◄◄ while rewinding or ►► while advancing the tape. To resume normal playback, press ►.

To view the picture at 1/5 speed (slow playback)
–CCD-TRV27E/TRV46E only
Press ❚► on the Remote Commander during playback. To resume normal playback, press ►. If slow playback lasts for about 1 minute, it shifts to normal speed automatically.

Notes on playback
- Noise may appear when you use the crystal-clear still/slow/picture search function to play back the tape recorded in LP mode.
- Streaks appear and the sound is muted in the various playback modes.
- When playback pause mode lasts for 5 minutes, the camcorder automatically enters stop mode.
- Horizontal noise appears at the centre, or top and bottom of the screen when you play back a tape in reverse. This is normal.
- You can play back the tapes recorded in the Hi8 video system on the standard 8 mm camcorder (CCD-TRV16E/TRV27E only).

Примечание к крышке объектива
Крышка объектива не открывается, когда выключатель POWER установлен в положение PLAYER. Не открывайте крышку объектива вручную. Это может привести к неисправности.

Различные режимы воспроизведения

Вы можете наслаждаться четким изображением при просмотре на экране ЖКД стоп-кадра, замедленного воспроизведения и поиска изображения.
(Кристально чистые стоп-кадр/ замедленное воспроизведение/поиск изображения)

Для просмотра неподвижного изображения (пауза воспроизведения)
Нажмите ❚❚ во время воспроизведения. Для восстановления воспроизведения нажмите ❚❚ или ►.

Для обнаружения фрагмента (поиск изображения)
Держите нажатой кнопку ◄◄ или ►► во время воспроизведения. Для восстановления нормального воспроизведения отпустите кнопку.

Для контроля изображения на высокой скорости во время ускоренной перемотки ленты вперед или назад (поиск методом прогона)
Держите нажатой кнопку ◄◄ во время перемотки ленты назад или кнопку ►► во время перемотки ленты вперед. Для восстановления нормального воспроизведения нажмите ►.

Для просмотра изображения на 1/5 скорости (замедленное воспроизведение)
– Только CCD-TRV27E/TRV46E
Нажмите ❚► на пульте дистанционного управления во время воспроизведения. Для восстановления нормального воспроизведения нажмите ►. Если замедленное воспроизведение продолжается приблизительно в течению 1 минуты, аппарат переключится на нормальную скорость автоматически.

Примечания к воспроизведению
- Помехи могут появляться, когда Вы используете функцию кристально чистого стоп-кадра/замедленного воспроизведения/ поиска изображения при воспроизведении ленты, записанной в режиме LP.
- "Тянучки" появляются и звук будет приглушен в различных режимах воспроизведения.
- Если режим паузы воспроизведения продолжается в течение 5 минут, видеокамера автоматически войдет в режим останова.
- При воспроизведении в режиме реверса в центре, вверху или внизу экрана появляется горизонтальный шум. Это нормальное явление.
- Вы можете воспроизводить пленки, записанные в видеосистеме Hi8 на стандартной 8-миллиметровой видеокамере (только для CCD-TRV16E/TRV27E).

Searching for the end of the picture

You can go to the end of the recorded portion after you record and play back the tape to make the transition between the last scene you recorded and the next scene smooth. The tape starts rewinding or fast-forwarding and the last 5 seconds (10 seconds in LP mode) of the recorded portion play back. Then the tape stops at the end of the recorded picture **(End Search)**.
Note that the End Search function does not work once you eject the cassette after you have recorded on the tape.
(1) While pressing OPEN, open the LCD panel.
(2) Press END SEARCH.
This function works when the POWER switch is set to either CAMERA or PLAYER.

Поиск конца изображения

Вы можете перейти к концу записанной части после записи и воспроизведения ленты для выполнения плавного перехода между последней сценой, которую Вы записали, и последующей сценой. Лента начинает перематываться назад или вперед, и последние 5 секунд (10 секунд в режиме LP) записанной части будут воспроизведены. Затем лента остановится в конце записанного изображения **(поиск конца)**.
Заметьте, что функция поиска конца не работает, если Вы вытолкнули кассету после выполнения записи на ленте.
(1) Нажимая OPEN, откройте панель ЖКД.
(2) Нажмите END SEARCH.
Данная функция работает, когда выключатель POWER установлен либо в положение CAMERA, либо в положение PLAYER.

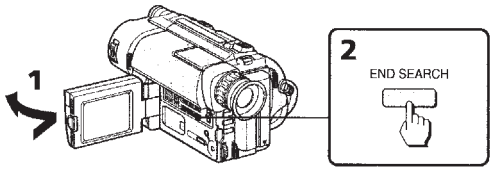

If you start recording after using END SEARCH
Occasionally, the transition between the last scene you recorded and the next scene may not be smooth.

Если Вы начали запись после использования END SEARCH
Изредка переход между последней сценой, которую Вы записали, и последующей сценой может не быть плавным.

Using alternative power sources

Использование альтернативных источников питания

You can choose any of the following power sources for your camcorder: battery pack, the mains and 12/24 V car battery. Choose the appropriate power source depending on where you want to use your camcorder.

Place	Power source	Accessory to be used
Indoors	Mains	Supplied AC power adaptor
Outdoors	Battery pack	Battery pack NP-F330 (supplied), NP-F530, NP-F550, NP-F730, NP-F750, NP-F930, NP-F950
In the car	12 V or 24 V car battery	Sony DC adaptor/ charger (not supplied)

Notes on power sources
- Disconnecting the power source or removing the battery pack during recording or playback may damage the inserted tape.
- The DC IN jack has source priority. This means that the battery pack cannot supply any power if the mains lead is connected to the DC IN jack, even when the mains lead is not plugged into the mains.

Вы можете выбрать любой из следующих источников питания для Вашей видеокамеры: батарейный блок, электрическую сеть и 12/24 В автомобильный аккумулятор. Выберите подходящий источник питания в зависимости от того, где Вы хотите использовать Вашу видеокамеру.

Место	Источник питания	Используемые принадлежности
В помещении	Электрическая сеть	Прилагаемый сетевой адаптер перем. тока
На улице	Батарейный блок	Батарейный блок NP-F330 (прилагается), NP-F530, NP-F550, NP-F730, NP-F750, NP-F930, NP-F950
В автомобиле	12 В или 24 В автомобильный аккумулятор	Зарядное устройство/ Адаптер пост. тока Sony (Не прилагается)

Примечания по источникам питания
- Отсоединение источника питания или снятие батарейного блока во время записи или воспроизведения может повредить вставленную ленту.
- Гнездо DC IN обладает приоритетом в качестве источника питания. Это означает, что батарейный блок не может подавать питание, если сетевой шнур подсоединен к гнезду DC IN, даже когда сетевой шнур не включен в стенную розетку.

Using the mains

(1) Open the DC IN jack cover, and connect the AC power adaptor to the DC IN jack on the camcorder.
(2) Connect the mains lead to the AC power adaptor.
(3) Connect the mains lead to the mains.

Использование электрической сети

(1) Откройте крышку гнезда DC IN и подсоедините сетевой адаптер переменного тока к гнезду DC IN на видеокамере.
(2) Подсоедините сетевой провод к сетевому адаптеру переменного тока.
(3) Подсоедините сетевой провод к сети.

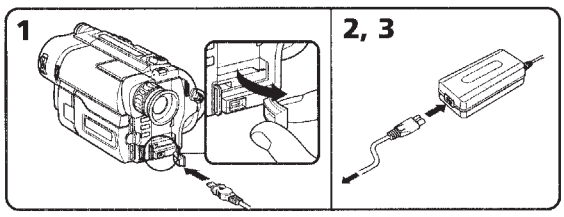

WARNING
The mains lead must only be changed at a qualified service shop.

PRECAUTION
The set is not disconnected from the AC power source (mains) as long as it is connected to the mains, even if the set itself has been turned off.

Note
Keep the AC power adaptor away from the camcorder if the picture is disturbed.

This mark indicates that this product is a genuine accessory for Sony video products.
When purchasing Sony video products, Sony recommends that you purchase accessories with this "GENUINE VIDEO ACCESSORIES" mark.

ПРЕДУПРЕЖДЕНИЕ
Сетевой пронод должен быть заменен только в мастерской квалифицированного обслуживания.

ПРЕДОСТЕРЕЖЕНИЕ
Аппарат не отключается от источника питания перем. тока (электрической сети) до тех пор, пока он подключен к электрической сети, даже если сам аппарат выключен.

Примечание
Держите сетевой адаптер переменного тока подальше от видеокамеры, если изображение содержит помехи.

Настоящий знак указывает, что данная продукция является подлинной принадлежностью видеопродукции Sony.
Если Вы покупаете видеопродукцию Sony, то мы рекомендуем, чтобы Вы покупали принадлежности, помеченные знаком "GENUINE VIDEO ACCESSORIES".

Changing the mode settings

Изменение установок режимов

You can change the mode settings in the menu system to further enjoy the features and functions of the camcorder.
(1) Press MENU to display the menu.
(2) Turn the control dial to select the desired icon in the left side of the menu, then press the dial to set.
(3) Turn the control dial to select the desired item, then press the dial to set.
(4) Turn the control dial to select the desired mode, and press the dial to set. If you want to change the other modes, repeat steps 3 and 4. If you want to change the other items, select ⮐ RETURN and press the dial, then repeat steps from 2 to 4.
(5) Press MENU or select ⮐ icon to erase the menu display.

Вы можете изменять установки режимов в системе меню для большего наслаждения особенностями и функциями видеокамеры.
(1) Нажмите MENU для отображения меню.
(2) Вращая регулировочный диск, выберите нужную пиктограмму в левой части меню, а затем нажатием диска занесите ее в память.
(3) Вращая регулировочный диск, выберите нужный параметр, а затем нажатием диска занесите его в память.
(4) Вращая регулировочный диск, выберите нужный режим, а затем нажатием диска занесите его в память. Если Вы хотите изменить другие режимы, повторите пункты 3 и 4. Если Вы хотите изменить другие установки выберите ⮐ RETURN и нажмите диск, а затем повторите пункты 2 – 4.
(5) Нажмите MENU или выберите пиктограмму ⮐ для стирания дисплея меню.

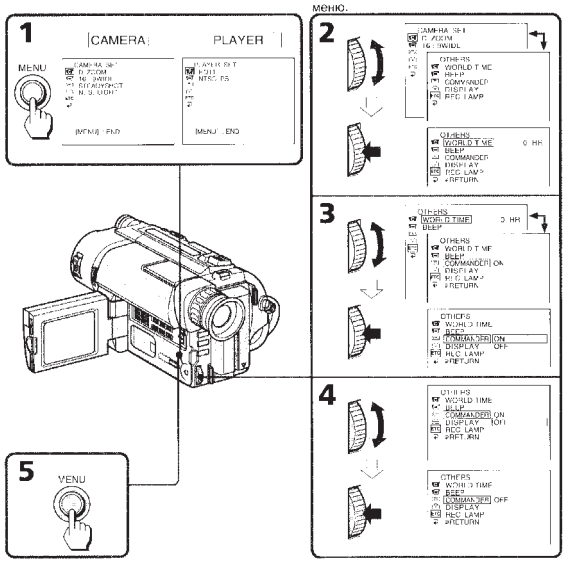

Note on the menu display
Depending on the model of your camcorder, the menu display may be different from that in this illustration.

Notes on changing the mode setting
- Menu items differ depending on the setting of the POWER switch to PLAYER or CAMERA.
- When you let the subject monitor the shot (mirror mode), the menu display does not appear.

Selecting the mode setting of each item

Items for both CAMERA and PLAYER modes

LCD B. L.* <BRT NORMAL/BRIGHT>
- Normally select BRT NORMAL.
- Select BRIGHT when the LCD screen is dark. When you select BRIGHT, battery life is about 10 percent shorter during recording. When you use the power sources other than the battery pack, BRIGHT is automatically selected, and LCD B.L. is not displayed in the menu.

LCD COLOUR*
Select this item to adjust the colour on the LCD screen.

REMAIN* <AUTO/ON>
- Select AUTO when you want to display the remaining tape bar:
  - for about 8 seconds after the camcorder is turned on and calculates the remainder of the tape.
  - for about 8 seconds after a cassette is inserted and the camcorder calculates the remainder of the tape. for the period of tape rewinding, forwarding or picture search in PLAYER mode.
  - for about 8 seconds after DISPLAY is pressed to display the screen indicators.
  - for about 8 seconds after ► is pressed in PLAYER mode.
- Select ON to always display the remaining tape indicator.

Примечание к дисплею меню
В зависимости от модели Вашей видеокамеры дисплей меню может отличаться от описанного в данной инструкции по эксплуатации.

Примечания к изменению установок режимов
- Установки меню отличаются в зависимости от нахождения выключателя POWER в положении PLAYER или CAMERA.
- Когда Вы даете снимаемому человеку наблюдать съемку (зеркальный режим) дисплей меню появляться не будет.

Выбор режима каждой установки

Установки для режимов и CAMERA и PLAYER

LCD B.L.* <BRT NORMAL/BRIGHT>
- Обычно выбирайте BRT NORMAL.
- Выбирайте BRIGHT, когда экран ЖКД темный.

При выборе функции BRIGHT срок работы батареи в режиме записи сокращается примерно на 10%.
Когда Вы используете другие источники питания помимо батарейного блока, функция BRIGHT выбирается автоматически, и функция LCD B.L. в меню не показывается.

LCD COLOUR*
Выберите данную установку для регулировки цвета на экране ЖКД.

REMAIN* <AUTO/ON>
- Выберите AUTO, если Вы хотите отобразить шкалу оставшейся ленты:
  - приблизительно на 8 секунд после включения видеокамеры и вычисления остатка ленты.
  - приблизительно на 8 секунд после установки кассеты и вычисления остатка ленты.
  - на период ускоренной перемотки ленты назад, вперед или поиска изображения в режиме PLAYER.
  - приблизительно на 8 секунд после нажатия кнопки DISPLAY для отображения экранной индикации.
  - приблизительно на 8 секунд после нажатия ► в режиме PLAYER.
- Выберите ON для постоянного отображения индикатора оставшейся ленты.

LTR SIZE* <NORMAL/2x>
- Normally select NORMAL.
- Select 2x to display selected menu item by twice size of normal.

BEEP* <ON/OFF>
- Select ON so that beeps sound when you start/stop recording, etc.
- Select OFF when you do not want to hear the beep sound.

COMMANDER <ON/OFF> (CCD-TRV27E/TRV46E only)
- Select ON when using the supplied Remote Commander for the camcorder.
- Select OFF when not using the Remote Commander.

DISPLAY* <LCD or V-OUT/LCD>
- Normally select LCD. The display appears on the LCD screen.
- Select V-OUT/LCD to show the display both on the TV screen and LCD screen.

Items for CAMERA mode only

D ZOOM* <ON/OFF>
- Select ON to activate digital zooming.
- Select OFF to prevent the deterioration of the picture quality. The camcorder goes back to optical zoom.

16:9WIDE* <OFF/CINEMA/16:9FULL>
- Normally select OFF.
- Select CINEMA to record in CINEMA mode.
- Select 16:9FULL to record in 16:9FULL mode.

STEADYSHOT* <ON/OFF> (CCD-TRV46E only)
- Normally select ON.
- Select OFF to release the SteadyShot function.

N.S.LIGHT* <ON/OFF>
- Normally select ON.
- Select OFF to not use the NightShot light function.

LTR SIZE* <NORMAL/2x>
- Обычно выбирайте NORMAL.
- Выберите 2x для отображения выбранной установки меню в два раз больше нормального размера.

BEEP* <ON/OFF>
- Выберите ON, чтобы зуммерные сигналы звучали, когда Вы начинаете/останавливаете запись и т.д.
- Выберите OFF, если Вы не хотите слышать зуммерный звуковой сигнал.

COMMANDER <ON/OFF> (Только CCD-TRV27E/TRV46E)
- Выбирайте ON при использовании прилагаемого к видеокамере пульта дистанционного управления.
- Выберите OFF, если пульт дистанционного управления не используется.

DISPLAY* <LCD или V-OUT/LCD>
- Обычно выбирайте LCD. Дисплей появляется на экране ЖКД.
- Выберите V-OUT/LCD для отображения индикаторов и на экране ЖКД и на экране телевизора.

Установки только для режима CAMERA

D ZOOM * <ON/OFF>
- Выберите ON для включения цифровой трансфокации.
- Выберите OFF, чтобы избежать ухудшения качества изображения. Видеокамера вновь переходит в режим оптической трансфокации.

16:9WIDE* <OFF/CINEMA/16:9FULL>
- Обычно выбирайте OFF.
- Выберите CINEMA для записи в режиме CINEMA.
- Выберите 16:9FULL для записи в режиме 16:9FULL.

STEADYSHOT* <ON/OFF> (Только CCD-TRV46E)
- Обычно выбирайте ON.
- Выбирайте OFF для отключения функции устойчивой съемки.

N.S.LIGHT* <ON/OFF>
- Обычно выбирайте ON.
- Выберите OFF при неиспользовании функции освещения ночной съемки.

REC MODE* <SP/LP>
- Select SP when recording in SP (standard play) mode.
- Select LP when recording in LP (long play) mode.

When a tape recorded on this camcorder in LP mode is played back on other types of 8 mm camcorders or VCRs, the playback quality may not be as good as that on this camcorder.

Note on the REC mode – CCD-TRV46E only
When you record tapes in LP mode, the picture is not recorded in the Hi8 system, but in the standard 8 mm system.

ORC TO SET*
Select this item to automatically adjust the recording condition to get the best possible recording.
If you have already performed this function, "ORC ON" is displayed.
ORC stands for "Optimizing the Recording Condition."

CLOCK SET*
Reset the date or time.

AUTO DATE* <ON/OFF>
- Select ON to record the date for 10 seconds after recording has started.
- Select OFF to not record the date.

DEMO MODE* <ON/OFF>
- Select ON to make the demonstration appear.
- Select OFF to deactivate the demonstration mode.

Notes on DEMO MODE
- DEMO MODE is set to STBY (Standby) at the factory and the demonstration starts about 10 minutes after you set the POWER switch to CAMERA without inserting a cassette. Note that you cannot select STBY of DEMO MODE in the menu system.
- You cannot select DEMO MODE when a cassette is inserted in the camcorder.
- If you insert a cassette during the demonstration, the demonstration stops. You can start recording as usual. DEMO MODE automatically returns to STBY.
- When NIGHTSHOT is set to ON, "NIGHTSHOT" appears in the viewfinder or on the LCD screen and you cannot select DEMO MODE.

REC MODE* <SP/LP>
- Выберите SP при записи в режиме SP (стандартного воспроизведения).
- Выберите LP при записи в режиме LP (удлиненного воспроизведения).

Когда лента, записанная на данной видеокамере в режиме LP, воспроизводится на других типах 8 мм видеокамер или КВМ, качество воспроизведения может быть не таким хорошим, как при воспроизведении на данной видеокамере.

Примечание о режиме REC – Только CCD-TRV46E
При записи на магнитную ленту в режиме LP изображение записывается не в системе Hi8, а в стандартной 8-миллиметровой системе.

ORC TO SET*
Выберите данную установку для автоматической регулировки условий записи для получения по возможности наилучшей записи.
Если Вы уже задействовали эту функцию, то будет отображаться "ORC ON".
Английское сокращение ORC означает "оптимизация условий записи".

CLOCK SET*
Выберите эту установку для переустановки даты или времени.

AUTO DATE* <ON/OFF>
- Выберите ON для записи даты в течение 10 секунд после начала записи.
- Выберите OFF, чтобы дата не записывалась.

DEMO MODE* <ON/OFF>
- Выберит ON для появления демонстрации.
- Выберите OFF для отключения функции демонстрации.

Примечания к DEMO MODE
- DEMO MODE устанавливается на заводе на STBY (готовность) и демонстрация начинается приблизительно через 10 минут после установки выключателя POWER в положение CAMERA без вставки кассеты. Заметьте, что Вы не можете выбирать STBY для режима DEMO MODE в системе меню.
- Вы не можете выбрать DEMO MODE, если кассета вставлена в видеокамеру.
- Если Вы вставите кассету во время демонстрации, то демонстрация прекращается. Вы можете начать запись, как обычно. DEMO MODE автоматически возвращается к STBY.
- Если функция NIGHTSHOT установлена во включенное положение ON, в видоискателе или на экране ЖКД появится индикация "NIGHTSHOT" и вы не сможете выбрать DEMO MODE.

To look at the demonstration at once
Eject the cassette, if inserted. Select ON of DEMO MODE and erase the menu display. The demonstration will begin.
When you turn off the camcorder once, DEMO MODE automatically returns to STBY.

WORLD TIME*
Select this item to set the clock by a time difference.

REC LAMP* <ON/OFF>
- Select OFF when you do not want the camera recording/battery lamp at the front of the unit to light up.
- Normally select ON.

Items for PLAYER mode only

EDIT <ON/OFF>
- Select ON to minimize picture deterioration when editing.
- Normally select OFF.

The EDIT setting works only during playback.

NTSC PB* <ON PAL TV/NTSC 4.43>
- Normally select ON PAL TV.
- Select NTSC 4.43 if your TV has the NTSC 4.43 mode when playing back a tape recorded in the NTSC colour system.

When you play back on a Multi System TV, select the best mode while watching the picture on the TV.

* These settings are retained even when the battery pack is removed, as long as the lithium battery is in place.

Для безотлагательного просмотра демонстрации
Выталкните кассету, если она вставлена. Выберите ON в установке DEMO MODE и сотрите дисплей меню. Начинается демонстрация.
Когды Вы выключите видеокамеру DEMO MODE автоматически возвращается к STBY.

WORLD TIME*
Выберите данную функцию для установки часов по разнице во времени.

REC LAMP* <ON/OFF>
- Выберите OFF, если Вы не хотите, чтобы загоралась лампочка записи камерой/батареи на передней панели аппарата.
- Обычно выбирайте ON.

Установки только для режима PLAYER

EDIT <ON/OFF>
- Выберите ON для сведения помех к минимуму во время монтажа.
- Обычно выбирайте OFF.

Функция EDIT применима только в режиме воспроизведения.

NTSC PB* <ON PAL TV/NTSC 4.43>
- Обычно вибирайте ON PAL TV.
- Выберите NTSC 4.43, если в Вашем телевизоре имеется режим NTSC 4.43 во время воспроизведения ленты, записанной в системе цветного телевидения NTSC. Если Вы воспроизводите на мультисистемном телевизоре, то выберите наилучший режим во время просмотра изображения на экране телевизора.

* Эти установки остаются в силе даже при снятии батарейного блока до тех пор, пока на месте литиевая батарейка.

Shooting with backlighting

When you shoot a subject with the light source behind the subject or a subject with a light background, use the BACK LIGHT function.

Press BACK LIGHT. The ▣ indicator appears in the viewfinder or on the LCD screen.

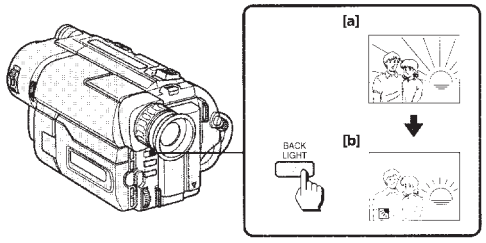

[a] Subject is too dark because of backlight.
[b] Subject becomes bright with backlight compensation.

After shooting

Be sure to release this adjustment condition by pressing BACK LIGHT again. The ▣ indicator disappears. Otherwise, the picture will be too bright under normal lighting condition.

This function is also effective under the following conditions:

- A subject with a light source nearby or a mirror reflecting light
- A white subject against a white background. Especially when you shoot a person wearing shiny clothes made of silk or synthetic fiber, his or her face tends to become dark if you do not use this function.

To make a fine adjustment

You can adjust the exposure manually. However, when you adjust the exposure manually, you cannot operate the BACK LIGHT function.

Съемка с задней подсветкой

Когда Вы снимаете объект с источником света позади объекта или объект на освещенном фоне, используйте функцию BACK LIGHT.

Нажмите BACK LIGHT. Индикатор ▣ появляется в видоискателе или на экране ЖКД.

[a] Объект является слишком темным из-за задней подсветки.
[b] Объект становится ярким с помощью компенсации задней подсветки.

После съемки

Не забудьте отключить состояние этой регулировки путем нажатия BACK LIGHT снова. Индикатор ▣ исчезнет. В противном случае изображение будет слишком ярким в условиях нормального освещения.

Данная функция является эффективной в следующих условиях:

- Для объекта, расположенного рядом с источником света или зеркалом, отражающим свет.
- Белый объект на белом фоне. Особенно, когда Вы снимаете человека в блестящей одежде из шелка или синтетического волокна, его или ее лицо может стать темным, если Вы не будете использовать данную функцию.

Для выполнения точной регулировки

Вы можете отрегулировать экспозицию вручную. Однако при ручной регулировке экспозиции функция BACK LIGHT работать не будет.

Using the FADER function

Selecting the fader function

You can fade in or out to give your recording a professional appearance.
When the picture fades in, the sound gradually increases. When the picture fades out, the sound gradually decreases.

Использование функции FADER

Выбор функции введения/выведения изображения

Вы можете плавно вводить или выводить изображение, придавая Вашей записи профессиональный вид.
Если изображение постепенно вводится, звук постепенно увеличивается. Если изображение постепенно выводится, звук постепенно уменьшается.

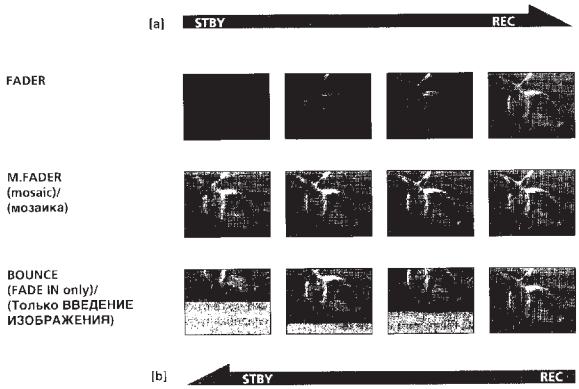

MONOTONE
When fading in, the picture gradually changes from black and white to colour.
When fading out, the picture gradually changes from colour to black and white.

Note
When D ZOOM in the menu system is set to ON, you cannot use the BOUNCE function.

MONOTONE
При введении изображение постепенно изменяется от черно-белого до цветного.
При выведении изображение постепенно изменяется от цветного до черно-белого.

Примечание
Вы не можете пользоваться функцией BOUNCE, когда функция D ZOOM установлена в меню на ON.

Using the fader function

When fading in [a]
(1) While the camcorder is in Standby mode, press FADER until the desired fade indicator flashes.
(2) Press START/STOP to start recording. The fade indicator stops flashing.

When fading out [b]
(1) During recording, press FADER until the desired fade indicator flashes.
(2) Press START/STOP to stop recording. The fade indicator stops flashing, and then recording stops.

The fading mode selected last is indicated first of all.

Использование функции введения/выведения изображения

Для введения изображения [a]
(1) Когда видеокамера находится в режиме готовности нажимайте FADER до тех пор, пока желаемый индикатор введения/выведения не начнет мигать.
(2) Нажмите START/STOP для начала записи. Индикатор введения/выведения перестает мигать.

Для выведения изображения [b]
(1) Во время записи нажимайте FADER до тех пор, пока желаемый индикатор введения/выведения не начнет мигать.
(2) Нажмите START/STOP для остановки записи. Индикатор введения/выведения перестает мигать и запись останавливается.

Режим введения/выведения, который был выбран последним, указывается прежде всего.

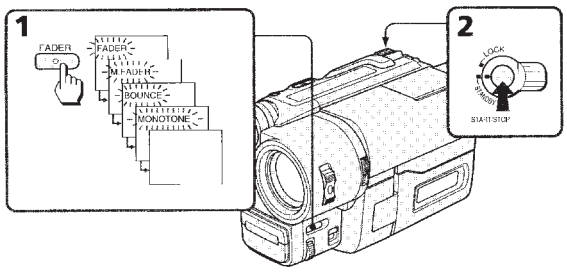

When you use the BOUNCE function
Set D ZOOM to OFF in the menu system.

Когда Вы используете функцию BOUNCE
Установите D ZOOM на OFF в системе меню.

Note on the BOUNCE function
When you use the following functions, "BOUNCE" indicator does not appear.
– Wide mode
– Functions using the PICTURE EFFECT button
– Functions using the PROGRAM AE button

To cancel the fader function

Before pressing START/STOP, press FADER until the indicator disappears.

When the date, time or title is displayed
The date, time and title do not fade in or fade out.

When the START/STOP MODE switch is set to 5SEC or ANTI GROUND SHOOTING ⏚
You cannot use the fader function.

Note on the fader function
While using the BOUNCE function, you cannot use the following functions.
Exposure
Focus
– Zoom

Примечание относительно функции BOUNCE
Если Вы используете следующие функции, индикатор "BOUNCE" не появится.
– Широкоформатный режим
– Функции с использованием кнопки PICTURE EFFECT
– Функции с использованием кнопки PROGRAM AE

Для отмены функции введения/выведения изображения

Перед нажатием START/STOP нажимайте FADER до тех пор, пока индикатор не исчезнет.

Когда отображаются индикатор даты или времени и надпись
Индикатор даты, времени и надпись не вводятся и не выводятся вместе с изображением.

Когда переключатель START/STOP MODE установлен в положение 5SEC или ANTI GROUND SHOOTING ⏚
Вы не сможете использовать функцию введения/выведения изображения.

Примечания к функции введения/выведения изображения
Во время использования функции BOUNCE Вы не можете использовать следующие функции.
– Экспозиция
– Фокусировка
– Трансфокация

Shooting in the dark (NightShot)

Съемка в темных условиях (Ночная съемка)

The NightShot function enables you to shoot a subject in a dark place. You can achieve a satisfactory recording of the ecology of nocturnal animals for observation with this function.

Функция ночной съемки позволяет Вам производить съемку объекта в темном месте. Вы можете получить удовлетворительную запись жизни ночных животных при использовании данной функции.

(1) While the camcorder is in Standby mode, slide NIGHTSHOT to ON.
(2) Press START/STOP to start recording.
and "NIGHTSHOT" indicators flash.

(1) Когда видеокамера находится в режиме готовности, передвиньте NIGHTSHOT в положение ON.
(2) Нажмите START/STOP для начала записи. Начнут мигать индикаторы и "NIGHTSHOT".

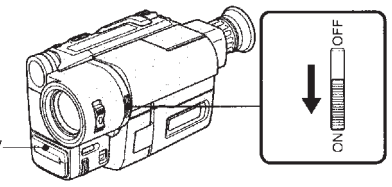

NightShot light emitter/
Эмиттер ночной съемки

To cancel the NightShot function

Slide NIGHTSHOT to OFF.

Using the NightShot Light

When you set N.S.LIGHT to ON in the menu system, the picture will be more clear. NightShot light rays are infrared and are therefore invisible. The maximum limit of NightShot light is about 3 m.

Для отмены функции ночной съемки

Передвиньте NIGHTSHOT в положение OFF.

Использование лампы ночной съемки

Когда функция N.S. LIGHT установлена на ON в системе меню, изображение будет более четким.
Световые лучи ночной съемки являются инфракрасными лучами и поэтому являются невидимыми. Максимальный предел для ночной съемки составляет около 3 метров.

Notes on the NightShot

- Do not use the NightShot function in bright places (ex. outdoors).
  This may cause your camcorder to malfunction.
- The following functions are not operable when using the NightShot function.
  – PROGRAM AE
  – Exposure
- When you keep setting NIGHTSHOT to ON in normal recording, picture may be recorded in incorrect/unnatural colour.
- If focusing is difficult with the autofocus mode when using the NightShot function, focus manually.

Примечания к ночной съемке

- Не используйте функцию ночной съемки (NightShot) при съемке в светлом месте, (например, днем на улице), поскольку это может привести к сбоям в работе камеры.
- При использовании функции ночной съемки неприменимы следующие функции:
  – PROGRAM AE
  – Экспозиция
- Когда Вы оставляете NIGHTSHOT в положении ON при нормальной записи, изображение может быть записано в неправильном/неестественном цвете.
- Если фокусировка в автоматическом режиме при использовании функции ночной съемки затруднена, выполните фокусировку вручную.

Using the wide mode function

Использование функции широкоформатного режима

Selecting the desired mode

You can record a cinemalike picture (CINEMA) or a 16:9 wide picture to watch on the 16:9 wide-screen TV (16:9 FULL).

Выбор желаемого режима

Вы можете записывать изображение как в кинотеатре (CINEMA) или широкоформатное изображение 16:9 для просмотра на широкоэкранном телевизоре формата 16:9 (16:9 FULL).

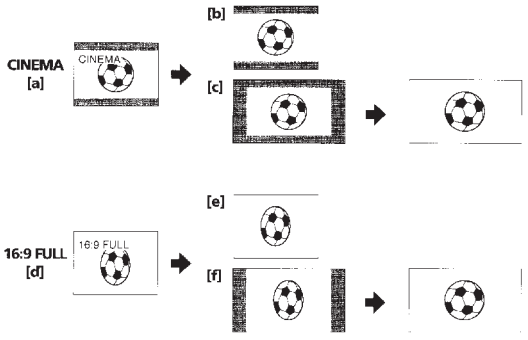

CINEMA

Black bands appear at the top and the bottom of the screen, and the viewfinder or LCD screen [a] and a normal TV screen [b] look wide. You can also watch the picture without black bands on a wide-screen TV [c].

16:9 FULL

The picture in the viewfinder or on the LCD screen [d] or on a normal TV [e] is horizontally compressed. You can watch the picture of normal images on a wide-screen TV [f].

CINEMA

Черные полосы появляются сверху и снизу экрана, видоискатель и экран ЖКД [a] и нормальный экран телевизора [b] выглядят широкими. Вы также можете просмотреть изображение без черных полос на широкоэкранном телевизоре [c].

16:9 FULL

Изображение на экране ЖКД [d] или на обычном телевизоре [e] сжато по горизонтали. Вы можете просмотреть нормальное изображение на широкоэкранном телевизоре [f].

Using the wide mode function

You can select the wide mode (OFF, CINEMA, 16:9FULL) in the menu system (p. 34).

To cancel wide mode

Select OFF in the menu system.

To watch the tape recorded in wide mode

To watch the tape recorded in CINEMA mode, set the screen mode of the wide-screen TV to zoom mode. To watch the tape recorded in 16:9 FULL mode, set it to full mode. For details, refer to the operating instructions of your TV.
Note that the picture recorded in 16:9 FULL mode looks compressed on a normal TV.

Notes on wide mode

- If wide mode is set to 16:9FULL, the SteadyShot function does not work and the "" indicator flashes (CCD-TRV46E only).
- In wide mode, you cannot select the BOUNCE function with FADER.
- When you record in 16:9 FULL mode, the date or time indicator will be widened on the wide-screen TV.
- If you dub a tape, the tape is copied in the same mode as the original recording.
- When recording, you cannot change the mode.

Использование функции широкоформатного режима

Вы можете выбрать широкоформатный режим (OFF, CINEMA, 16:9FULL) в системе меню (стр. 34).

Для отмены режима

Выберите OFF в системе меню.

Для просмотра ленты, записанной в широкоформатном режиме

Для просмотра ленты записанной в режиме CINEMA установите режим экрана широкоэкранного телевизора на режим масштабирования. Для просмотра ленты, записанной в режиме 16:9 FULL, установите его на полноэкранный режим. Подробности смотрите в инструкции по эксплуатации Вашего телевизора.
Заметьте, что изображение, записанное в режиме 16:9 FULL , выглядит сжатым на обычном телевизоре.

Примечания к широкоформатному режиму

- Если широкоформатный режим установлен на 16:9 FULL, то функция устойчивой съемки работать не будет, а индикатор "" будет мигать (только CCD-TRV46E).
- В широкоформатном режиме Вы не можете выбрать функцию перехода (BOUNCE) с помощью FADER.
- При записи в режиме 16:9 FULL индикатор даты или времени будет расширенным на широкоэкранном телевизоре.
- Если Вы осуществляете перезапись ленты, то лента будет записываться в таком режиме, как и исходная лента.
- Во время записи Вы не можете изменить режим.

Using the PROGRAM AE function

Selecting the best mode

You can select one of six PROGRAM AE (Auto Exposure) modes to suit your shooting situation, referring to the following.

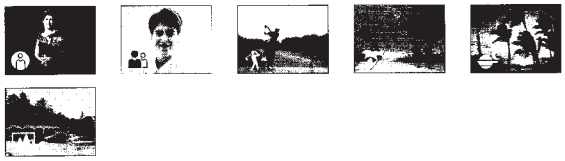

Spotlight mode
For subjects in spotlight, such as at the theatre or a formal event.

Soft Portrait mode
For zooming in on a still subject in telephoto mode, or for a subject behind an obstacle such as a screen. Creates a soft background for subjects such as people or flowers, and faithfully reproduces skin colour.

Sports Lesson mode
For recording fast moving subjects such as in tennis or golf games.

Beach & Ski mode
For people or faces in strong light or reflected light, such as at a beach in midsummer or on a ski slope.

Sunset & Moon mode
For recording subjects in dark environments such as sunsets, fireworks, neon signs, or general night views.

Landscape mode
For distant subjects such as mountains or when recording a subject behind an obstacle such as a window or screen.

Использование функции PROGRAM AE

Выбор наилучшего режима

Вы можете выбрать из шести режимов PROGRAM AE (автоматической экспозиции) режим, который подходит для съемки в Вашей ситуации, сверяясь со следующими описаниями.

Режим прожекторного освещения
Для записи объекта под прожекторным освещением, как например, в театре или на официальном приеме.

Мягкий портретный режим
Для выполнения наезда видеокамеры на неподвижный объект в режиме телефото или для записи объекта, находящегося за преградой, например, за сеткой. Создает мягкий фон для таких объектов, как люди или цветы, и четко воспроизводит телесный цвет.

Режим спортивных занятий
Для съемки быстродвигающихся объектов, как например, в играх в теннис или гольф.

Пляжный и лыжный режим
Для записи людей или лиц, находящихся под сильным освещением или отраженным светом, как например, на пляже летом или на снежном склоне.

Режим захода солнца и луны
Для записи объектов в темных условиях, как например, заход солнца, фейерверки, неоновые рекламы или общие ночные пейзажи.

Ландшафтный режим
Для записи удаленных объектов, таких как горы, или при записи объекта за преградой, как например, за окном или сеткой.

Using the PROGRAM AE function

(1) Press PROGRAM AE.
(2) Turn the control dial to select the desired PROGRAM AE mode.

Использование функции PROGRAM AE

(1) Нажмите PROGRAM AE.
(2) Поверните регулировочный диск для выбора желаемого режима PROGRAM AE.

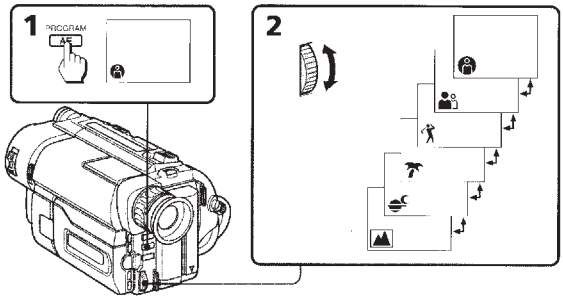

To turn off PROGRAM AE
Press PROGRAM AE again.

Notes on focus setting
- In the Spotlight, Sports lesson and Beach & Ski modes, you cannot take close-ups because the camcorder is set to focus only on subjects in the middle to far distance.
- In the Sunset & Moon and Landscape modes, the camcorder is set to focus only on distant subjects.

Note on PROGRAM AE
Flickering or changes in colour may occur in the following modes if recording is carried out under a discharge tube such as fluorescent lamp, sodium lamp or mercury lamp. If this happens, turn off PROGRAM AE.
– Soft Portrait mode
– Sports Lesson mode

Note
When using the NightShot function, the PROGRAM AE indicator flashes to indicate that it will not operate with this function.

Для выключения PROGRAM AE
Нажмите PROGRAM AE.

Примечания к установке фокусировки
- В режимах прожекторного освещения, спортивных занятий, а также пляжном и лыжном режимах Вы не можете снимать крупным планом, так как видеокамера фокусируется только на объекты среднего и дальнего удаления.
- В режимах захода солнца и луны и ландшафтном видеокамера фокусируется только на удаленные объекты.

Примечание о PROGRAM AE
Если съемка осуществляется под осветительной разрядной трубкой, например, люминесцентной, натриевой или ртутной лампой, при использовании двух названных ниже режимов может наблюдаться мерцание или изменение цвета изображения. В таком случае отключите PROGRAM AE.
– режим Мягкий портретный режим
– режим Режим спортивных занятий

Примечание
Когда Вы используете функцию ночной съемки, индикатор PROGRAM AE мигает, давая знать, что эта программа не будет работать одновременно с указанной функцией.

Focusing manually

When to use manual focus

In the following cases you should obtain better results by adjusting the focus manually.



- Insufficient light **[a]**
- Subjects with little contrast – walls, sky, etc. **[b]**
- Too much brightness behind the subject **[c]**
- Horizontal stripes **[d]**
- Subjects through frosted glass
- Subjects beyond nets, etc.
- Bright subject or subject reflecting light
- Shooting a stationary subject when using a tripod

Ручная фокусировка

Когда использовать ручную фокусировку

В следующих случаях Вы можете получить лучшие результаты, отрегулировав фокусировку вручную.

- Недостаточное освещение **[a]**
- Объекты с малым контрастом - стены, небо и т.д. **[b]**
- Слишком яркий фон за объектом **[c]**
- Горизонтальные полосы **[d]**
- Съемка объектов через матированное стекло
- Объекты за сеткой и т.д.
- Яркий объект или объект, отражающий свет
- Съемка неподвижного объекта с использованием треноги

Focusing manually

When focusing manually, first focus in telephoto before recording, and then reset the shot length.
(1) Set FOCUS to MANUAL. The indicator appears in the viewfinder or on the LCD screen.
(2) Move the power zoom lever to the "T" side in the optical zoom until the lever reaches the end.
(3) Turn the NEAR/FAR dial to achieve a sharp focus.
(4) Set the desired shot length using the power zoom lever.

Ручная фокусировка

При ручной фокусировке сперва выполняйте фокусировку в режиме телефото перед записью, а затем установите расстояние съемки.
(1) Установите FOCUS на MANUAL. Индикатор появляется в видоискателе или на экране ЖКД.
(2) Перемещайте рычаг приводного трансфокатора в сторону "T" по оптической зоне пока он не дойдет до упора.
(3) Поверните диск NEAR/FAR для получения четкой фокусировки.
(4) Установите желаемое расстояние съемки с использованием рычага приводного трансфокатора.

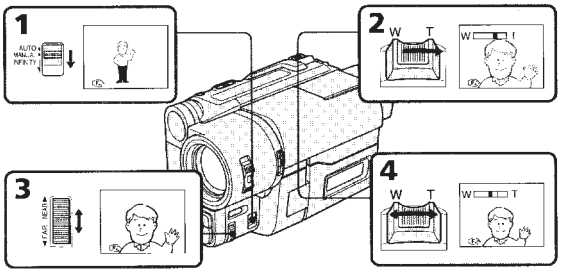

To return to autofocus mode
Set FOCUS to AUTO. The indicator in the viewfinder or on the LCD screen disappears.

Shooting in relatively dark places
Shoot at wide-angle after focusing in the telephoto position.

To record a very distant subject
Push FOCUS down to INFINITY. The lens focuses on the most distant subject while FOCUS is held down. When it is released, manual focus mode is resumed.
Use this function when shooting through a window or a screen, to focus on a most distant subject.

Note on manual focusing
The following indicators may appear:
- when recording a very distant subject.
- when the subject is too close to focus on.

Для возвращения к режиму автоматической фокусировки
Установите FOCUS на AUTO. Индикатор исчезнет из видоискателя или с экрана ЖКД.

Съемка в относительно темном месте
Производите съемку в положении широкого угла после выполнения фокусировки в положении телефото.

Для записи очень удаленного объекта
Нажать FOCUS вниз до INFINITY. Объектив фокусируется на наиболее удаленный объект, когда FOCUS удерживается в нажатом состоянии. После отпускания режим ручной фокусировки будет восстановлен. Используйте эту функцию при съемке через окно или решетку для фокусировки на наиболее удаленные объекты.

Примечание к ручной фокусировке
Могут появляться следующие индикаторы
- При записи очень удаленного объекта.
- Когда объект находится слишком близко для фокусировки.

Enjoying picture effect

Selecting picture effect

You can digitally process images to obtain special effects like those in films or on the TV.

PASTEL [a]
The contrast of the picture is emphasized, and the picture looks like an animated cartoon.

NEG. ART [b]
The colour and brightness of the picture is reversed.

SEPIA
The picture is sepia.

B&W
The picture is monochrome (black and white).

SOLARIZE [c]
The light intensity is more clear, and the picture looks like an illustration.

MOSAIC [d]
The picture is mosaic.

SLIM [e]
The picture expands vertically.

STRETCH [f]
The picture expands horizontally.

Наслаждение эффектами изображений

Выбор эффекта изображения

При помощи цифровой обработки изображения Вы можете достичь спецэффекта, аналогичного тем, которые применяются в кино и на телевидении.

PASTEL [a]
Контрастность изображения усиливается, и изображение выглядит, как мультипликация.

NEG. ART [b]
Цвет и яркость изображения будут негативными.

SEPIA
Изображение будет в цвете сепия.

B&W
Изображение будет монохроматическим (черно-белым).

SOLARIZE [c]
Интенсивность света будет более яркой, и изображение будет выглядеть, как иллюстрация.

MOSAIC [d]
Изображение будет мозаичным.

SLIM [e]
Изображение расширяется по вертикали.

STRETCH [f]
Изображение расширяется по горизонтали.

Using picture effect function

(1) Press PICTURE EFFECT.
(2) Turn the control dial to select the desired picture effect mode.

Использование функции эффектов изображения

(1) Нажмите PICTURE EFFECT.
(2) Поверните регулировочный диск для выбора желаемого режима эффекта изображения.

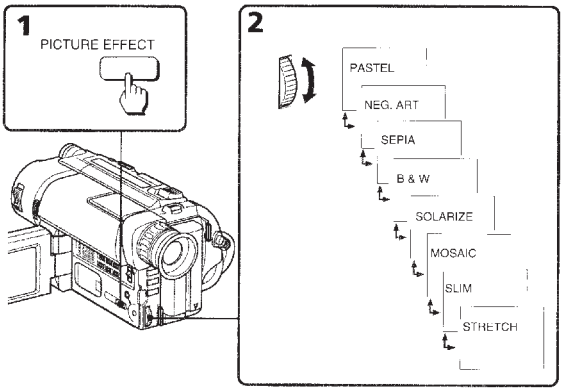

To turn off picture effect
Press PICTURE EFFECT. The indicator in the viewfinder or on the LCD screen goes out.

Note on the picture effect
When you turn the power off, the camcorder returns automatically to normal mode.

Выключение эффекта изображения
Нажмите PICTURE EFFECT. Индикатор эффекта изображения исчезнет из видоискателя или с экрана ЖКД.

Примечание к эффектам изображения
Когда Вы выключаете питание, видеокамера автоматически возвращается к нормальному режиму.

Adjusting the exposure

When to adjust the exposure

Adjust the exposure manually under the following cases.

[a]
• The background is too bright (back lighting)
• Insufficient light: most of the picture is dark

[b]
• Bright subject and dark background
• To record the darkness faithfully

Adjusting the exposure

(1) Press EXPOSURE.
(2) Turn the control dial to adjust the brightness.

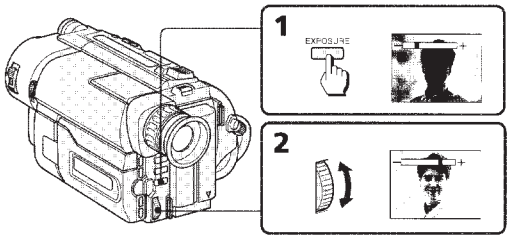

To return to automatic exposure mode
Press EXPOSURE again.

Регулировка экспозиции

Когда требуется регулировать экспозицию

Отрегулируйте экспозицию вручную в следующих случаях.

[a]
• Фон является слишком ярким (задняя подсветка)
• Недостаточное освещение: большая часть изображения темная

[b]
• Яркий предмет на темном фоне
• Для хорошей записи в темноте

Регулировка экспозиции

(1) Нажмите EXPOSURE.
(2) Поверните регулировочный диск для регулировки яркости.

Для возврата к режиму автоматической экспозиции
Снова нажмите EXPOSURE.

Shooting with the sun behind your subject
If the light source is behind your subject, or in the following situations, the subject will be recorded too dark.
• The subject is indoors and there is a window behind the subject.
• Bright light sources are included in the scene.
• When shooting a person wearing white or shiny clothes in front of a white background, the face will be recorded too dark.

Shooting in the dark
We recommend you to use the built-in light (CCD-TRV46E only) or a video light (not supplied). To get the best colour, you must maintain a sufficient light level.

Note
Exposure cannot adjusted when using the NightShot function.

When you adjust the exposure manually
• BACK LIGHT does not work.
• If you change the setting of PROGRAM AE mode, the camcorder automatically returns to automatic exposure mode.

Съемка в условиях, когда солнце находится за Вашим объектом
Если источник освещения находится у Вас за спиной или в следующих условиях, объект будет записан слишком темным.
• Объект внутри помещения и окно находится за объектом.
• Источники яркого освещения попадают в кадр.
• Когда снимаемае человек, носящий белую или блестящую одежду, на белом фоне, лицо может стать темным.

Съемка в темных условиях
Мы рекомендуем Вам использовать встроенную подсветку (только CCD-TRV46E) или видеофонарь (не прилагается). Для получения наилучшего цвета Вы должны поддерживать достаточный уровень освещения.

Примечание
Вы не можете регулировать экспозицию при включенной функции ночной съемки.

Когда Вы регулируете экспозицию вручную
• Функция BACK LIGHT не работает.
• Если Вы измените режим PROGRAM AE, видеокамера автоматически вернется к режиму автоматической экспозиции.

Superimposing a title

You can select one of eight preset titles and two custom titles. You can also select the language, colour, size and position of titles.

Superimposing titles

(1) Press TITLE to display the title menu.
(2) Turn the control dial to select □, then press the dial.
(3) Turn the control dial to select the desired title, then press the dial. The titles are displayed in the language you selected.
(4) Turn the control dial to select the colour, size, or position, then press the dial.
(5) Turn the control dial to select the desired item, then press the dial.
(6) Repeat steps 4 and 5 until the title is arranged as desired.
(7) Press control dial again to complete the setting.
(8) When you want to stop recording the title, press TITLE.

Наложение надписи

Вы можете выбирать из восьми предварительно установленных надписей и двух собственных надписей. Вы можете также выбирать язык, цвет, размер и положение надписей.

Наложение надписей

(1) Нажмите TITLE для отображения меню надписей .
(2) Поверните регулировочный диск для выбра □, а затем нажмите диск.
(3) Поверните регулировочный диск для выбора надписи, а затем нажмите регулировочный диск. Надпись отображается на выбранном Вами языке.
(4) Поверните регулировочный диск для выбора цвета, размера или положения, а затем нажмите регулировочный диск.
(5) Поверните регулировочный диск для выбора желаемого элемента, а затем нажмите регулировочный диск.
(6) Повторяйте пункты 4 и 5 до тех пор, пока не отрегулируете надпись по своему желанию.
(7) Нажмите регулировочный диск снова для завершения установки.
(8) Когда Вы захотите закончить запись надписи, нажмите TITLE.

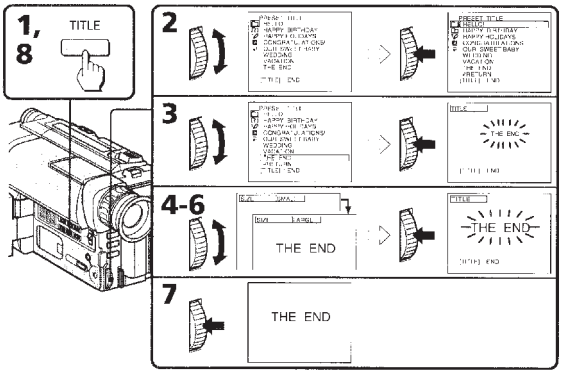

To superimpose the title from beginning

After step 7, press START/STOP to start recording.

To superimpose the title while you are recording

After pressing START/STOP to start recording, start from step 1. In this case, beep is not heard.

To select the language of preset title

When you want to select the language, select ◘ before step 2. Then select language and return to step 2.

To use the custom title

When you want to use the custom title, select ◘ in step 2.

Notes on superimposing a title

- If you have not given any custom title, "　　..." appears on the display.
- The FADER function works while the title is displayed, however, the title does not fade.
- If you display the menu or title menu while superimposing a title, the title is not recorded while the menu or title menu is being displayed.

Title colour changes as follows:

WHITE ↔ YELLOW ↔ VIOLET ↔ RED ↔ CYAN ↔ GREEN ↔ BLUE

Title size changes as follows:

SMALL ↔ LARGE

Title position changes as follows:

When you select the title size "SMALL", you can choose 9 positions. When you select the title size "LARGE" you can choose 8 positions.

Notes on the title

- Depending on size or position of the title, both of the date and time or either of them is not displayed.
- If you input 13 characters or more for a LARGE title, the title is automatically reduced into a proper size after the position is set.
- When the title is displayed, LCD BRIGHT and VOLUME indicators do not appear.

Для наложения надписи от начала

После пункта 7 нажмите START/STOP для начала записи.

Для наложения надписи в процессе записи

После нажатия START/STOP для начала записи начните с пункта 1. В этом случае зуммерный сигнал подаваться не будет.

Для выбора языка предварительно установленной надписи

Если Вы хотите выбрать язык, выберите ◘ перед пунктом 2. Затем выберите язык и вернитесь к пункту 2.

Для выбора собственной надписи

Если Вы хотите использовать собственную надпись, выберите ◘ в пункте 2.

Примечания к наложению надписи

- Если Вы не дали надписи никакого названия, на дисплее появится индикация "– – ...".
- Функция FADER во время отображения названия работает, однако название плавно не вводится и не выводится.
- Если Вы отобразите дисплей меню или меню надписей во время наложения надписи, то надпись не будет записываться во время отображения дисплея меню или меню надписей.

Цвет надписей изменяется следующим образом:

WHITE ↔ YELLOW ↔ VIOLET ↔ RED ↔ CYAN ↔ GREEN ↔ BLUE

Размер надписей изменяется следующим образом:

SMALL ↔ LARGE

Положение надписи изменяется следующим образом:

Если Вы выбираете размер надписи "SMALL", то Вы можете выбирать одно из 9 положений. Когда Вы выбираете размер надписи "LARGE", Вы может выбирать из 8 положений.

Примечания к надписям

- В зависимости от размера или положения названия дата и время или же что-то одно из них не отображается.
- Если Вы ввели 13 знаков или более для размера надписи LARGE, надпись автоматически уменьшается до надлежащего размера после выбора положения.
- Во время отображения надписи индикаторы LCD BRIGHT и VOLUME появляться не будут.

Making your own titles

You can make up to two titles and store them in the camcorder. We recommend to set the POWER switch to PLAYER or eject the cassette before you begin.
Your title can have up to 20 characters.
(1) Press TITLE to display the title menu.
(2) Turn the control dial to select ✎, then press the dial.
(3) Turn the control dial to select the first line (CUSTOM1) or second line (CUSTOM2), then press the dial.
(4) Turn the control dial to select the column of the desired character, then press the dial.
(5) Turn the control dial to select the desired character, then press the dial.
(6) Repeat steps 4 and 5 until you finish the title.
(7) For finishing the titling work, turn the control dial to select SET, then press the dial.

Создание Ваших собственных надписей

Вы можете создать две надписи и сохранить их в памяти видеокамеры. Мы рекомендуем установить выключатель POWER в положение PLAYER или вытолкнуть кассету перед началом.
Ваша надпись может иметь до 20 знаков.
(1) Нажмите TITLE для отображения меню надписей.
(2) Поверните регулировочный диск для выбора ✎, а затем нажмите диск.
(3) Поверните регулировочный диск для выбора первой линии строки (CUSTOM1) или второй линии строки (CUSTOM2), а затем нажмите диск.
(4) Поверните регулировочный диск для выбора колонки с желаемым знаком, а затем нажмите диск.
(5) Поверните регулировочный диск для выбора желаемого знака, а затем нажмите регулировочный диск.
(6) Повторяйте пункты 4 и 5 до тех пор, пока не закончите надпись.
(7) Для окончания работы по созданию надписи поверните регулировочный диск для выбора SET, а затем нажмите диск.

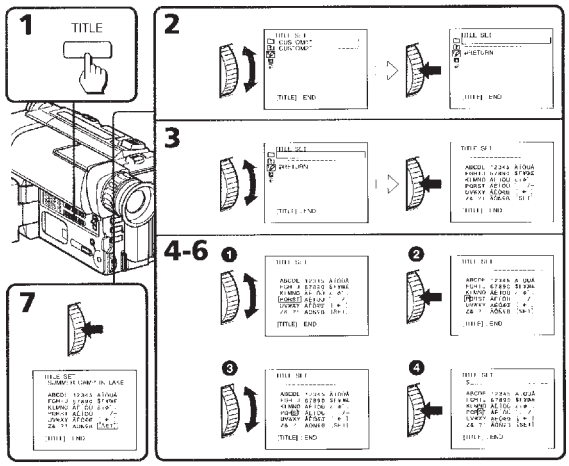

To edit a title you have stored

In step 3, select CUSTOM1 or CUSTOM2, depending on which title you want to edit, then change the title.

Note

You cannot enter over 20 characters title.

If you take 5 minutes or longer to enter characters while a cassette is in the camcorder

The power goes off automatically. Characters you have entered remain. Turn STANDBY down once and then up again, then proceed from step 1.

To delete a title

In step 4, turn the control dial to select [←] then press the dial. The last character is erased. Repeat this step until all characters are deleted.

Для редактирования запомненной надписи

В пункте 3 выберите CUSTOM1 или CUSTOM2 в зависимости от того, какую надпись Вы хотите отредактировать, а затем измените надпись.

Примечание

Вы не можете ввести больше, чем 20 знаков.

Если проходит 5 минут или более при вводе знаков в то время, когда кассета находится в видеокамере

Питание выключится автоматически. Знаки, которые Вы ввели, остаются в памяти. Поверните STANDBY один раз вниз, а затем снова вверх и начните с пункта 1.

Для отмены надписи

В пункте 4 поверните диск управления, чтобы выбрать [←], затем нажмите диск. Последний знак будет стерт. Повторяйте это действие до тех пор, пока не будут удалены все знаки.

Recording with the date/time

Before you start recording or during recording, press DATE or TIME. You can record the date or time displayed in the viewfinder or on the LCD screen with the picture. Press DATE (or TIME), then press TIME (or DATE) to display the date and time together.
The clock is set at the factory to Sydney time for Australia and New Zealand models, to Tokyo time for the models sold in Japan, and to Hong Kong time for other models. You can reset the clock in the menu system.

Запись с датой/временем

Перед началом записи нажмите DATE или TIME. Вы можете записывать дату или время, отображаемые в видоискателе или на экране ЖКД, вместе с изображением. Нажмите DATE (или TIME), а затем нажмите TIME (или DATE) для отображения даты и времени одновременно.
Часы установлены на заводе на сиднейское время для моделей для Австралии и Новой Зеландии, на токийское время для моделей, продаваемых в Японии, и на гонконгское время для других моделей. Вы можете заново установить часы в системе меню.

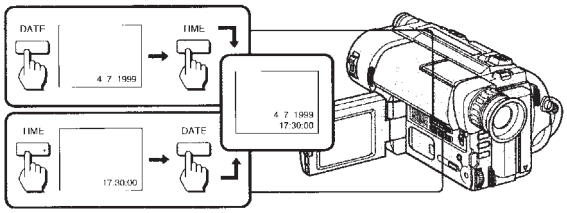

To stop recording with the date and/or time
Press DATE and/or TIME again. The date and/or time indicator disappears. The recording continues.

Для останова записи с датой и/или временем
Нажмите DATE и/или TIME снова. Индикатор даты и/или времени исчезнет. Запись будет продолжена.

Optimizing the recording condition

Use this feature to check the tape condition before recording, so that you can get the best possible picture (ORC).
(1) While the camcorder is in Standby mode, press MENU to display the menu.
(2) Turn the control dial to select [icon], then press the dial.
(3) Turn the control dial to select ORC TO SET, then press the dial.
"START/STOP KEY" flashes.
(4) Press START/STOP.
The camcorder takes about 5 10 seconds to check the tape condition and then returns to Standby mode.

Оптимизация состояния записи

Используйте данную функцию для проверки состояния ленты перед записью, так, чтобы Вы могли получить наилучшее по возможности изображение (ORC).
(1) Когда видеокамера будет находиться в режиме готовности, нажмите MENU для отображения меню.
(2) Нажмите регулировочный диск для выбора [icon], а затем нажмите диск.
(3) Поверните регулировочный диск для выбора ORC TO SET, а затем нажмите диск.
"START/STOP KEY" будет мигать.
(4) Нажмите START/STOP.
Видеокамере требуется около 5 – 10 секунд для проверки состояния ленты, а затем она возвращается в режим готовности.

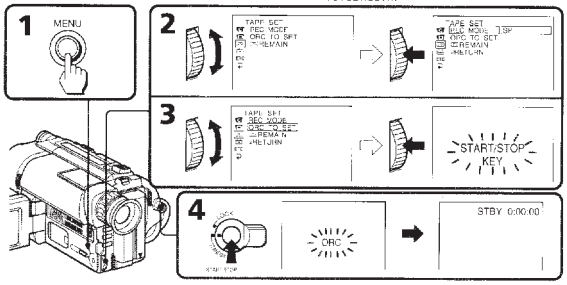

Each time you insert the cassette
Perform the above procedures.

Notes on the ORC function
- When you set ORC TO SET, the recording on the tape is erased for about 0.1 second so that the camcorder can check the tape condition. Be careful when you use a recorded tape. The 0.1 second blank is erased if you record from the point where you set ORC TO SET for more than 2 seconds, or if you record over the blank.
- You cannot use this function on a tape with the red mark on the cassette exposed.
- ORC stands for "Optimizing the Recording Condition."

Каждый раз, когда Вы вставляете кассету
Выполняйте вышеописанную процедуру.

Примечания к функции ORC
- Когда Вы устанавливаете ORC TO SET, запись ленты стирается на 0,1 секунды, так, чтобы видеокамера смогла проверить состояние ленты. Будьте осторожны, когда Вы используете записанную ленту. 0,1-секундный пробел исчезает, если Вы начинаете запись от точки, где Вы установили ORC TO SET более, чем на 2 секунды, или если производите запись поверх незаписанной части.
- Вы не можете использовать данную функцию с лентой, если на кассете вставлена красная метка.
- Английское сокращение ORC означает "оптимизация условий записи".

Using the built-in light

– CCD-TRV46E only
You can use the built-in light to suit your shooting situation. The recommended distance between the subject and camcorder is about 1.5 m.

While the camcorder is in Standby mode, slide LIGHT to ON. The built-in light turns on.
The built-in light turns on/off by turning on/off STANDBY.

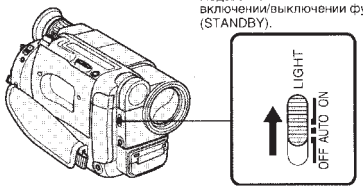

To stop using the built-in light
Slide LIGHT to OFF.

To turn on the built-in light automatically
Slide LIGHT to AUTO.
The built-in light automatically turns on and off according to the ambient brightness.
However, if the built-in light turns on for more than about 5 minutes, it automatically turns off. In this case, turn STANDBY down once and turn it up again.

Notes
- The battery pack is quickly discharging while the built-in light is turned on. Slide LIGHT to OFF when not in use.
- When you do not use the camcorder, slide LIGHT to OFF and remove the battery pack to avoid turning on the built-in light accidentally.
- When flickering occurs when you shoot white and bright subjects in AUTO mode, slide LIGHT to ON.
- The built-in light may turn on/off when you use the PROGRAM AE or BACK LIGHT function.
- When inserting or ejecting a cassette, the built-in light may be turned off.

Использование встроенной подсветки

– Только CCD-TRV46E
При необходимости Вы можете во время съемки использовать встроенную подсветку. Рекомендуемое расстояние между видеокамерой и объектом съемки составляет около 1,5 м.
Когда видеокамера находится в режиме готовности, переведите переключатель LIGHT (свет) в положение ON (вкл.). Включается подсветка.
Подсветка включается/выключается при включении/выключении функции готовности (STANDBY).

Для прекращения пользования встроенным освещением
Переведите переключатель LIGHT в положение OFF.

Для автоматического включения встроенной подсветки
Сдвиньте переключатель LIGHT в положение AUTO.
Встроенная подсветка будет автоматически включаться и выключаться в зависимости от освещенности места съемки.
Однако если встроенная подсветка остается включенной на протяжении более пяти минут, она автоматически отключается. В такой ситуации опустите переключатель STANDBY вниз и тут же поднимите его вновь.

Примечания
- При включенной подсветке идет быстрая разрядка аккумуляторного блока. Поэтому когда Вы ее не используете, устанавливайте переключатель LIGHT в положение OFF.
- На время, когда Вы не пользуетесь видеокамерой, переводите переключатель LIGHT в положение OFF и отсоединяйте аккумуляторный блок во избежание случайного включения подсветки.
- Если при съемке Вами белых или ярких объектов в режиме AUTO изображение мерцает, переведите переключатель LIGHT в положение ON.
- При использовании Вами PROGRAM AE или функции BACK LIGHT может происходить включение/выключение встроенной подсветки.
- Встроенная подсветка может включаться, когда Вы вставляете или извлекаете кассету.

Using the built-in light

CAUTION

Be careful not to touch the lighting section, because the plastic window and surrounding surfaces are hot while the light is on. It remains hot for a while after the light is turned off.

DANGER

Not to be handled by children.
Emits intense heat and light.
Use with caution to reduce the risk of fire or injury to persons.
Do not direct light at persons or materials from less than 1.22 meters during use and until cool.
Slide LIGHT to OFF when not in use.

Replacing the bulb

Use the Sony XB-3D halogen lamp (not supplied). The supplied halogen lamp is not on the market. Purchase the Sony XB-3D halogen lamp.
Remove the power source before replacing the bulb.
(1) While pushing the hole under the built-in light unit using a wire, remove the unit.
(2) Turn the bulb housing counterclockwise and detach from the built-in light unit.
(3) Replace the bulb using a dry cloth.
(4) Attach the bulb housing turning it clockwise, then replace the built in light unit.

Использование встроенной подсветки

МЕРЫ ПРЕДОСТОРОЖНОСТИ

Старайтесь не прикасаться к осветительному блоку, поскольку когда подсветка включена, пластмассовое окошечко и поверхность корпуса рядом с ним нагреваются. Они остаются горячими на протяжении еще какого-то времени после выключения подсветки.

ВНИМАНИЕ!

Детям не разрешается пользоваться подсветкой.
Интенсивно излучает тепло и свет.
При эксплуатации соблюдайте меры предосторожности, чтобы свести к минимуму опасность возгорания или получения травмы.
При использовании и до остывания лампы подсветки не направляйте свет на людей или другие объекты с расстояния менее 1,22 м.
Когда подсветка не используется, переводите переключатель LIGHT в положение OFF.

Смена лампы

Используйте галогенную лампу Sony XB-3D (не прилагается). Входящей в комплектацию камеры галогенной лампы в открытой продаже нет, поэтому приобретайте галогенную лампу Sony XB-3D. Перед заменой лампы отключите питание.
(1) Вставьте проволочку в отверстие под блоком встроенного источника света и, нажав на нее, снимите блок.
(2) Поверните патрон с лампочкой против часовой стрелки и отсоедините его от блока встроенного источника света.
(3) Замените лампочку, используя сухую тряпочку.
(4) Присоедините патрон с лампочкой, вращая его по часовой стрелке, затем установите блок подсветки на место.

Using the built-in light

Использование встроенной подсветки

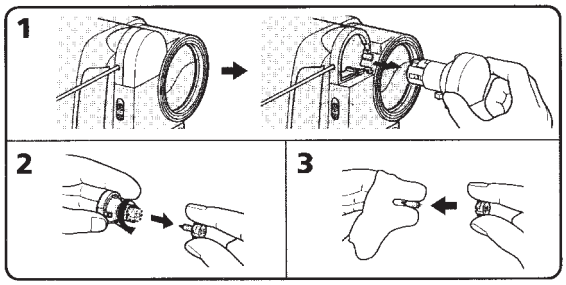

CAUTION

- When replacing the bulb, use only the Sony XB-3D halogen lamp (not supplied) to reduce the risk of fire.
- To prevent possible burn hazard, disconnect the power source before replacing and do not touch the bulb until the bulb becomes cool enough to handle (for about 30 minutes or more).

Note

To prevent the bulb from being smudged with finger prints, handle it with a dry cloth, etc. If the bulb is smudged, wipe it completely.

МЕРЫ ПРЕДОСТОРОЖНОСТИ

- В целях уменьшения опасности возгорания используйте для замены только галогенную лампу Sony XB-3D (не прилагается).
- Чтобы предотвратить возможные ожоги, перед сменой лампочки отсоединяйте источник питания и не притрагивайтесь к лампочке пока она не остынет до температуры, при которой ее можно брать в руки (примерно через 30 или более минут).

Примечание

Чтобы не запачкать лампочку отпечатками пальцев, беритесь за нее сухой тряпочкой или чем-нибудь подобным. Если лампочка загрязнилась, протрите ее начисто.

Releasing the STEADYSHOT function

Отключение функции STEADYSHOT

– CCD-TRV46E only

When the SteadyShot function is working, the camcorder compensates for camera-shake.

You can release the SteadyShot function when you do not need to use the SteadyShot function. The "☞" indicator lights up when you release the SteadyShot function. You do not need to use the SteadyShot function when shooting a stationary object with a tripod.
You can select ON or OFF in the menu system (p. 34).

To activate the SteadyShot function again

Set STEADYSHOT to ON in the menu system.

Notes on the SteadyShot function

- The SteadyShot function will not correct excessive camera-shake.
- When you set STEADYSHOT to ON or OFF in the menu system, the exposure may fluctuate.
- SteadyShot does not operate in 16:9 FULL mode. If you set STEADYSHOT to ON in the menu system, the "☞" indicator flashes.

– Только CCD-TRV46E

Когда работает функция устойчивой съемки, видеокамера осуществляет компенсацию дрожания видеокамеры.

Вы можете отключить функцию устойчивой съемки, когда Вы не нуждаетесь в использовании функции устойчивой съемки. При отключении функции SteadyShot зажигается индикатор "☞". Вам не нужно использовать функцию SteadyShot, когда Вы ведете съемку неподвижного объекта с треноги.
Вы можете выбирать ON или OFF в системе меню (стр. 34).

Для активизации функции устойчивой съемки снова

Установите STEADYSHOT на ON в системе меню.

Примечания к функции устойчивой съемки

- Функция устойчивой съемки не откорректирует чрезмерного дрожания видеокамеры.
- При установке функции STEADYSHOT в положение ON или OFF в системе меню экспозиция может колебаться.
- Функция устойчивой съемки не работает в режиме 16:9FULL. Если Вы установите STEADYSHOT на ON, индикатор "☞" будет мигать.

Watching on a TV screen

Просмотр на экране телевизора

Connect the camcorder to your TV or VCR to watch the playback picture on the TV screen. When monitoring the playback picture by connecting the camcorder to your TV, we recommend you to use the mains for the power source.

While playing back on a TV screen, close the LCD panel. Otherwise, picture distortion may occur.

Connecting directly to a TV/VCR with Video/Audio input jacks

When connecting the A/V connecting cable, make sure you connect the plug to jacks of the same colour.
Open the jack cover. With using the supplied A/V connecting cable, connect the camcorder to the LINE IN inputs on the TV or VCR connected to the TV. Set the TV/VCR selector on the TV to VCR. When connecting to the VCR, set the input selector on the VCR to LINE.

Подсоедините видеокамеру к Вашему телевизору или КВМ для просмотра воспроизводимого изображения на экране телевизора. При просмотре воспроизводимого изображения путем подсоединения видеокамеры к Вашему телевизору мы рекомендуем Вам использовать электрическую сеть в качестве источника питания.

Во время воспроизведения на экране телевизора, закройте панель ЖКД. В противном случае могут происходить искажения изображения.

Подсоединение прямо к телевизору/КВМ с входными гнездами аудио/видео

При подсоединении соединительного кабеля аудио/видео убедитесь, что Вы подсоединяете штекеры к гнездам одинакового цвета. Откройте крышку гнезда. Подсоедините видеокамеру к входам LINE IN на телевизоре или на подсоединенном к телевизору КВМ с использованием прилагаемого соединительного кабеля аудио/видео. Установите селектор TV/VCR на телевизоре в положение VCR. При подсоединении к КВМ установите селектор входных сигналов на КВМ в положение LINE.

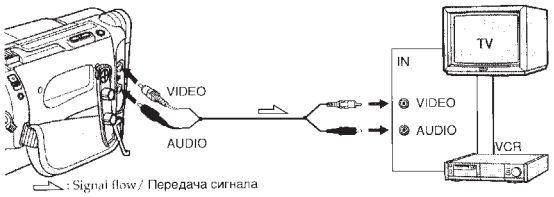

To connect to a TV or VCR without Video/Audio input jacks

Use a PAL type RFU adaptor (not supplied).

Для подсоединения к телевизору или КВМ без входных гнезд аудио/видео

Используйте ВЧ-адаптер типа PAL (не прилагается).

Watching on a TV screen

Просмотр на экране телевизора

Using the AV cordless IR receiver – LASER LINK

Использование беспроводного ИК аудиовидеоприемника – LASER LINK

–CCD-TRV46E only

Once you connect the AV cordless IR receiver (not supplied) having the LASER LINK mark to your TV or VCR, you can easily view the picture on your TV. For details, refer to the operating instruction of the AV cordless IR receiver.
LASER LINK is a system which transmits and receives a picture and sound between video equipment having the mark by using infrared rays.
LASER LINK is a trademark of Sony Corporation.

To play back on a TV

(1) After connecting your TV and AV cordless IR receiver, set the POWER switch on the AV cordless IR receiver to ON.
(2) Set the POWER switch on the camcorder to PLAYER.
(3) Turn the TV on and set the TV/VCR selector on the TV to VCR.
(4) Press LASER LINK. The lamp of the LASER LINK button lights up.
(5) Press ► on the camcorder to start playback.
(6) Point the LASER LINK emitter at the AV cordless IR receiver.

To cancel the LASER LINK function

Press LASER LINK.

Note

When LASER LINK is activated (the LASER LINK button is lit), the camcorder consumes power. Press and turn off the LASER LINK button when it is not needed.

–Только CCD-TRV46E

Если Вы подсоедините беспроводной ИК аудиовидеоприемник (не прилагается), имеющий знак LASER LINK, к Вашему телевизору или КВМ, то Вы сможете легко просматривать изображение на экране Вашего телевизора. Смотрите подробности в руководстве по эксплуатации беспроводного ИК аудиовидеоприемника.
LASER LINK является системой приема и передачи изображения и звука между видеоаппаратурой, имеющей знак , с помощью инфракрасных лучей.
LASER LINK является торговой маркой корпорации "Sony".

Для воспроизведения на телевизоре

(1) После соединения Вашего телевизора и беспроводного ИК аудиовидеоприемника, установите выключатель POWER на беспроводном ИК аудиовидеоприемнике в положение ON.
(2) Установите выключатель POWER на видеокамере в положение PLAYER.
(3) Включите телевизор и установите селектор TV/VCR на телевизоре в положение VCR.
(4) Нажмите LASER LINK. Зажжется лампочка кнопки LASER LINK.
(5) Нажмите ► на видеокамере для начала воспроизведения.
(6) Наведите излучатель LASER LINK на беспроводной ИК-аудиовидеоприемник.

Для отмены функции LASER LINK

Нажмите LASER LINK.

Примечания

Когда функция LASER LINK включена (лампочка кнопки LASER LINK горит), видеокамера потребляет питание. Нажмите и выключите кнопку LASER LINK, если данная функция не требуется.

Editing onto another tape

You can create your own video programme by editing with any other 8 8 mm, Hi8 Hi8, "DV miniDV, DV DV, VHS VHS, S-VHS S-VHS, VHSC VHSC, S-VHSC S-VHSC or Betamax VCR that has video/audio inputs.

Before editing

Connect the camcorder to the VCR using the supplied A/V connecting cable.
Set the input selector on the VCR to LINE, if available.
Set EDIT to ON in the menu system (p. 36).

Starting editing

Turn down the volume of the camcorder while editing. Otherwise, picture distortion may occur.
(1) Insert a blank tape (or a tape you want to record over) into the VCR, and insert your recorded tape into the camcorder.
(2) Play back the recorded tape on the camcorder until you locate the point just before where you want to start editing, then press II to set the camcorder in playback pause mode.
(3) On the VCR, locate the recording start point and set the VCR in recording pause mode.
(4) First press II on the camcorder, and after a few seconds press II on the VCR to start editing.

To edit more scenes

Repeat steps 2 to 4.

To superimpose the title while you are editing

You can superimpose the title while you are editing. Refer to "Superimposing a title" (p. 33).

To stop editing

Press ■ on both the camcorder and the VCR.

Note on Fine Synchro Edit

If you connect a video deck that has the Fine Synchro Edit feature to the LANC jack of the camcorder, using a LANC cable (not supplied), the edit will be even more precise.

Монтаж на другую ленту

Вы можете создать Вашу собственную видеопрограмму путем монтажа с помощью другого КВМ типа 8 8 мм, Hi8 Hi8, "DV miniDV, DV DV, VHS VHS, S-VHS S-VHS, VHSC VHSC, S-VHSC S-VHSC или Betamax, который имеет входы аудио/видео.

Перед монтажем

Подсоедините видеокамеру к КВМ, используя прилагаемый соединительный кабель аудио/видео.
Установите селектор входных сигналов на КВМ в положение LINE, если таков имеется.
Установите EDIT на ON в системе меню (стр. 36).

Начните монтаж

Понизьте громкость видеокамеры во время монтажа. В противном случае может произойти искажение изображения.
(1) Вставьте чистую ленту (или ленту, которую Вы хотите перезаписать) в КВМ и вставьте Вашу записанную ленту в видеокамеру.
(2) Воспроизводите записанную ленту в видеокамере до тех пор, пока Вы не обнаружите точку, откуда Вы хотите начать монтаж, а затем нажмите II для установки видеокамеры на режим паузы воспроизведения.
(3) Найдите на КВМ точку начала записи и установите КВМ на режим паузы записи.
(4) Сначала нажмите II на видеокамере, а через несколько секунд нажмите кнопку II на КВМ для начала монтажа.

Для монтажа других сцен

Повторите пункты со 2 по 4.

Для наложения надписи во время монтажа

Вы можете наложить надпись во время монтажа. См. раздел "Наложение надписи" (стр. 53).

Для остановки монтажа

Нажмите ■ и на видеокамере и на КВМ.

Примечание к точному синхронному монтажу

Если Вы подсоедините видеодеку, которая имеет функцию точного синхронного монтажа к гнезду LANC на видеокамере с использованием кабеля LANC (не прилагается), то монтаж будет еще более точный.

Changing the lithium battery in the camcorder

Your camcorder is supplied with a lithium battery installed. When the battery becomes weak or dead, the indicator flashes in the viewfinder for about 5 seconds when you set the POWER switch to CAMERA. In this case, **replace the battery with a Sony CR2025 or Duracell DL-2025 lithium battery. Use of any other battery may present a risk of fire or explosion.** Discard used batteries according to the manufacturer's instructions.
The lithium battery for the camcorder lasts for about 1 year under normal operation. (The lithium battery that comes installed at the factory may not last 1 year.)

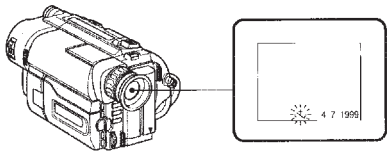

Notes on lithium battery

- **Keep the lithium battery out of the reach of children.**
  Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to assure a good contact.
- Do not hold the battery with metallic tweezers, otherwise a short circuit may occur.
- Note that the lithium battery has a positive (+) and a negative (−) terminals as illustrated. **Be sure to install the lithium battery so that terminals on the battery match the terminals on the camcorder.**



Замена литиевой батарейки в видеокамере

Ваша видеокамера снабжена установленной литиевой батарейкой. Если батарейка станет слабой или полностью разрядится, индикатор будет мигать в видоискателе приблизительно в течение 5 секунд, когда Вы установите выключатель POWER в положение CAMERA. В этом случае **замените батарейку на батарейку марки Sony CR2025 или на литиевую батарейку марки Duracell DL-2025. Использование какой-нибудь другой батарейки может представлять риск воспламенения или взрыва.** Выбросьте использованную батарейку в соответствии с указаниями изготовителя.
Литиевой батарейки для видеокамеры хватает приблизительно на 1 год при нормальных условиях эксплуатации.
(Литиевой батарейки, которая была установлена на заводе, может не хватить на 1 год.)

Примечания к литиевой батарейке

- **Держите литиевую батарейку в недоступном для детей месте.**
  Если батарейка была проглочена, немедленно обратитесь к доктору.
- Протрите батарейку сухой тканью для обеспечения хорошего контакта.
- Не берите батарейку металлическими щипцами, или же может произойти короткое замыкание.
- Учтите, что литиевая батарейка имеет положительный (+) и отрицательный (−) полюсы, как показано на рисунке. **Обязательно вставьте литиевую батарейку так, чтобы полюсы на батарейке соответствовали полюсам на видеокамере.**

Changing the lithium battery in the camcorder

WARNING
The battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.

Changing the lithium battery

When replacing the lithium battery, keep the battery pack or other power source attached. Otherwise, you will need to reset the date, time and other items in the menu system retained by the lithium battery.
(1) Open the LCD panel and open the lid of the lithium battery compartment.
(2) Push the lithium battery down once and pull it out from the holder.
(3) Install the lithium battery with the positive (+) side facing out. Close the lid.

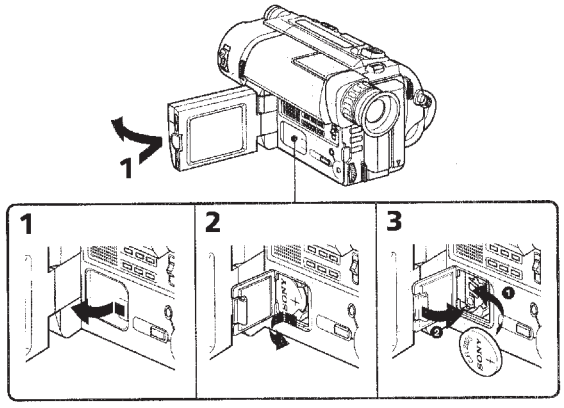

Замена литиевой батарейки в видеокамере

ПРЕДУПРЕЖДЕНИЕ
При неправильном обращении батарейка может взорваться. Не перезаряжайте, не разбирайте и не бросайте батарейку в огонь.

Замена литиевой батарейки

При замене литиевой батарейки, оставьте подсоединенным батарейный блок или другой источник питания. В противном случае Вам понадобится снова устанавливать дату, время и другие установки в системе меню, хранимые посредством литиевой батарейки.
(1) Откройте панель ЖКД и откройте крышку отсека литиевой батарейки.
(2) Нажмите батарейку вниз и вытащите ее из держателя.
(3) Установите литиевую батарейку положительной (+) стороной, обращенной наружу. Закройте крышку.

Resetting the date and time

You can reset the date and time in the menu system.
(1) While the camcorder is in Standby mode, press MENU to display the menu.
(2) Turn the control dial to select , then press the dial.
(3) Turn the control dial to select CLOCK SET, then press the dial.
(4) Turn the control dial to adjust the desired year, then press the dial.
(5) Set the month, day, hour and minute by turning the control dial and pressing the dial.
(6) Press MENU to erase the menu display.

Установка даты и времени

Вы можете установить дату и время в системе меню.
(1) Когда видеокамера будет находится в режиме готовности, нажмите MENU для отображения меню.
(2) Поверните регулировочный диск для выбора , а затем нажмите диск.
(3) Поверните регулировочный диск для выбора CLOCK SET, а затем нажмите диск.
(4) Поверните регулировочный диск для регулировки желаемого года, а затем нажмите регулировочный диск.
(5) Установите месяц, дату, часы и минуты, поворачивая регулировочный диск, а затем нажимая диск.
(6) Нажмите MENU для стирания дисплея меню.

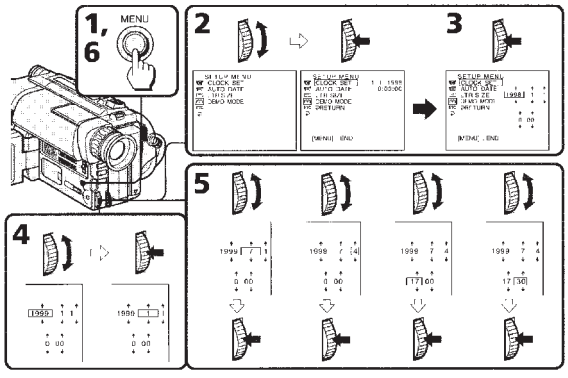

To correct the date and time setting

Repeat the above procedure.

To check the preset date and time

Press DATE to display the date indicator.
Press TIME to display the time indicator.
When you press the same button again, the indicator goes off.

The year changes as follows:

1998 ↔ 1999 ← · · · · → 2029

Note on the time indicator

The internal clock of this camcorder operates on a 24-hour cycle.

Для корректировки установки даты и времени

Повторите вышеописанную процедуру.

Для проверки предварительно установленных даты и времени

Нажмите DATE для отображения индикатора даты.
Нажмите TIME для отображения индикатора времени.
Если Вы снова нажмете ту же самую кнопку, индикатор исчезнет.

Год изменяется следующим образом:

1998 ↔ 1999 ← · · · · → 2029

Примечание к индикатору времени

Встроенные часы данной видеокамеры работают в 24-часовом цикле.

Simple setting of clock by time difference

Простая установка часов с помощью разницы во времени

You can easily set the clock for a local time by a time difference in the menu system.

(1) While the camcorder is the standby mode, press MENU to display the menu.
(2) Turn the control dial to select **ETC**, then press the dial.
(3) Turn the control dial to select WORLD TIME, then press the dial.
(4) Turn the control dial to set a time difference, and press the dial. The hour of clock changes in relation to a time difference which you set.
(5) Press MENU to erase the menu display.

Вы можете легко установить часы на местное время с помощью разницы во времени в системе меню.

(1) Когда видеокамера будет находится в режиме готовности нажмите MENU для отображения меню.
(2) Поверните регулировочный диск для выбора **ETC**, а затем нажмите диск
(3) Поверните регулировочный диск для выбора WORLD TIME, а затем нажмите диск.
(4) Поверните регулировочный диск для установки разницы во времени, а затем нажмите диск. Время на часах изменится в соответствии с разницей во времени, которую Вы установили.
(5) Нажмите MENU для стирания дисплея меню.

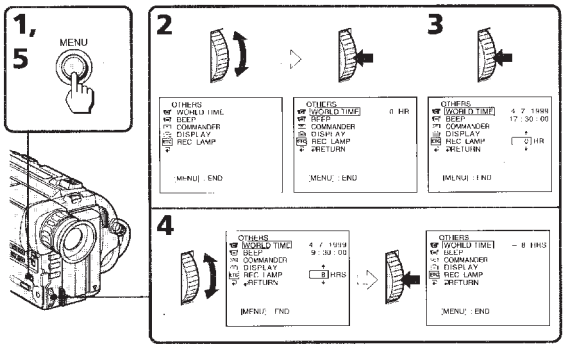

Note on WORLD TIME
If the time is not set, WORLD TIME does not work.

Примечание к фукции WORLD TIME
Если время не установлено, функция WORLD TIME не работает.

Usable cassettes and playback modes

Используемые кассеты и режимы воспроизведения

Selecting cassette types

– CCD-TRV46E only
This Hi8 system is an extension of the standard 8 mm system, and was developed to realize higher picture quality.
You can use either Hi8 or standard 8 mm video cassette for this camera. When you use a Hi8 video cassette, the recording is made in the Hi8 system. When you use a standard 8 mm video cassette, the recording is made in the standard 8 mm system. Standard 8 mm video cassette is incapable of recording in the Hi8 system.
If you intend to use a standard 8 mm video recorder/player to play back a video tape, you are required to use a standard 8 mm video cassette for recording.

What is Video 8 XR

"XR" is an abbreviation of "Extended Resolution." The video 8 XR camcorder is new type of 8 mm camcorder with a picture quality superior to the conventional video 8 camcorder respectively. You can record and play back pictures more clearly with the "XR" camcorder. A video tape recorded by the "XR" camcorder gives excellent picture quality at maximum when it is played back on the "XR" camcorder.
When a video tape recorded by this "XR" camcorder is played back on a conventional 8 camcorder or when a video tape recorded on a conventional 8 camcorder is played back on this "XR" camcorder, the playback picture has the normal quality of an 8 camcorder.

When you play back

The playback mode (SP/LP) and system (Hi8/standard 8 mm) are selected automatically according to the format in which the tape has been recorded. The quality of the recorded picture in LP mode, however, will not be as good as that in SP mode.

Foreign 8 mm video

Because the TV colour systems differ from country to country, you may not be able to play back foreign pre-recorded tapes. Refer to the list of "Using your camcorder abroad" to check the TV colour system of foreign countries.

Выбор типа кассеты

– только CCD-TRV46E
Эта система Hi8 является усовершенствованием стандартной системы 8 мм и была разработана для реализации высокого качества изображения.
Вы можете использовать для этой камеры видеокассеты Hi8 или же стандартные видеокассеты на 8-мм ленте. В случае использования видеокассет Hi8 запись выполняется в системе Hi8. В случае использования видеокассет на 8-мм ленте запись выполняется в системе 8 мм. Стандартная видеокассета на 8-мм ленте не может обеспечить запись в системе Hi8.
Если Вы намереваетесь использовать стандартный видеомагнитофон/видеоплейер системы 8 мм, то следует использовать для записи стандартную видеокассету на 8-мм ленте.

Что такое Video 8 XR

"XR" - это сокращение от термина "Улучшенное разрешение". Видеокамера системы 8 XR это новый тип 8-мм видеокамеры с качеством изображения лучше чем у обычной камеры системы Video 8. Вы можете записывать и воспроизводить изображения с большей четкостью.
Пленка, записанная на видеокамере "XR" дает наилучшее качество изображения при воспроизведении на видеокамере "XR".
Если пленку, записанную на данной видеокамере "XR", воспроизводить на обычной видеокамере системы Video 8 или пленку, записанную на обычной видеокамере системы Video 8, воспроизводить на видеокамере "XR", то изображение будет качества обычной видеокамеры системы Video 8.

Когда Вы осуществляете воспроизведение

Режим воспроизведения (SP/LP) и система (Hi8/8-мм стандарт) выбираются автоматически в соответствии с форматом, в котором была записана лента. Однако, качество изображения, записанного в режиме LP, не будет таким хорошим, как при записи в режиме SP.

Иностранные 8-мм видеоленты

Так как системы цветного телевидения отличаются в зависимости от страны, то может быть Вы не сможете воспроизводить иностранные предварительно записанные ленты. Смотрите перечень в разделе "Использование Вашей видеокамеры за границей" для проверки системы цветного телевидения иностранных государств.

Usable cassettes and playback modes

Используемые кассеты и режимы воспроизведения

Playing back an NTSC-recorded tape
You can play back tapes recorded in the NTSC video system using the SP mode. However, note that the following will occur during playback of an NTSC-recorded tape.

- When playing back a tape on a TV screen, you may not get the original colour depending on the TV. When you play back on a Multi System TV, set NTSC PB to the desired mode in the menu system.
- During playback, a black band appears on the lower part of the viewfinder or the LCD screen.
- You cannot play back a tape recorded in NTSC video system with LP mode neither on the LCD nor on a TV screen.
- If a tape has portions recorded in PAL and NTSC video systems, the tape counter reading is not correct. This discrepancy is due to the difference between the counting cycle of the two video systems.
- You cannot edit the NTSC-recorded tape onto another VCR.

Воспроизведение ленты, записанной в системе NTSC
Вы можете воспроизводить ленты, записанные в видеосистеме NTSC с использованием режима SP. Однако, обратите внимание на то, что следующее будет происходить во время воспроизведения ленты, записанной в системе NTSC.

- При воспроизведении на экране телевизора Вы можете не получить подлинные цвета в зависимости от телевизора. Если Вы воспроизводите ленту на мультисистемном телевизоре, установите NTSC PB на желаемый режим в системе меню.
- Во время воспроизведения черная полоса появляется в нижней части видоискателя или на экране ЖКД.
- Вы не можете воспроизводить ленты, записанные в системе NTSC в режиме LP, ни на ЖКД, ни на экране телевизора.
- Если лента имеет части, записанные в видеосистемах PAL и NTSC, показания счетчика будут неправильные. Это расхождение происходит из-за разницы между расчетом времени двух видеосистем.
- Вы не можете производить монтаж ленты, записанной в системе NTSC, на другой КВМ.

Tips for using the battery pack

Советы по использованию батарейного блока

This section shows you how you can get the most out of your battery pack.

Preparing the battery pack

Always carry additional batteries
Have sufficient battery pack power to do 2 to 3 times as much recording as you have planned.

Battery life is shorter in a cold environment
Battery efficiency is decreased, and the battery will be used up more quickly, if you are recording in a cold environment.

To save battery power
Turn STANDBY down when not recording to save battery power.
A smooth transition between scenes can be made even if recording is stopped and started again. While you are positioning the subject, selecting an angle, or looking through the viewfinder lens or on the LCD screen, the lens moves automatically and the battery is used. The battery is also used when a tape is inserted or removed.
Be sure and remove the battery pack after using the camcorder.

When to replace the battery pack

While you are using your camcorder, the remaining battery indicator decreases gradually as battery power is used up. Remaining time in minutes appears.

When the remaining battery indicator reaches the lowest point, the ⌧ indicator may appear and start flashing in the viewfinder or on the LCD screen.
When the ⌧ indicator changes from slow flashing to rapid flashing while you are recording, set the POWER switch to OFF on the camcorder and replace the battery pack. Leave the tape in the camcorder to obtain a smooth transition between scenes after the battery pack has been replaced.

Данный раздел показывает, как Вы можете получить наибольшую отдачу от Вашего батарейного блока.

Подготовка батарейного блока

Всегда носите дополнительные батарейные блоки
Имейте достаточный заряд батарейного блока для выполнения записи в 2 - 3 раза больше, чем Вы запланировали.

Срок службы заряда батарейного блока будет короче в холодных условиях
Эффективность батарейного блока снижается, и заряд батарейного блока используется быстрее, если Вы производите запись в холодных условиях.

Для экономии заряда батарейного блока
Поверните STANDBY вниз, когда Вы не производите запись, для экономии заряда батарейного блока.
Плавный переход между сценами может быть выполнен, даже если запись была остановлена и начата снова. Когда Вы позиционируете объект, выбираете угол или смотрите в объектив видоискателя или на экран ЖКД, объектив перемещается автоматически, и батарейный блок будет использоваться. Батарейный блок также используется при вставке и удалении ленты.
По окончании пользования видеокамерой не забудьте отсоединить батарейный блок.

Когда заменять батарейный блок

Когда Вы используете видеокамеру, индикатор оставшегося заряда батарейного блока постепенно уменьшается по мере использования заряда батарейного блока. Также появляется оставшееся время в минутах.

Когда индикатор оставшегося заряда батарейного блока достигает наинизшей точки, индикатор ⌧ появляется и начинает мигать в видоискателе или на экране ЖКД. Когда индикатор ⌧ изменяет медленное мигание на быстрое мигание во время записи, установите выключатель POWER в положение OFF на видеокамере и замените батарейный блок. Оставьте ленту в видеокамере для получения плавного перехода между сценами после замены батарейного блока.

Notes on the rechargeable battery pack

Caution
Never leave the battery pack in temperatures above 60°C, such as in a car parked in the sun or under direct sunlight.

The battery pack heats up
During charging or recording, the battery pack heats up. This is caused by energy that has been generated and a chemical change that has occurred inside the battery pack. This is not cause for concern and is normal.

Be sure to observe the following
- Keep the battery pack away from fire.
- Keep the battery pack dry.
- Do not open nor try to disassemble the battery pack.
- Do not expose the battery pack to any mechanical shock.

The life of the battery pack
If the battery indicator flashes rapidly just after turning on the camcorder with a fully charged battery pack, the battery pack should be replaced with a new fully charged one.

Charging temperature
You should charge batteries at temperatures from 10°C to 30°C. Lower temperatures require a longer charging time.

Примечания к перезаряжаемому батарейному блоку

Предостережение
Никогда не оставляйте батарейный блок при температуре свыше 60° С, как например, в автомобиле, припаркованном на солнце, или под прямыми солнечными лучами.

Батарейный блок нагревается
Во время зарядки или записи батарейный блок нагревается. Это вызвано генерируемой энергией и химическими реакциями, которые происходят внутри батарейного блока. Это не должно быть причиной для беспокойства и является нормальным.

Обязательно соблюдайте следующее
- Храните батарейный блок подальше от огня.
- Храните батарейный блок сухим.
- Не пытайтесь открыть или разобрать батарейный блок.
- Не подвергайте батарейный блок никаким механическим ударам.

Срок службы батарейного блока
Если индикатор батарейного блока мигает быстро сразу после включения видеокамеры с полностью заряженным батарейным блоком, батарейный блок должен быть заменен новым полностью заряженным батарейным блоком.

Температура зарядки
Вы должны заряжать батарейный блок при температуре от 10° С до 30° С. Более низкая температура требует более длительного времени зарядки.

Notes on the "InfoLITHIUM" battery pack

What is "InfoLITHIUM"
The "InfoLITHIUM" is a lithium ion battery pack which can exchange data with compatible video equipment about its battery consumption.
When you use this battery pack with video equipment having the (i) mark, the video equipment will indicate the remaining battery time in minutes*. However, if you use it with video equipment not having this mark, the remaining battery capacity will not be indicated in minutes.
"InfoLITHIUM" is a trademark of Sony Corporation.
* The indication may not be accurate depending on the condition and environment which the equipment is used under.

How the battery consumption is displayed
The power consumption of the camcorder changes depending on its use, such as how the autofocusing is working.
While checking the condition of the camcorder, the "InfoLITHIUM" battery pack measures the battery consumption and calculates the remaining battery power. If the condition changed drastically, the remaining battery indication may suddenly decrease or increase by more than 2 minutes.
Even if 5 to 10 minutes is indicated as the battery remaining time on the LCD screen or in the viewfinder, the ⌧ indicator may also flash under some condition.

Примечания к батарейному блоку "InfoLITHIUM"

Что такое "InfoLITHIUM"
"InfoLITHIUM" является литиево-ионным батарейным блоком, который может обмениваться данными с совместимой видеоаппаратурой относительно расхода заряда батарейного блока.
При использовании данного батарейного блока с видеоаппаратурой, имеющей знак (i), видеоаппаратура будет показывать оставшееся время заряда батарейного блока в минутах.* Однако, если Вы используете его с видеоаппаратурой, не имеющей такого знака, оставшаяся емкость батарейного блока не указывается в минутах.
"InfoLITHIUM" является товарным знаком корпорации Sony.
* Показание может быть неточным, в зависимости от условий и окружающей среды, при которых используется аппаратура.

Как отображается расход заряда батарейного блока
Потребляемая мощность видеокамерой изменяется в зависимости от условий ее использования, как например, работает ли автоматическая фокусировка.
Во время проверки состояния видеокамеры батарейный блок "InfoLITHIUM" измеряет расход батарейного заряда и вычисляет оставшийся заряд батарейного блока. Если условия использования сильно изменяются, индикация оставшегося заряда батарейного блока может резко уменьшиться или увеличиться более чем на 2 минуты.
Даже если 5 или 10 минут указано на экране ЖКД или в видоискателе в качестве оставшегося времени заряда батарейного блока, индикатор ⌧ может все же мигать при некоторых условиях.

To obtain more accurate remaining battery indication
Set the camcorder to recording standby mode and point towards a stationary object. Do not move the camcorder for 30 seconds or more.
- If the indication seems incorrect, recharge the battery pack fully (Full charge[1]). Note that if you have used the battery in a hot or cold environment for long time, or you have repeated charging many times, the battery pack may not be able to show the correct time even after being fully charged.
- After you have used the "InfoLITHIUM" battery pack with an equipment not having the (i) mark, make sure that you use up the battery pack on the equipment having the (i) mark and then recharge fully.

Why the remaining battery indication does not match the continuous recording time in the operating instructions
The recording time is affected by the environmental temperature and conditions. The recording time becomes very short in a cold environment. The continuous recording time in the operating instructions is measured under the condition of using a fully charged (or normal charged) battery pack in 25°C. As the environmental temperature and condition are different when you actually use the camcorder, the remaining battery time is not same as the continuous recording time in the operating instructions.

[1] Full charge: Charging until FULL appears in the display window.

Для получения более точной индикации оставшегося заряда батарейного блока
Установите видеокамеру на режим готовности записи и наведите ее на неподвижный объект. Не двигайте видеокамеру в течение 30 секунд или более.
- Если индикация кажется неправильной, зарядите батарейный блок полностью (полная зарядка [1]). Имейте в виду, что если Вы использовали батарейный блок в жарких или холодных окружающих условиях в течение длительного времени, или если Вы повторяли зарядку много раз, батарейный блок может не показывать правильное время даже после полной зарядки.
- После использонания батарейного блока "InfoLITHIUM" с аппаратурой, которая не имеет знака (i), обязательно используйте заряд батарейного блока до конца с аппаратурой, имеющей знак (i), а затем полностью зарядите его.

Почему индикация оставшегося заряда батарейного блока не соответствует времени непрерывной записи, указанному в инструкции по эксплуатации
На время записи влияет температура окружающей среды и другие условия. Время записи становится очень коротким в холодных условиях. Время непрерывной записи, указанное в инструкции по эксплуатации, измеряется в условиях использования полностью заряженного батарейного блока (или нормально заряженного≤≥) при температуре 25°С. Так как температура окружающей среды и другие условия отличаются от реальных условий использования видеокамеры, то время оставшегося заряда батарейного блока будет не таким, как время непрерывной записи, указанное в инструкции по эксплуатации.

[1] Полная зарядка: Зарядка до тех пор, пока FULL не появится в окошке дисплея.

Moisture condensation

If the camcorder is brought directly from a cold place to a warm place, moisture may condense inside the camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or the unit may not operate correctly. To prevent possible damage under these circumstances, the camcorder is furnished with moisture sensors. Please take the following precautions.

Inside the camcorder
If there is moisture inside the camcorder, the beep sounds and the 💧 indicator flashes. If this happens, none of the functions except cassette ejection will work. Open the cassette compartment, turn off the camcorder, and leave it about 1 hour. When ⏏ indicator flashes at the same time, the cassette is inserted in the camcorder. Eject the cassette, turn off the camcorder, and leave also the cassette about 1 hour. The camcorder can be used again if the 💧 indicator does not appear when the power is turned on again.

On the lens
If moisture condenses on the lens, no indicator appears, but the picture becomes dim. Turn off the power and do not use the camcorder for about 1 hour.

How to prevent moisture condensation
When bringing the camcorder from a cold place to a warm place, put the camcorder in a plastic bag and allow it to adapt to room conditions over a period of time.
(1) Be sure to tightly seal the plastic bag containing the camcorder.
(2) Remove the bag when the air temperature inside it has reached the temperature surrounding it (after about 1 hour).

Конденсация влаги

Если видеокамера принесена прямо из холодного места в теплое место, влага может сконденсироваться внури видеокамеры, на поверхности ленты или на объективе. В таком состоянии лента может прилипнуть к барабану головки и будет повреждена, или видеокамера не сможет работать правильно. Для предотвращения возможного повреждения ввиду таких обстоятельств, видеокамера снабжена датчиками влаги. Соблюдайте следующие предосторожности.

Внутри видеокамеры
Если внутри видеокамеры произошла конденсация влаги, то будет звучать зуммерный сигнал, и индикатор 💧 будет мигать. Если это случилось, то никакие функции, кроме выталкивания кассеты, не будут работать. Откройте кассетный отсек, выключите видеокамеру и оставьте ее приблизительно на 1 час. Если индикатор ⏏ будет мигать в то же самое время, то значит кассета вставлена в видеокамеру. Вытолкните кассету, выключите видеокамеру и оставьте кассету приблизительно на 1 час. Видеокамера снова может быть использована, если индикатор 💧 не будет появляться после включения питания.

На объективе
Если влага сконденсировалась на объективе, никакие индикаторы появляться не будут, но изображение станет тусклым. Выключите питание и не используйте видеокамеру приблизительно 1 час.

Как предотвратить конденсацию влаги
Если видеокамера принесена из холодного места в теплое место, то положите видеокамеру в полиэтиленовый пакет и дайте ей адаптироваться к комнатным условиям за некоторый период времени.
(1) Обязательно плотно закройте полиэтиленовый пакет, содержащий камеру.
(2) Выньте камеру, когда температура воздуха внутри пакета достигнет температуры окружающего воздуха (приблизительно через 1 час).

Video head cleaning

To ensure normal recording and clear pictures, clean the video heads. When the ⊗ indicator and "🖭 CLEANING CASSETTE" message appear one after another or playback pictures are "noisy" or hardly visible, the video heads may be dirty.

[a] [b]

[a] Slightly dirty
[b] Very dirty

If this happens, clean the video heads with the Sony V8-25CLD cleaning cassette (not supplied). After checking the picture, if it is still "noisy," repeat the cleaning. (Do not repeat cleaning more than 5 times in one session.)

Caution

Do not use a commercially available wet-type cleaning cassette. It may damage the video heads.

Note

If the Sony V8-25CLD cleaning cassette is not available in your area, consult your nearest Sony dealer.

Очистка видеоголовок

Для обеспечения нормальной записи и четкого изображения очищайте видеоголовки. Когда индикатор ⊗ и сообщение "🖭 CLEANING CASSETTE" появляются одно за другим или воспроизводимое изображение будет "зашумленным" или трудно просматриваемым, видеоголовки наверное загрязнены.

[a] Слегка загрязнены
[b] Очень загрязнены

Если это случится, очистите видеоголовки с помощью очистительной кассеты V8-25CLD фирмы Sony (не прилагается). После проверки изображения, если оно все еще "зашумлено", повторите очистку. (Не повторяйте очистку более 5 раз за один прием.)

Предостережение

Не используйте имеющуюся в продаже очистительную кассету влажного типа. Она может повредить видеоголовки.

Примечание

Если очистительной кассеты V8-25CLD фирмы Sony нет в продаже в Вашей области, проконсультируйтесь у Вашего ближайшего дилера Sony.

Removing dust from inside the viewfinder

(1) Remove the screw with a screwdriver (not supplied). Then, while sliding the RELEASE knob, turn the eyecup in the direction of the arrow and pull it out.
(2) Clean the surface with a blower sold on the market.

Удаление пыли из видоискателя

(1) Снимите винт с помощью отвертки (не прилагается). Затем, сдвигая ручку RELEASE, поверните окуляр в направлении стрелки и вытащите его.
(2) Очистите поверхность с помощью имеющейся в продаже воздуходувки.

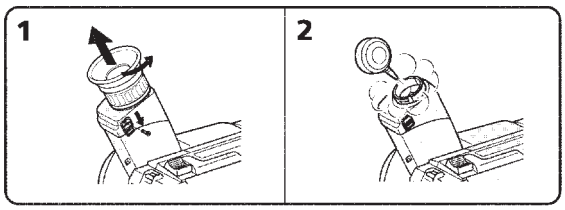

To reattach the eyecup

(1) Align the groove on the eyecup with the • mark on the barrel.
(2) Turn the eyecup in the direction of the arrow. Then replace the screw.

Для присоединения окуляра

(1) Совместите канавку на окуляре с меткой • на корпусе.
(2) Поверните окуляр в направлении стрелки. Затем установите на место винт.

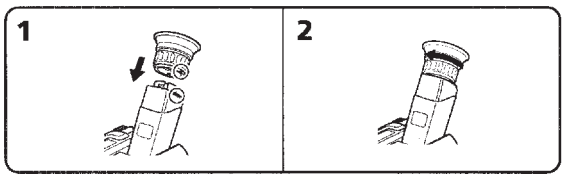

Caution

Do not remove any other screws. You may remove only the screw to remove the eyecup.

Предостережение

Не снимайте никаких других винтов. Вы можете открутить только винт для снятия окуляра.

Precautions

Camcorder operation

- Operate the camcorder on 7.2 V (battery pack) or 8.4 V (AC power adaptor).
- For DC or AC operation, use the accessories recommended in this manual.
- Should any solid object or liquid get inside the casing, unplug the camcorder and have it checked by a Sony dealer before operating it any further.
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.
- Keep the POWER switch setting to OFF when not using the camcorder.
- Do not wrap up the camcorder and operate it since heat may build up internally.
- Keep the camcorder away from strong magnetic fields or mechanical vibration.
- Do not push the LCD screen.
- If the camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.
- While using the camcorder, the back of the LCD screen may heat up. This is not a malfunction.

Built-in light

– CCD-TRV46E only

- Do not knock or jolt the buil-in light while it is turned on as it may damage the bulb or shorten the life of the bulb.
- Do not leave the built in light on while it is resting on or against something; it may cause a fire or damage the built-in light.

On handling tapes

Do not insert anything in the small holes on the rear of the cassette. These holes are used to sense the type of tape, thickness of tape and if the recording tab is in or out.

Предосторожности

Эксплуатация видеокамеры

- Эксплуатируйте видеокамеру от 7,2 В (батарейный блок) или 8,4 В (сетевой адаптер перем. тока).
- Для эксплуатации от постоянного тока или переменного тока используйте принадлежности, рекомендованные в данном руководстве.
- Если какой-нибудь твердый предмет или жидкость попали в корпус, то выключите видеокамеру и проверьте ее у дилера Sony перед дальнейшей ее эксплуатацией.
- Избегайте грубого обращения или механических ударов. Будьте особенно осторожны с объективом.
- Держите выключатель POWER в положении OFF, когда видеокамера не используется.
- Не заворачивайте видеокамеру и не эксплуатируйте ее в таком состоянии, так как может произойти внутреннее повышение температуры.
- Держите видеокамеру подальше от сильных магнитных полей или механической вибрации.
- Не нажимайте на экран ЖКД.
- Если видеокамера используется в холодном месте, то на экране ЖКД могут появляться теневые изображения. Это не является неисправностью.
- Во время использования видеокамеры тыльная часть экрана ЖКД может нагреться. Это не является неисправностью.

Встроенная подсветка

– только CCD-TRV46E

- Когда блок подсветки включен, не подвергайте его ударам или сильной тряске, поскольку это может привести к повреждению лампы или сокращению срока ее службы.
- Не оставляйте подсветку включенной, когда блок подсветки к чему-либо прислонен или опирается на что-либо, так как это может привести к его возгоранию или повреждению.

Относительно обращения с лентами

Не вставляйте ничего в маленькие отверстия на задней стороне кассеты. Эти отверстия используются для определения типа ленты, толщины ленты и наличия лепестка защиты записи.

Camcorder care

- When the camcorder is not to be used for a long time, remove the tape. Periodically operate the camcorder both in the CAMERA and PLAYER modes and play back a tape for about 3 minutes.
- If fingerprints or debris make the LCD screen dirty, we recommend using a LCD Cleaning Kit (not supplied) to clean the LCD screen.
- Clean the lens with a soft brush to remove dust. If there are fingerprints on it, remove them with a soft cloth.
- Clean the camcorder body with a dry soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.
- Do not let sand get into the camcorder. When you use the camcorder on a sandy beach or in a dusty place, protect it from the sand or dust with some protector such as Sony sports pack. Sand or dust may cause the unit to malfunction, and sometimes this malfunction cannot be repaired.

AC power adaptor

- Unplug the unit from the mains when not in use for a long time. To disconnect the mains lead, pull it out by the plug. Never pull the mains lead itself.
- Do not operate the unit with a damaged cord or if the unit has been dropped or damaged.
- Do not bend the mains lead forcibly, or put a heavy object on it. This will damage the cord and may cause a fire or electrical shock.
- Be sure that nothing metallic comes into contact with the metal parts of the connecting plate. If this happens, a short may occur and the unit may be damaged.
- Always keep the metal contacts clean.
- Do not disassemble the unit.

Уход за видеокамерой

- Когда видеокамера не используется в течение длительного времени, удалите ленту. Периодически эксплуатируйте видеокамеру в режиме CAMERA и режиме PLAYER и осуществляйте воспроизведение записи с ленты в течение примерно 3 минут.
- Если отпечатки пальцев или мусор сделают экран ЖКД грязным, то мы рекомендуем использование очистительного набора для ЖКД (не прилагается) для очистки экрана ЖКД.
- Очищайте объектив с помощью мягкой кисточки для удаления грязи. Если имеются отпечатки пальцев на объективе, то удалите их с помощью мягкой ткани.
- Очищайте корпус аппарата с помощью сухой мягкой ткани или мягкой ткани, слегка смоченной раствором умеренного моющего средства. Не используйте каких-либо типов растворителей, которые могут повредить отделку.
- Не позволяйте песку попасть в видеокамеру. При использовании видеокамеры на песчаном пляже или в пыльном месте предохраняйте ее от песка и пыли, например, при помощи защитного кожуха Sony sports. Песок и пыль могут вызвать неисправность аппарата, и иногда такая неисправность может не подлежать ремонту.

Сетевой адаптер перем. тока

- Отсоедините аппарат от электрической сети, если он не используется длительное время. Для отсоединения сетевого провода вытащите его за разъем. Никогда не тяните за сам сетевой провод.
- Не эксплуатируйте аппарат с поврежденным проводом, или если аппарат упал или был поврежден.
- Не сгибайте сетевой провод силой и не ставьте на него тяжелые предметы. Это повредит провод и может привести к пожару или удару электрическим током.
- Убедитесь, что никакие металлические предметы не соприкасаются с металлическими частями соединительной пластины. Если это случится, может произойти короткое замыкание, и аппарат может быть поврежден.
- Всегда поддерживайте металлические контакты в чистоте.
- Не разбирайте аппарат.

Maintenance information and precautions

- Do not apply mechanical shock or drop the unit.
- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment because it will disturb AM reception and video operation.
- The unit becomes warm while in use. This is normal.
- Do not place the unit in locations that are:
  - Extremely hot or cold
  - Dusty or dirty
  - Very humid
  - Vibrating

Notes on dry batteries
–CCD-TRV27E/TRV46E only

To avoid possible damage from battery leakage or corrosion, observe the following.
- Be sure to insert the batteries in the correct direction.
- Dry batteries are not rechargeable.
- Do not use a combination of new and old batteries.
- Do not use different types of batteries.
- The batteries slowly discharge while not in use.
- Do not use a battery that is leaking.

If battery leakage occurred
- Wipe off the liquid in the Remote Commander carefully before replacing the batteries.
- If you touch the liquid, wash it off with water.
- If the liquid get into your eyes, wash your eyes with a lot of water and then consult a doctor.

If any difficulty should arise, unplug the unit and contact your nearest Sony dealer.

Информация по уходу за аппаратом и предосторожности

- Не подвергайте аппарат механическим ударам и не роняйте его.
- Когда аппарат используется, особенно во время зарядки, держите его подальше от радиоприемников АМ и видеоаппаратуры, потому что он будет нарушать прием АМ и работу видеоаппаратуры.
- Аппарат становится теплым во время зарядки. Это является нормальным.
- Не размещайте аппарат в местах, которые:
  - Чрезмерно жаркие или холодные
  - Пыльные или грязные
  - Очень влажные
  - Подвержены вибрации

Примечания к сухим батарейкам
– только CCD-TRV27E/TRV46E

Во избежание возможного повреждения из-за протечки батареек или корроизии соблюдайте следующее.
- Обязательно вставьте батарейки с правильным направлением.
- Сухие батарейки не являются перезаряжаемыми.
- Не используйте комбинацию старых и новых батареек.
- Не используйте различные типы батареек.
- Батарейки медленно разряжаются, даже если не используются.
- Не используйте батарейку, которая протекла.

Если случится протечка батареек
- Перед сменой батареек тщательно протрите пульт дистанционного управления насухо.
- Если Вы дотронетесь до жидкости, то промойте это место водой.
- Если жидкость попала Вам в глаза, то промойте Ваши глаза большим количеством воды, а затем обратитесь к врачу.

В случае возникноненин каких-либо трудностей, отключите аппарат и обратитесь к Вашему ближайшему дилеру Sony.

Additional information / Дополнительная информация

Using your camcorder abroad

Each country or area has its own electric and TV colour systems. Before using your camcorder abroad, check the following points.

Power sources

You can use your camcorder in any country or area with the supplied AC power adaptor within 100 V to 240 V AC, 50/60 Hz.

Difference in colour systems

This camcorder is a PAL system based camcorder. If you want to view the playback picture on a TV, it must be a PAL system based TV.
Check the following list.

PAL system
Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Great Britain, Holland, Hong Kong, Italy, Kuwait, Malaysia, New Zealand, Norway, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, etc.

PAL-M system
Brazil

PAL-N system
Argentina, Paraguay, Uruguay

NTSC system
Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

SECAM system
Bulgaria, France, Guyana, Hungary, Iran, Iraq, Monaco, Poland, Russia, Ukraine, etc.

Использование Вашей видеокамеры за границей

Каждая страна или область имеет свои собственные системы электрической сети и цветного телевидения. Перед использованием Вашей видеокамеры за границей проверьте следующие пункты.

Источники питания

Вы можете использовать видеокамеру в любой стране или области с помощью прилагаемого сетевого адаптера перем. тока в пределах от 100 В до 240 В перем. тока, 50/60 Гц.

Различия в системах цветного телевидения

Данная видеокамера основана на системе PAL. Если Вы хотите просмотреть воспроизводимое изображение на телевизоре, то это должен быть телевизор, основанный на системе PAL.
Проверьте по следующему перечню.

Система PAL
Австралия, Австрия, Бельгия, Великобритания, Германия, Голландия, Гонконг, Дания, Испания, Италия, Китай, Кувейт, Малайзия, Новая Зеландия, Норвегия, Португалия, Сингапур, Словацкая Республика, Тайланд, Финляндия, Чешская Республика, Швейцария, Швеция и т.д.

Система PAL-M
Бразилия

Система PAL-N
Аргентина, Парагвай, Уругвай

Система NTSC
Багамские острова, Боливия, Венесуэла, Канада, Колумбия, Корея, Мексика, Перу, Суринам, США, Тайвань, Филиппины, Центральная Америка, Чили, Эквадор, Ямайка, Япония и т.д.

Система SECAM
Болгария, Венгрия, Гайяна, Ирак, Иран, Монако, Польша, Россия, Украина, Франция и т.д.

English

Trouble check

If you run into any problem using the camcorder, use the following table to troubleshoot the problem. Should the difficulty persist, disconnect the power source and contact your Sony dealer or local authorized Sony service facility.

Camcorder

Power

Symptom	Cause and/or Corrective Actions
The power is not on.	• The battery pack is not installed. → Install the battery pack. (p. 8) • The battery is dead. → Use a charged battery pack. (p. 9) • The AC power adaptor is not connected to the mains. → Connect the AC power adaptor to the mains. (p. 31)
The power goes off.	• While being operated in CAMERA mode, the camcorder has been in Standby mode for more than 5 minutes. → Turn STANDBY down once and then up again. (p. 13) • The battery is dead. → Use a charged battery pack. (p. 9)
The battery pack is quickly discharged.	• The camcorder does not operate when using a battery pack that is not an "InfoLITHIUM" battery pack. → Use an "InfoLITHIUM" battery pack. (p. 74) • The ambient temperature is too low. (p. 73) • The battery pack has not been charged fully. → Charge the battery pack again. (p. 9) • The battery pack is completely dead, and cannot be recharged. → Use another battery pack. (p. 73)
While charging the battery pack, no indicator appears or the indicator flashes in the display window.	• The AC power adaptor is disconnected. → Connect it firmly. • Something is wrong with the battery pack. → Contact your Sony dealer or local authorized Sony service facility.

Operation

Symptom	Cause and/or Corrective Actions
START/STOP does not operate.	• The tape is stuck to the drum. → Eject the tape. (p. 14) • The tape has run out. → Rewind the tape or use a new one. (p. 14) • The POWER switch is set to PLAYER. → Set it to CAMERA. (p. 15) • The tab on the cassette is out (red). → Use a new tape or slide the tab. (p. 14)
Recording stops in a few seconds.	• The START/STOP MODE switch is set to 5SEC or ANTI GROUND SHOOTING . → Set it to . (p. 19)

(to be continued)

Additional information / Дополнительная информация

Trouble check

Symptom	Cause and/or Corrective Actions
The cassette cannot be removed from the holder.	• The battery is dead. → Use a charged battery pack or the AC power adaptor. (p. 9, 31)
and ⏏ indicators flash and no function except for cassette ejection works.	• Moisture condensation has occurred. → Remove the cassette and leave the camcorder for at least 1 hour. (p. 76)
The date or time indicator is flashing.	• You pressed DATE and TIME together for more than 2 seconds. → The camcorder is not malfunctioning. You may start recording. Flashing will stop soon. • The lithium battery is weak or dead. → Replace the lithium battery with a new one. (p. 67)
The tape does not move when a video control button is pressed.	• The POWER switch is set to CAMERA or OFF. → Set it to PLAYER. • The tape has run out. → Rewind the tape or use a new one. (p. 26)
The SteadyShot function does not activate. (CCD-TRV46E only)	• STEADYSHOT is set to OFF in the menu system. → Set it to ON. (p. 62) • The SteadyShot function does not work when the wide mode is set to 16:9 FULL.
The autofocusing function does not work.	• FOCUS is set to MANUAL. → Set it to AUTO. (p. 48) • Shooting conditions are not suitable for autofocus. → Set FOCUS to MANUAL to focus manually. (p. 48)
The fader function does not work.	• The START/STOP MODE switch is set to 5SEC or ANTI GROUND SHOOTING . → Set it to . (p. 19)
The date or time indicator disappears.	• Reset the date and time. (p. 68)
Exposure adjustment or the PROGRAM AE function does not work.	• The NIGHTSHOT switch is set to ON. → Set it to OFF.

Picture

Symptom	Cause and/or Corrective Actions
The image on the viewfinder screen is not clear.	• The viewfinder lens is not adjusted. → Adjust the viewfinder lens. (p. 16)
A vertical band appears when a subject such as lights or a candle flame is shot against a dark background.	• The contrast between the subject and background is too high. The camcorder is not malfunctioning. → Change locations.

Trouble check

Symptom	Cause and/or Corrective Actions
A vertical band appears when shooting a very bright subject.	• The camcorder is not malfunctioning.
The playback picture is not clear.	• EDIT is set to ON in the menu system. → Set it to OFF. (p. 36)
The picture is "noisy".	• The video heads may be dirty. → Clean the heads using the Sony V8-25CLD cleaning cassette (not supplied). (p. 77)
The picture does not appear in the viewfinder.	• The LCD panel is open. → Close the LCD panel. (p. 20)
An unknown picture is displayed in the viewfinder or on the LCD screen.	• If 10 minutes elapse after you set the POWER switch to CAMERA without inserting a cassette, the camcorder automatically starts the demonstration or DEMO MODE is set ON in the menu system. → Insert the cassette and the demonstration stops. You can deactivate the demonstration. (p. 35)
The picture does not appear on the LCD screen.	• Incorporated fluorescent tube is worn out. → Please contact your nearest Sony dealer.
The five digit code appears.	• The self-diagnosis function is activated. → Check the code and solve the problem. (p. 89)
Picture is recorded in incorrect/unnatural colour.	• The NIGHTSHOT switch is set to ON. → Set it to OFF. (p. 41)
Picture appears too bright, and the subject does not appear in the viewfinder or on the LCD screen.	• The NIGHTSHOT switch is set to ON in a bright place. → Set it to OFF, or use the NightShot function in a dark place. (p. 41)

Others

Symptom	Cause and/or Corrective Actions
The supplied Remote Commander does not work. (CCD-TRV27E/TRV46E only)	• COMMANDER is set to OFF in the menu system. → Set it to ON. (p. 34) • Something is blocking the infrared rays. → Remove the obstacle. • The batteries are not inserted with the correct polarity. → Insert the batteries with the correct polarity. (p. 99) • The batteries are dead. → Insert new ones. (p. 99)
The beep sounds for 5 seconds.	• Moisture condensation has occurred. → Remove the cassette and leave the camcorder for at least 1 hour. (p. 76) • Some troubles occured in your camcorder. → Remove the cassette and insert it again, then operate the camcorder.
There is dust in the viewfinder.	• Detach the eyecup and clean the viewfinder. (p. 78)

Additional information / Дополнительная информация

Русский

Проверка неисправностей

Если у Вас возникла какая-либо проблема при использовании видеокамеры, воспользуйтесь следующей таблицей для отыскания и устранения проблемы.
Если трудности все еще остаются, то отсоедините источник питания и обратитесь к Вашему дилеру Sony или на местное уполномоченное предприятие по обслуживанию Sony.

Видеокамера

Питание

Признак	Причина и/или действия по устранению
Не включается питание.	• Не установлен батарейный блок. → Установите батарейный блок. (стр. 8) • Батарейный блок полностью разрядился. → Используйте заряженный батарейный блок. (стр. 9) • Сетевой адаптер перем. тока не подсоединен к электрической сети. → Подсоедините сетевой адаптер перем. тока к электрической сети. (стр. 31)
Питание выключается.	• При работе в режиме CAMERA видеокамера находилась в режиме готовности более 5 минут. → Поверните STANDBY вниз, а затем снова вверх. (стр. 15) • Батарейный блок полностью разрядился. → Используйте заряженный батарейный блок. (стр. 9)
Батарейный блок быстро разряжается.	• Видеокамера не работает при использовании батарейного блока, который не является батарейным блоком "InfoLITHIUM". → Используйте батарейный блок "InfoLITHIUM". (стр. 74) • Температура окружающей среды слишком низкая. (стр. 73) • Батарейный блок был заряжен не полностью. → Снова зарядите батарейный блок. (стр. 9) • Батарейный блок полностью разрядился и не может быть перезаряжен. → Используйте другой батарейный блок. (стр. 73)
Во время зарядки батарейного блока никакой индикатор не появляется, или индикатор мигает в окошке дисплея.	• Отсоединился сетевой адаптер переменного тока. → Подсоедините его надежно. • Что-то не в порядке у батарейного блока. → Свяжитесь с Вашим дилером Sony или местным уполномоченным предприятием по техническому обслуживанию Sony.

Работа

Признак	Причина и/или действия по устранению
Не функционирует START/STOP.	• Лента прилипла к барабану. → Выталкните ленту. (стр. 14) • Лента закончилась. → Перемотайте ленту назад или используйте новую. (стр. 14) • Выключатель POWER установлен в положение PLAYER. → Установите его в положение CAMERA. (стр. 15) • Лепесток кассеты отсутствует (красная метка). → Используйте новую ленту или передвиньте лепесток. (стр. 14)
Запись останавливается через несколько секунд.	• Переключатель START/STOP MODE установлен в положение 5SEC или ANTI GROUND SHOOTING ⏃. → Установите его в положение ⏄. (стр. 19)

Проверка неисправностей

Признак	Причина и/или действия по устранению
Кассета не может быть вынута из держателя.	• Батарейный блок полностью разряжен. → Используйте заряженный батарейный блок или сетевой адаптер перем. тока. (стр. 9, 31)
Мигают индикаторы ⏏ и ⏏, и никакие функции, за исключением выталкивания кассеты, не работают.	• Произошла конденсация влаги. → Удалите кассету и оставьте видеокамеру по меньшей мере на 1 час. (стр. 76)
Мигает индикатор даты или времени.	• Вы нажали DATE и TIME одновременно более, чем на 2 секунды. → Видеокамера не является неисправной. Вы можете начинать запись. Мигание вскоре прекратится. • Литиевая батарейка слабая или полностью разряженная. → Замените литиевую батарейку на новую. (стр. 67)
Лента не перемещается при нажатии кнопки видеоконтроля.	• Выключатель POWER установлен в положение CAMERA или OFF. → Установить его в положение PLAYER. • Лента закончилась. → Перемотайте ленту назад или используйте новую. (стр. 26)
Не активизируется функция устойчивой съемки. (только CCD-TRV46E)	• Функция STEADYSHOT установлена на OFF. → Установите ее на ON. (стр. 62) • Функция устойчивой съемки не работает, когда широкоформатный режим установлен на 16:9FULL.
Не работает функция автоматической фокусировки.	• Функция FOCUS установлена на MANUAL. → Установите ее на AUTO. (стр. 48) • Условия съемки не подходят для автоматической фокусировки. → Установите FOCUS на MANUAL для фокусировки вручную. (стр. 48)
Функция плавного введения изображения не работает.	• Переключатель START/STOP MODE установлен в положение 5SEC или ANTI GROUND SHOOTING ⏃. → Установите его в положение ⏄. (стр. 19)
Исчезает индикатор даты или времени.	• Снова установите дату и время. (стр. 68)
Не работает регулировка экспозиции или функция PROGRAM AE.	• Функция NIGHTSHOT установлена на ON. →Установите ее на OFF.

Изображение

Признак	Причина и/или действия по устранению
Изображение на экране видоискателя нечеткое.	• Объектив видоискателя не отрегулирован → Отрегулируйте объектив видоискателя. (стр. 16)
Вертикальная полоса появляется, если такие объекты, как источники света или пламя свечи, снимаются на темном фоне.	• Слишком высокий контраст между объектом и фоном. Видеокамера не является неисправной. → Измените позицию съемки.

(Продолжается)

Additional information / Дополнительная информация

Проверка неисправностей

Признак	Причина и/или действия по устранению
Вертикальная полоса появляется при съемке очень яркого объекта.	• Видеокамера не является неисправной.
Воспроизводимое изображение нечеткое.	• Функция EDIT установлена на ON в системе меню. → Установите ее на OFF. (стр. 36)
Изображение "зашумлено".	• Возможно загрязнены видеоголовки. → Очистите видеоголовки с использованием очистительной кассеты Sony V8-25CLD (не прилагается). (стр. 77)
Изображение не появляется в видоискателе.	• Открыта панель ЖКД. → Закройте панель ЖКД. (стр. 20)
Незнакомое изображение появляется на экране ЖКД или в видоискателе.	• Если истечет 10 минут после того, как Вы установите выключатель POWER в положение CAMERA без вставленной кассеты, видеокамера автоматически начинает демонстрацию, или функция DEMO MODE в системе меню установлена на ON. → Вставьте кассету и демонстрация прекратится. Вы можете отключить демонстрационный режим. (стр. 35)
Изображение не появляется на экране ЖКД.	• Встроенная люминесцентная лампа вышла из строя. → Свяжитесь с Вашим ближайшим дилером Sony.
Появился пятизначный код.	• Была активизирована функция самодиагностики. → Проверьте код и устраните проблему. (стр. 90)
Изображение записывается в неправильном/ненатуральном цвете.	• Функция NIGHTSHOT установлена на ON. →Установите ее на OFF. (стр. 41)
Картинка слишком яркая, в видоискателе или на экране ЖКД невозможно различить объект.	• Функция ночной съемки (NIGHTSHOT) включена при съемке в светлом месте. → Переключите ее на OFF или используйте ночную съемку в темном месте. (стр. 41)

Прочее

Признак	Причина и/или действия по устранению
Не работает прилагаемый пульт дистанционного управления. (только CCD-TRV27E/TRV46E)	• Функция COMMANDER установлена на OFF в системе меню. → Установите ее на ON. (стр. 34) • Что-то закрывает путь инфракрасных лучей. → Удалите препятствие. • Батарейка вставлена с неправильной полярностью. → Вставьте батарейку с правильной полярностью. (стр. 99) • Батарейки полностью разряжены. → Вставьте новые батарейки. (стр. 99)
Зуммерный сигнал звучит в течение 5 секунд.	• Произошла конденсация влаги. → Удалите кассету и оставьте видеокамеру по меньшей мере на 1 час. (стр. 76) • С Вашей видеокамерой случилась какая-то проблема. → Удалите кассету и вставьте ее снова, а затем эксплуатируйте видеокамеру.
В видоискатель попала пыль.	• Снимите окуляр и почистите видоискатель.(стр. 78)

English

Self-diagnosis display

The camcorder has a self-diagnosis display. This function displays the camcorder's condition with five digits (a combination of a letter and figures) in the viewfinder, on the LCD screen or in the display window.
If this occurs, check the following code chart. The five-digit display informs you of the camcorder's current condition. The last two digits (indicated by □□) will differ depending on the state of the camcorder.

LCD screen



Self-diagnosis display

- C:□□:□□
  You can service the camcorder yourself.
- E:□□:□□
  Contact your Sony dealer or local authorized Sony facility.

Five-digit display	Cause and/or Corrective Actions
C:21:□□	• Moisture condensation has occurred. → Remove the cassette and leave the camcorder for at least 1 hour. (p. 76)
C:22:□□	• The video heads are dirty. → Clean the heads using the Sony V8-25CLD cleaning cassette (not supplied). (p. 77)
C:23:□□	• You are using a battery pack that is not an "InfoLITHIUM" battery pack. → Use an "InfoLITHIUM" battery pack. (p. 74)
C:31:□□ C:32:□□	• A serviceable situation not mentioned above has occurred. → Remove the cassette and insert it again, then operate the camcorder. → Disconnect the mains lead of the AC power adaptor or remove the battery pack. After reconnecting the power source, operate the camcorder.
E:61:□□ E:62:□□	• A camcorder malfunction which you cannot service has occurred. → Contact your Sony dealer or local authorized Sony service facility and inform them of the five digits. (example: E:61:10)

If you are unable to resolve the problem, contact your Sony dealer or local authorized Sony service facility.

Additional information / Дополнительная информация

Русский

Дисплей самодиагностики

Видеокамера имеет дисплей самодиагностики.
Данная функция отображает состояние видеокамеры с помощью пяти знаков (комбинации одной буквы и цифр) в видоискателе, на экране ЖКД или в окошке дисплея. Если это случится, выполните проверку в соответствии со следующей кодовой таблицей. Пятизначная индикация будет информировать Вас о текущем состоянии видеокамеры. Последние две цифры (указанных как □□) будут различаться в зависимости от состояния видеокамеры.

Экран ЖКД

Дисплей самодиагностики

- C:□□:□□
  Вы можете выполнить техническое обслуживание видеокамеры самостоятельно.
- E:□□:□□
  Свяжитесь с Вашим дилером Sony или местным уполномоченным предприятием Sony.

Пятизначный дисплей	Вероятная причина и/или метод устранения.
C:21:□□	• Произошла конденсация влаги. → Выньте кассету и оставьте видеокамеру по меньшей мере на 1 час. (стр. 76)
C:22:□□	• Грязные видеоголовки. → Очистите видеоголовки с использованием очистительной кассеты V8-25CLD фирмы Sony (не прилагается). (стр. 77)
C:23:□□	• Вы используете батарейный блок, который не является батарейным блоком "InfoLITHIUM". → Используйте батарейный блок "InfoLITHIUM". (стр. 74)
C:31:□□ C:32:□□	• Возникла устраняемая неполадка, не указанная выше. → Выньте кассету и вставьте ее снова, а затем управляйте видеокамерой. → Отсоедините провод электропитания сетевого адаптера переменного тока или удалите батарейный блок. После обратного подсоединения источника питания управляйте видеокамерой.
E:61:□□ E:62:□□	• Случилась неисправность видеокамеры, для которой Вы не можете выполнить техническое обслуживание. → Свяжитесь с Вашим дилером Sony или местным уполномоченным предприятием Sony и проинформируйте их о появлении пяти знаков. (Например: E:61:10)

Если Вы не можете решить проблему, то свяжитесь с Вашим дилером Sony или местным уполномоченным предприятием Sony.

Identifying the parts Опознавание частей

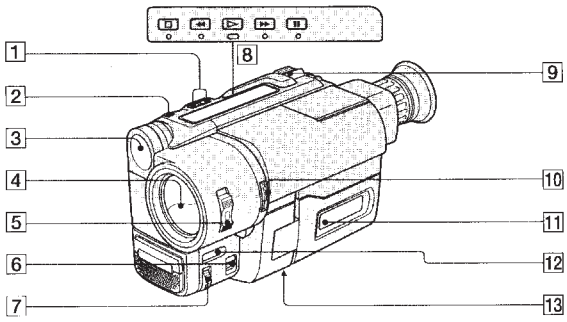

1 **EDITSEARCH button** (p. 24)

2 **LASER LINK button** (CCD-TRV46E only) (p. 64)

3 **Built-in light** (CCD-TRV46E only) (p. 59)

4 **Lens cover**

5 **POWER switch** (p. 15)

6 **FOCUS switch** (p. 48)

7 **NEAR/FAR dial** (p. 48)

8 **Video control buttons** (p. 26)
- ■ STOP (stop)
- ◄◄ REW (rewind)
- ► PLAY (playback)
- ►► FF (fastforward)
- ❚❚ PAUSE (pause)

9 **Power zoom lever** (p. 18)

10 **NIGHTSHOT switch** (p. 41)

11 **Display window** (p. 101)

12 **FADER button** (p. 39)

13 **Tripod receptacle** (p. 23)
Make sure that the length of the tripod screw is less than 6.5 mm otherwise, you cannot attach the tripod securely and the screw may damage the camcorder.

1 **Кнопка EDITSEARCH** (стр. 24)

2 **Кнопка LASER LINK** (только CCD-TRV46E) (стр. 64)

3 **Встроенный источник света** (только CCD-TRV46E) (стр. 59)

4 **Крышка объектива**

5 **Выключатель POWER** (стр. 15)

6 **Переключатель FOCUS** (стр. 48)

7 **Диск NEAR/FAR** (стр. 48)

8 **Кнопки видеоконтроля** (стр. 26)
- ■ STOP (остановка)
- ◄◄ REW (ускоренная перемотка назад)
- ► PLAY (воспроизведение)
- ►► FF (ускоренная перемотка вперед)
- ❚❚ PAUSE (пауза)

9 **Рычаг приводного трансфокатора** (стр. 18)

10 **Выключатель NIGHTSHOT** (стр. 41)

11 **Окошко дисплея** (стр. 101)

12 **Кнопка FADER** (стр. 39)

13 **Держатель треноги** (стр. 23)
Убедитесь, что длина винта треноги менее 6,5 мм. В противном случае Вы не сможете надержно подсоединить треногу, а винт может повредить видеокамеру.

Additional information / Дополнительная информация

Identifying the parts Опознавание частей

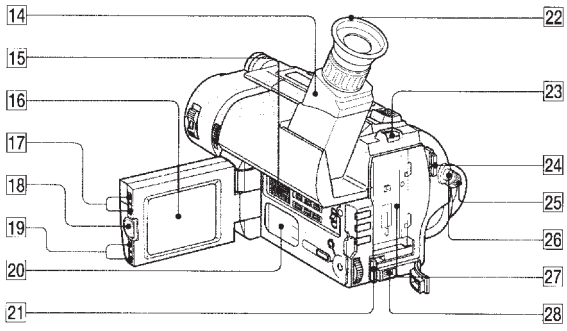

14 **Viewfinder** (p. 16)

15 **Speaker** (p. 26, 27)

16 **LCD screen** (p. 20)

17 **LCD BRIGHT buttons** (p. 20)

18 **OPEN button** (p. 19)

19 **VOLUME buttons** (p. 26)

20 **Lithium battery compartment** (p. 67)

21 **Hook for shoulder strap** (p. 100)

22 **Eyecup**

23 **BATT RELEASE lever** (p. 13)

24 **Hook for shoulder strap** (p. 100)

25 **STANDBY switch** (p. 15)

26 **START/STOP button** (p. 15)

27 **Battery mounting surface**

28 **DC IN jack** (p. 9, 31)

14 **Видоискатель** (стр. 16)

15 **Громкоговоритель** (стр. 26, 27)

16 **Экран ЖКД** (стр. 20)

17 **Кнопки LCD BRIGHT** (стр. 20)

18 **Кнопка OPEN** (стр. 19)

19 **Кнопки VOLUME** (стр. 26)

20 **Отсек литиевой батарейки** (стр. 67)

21 **Скоба для плечевого ремня** (стр. 100)

22 **Окуляр**

23 **Рычаг BATT RELEASE** (стр. 13)

24 **Скоба для плечевого ремня** (стр. 100)

25 **Переключатель STANDBY** (стр. 15)

26 **Кнопка START/STOP** (стр. 15)

27 **Поверхность установки батарейного блока**

28 **Гнездо DC IN** (стр. 9, 31)

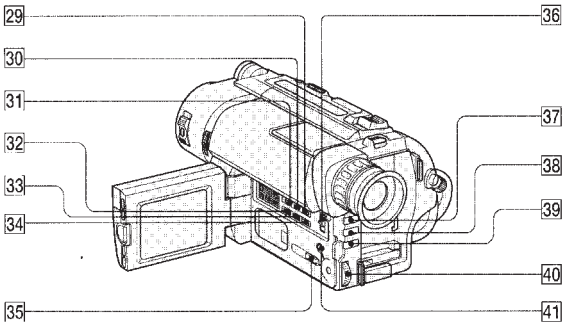

29 **COUNTER RESET button** (p. 17)
30 **TIME button** (p. 57)
31 **DATE button** (p. 57)
32 **DISPLAY button** (p. 27)
33 **TITLE button** (p. 53)
34 **END SEARCH button** (p. 29)
35 **PICTURE EFFECT button** (p. 50)
36 **START/STOP MODE switch** (p. 19)
37 **BACK LIGHT button** (p. 37)
38 **PROGRAM AE button** (p. 46)
39 **EXPOSURE button** (p. 51)
40 **Control dial** (p. 32)
41 **MENU button** (p. 32)

29 **Кнопка COUNTER RESET** (стр. 17)
30 **Кнопка TIME** (стр. 57)
31 **Кнопка DATE** (стр. 57)
32 **Кнопка DISPLAY** (стр. 27)
33 **Кнопка TITLE** (стр. 53)
34 **Кнопка END SEARCH** (стр. 29)
35 **Кнопка PICTURE EFFECT** (стр. 50)
36 **Переключатель START/STOP MODE** (стр. 19)
37 **Кнопка BACK LIGHT** (стр. 37)
38 **Кнопка PROGRAM AE** (стр. 46)
39 **Кнопка EXPOSURE** (стр. 51)
40 **Регулировочный диск** (стр. 32)
41 **Кнопка MENU** (стр. 32)

Identifying the parts Опознавание частей

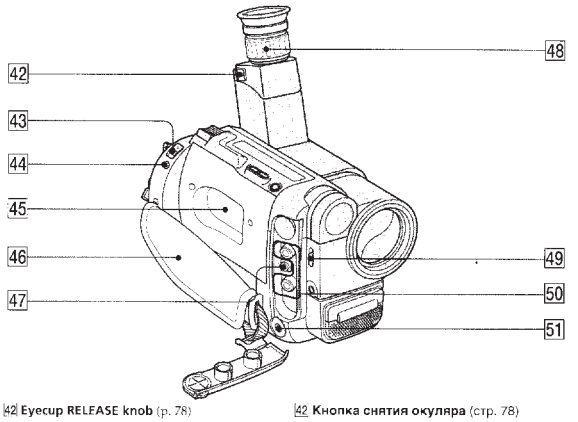

42 **Eyecup RELEASE knob** (p. 78)
43 **EJECT switch** (p. 14)
44 **LANC control jack**
stands for Local Application Control Bus System. The control jack is used for controlling the tape transport of video equipment and peripherals connected to it. This jack has the same function as the jack indicated as CONTROL L or REMOTE.
45 **Cassette compartment** (p. 14)
46 **Grip strap** (p. 22)
47 **RFU DC OUT (RFU adaptor DC output) jack** (p. 63)
48 **Viewfinder lens adjustment ring** (p. 16)
49 **LIGHT switch** (CCD-TRV46E only) (p. 59)
50 **VIDEO/AUDIO jacks** (p. 63)
51 **(earphone) jack** (p. 27)

42 **Кнопка снятия окуляра** (стр. 78)
43 **Кнопка выброса кассеты EJECT** (стр. 14)
44 **Гнездо управления LANC**
означает систему канала местного управления. Гнездо управления используется для контроля за перемещением ленты видеооборудования и периферийных устройств, подключенных к нему. Данное гнездо имеет такую же функцию, как и разъемы, обозначенные как CONTROL L или REMOTE.
45 **Кассетный отсек** (стр. 14)
46 **Ременной захват** (стр. 22)
47 **Гнездо RFU DC OUT (выход пост. тока ВЧ-адаптера)** (стр. 63)
48 **Кольцо регулировки объектива видоискателя** (стр. 16)
49 **Переключатель LIGHT** (только CCD-TRV46E) (стр. 59)
50 **Гнезда VIDEO/AUDIO** (стр. 63)
51 **Гнездо (наушников)** (стр. 27)

Identifying the parts Опознавание частей

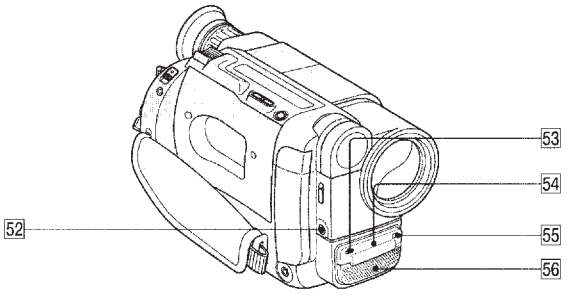

52 **MIC jack (PLUG IN POWER)**
Connect an external microphone (not supplied). This jack also accepts a "plug-in-power" microphone.
53 **Camera recording/battery lamp** (p. 15)
54 **NightShot light emitter** (p. 41) **/LASER LINK emitter** (CCD-TRV46E only) (p. 64)
55 **Remote sensor** (CCD-TRV27E/TRV46E only) (p. 98)
Aim the Remote Commander here for remote control.
56 **Microphone**

52 **Гнездо MIC (PLUG IN POWER)**
Для подсоединения внешнего микрофона (не прилагается). Это гнездо допускает подключение микрофона "с выключателем питания".
53 **Лампочка записи камерой/батареи** (стр. 15)
54 **Эмиттер ночной съемки** (стр. 41) **/ Излучатель LASER LINK** (только CCD-TRV46E) (стр. 64)
55 **Дистанционный сенсор** (только CCD-TRV27E/TRV46E) (стр. 98)
Для осуществления функции дистанционного управления нацельте ПДУ сюда.
56 **Микрофон**

Additional information / Дополнительная информация

Identifying the parts Опознавание частей

Remote Commander

–CCD-TRV27E/TRV46E only
The buttons that have the same name on the Remote Commander as on the camcorder function identically.

Пульт дистанционного управления

– Только CCD-TRV27E/TRV46E
Кнопки пульта дистанционного управления, которые имеют одинаковые наименования с кнопками на видеокамере, функционируют идентично.

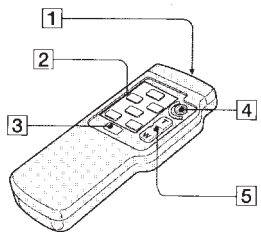

1 **Transmitter**
Point toward the remote sensor to control the camcorder after turning on the camcorder.
2 **Video control buttons** (p. 26)
3 **DISPLAY button** (p. 27)
4 **START/STOP button** (p. 15)
5 **Power zoom button** (p. 18)

1 **Передатчик**
Нацельте в направлении дистанционного датчика для управления видеокамерой после ее включения.
2 **Кнопки видеоконтроля** (стр. 26)
3 **Кнопка DISPLAY** (стр. 27)
4 **Кнопка START/STOP** (стр. 15)
5 **Кнопка приводного трансфокатора** (стр. 18)

Notes on the Remote Commander

- Keep the remote sensor away from strong light sources such as direct sunlight or illumination. Otherwise, the remote control may not be effective.
- Be sure that there is no obstacle between the remote sensor on the camcorder and the Remote Commander.
- This camcorder works in commander mode VTR 2. The commander modes (1, 2 and 3) are used to distinguish this camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR in commander mode VTR 2, we recommend you change the commander mode or cover the remote sensor of the VCR with black paper.

To prepare the Remote Commander

Insert two R6 (size AA) batteries by matching the + and – on the batteries to the diagram inside the battery compartment.

Примечания к пульту дистанционного управления

- Держите дистанционный датчик подальше от сильных источников света, как например, прямые солнечные лучи или иллюминация. В противном случае дистанционное управление может не действовать.
- Убедитесь, что между дистанционным датчиком на видеокамере и пультом дистанционного управления нет препятствия.
- Данная видеокамера работает в режиме пульта дистанционного управления VTR2. Режимы пульта дистанционного управления (1, 2 и 3) используются для отличия данной видеокамеры от других KBM фирмы Sony во избежание неправильной работы дистанционного управления. Если Вы используете другой KBM фирмы Sony, работающий в режиме VTR2, мы рекомендуем Вам изменить режим пульта дистанционного управления или закрыть дистанционный датчик KBM черной бумагой.

Для подготовки пульта дистанционного управления

Вставьте две батарейки R6 (размером AA) согласуя знаки + и – на батарейках со схемой внутри батарейного отсека.

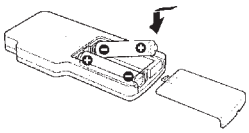

Note on battery life

The batteries for the Remote Commander last about 6 months under normal operation. When the batteries become weak or dead, the Remote Commander does not work.

To avoid damage from possible battery leakage

Remove the batteries when you will not use the Remote Commander for a long time.

Примечание к сроку службы батареек

Батареек для пульта дистанционного управления хватает приблизительно на 6 месяцев при нормальных условиях эксплуатации. Когда батарейки станут слабыми или полностью разрядятся, пульт дистанционного управления не будет работать.

Во избежание повреждения из-за возможной утечки из батареек.

Удалите батарейки, если Вы не будете использовать пульт дистанционного управления в течение длительного времени.

Attaching the shoulder strap

Attach the supplied shoulder strap to the hooks for the shoulder strap.

Прикрепление плечевого ремня

Прикрепите прилагаемый плечевой ремень к скобам для плечевого ремня.

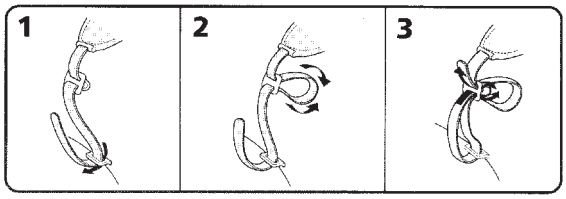

To watch the demonstration

You can start the demonstration by setting DEMO MODE in the menu system.
You can also start the demonstration by the following operation.
When NIGHTSHOT is set to ON, you cannot watch the demonstration.

To enter demo mode

(1) Eject the cassette and set the POWER switch to PLAYER.
(2) Turn STANDBY up to STANDBY.
(3) While holding down ► set the POWER switch to CAMERA.

To exit demo mode

(1) Set the POWER switch to PLAYER.
(2) Turn STANDBY up to STANDBY.
(3) While holding down ■ set the POWER switch to CAMERA.

Для просмотра демонстрации

Вы можете начать демонстрацию с помощью установки DEMO MODE в системе меню.
Вы также можете начать демонстрацию, выполнив следующую операцию.
Если индикация NIGHTSHOT установлена в положение ON, Вы не сможете наблюдать демонстрацию.

Для ввода демонстрационного режима

(1) Удалите кассету и установите выключатель POWER в положение PLAYER.
(2) Поверните STANDBY вверх в положение STANDBY.
(3) Нажимая вниз ►, установите выключатель POWER в положение CAMERA.

Для выхода из демонстрационного режима

(1) Удалите кассету и установите выключатель POWER в положение PLAYER.
(2) Поверните STANDBY вверх в положение STANDBY.
(3) Удерживая ■ внизу, установите выключатель POWER в положение CAMERA.

Operation indicators

Viewfinder/Видоискатель

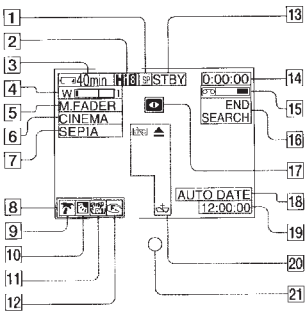

Рабочие индикаторы

Display window/Окошко дисплея

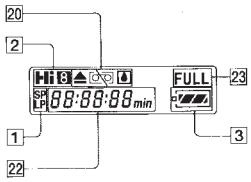

[1] Recording mode indicator (p. 35)/ Mirror mode indicator (p. 21)

[2] Playing back or recording in Hi8 format (CCD-TRV46E only) (p. 70)

[3] Remaining battery time indicator

[4] Exposure indicator (p. 51)/ Zoom indicator (p. 18)

[5] FADER indicator (p. 39)

[6] Wide mode indicator (p. 43)

[7] PICTURE EFFECT indicator (p. 50)

[8] LCD BRIGHT indicator (p. 26)/ VOLUME indicator (p. 26)

[9] PROGRAM AE indicator (p. 45)

[10] Backlight indicator (p. 37)

[11] SteadyShot off indicator (CCD-TRV46E only) (p. 62)

[12] Manual focusing (p. 48)

[1] **Индикатор рабочего режима** (стр. 35)/ **Индикатор зеркального режима** (стр. 21)

[2] **Воспроизведение или запись в формате Hi8** (только CCD-TRV46E) (стр. 70)

[3] **Индикатор оставшегося времени заряда батарейного блока**

[4] **Индикатор экспозиции** (стр. 51)/ **Индикатор трансфокатора** (стр. 18)

[5] **Индикатор FADER** (стр. 39)

[6] **Индикатор широкоформатного режима** (стр. 43)

[7] **Индикатор PICTURE EFFECT** (стр. 50)

[8] **Индикатор LCD BRIGHT** (стр. 26)/ **Индикатор VOLUME** (стр. 26)

[9] **Индикатор PROGRAM AE** (стр. 45)

[10] **Индикатор задней подсветки** (стр. 37)

[11] **Индикатор устойчивой съемки** (только CCD-TRV46E) (стр. 62)

[12] **Ручная фокусировка** (стр. 48)

(to be continued)

[13] Standby/Recording mode indicator (p. 15)/ Video control mode indicator (p. 28)

[14] Tape counter (p. 17)/ Self-diagnosis functions indicator (p. 89)/ 5SEC mode indicator (p. 19)

[15] Remaining tape indicator



[16] END SEARCH indicator (p. 29)

[17] NIGHTSHOT indicator (p. 41)

[18] AUTO DATE indicator (p. 15)/ Date indicator (p. 57)

[19] Time indicator (p. 57)

[20] Warning indicators (p. 103)

[21] Recording lamp (p. 15)

[22] Date or time indicator (p. 57)/ Tape counter (p. 17)/ Self-diagnosis functions indicator (p. 89)/ Remaining battery time indicator

[23] FULL charge indicator (p. 9)

[13] **Индикатор режима готовности/режима записи** (стр. 15)/**Индикатор режима видеоконтроля** (стр. 28)

[14] **Индикатор счетчика ленты** (стр. 17)/ **Индикатор функции самодиагностики** (стр.90)/**Индикатор режима 5SEC** (стр. 19)

[15] **Индикатор оставшейся ленты**



[16] **Индикатор END SEARCH** (стр. 29)

[17] **Индикатор NIGHTSHOT** (стр. 41)

[18] **Индикатор AUTO DATE** (стр. 15)/ **Индикатор даты** (стр. 57)

[19] **Индикатор времени** (стр. 57)

[20] **Предупреждающие индикаторы** (стр. 103)

[21] **Лампочка записи** (стр. 15)

[22] **Индикатор даты или времени** (стр. 57)/ **Счетчик ленты** (стр. 17)/**Индикатор функции** (стр. 90)/**Индикатор времени оставшегося заряда батарейного блока**

[23] **Индикатор зарядки FULL** (стр. 9)

Warning indicators

If indicators flash in the viewfinder or in the display window, check the following:
♪♪... you can hear the beep sound when the BEEP is set to ON.

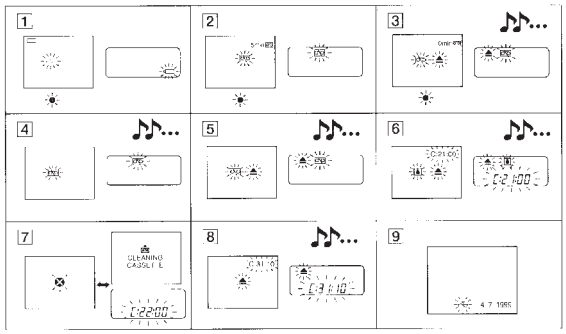

1 **The battery is weak or dead.**
Slow flashing: The battery is weak.
Fast flashing: The battery is dead.

2 **The tape is near the end.**
The flashing is slow.

3 **The tape has run out.**
The flashing becomes rapid.

4 **No tape has been inserted.**

5 **The tab on the tape is out (red).**

6 **Moisture condensation has occurred.**

7 **The video heads may be contaminated.**

8 **Some other trouble has occurred.**
Use the self-diagnosis function (p. 89).
If the display does not disappear, contact your Sony dealer or local authorized Sony service facility.

9 **The lithium battery is weak or is not installed.**

Предупреждающие индикаторы

Если индикаторы мигают или предупреждающие сообщения появляются на экране ЖКД или в видоискателе, то проверьте следующее:
♪♪... :Вы можете слышать зуммерный звуковой сигнал, когда функция BEEP установлена на ON в системе меню.

1 **Батарейный блок слабый или полностью разряженный**
Медленное мигание: Батарейный блок слабый.
Быстрое мигание: Батарейный блок полностью разряженный.

2 **Лента приближается к концу.**
Медленное мигание.

3 **Лента закончилась.**
Мигание становится быстрым.

4 **Лента не вставлена.**

5 **На кассете нет лепестка (красная метка).**

6 **Произошла конденсация влаги.**

7 **Видеоголовки возможно загрязнены.**

8 **Имеется какая-либо другая проблема.**
Используйте функцию самодиагностики (стр. 90).
Если дисплей не исчезает, то свяжитесь с Вашим дилером Sony или местным уполномоченным предприятием.

9 **Литиевая батарейка слабая или не установлена.**

SECTION 2
DISASSEMBLY

The equipment can be removed using the following procedure.

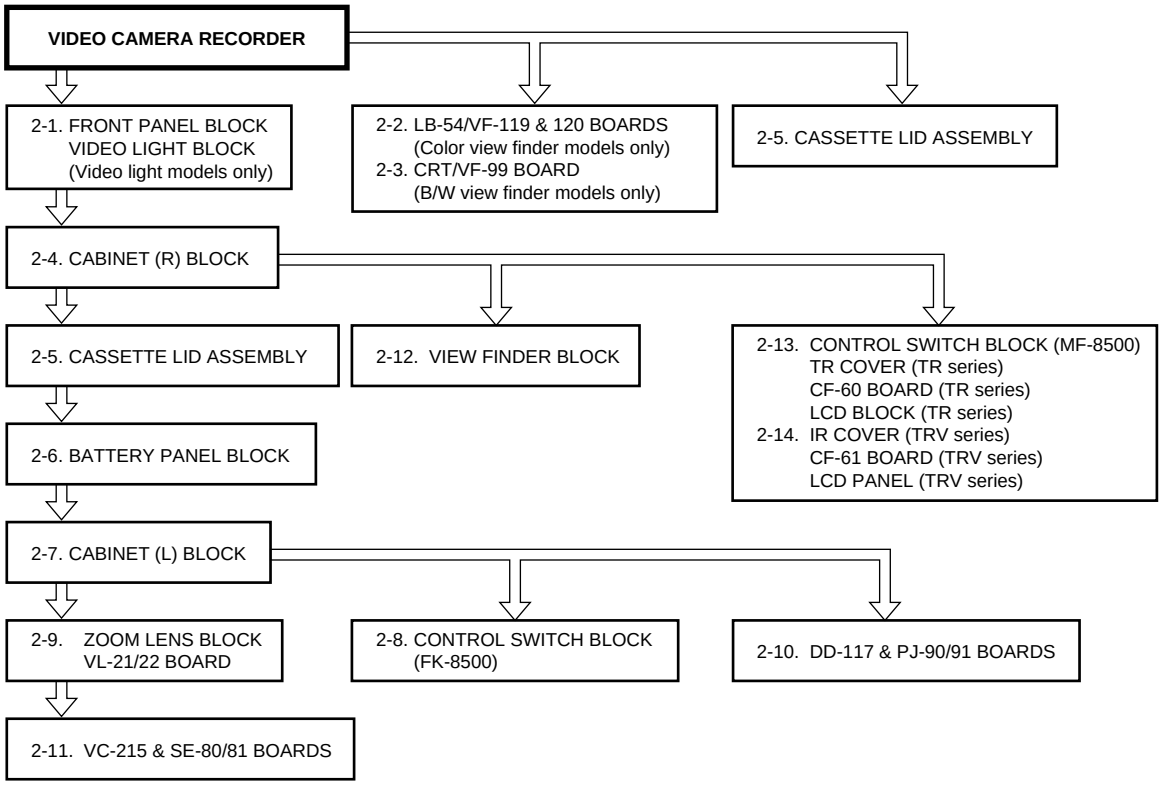
VIDEO CAMERA RECORDER
2-1. FRONT PANEL BLOCK
VIDEO LIGHT BLOCK
(Video light models only)
2-2. LB-54/VF-119 & 120 BOARDS
(Color view finder models only)
2-3. CRT/VF-99 BOARD
(B/W view finder models only)
2-5. CASSETTE LID ASSEMBLY
2-4. CABINET (R) BLOCK
2-5. CASSETTE LID ASSEMBLY
2-12. VIEW FINDER BLOCK
2-13. CONTROL SWITCH BLOCK (MF-8500)
TR COVER (TR series)
CF-60 BOARD (TR series)
LCD BLOCK (TR series)
2-14. IR COVER (TRV series)
CF-61 BOARD (TRV series)
LCD PANEL (TRV series)
2-6. BATTERY PANEL BLOCK
2-7. CABINET (L) BLOCK
2-9. ZOOM LENS BLOCK
VL-21/22 BOARD
2-8. CONTROL SWITCH BLOCK
(FK-8500)
2-10. DD-117 & PJ-90/91 BOARDS
2-11. VC-215 & SE-80/81 BOARDS

NOTE : Follow the disassembly procedure in the numerical order given.

2-1. REMOVAL OF FRONT PANEL BLOCK AND VIDEO LIGHT BLOCK

—Video light models—

CCD-TR515E/TR516E/TR713E
CCD-TRV36E/TRV46E

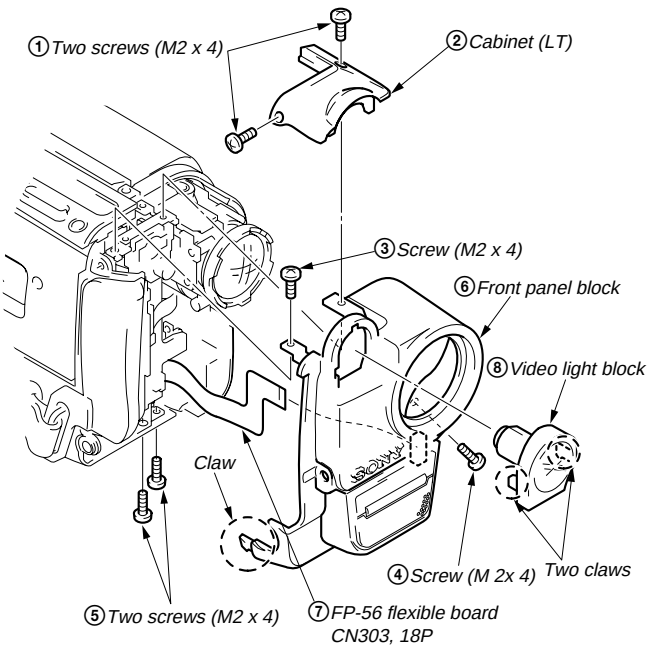

—No video light models—

CCD-TR315E/TR415E/TR425E
CCD-TRV16E/TRV26E/TRV27E/TRV27EP

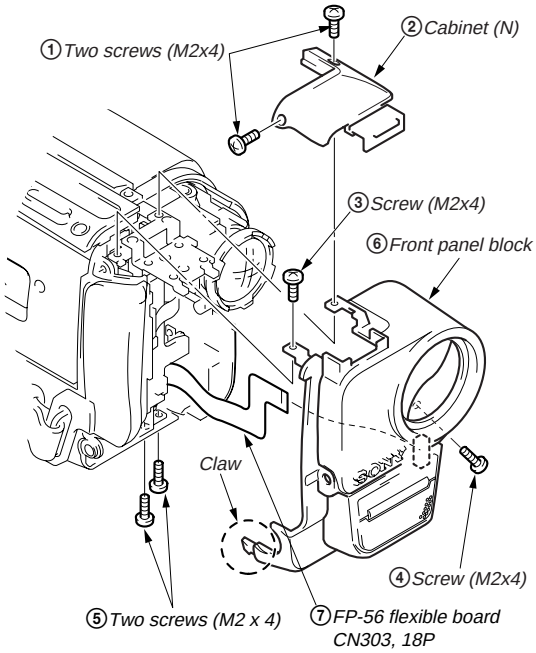

2-2. REMOVAL OF LB-54, VF-119 AND VF-120 BOARDS (Color view finder model CCD-TR516E)

① *Tilt-up the EVF block to the direction of arrow* Ⓐ.

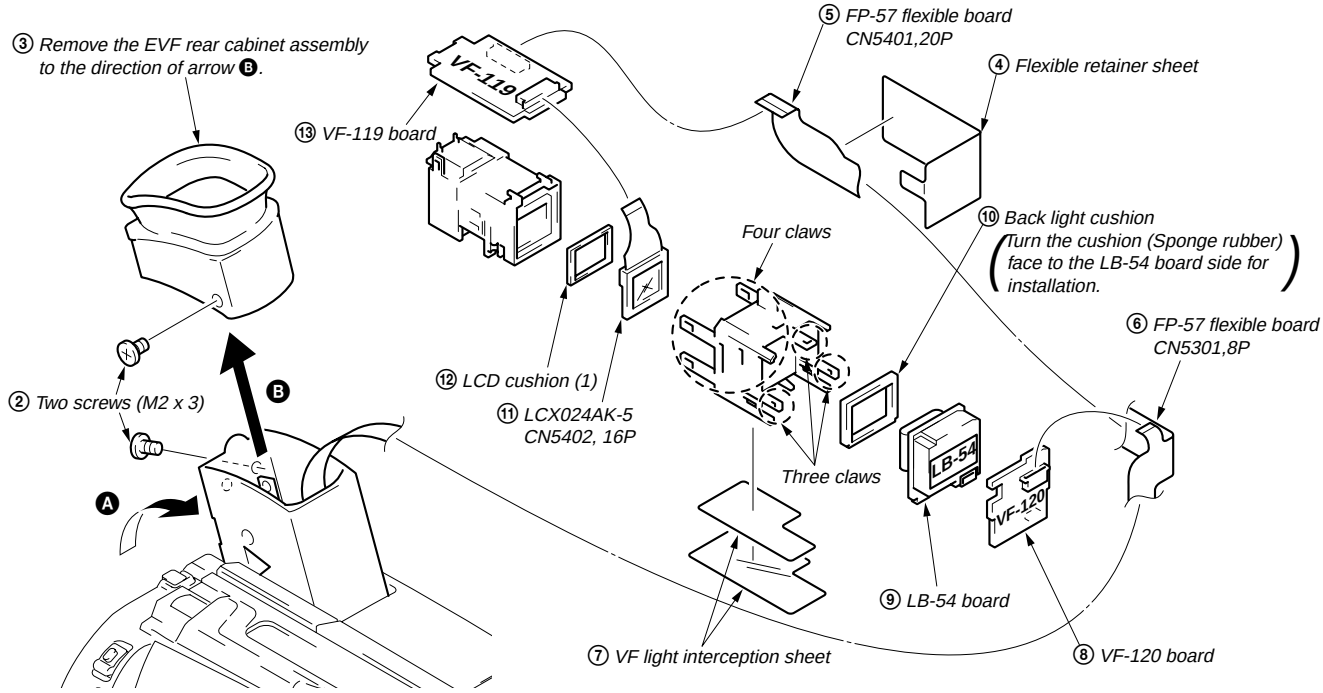
③ Remove the EVF rear cabinet assembly to the direction of arrow Ⓑ.
⑤ FP-57 flexible board CN5401,20P
④ Flexible retainer sheet
VF-119
⑬ VF-119 board
⑩ Back light cushion (Turn the cushion (Sponge rubber) face to the LB-54 board side for installation.)
Four claws
⑥ FP-57 flexible board CN5301,8P
② Two screws (M2 x 3)
⑫ LCD cushion (1)
⑪ LCX024AK-5 CN5402, 16P
Three claws
LB-54
VF-120
⑨ LB-54 board
⑦ VF light interception sheet
⑧ VF-120 board

2-3. REMOVAL OF VF-99 AND CRT ASSEMBLY (B/W view finder model CCD-TR315E/TR415E/TR425E/TR515E/TR713E and TRV series)

① *Tilt-up the EVF block to the direction of arrow* Ⓐ.

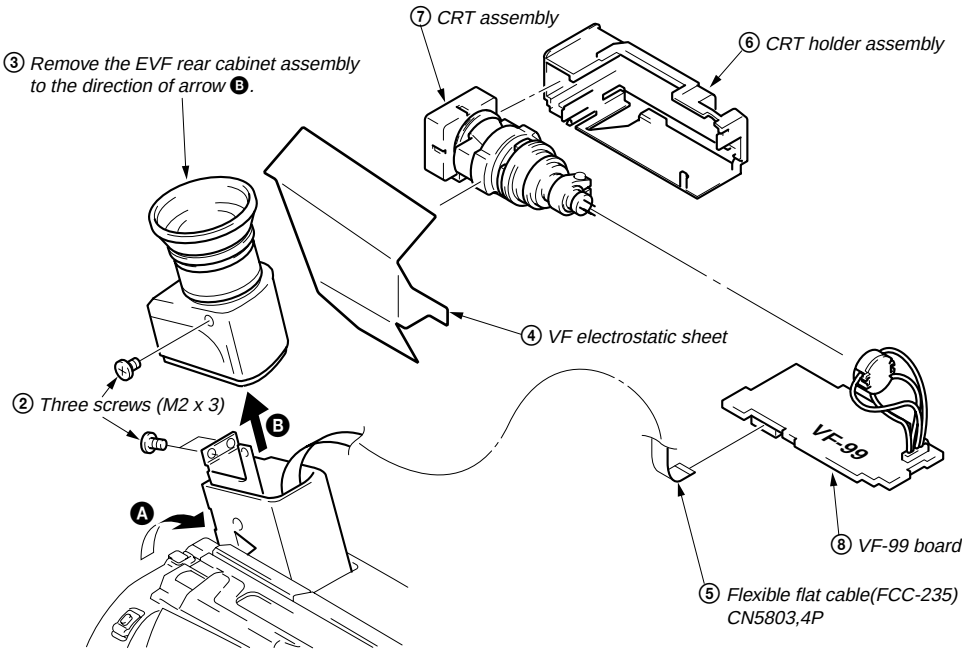
⑦ CRT assembly
⑥ CRT holder assembly
③ Remove the EVF rear cabinet assembly to the direction of arrow Ⓑ.
④ VF electrostatic sheet
② Three screws (M2 x 3)
VF-99
⑧ VF-99 board
⑤ Flexible flat cable(FCC-235) CN5803,4P

2-4. REMOVAL OF CABINET (R) BLOCK

Note : *Be sure to that the pin of the Lens assembly is put into the hole of the IR knob when attaching.*

(TR series)

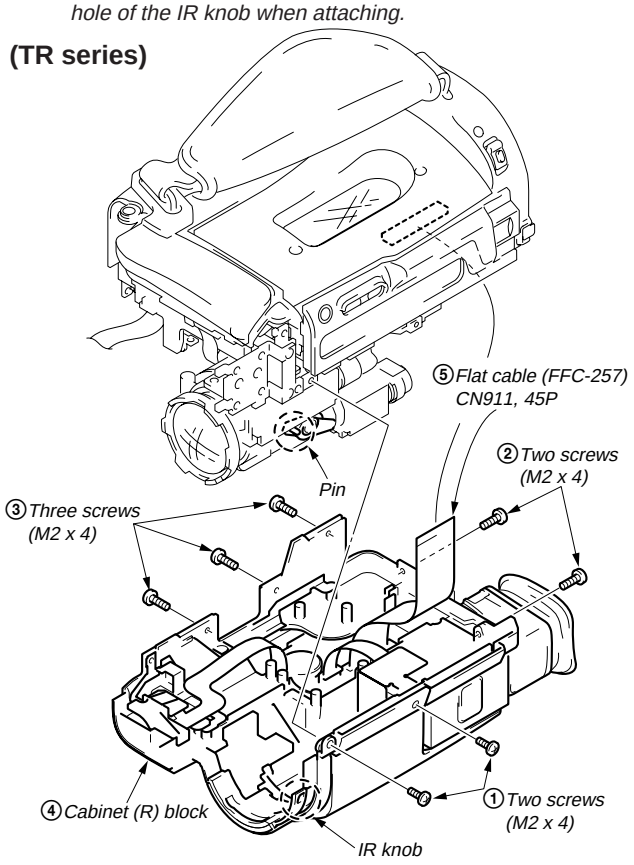

(TRV series)

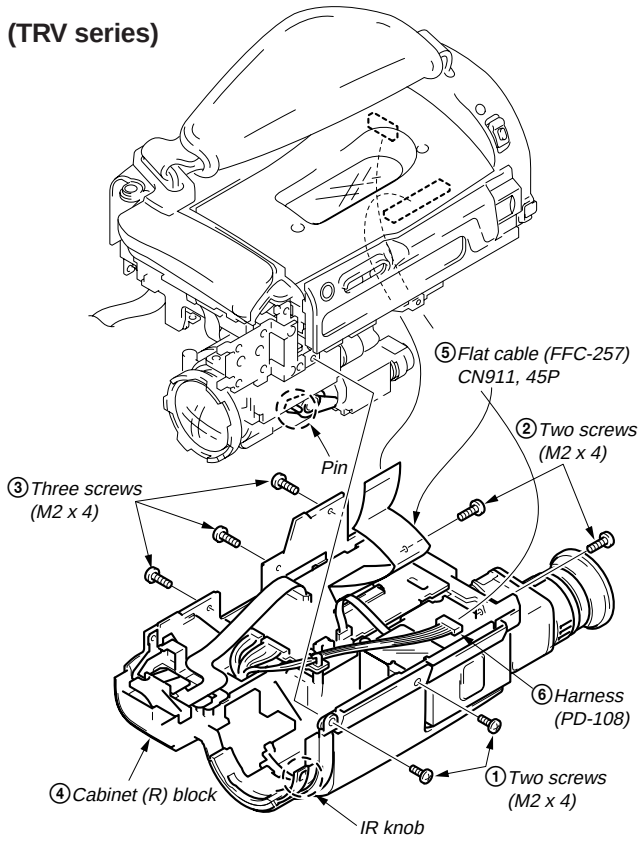

2-5. REMOVAL OF CASSETTE LID ASSEMBLY

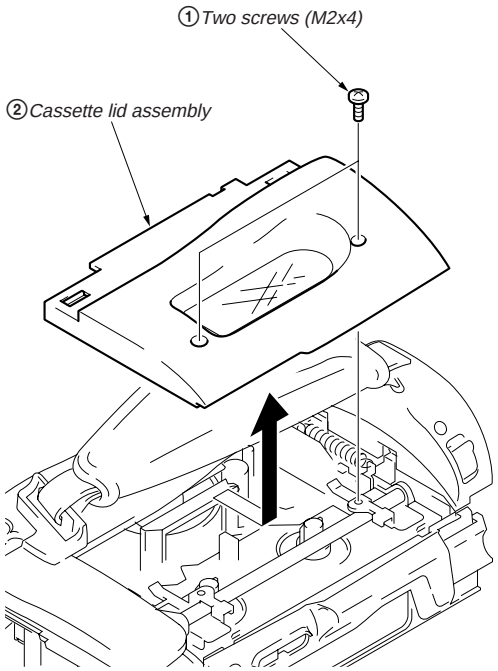

2-6. REMOVAL OF BATTERY PANEL BLOCK

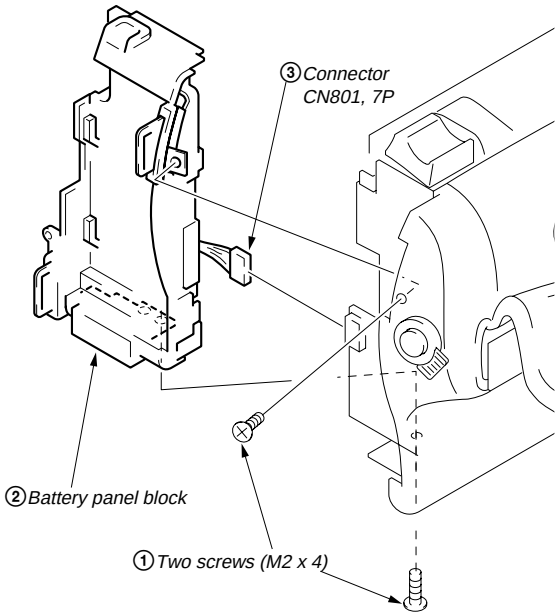

2-7. REMOVAL OF CABINET (L) BLOCK

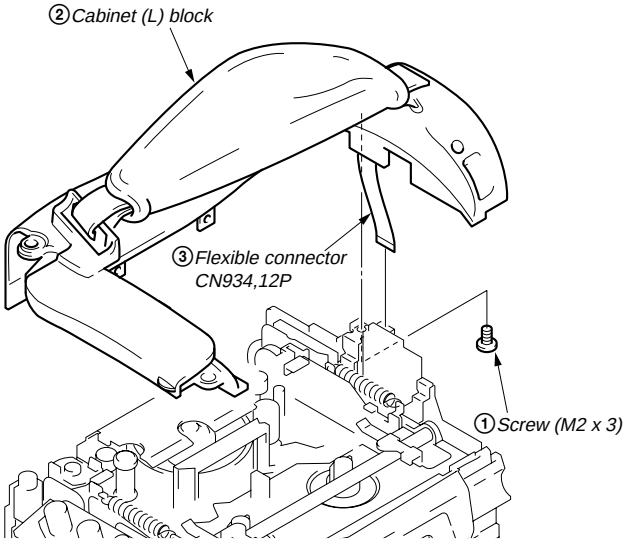

2-8. REMOVAL OF CONTROL SWITCH BLOCK

Function Key Switch (FK-8500)

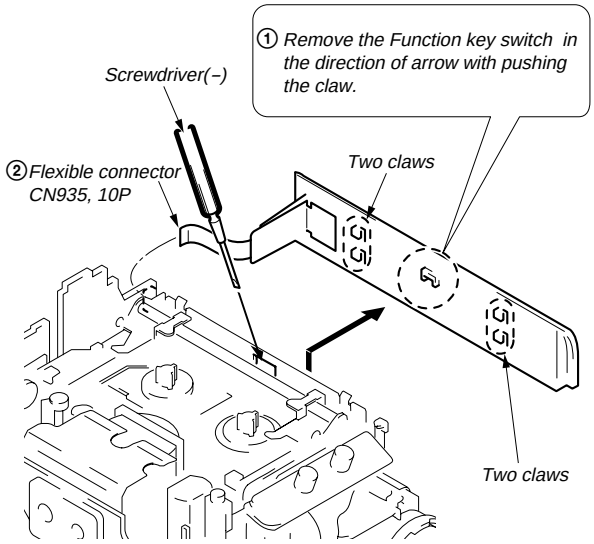
① Remove the Function key switch in the direction of arrow with pushing the claw.
Screwdriver(−)
②Flexible connector
CN935, 10P
Two claws
Two claws

2-9. REMOVAL OF ZOOM LENS BLOCK AND VL-21/22 BOARD

—Video light models—

CCD-TR515E/TR516E/TR713E
CCD-TRV36E/TRV46E

—No video light models—

CCD-TR315E/TR415E/TR425E
CCD-TRV16E/TRV26E/TRV27E/TRV27EP

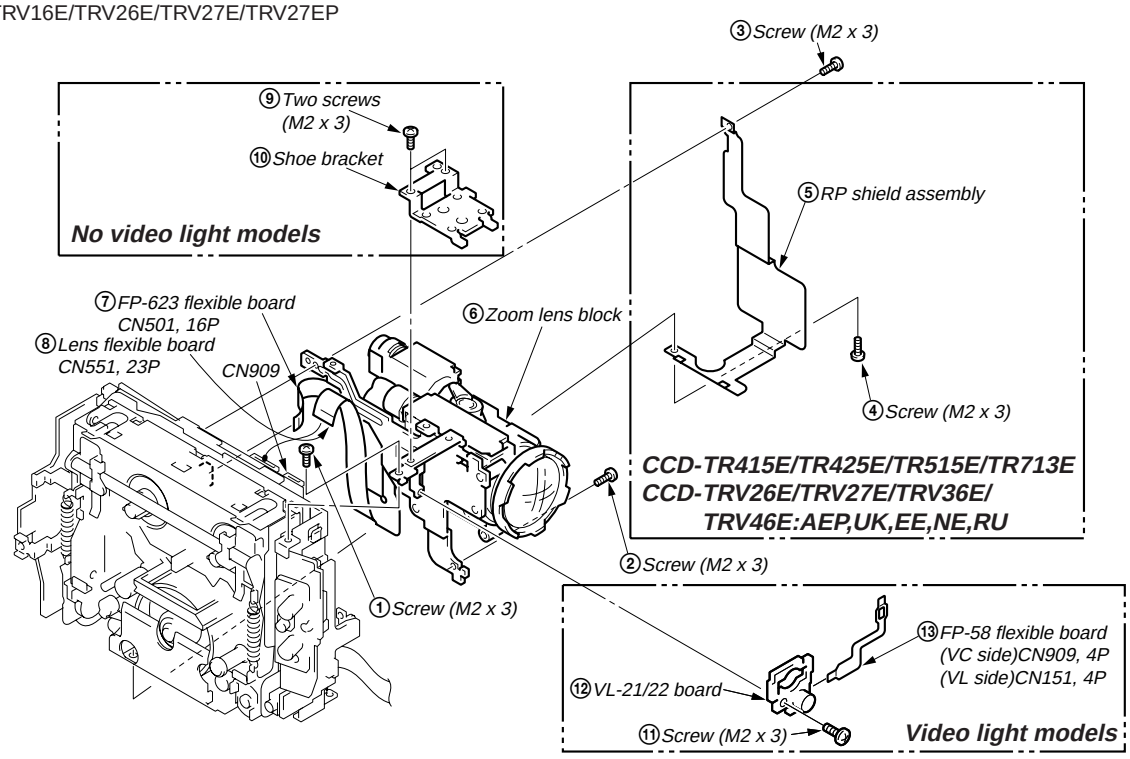

2-10. REMOVAL OF VC-215, SE-80/81, DD-117 AND PJ-90/91 BOARDS

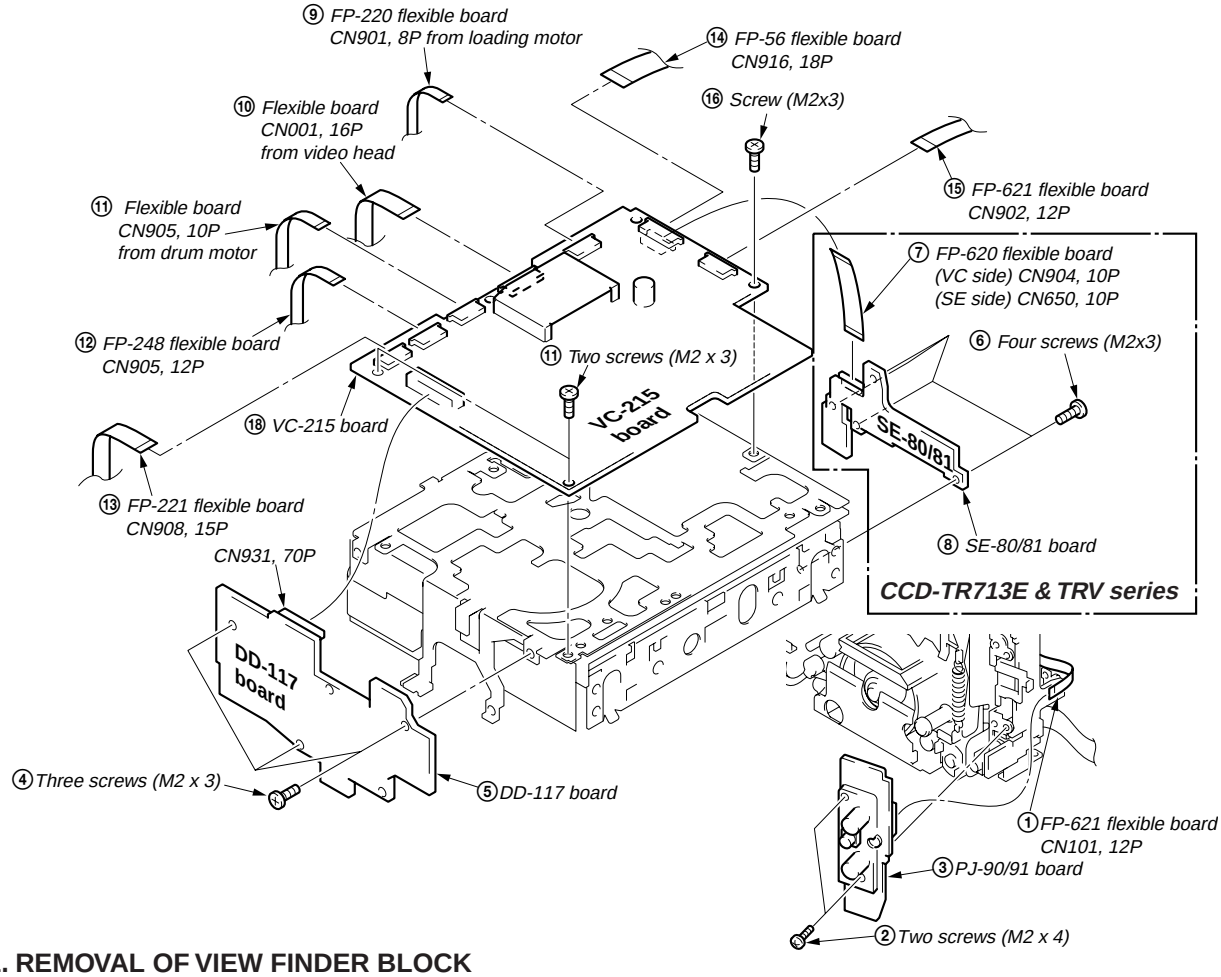

2-11. REMOVAL OF VIEW FINDER BLOCK

—Color view finder—

CCD-TR516E

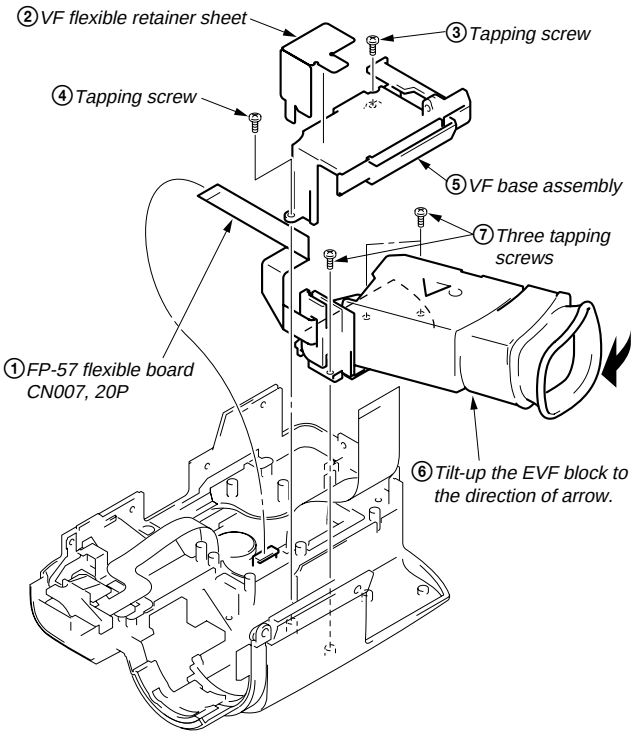
② VF flexible retainer sheet
③ Tapping screw
④ Tapping screw
⑤ VF base assembly
⑦ Three tapping screws
① FP-57 flexible board
CN007, 20P
⑥ Tilt-up the EVF block to the direction of arrow.

—B/W view finder—

CCD-TR315E/TR415E/TR425E/TR515E/TR713E and TRV series

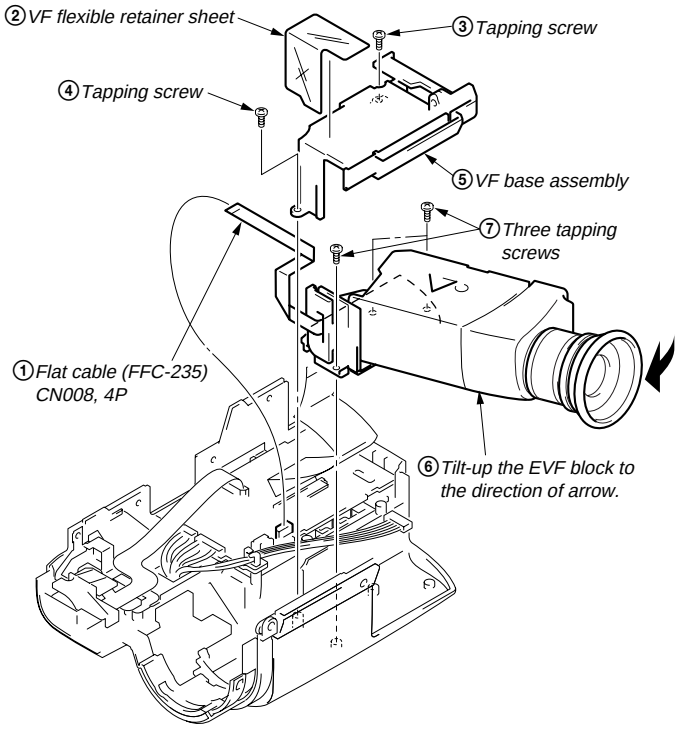
② VF flexible retainer sheet
③ Tapping screw
④ Tapping screw
⑤ VF base assembly
⑦ Three tapping screws
① Flat cable (FFC-235)
CN008, 4P
⑥ Tilt-up the EVF block to the direction of arrow.

2-12. REMOVAL OF TR COVER, CF-60 BOARD AND DISPLAY PANEL ...(TR series)

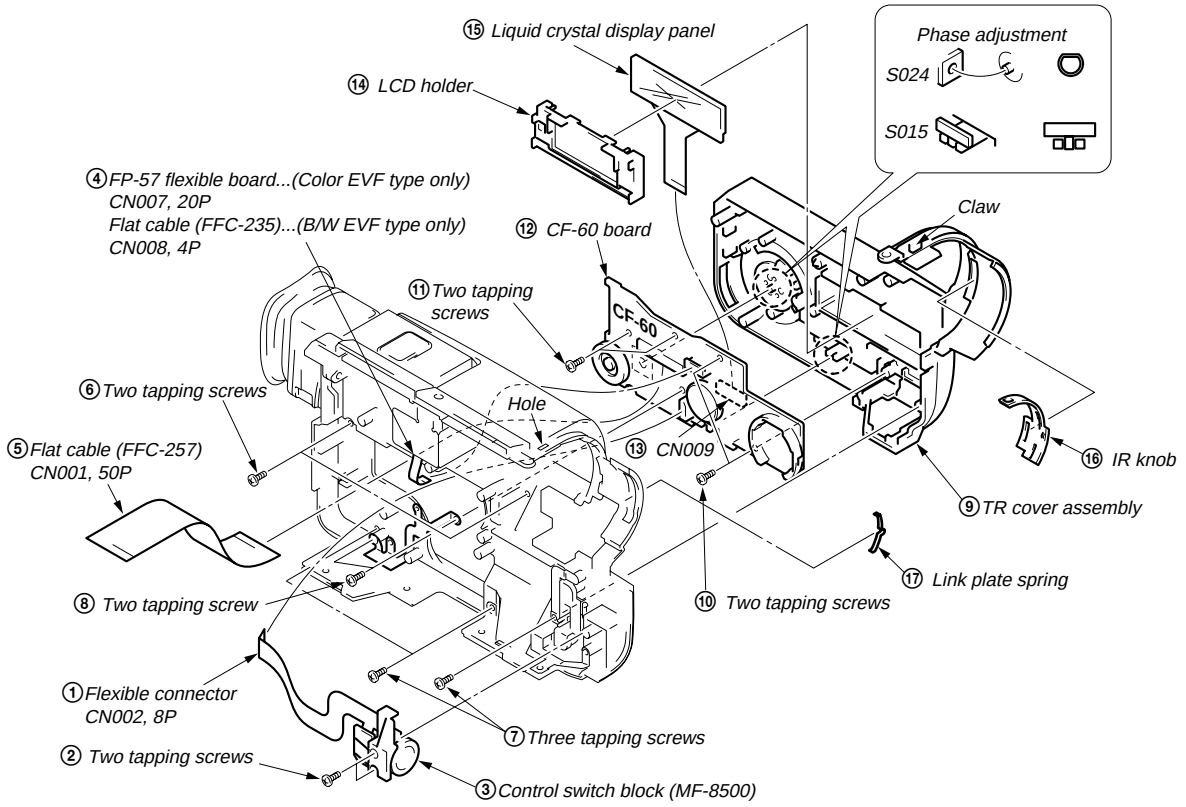

2-13. REMOVAL OF IR COVER, CF-61 BOARD AND LCD PANEL...(TRV series)

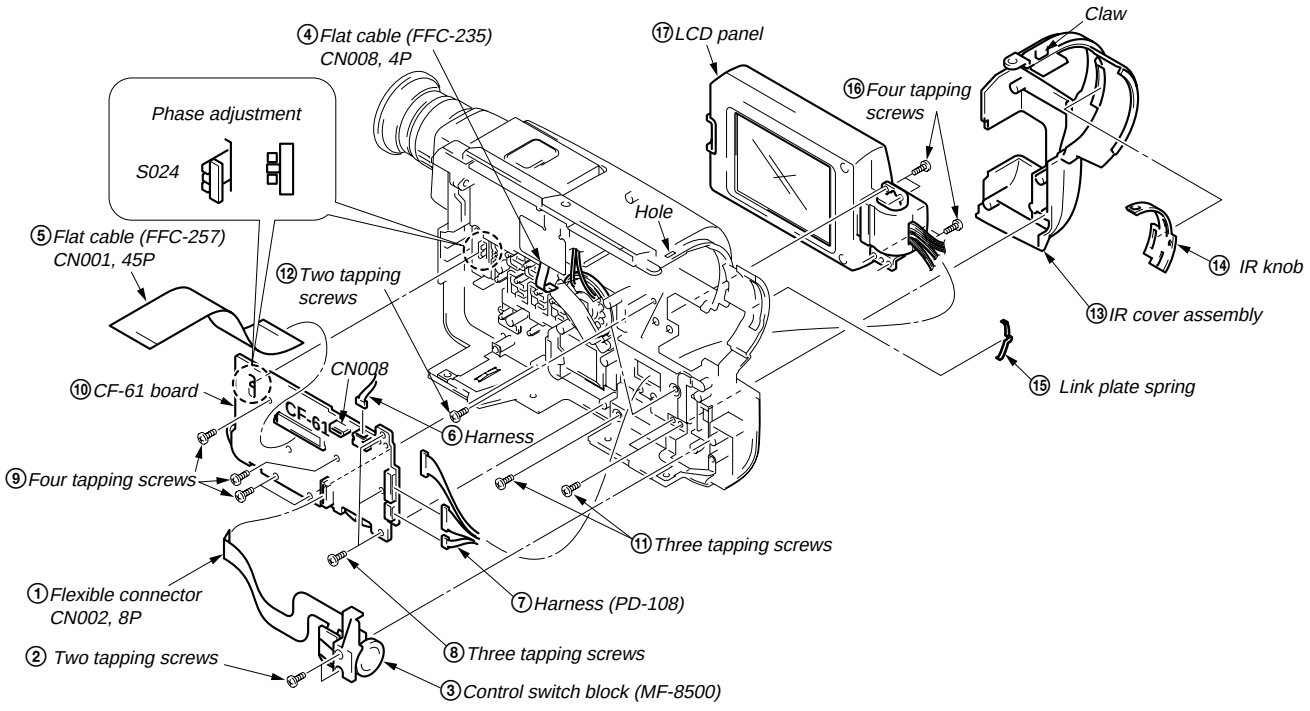

2-14. SERVICE POSITION

Preparation : *Refer to previous section "DISASSEMBLY", and connect as shown in the figure after each parts has been removed.*

—TR series—

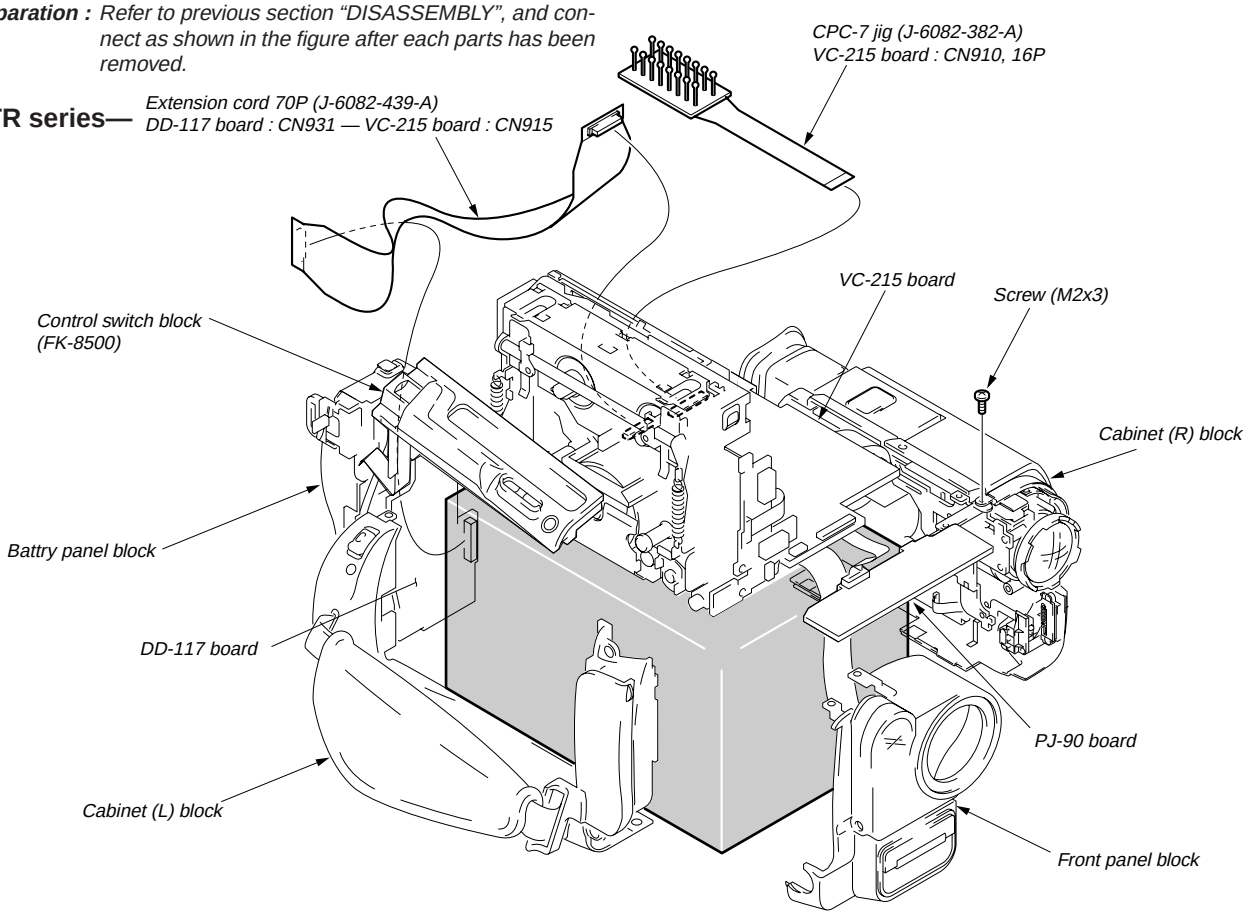

—TRV series—

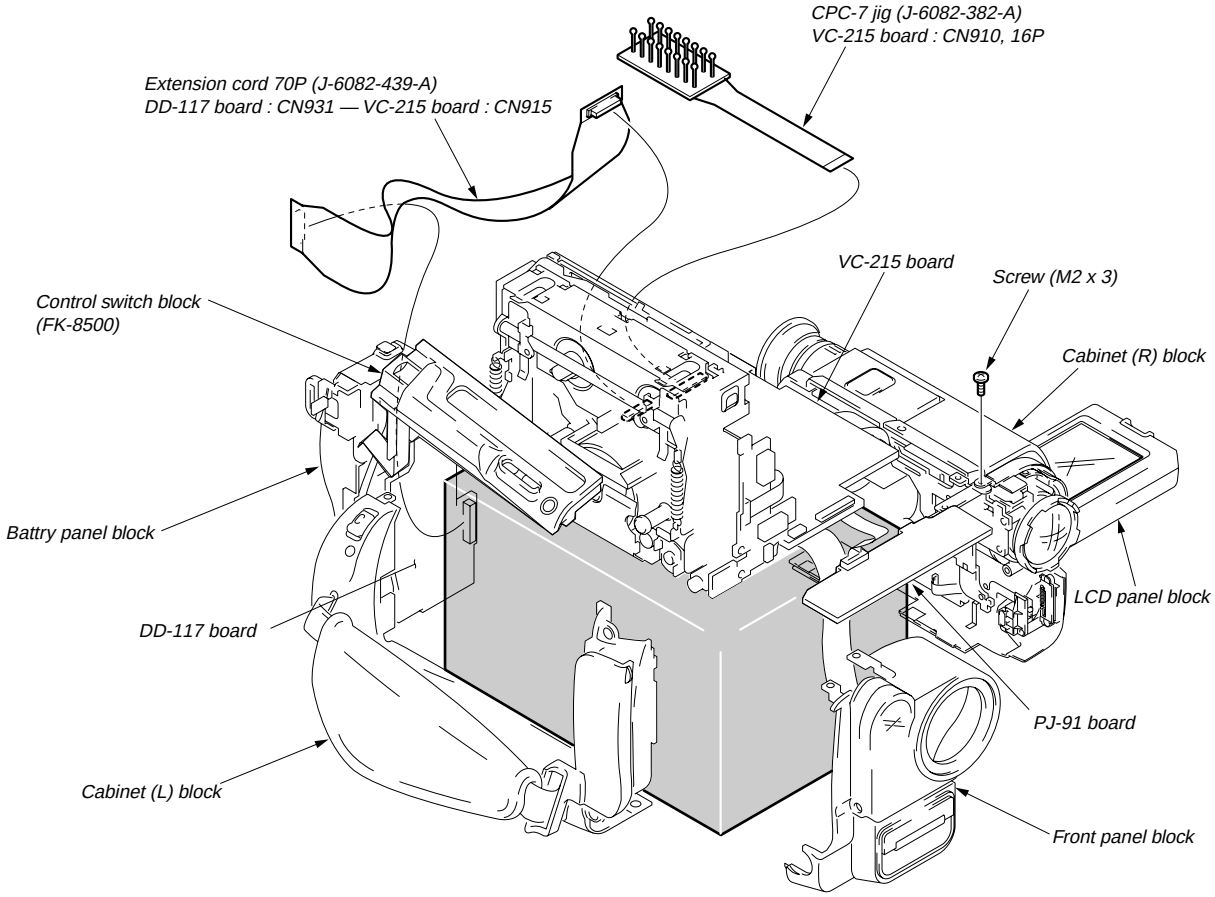

2-15. CIRCUIT BOARDS LOCATION

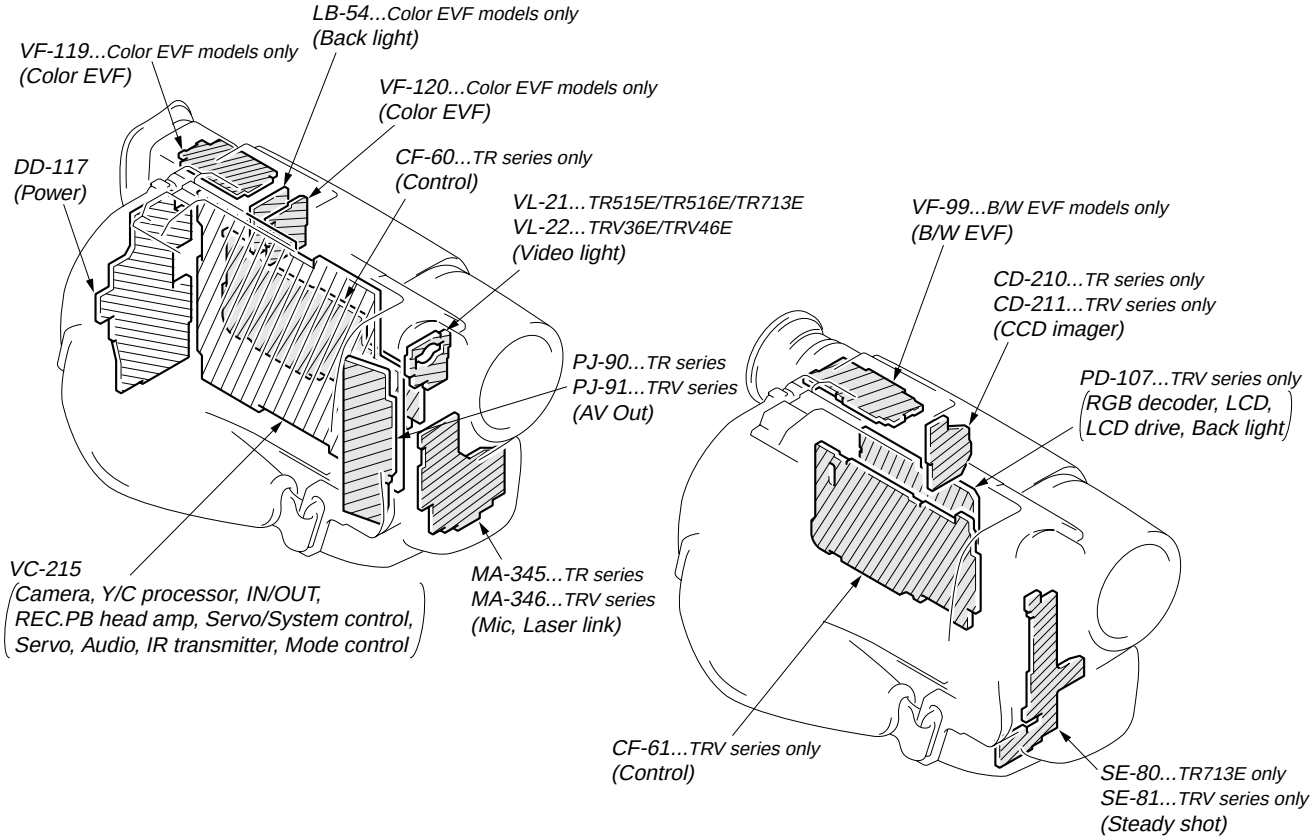

2-16. FLEXIBLE BOARDS AND FLAT CABLES LOCATION

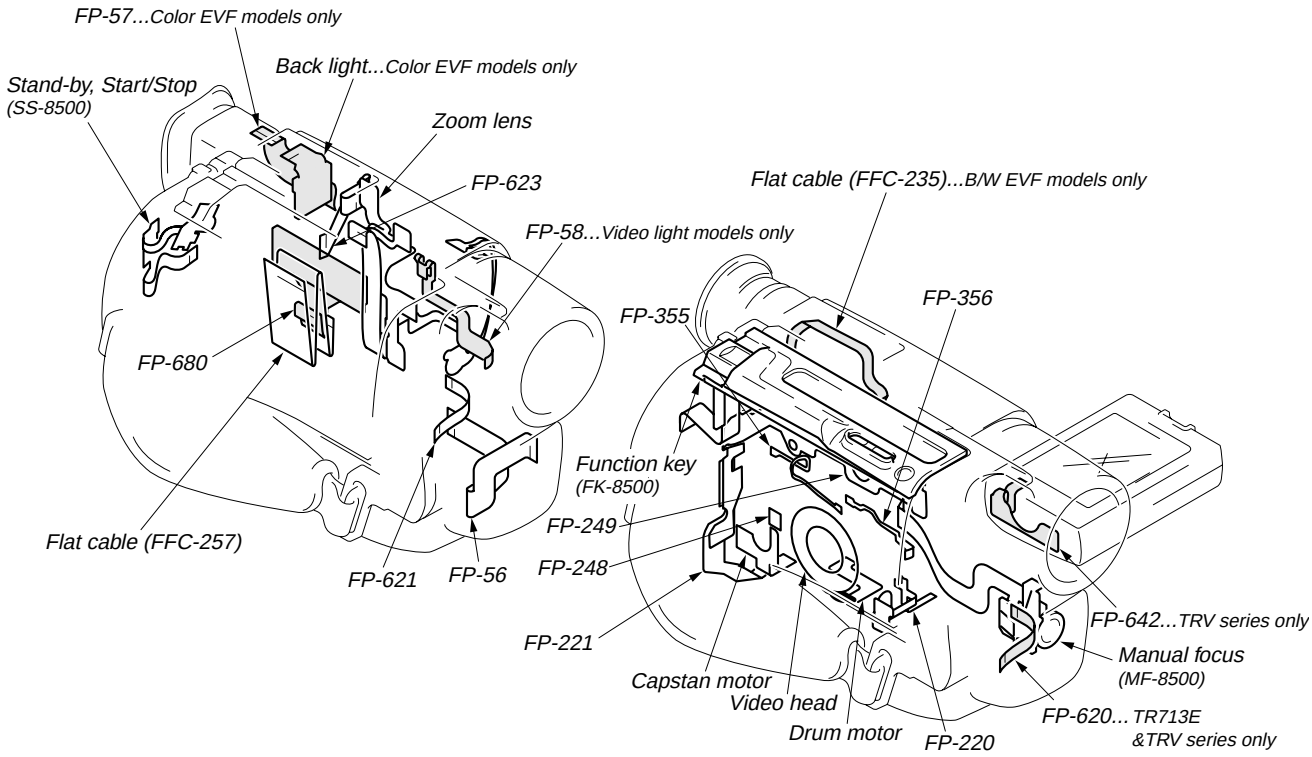

SECTION 3
BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM

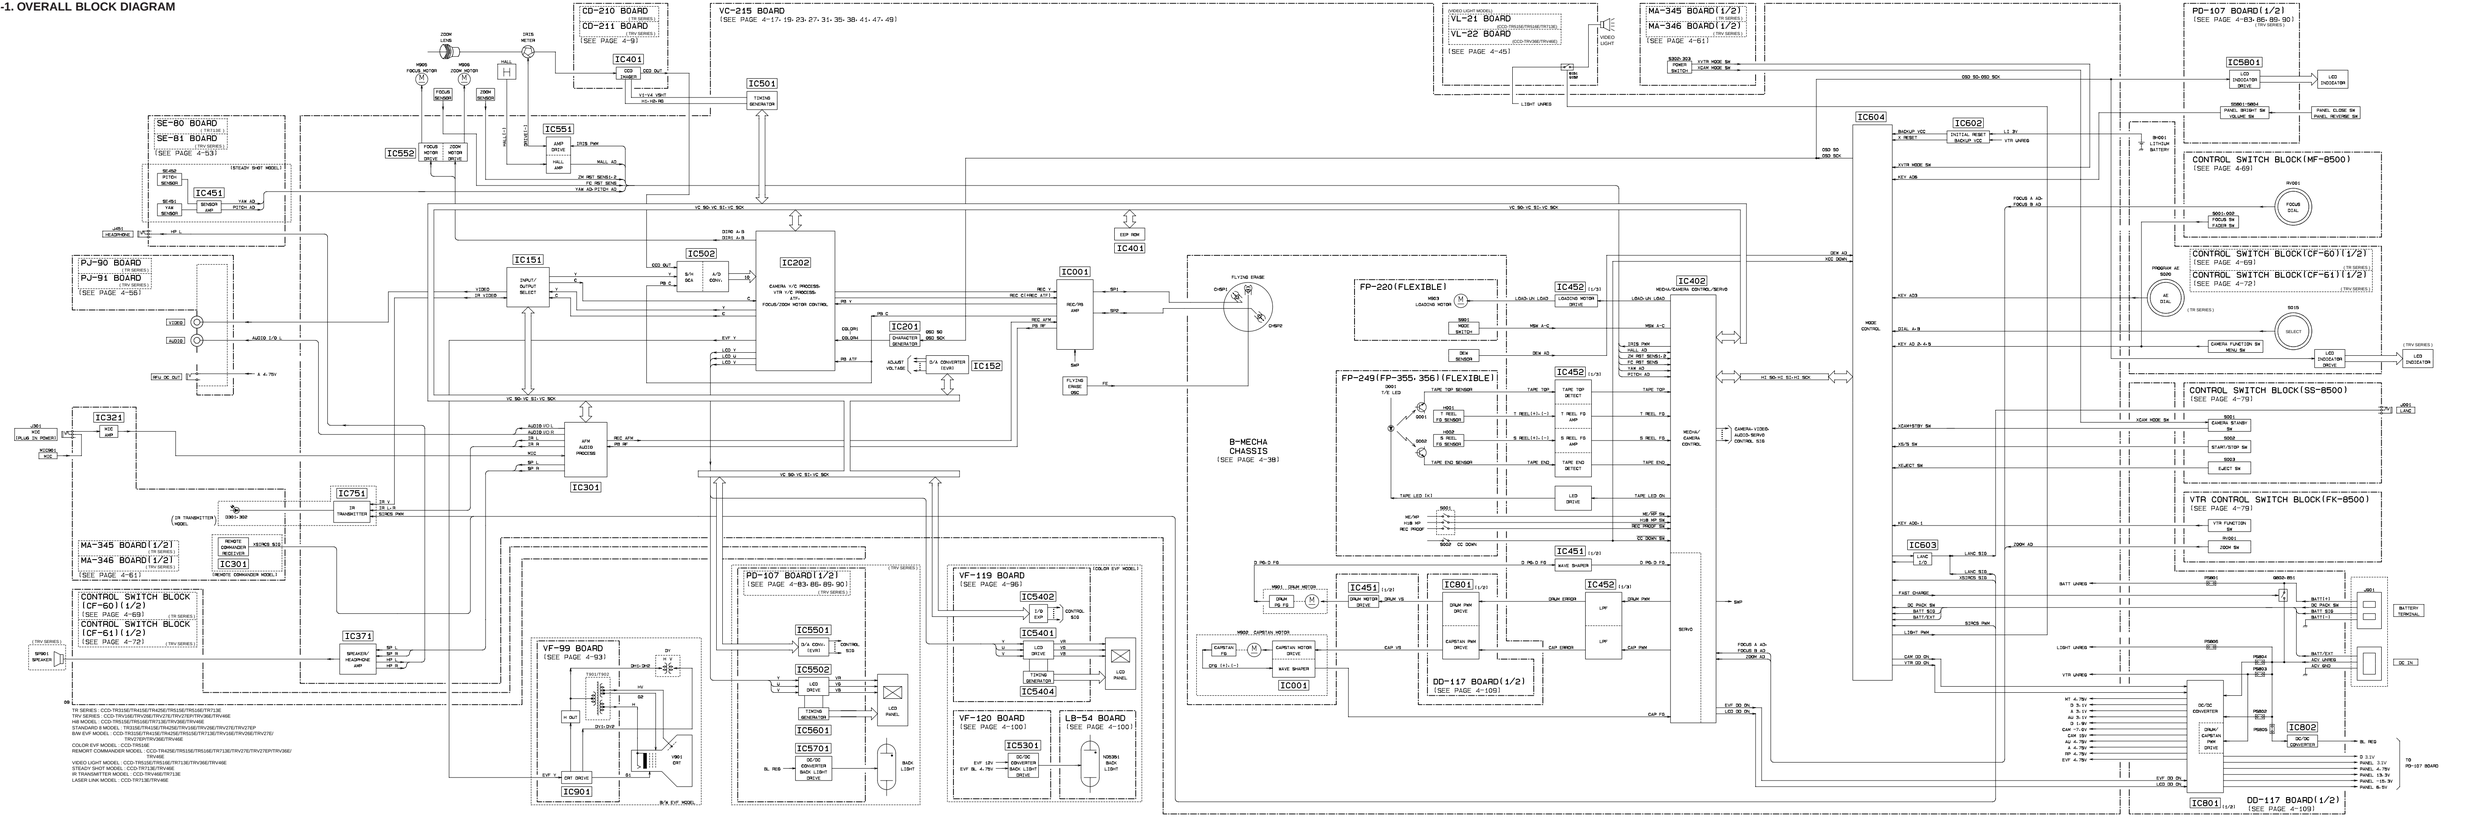
CD-210 BOARD
(TR SERIES)
CD-211 BOARD
(TRV SERIES)
(SEE PAGE 4-53)
VC-215 BOARD
(SEE PAGE 4-17, 19, 23, 27, 31, 35, 38, 41, 47, 49)
(VIDEO LIGHT MODEL)
VL-21 BOARD
(CCD-TR515E/TR516E/TR713E)
VL-22 BOARD
(CCD-TRV36E/TRV46E)
(SEE PAGE 4-45)
MA-345 BOARD(1/2)
(TR SERIES)
MA-346 BOARD(1/2)
(TRV SERIES)
(SEE PAGE 4-61)
PD-107 BOARD(1/2)
(SEE PAGE 4-83, 86, 89, 90)
(TRV SERIES)
SE-80 BOARD
(TR315E)
SE-81 BOARD
(TRV SERIES)
(SEE PAGE 4-53)
PJ-90 BOARD
(TR SERIES)
PJ-91 BOARD
(TRV SERIES)
(SEE PAGE 4-56)
MA-345 BOARD(1/2)
(TR SERIES)
MA-346 BOARD(1/2)
(TRV SERIES)
(SEE PAGE 4-61)
REMOTE COMMANDER MODEL
CONTROL SWITCH BLOCK (CF-60)(1/2)
(SEE PAGE 4-69)
CONTROL SWITCH BLOCK (CF-61)(1/2)
(SEE PAGE 4-72)
(TR SERIES)
(TRV SERIES)
VF-99 BOARD
(SEE PAGE 4-93)
VF-119 BOARD
(SEE PAGE 4-96)
VF-120 BOARD
(SEE PAGE 4-100)
LB-54 BOARD
(SEE PAGE 4-100)
COLOR EVF MODEL
B/W EVF MODEL
B-MECHA CHASSIS
(SEE PAGE 4-38)
FP-220(FLEXIBLE)
FP-249(FP-355-356)(FLEXIBLE)
DD-117 BOARD(1/2)
(SEE PAGE 4-109)
CONTROL SWITCH BLOCK (MF-8500)
(SEE PAGE 4-69)
CONTROL SWITCH BLOCK (CF-60)(1/2)
(SEE PAGE 4-69)
CONTROL SWITCH BLOCK (CF-61)(1/2)
(SEE PAGE 4-72)
CONTROL SWITCH BLOCK (SS-8500)
(SEE PAGE 4-79)
VTR CONTROL SWITCH BLOCK (FK-8500)
(SEE PAGE 4-79)
IC151
IC152
IC201
IC202
IC301
IC321
IC371
IC401
IC451
IC452
IC501
IC502
IC551
IC552
IC602
IC603
IC604
IC751
IC801
IC901
IC1001
IC5401
IC5402
IC5404
IC5501
IC5502
IC5601
IC5701
IC5801
IC5301
IC802
IC1401
IC1402
IC1451
IC1452
IC1501
IC1502
IC1601
IC1602
IC1603
IC1604
IC1701
IC1702
IC1751
IC1801
IC1802
IC1901
IC1902
IC2001
IC2002
IC2101
IC2102
IC2201
IC2202
IC2301
IC2302
IC2401
IC2402
IC2501
IC2502
IC2601
IC2602
IC2701
IC2702
IC2801
IC2802
IC2901
IC2902
IC3001
IC3002
IC3101
IC3102
IC3201
IC3202
IC3301
IC3302
IC3401
IC3402
IC3501
IC3502
IC3601
IC3602
IC3701
IC3702

3-2. CAMERA/VIDEO 1 BLOCK DIAGRAM

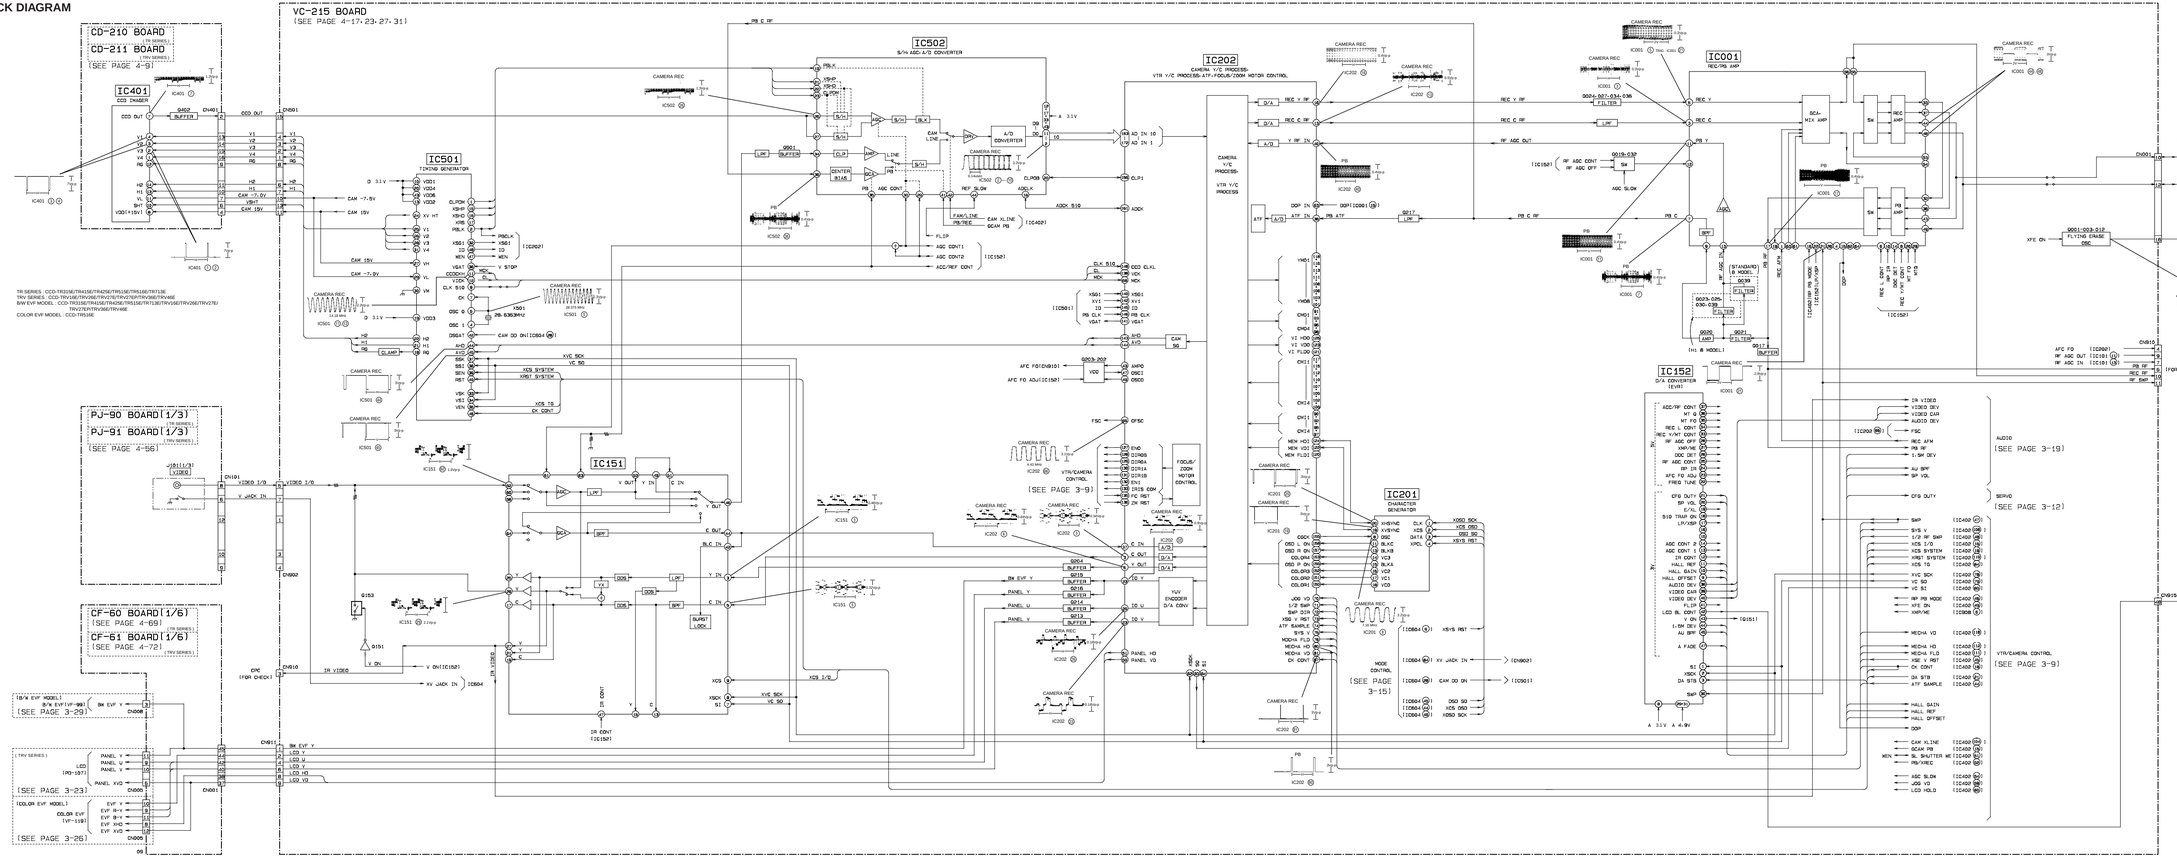

3-3. VTR/CAMERA CONTROL BLOCK DIAGRAM

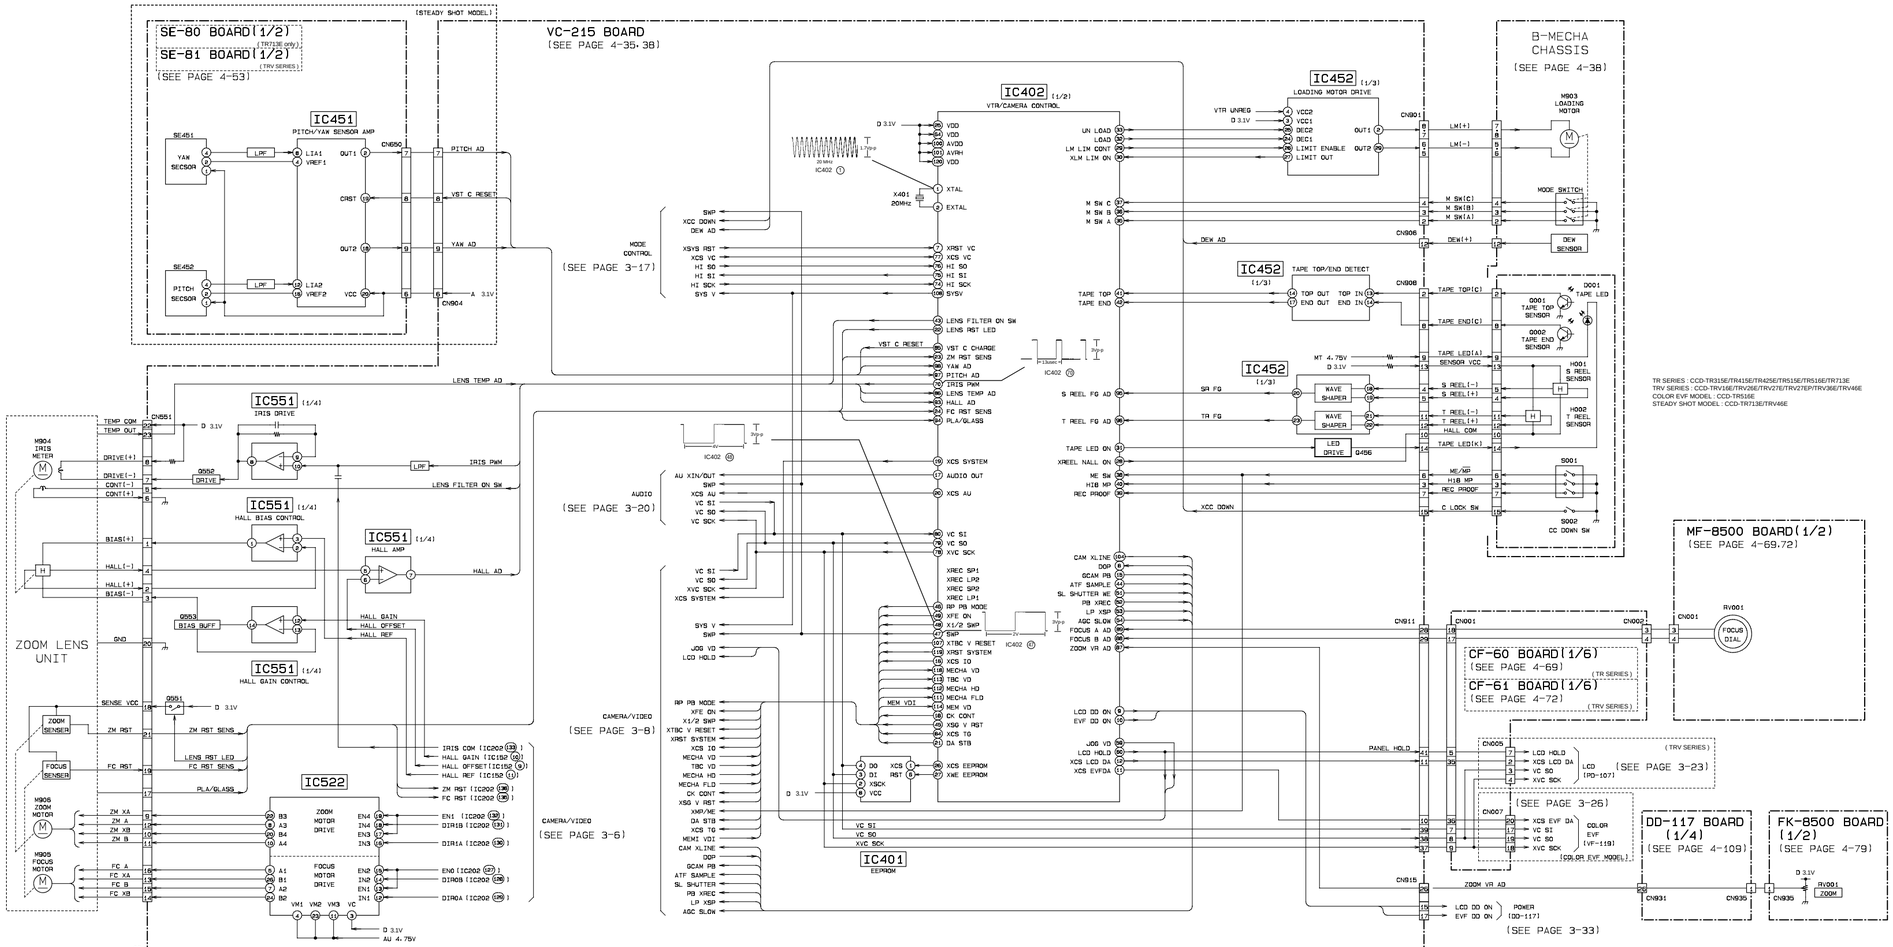

3-4. SERVO BLOCK DIAGRAM

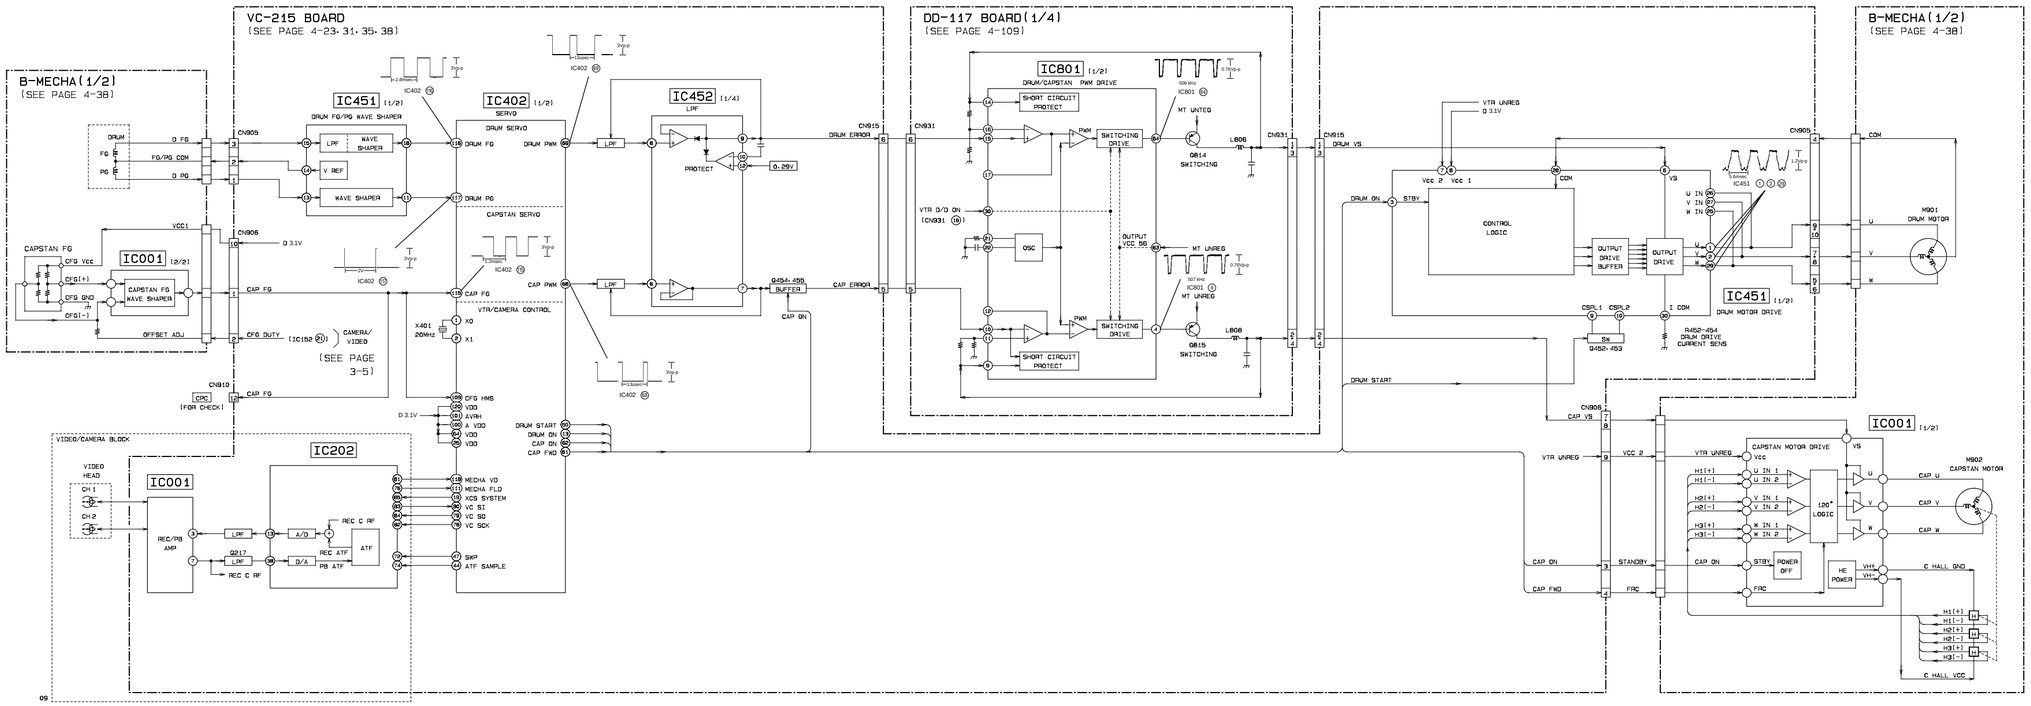

3-5. MODE CONTROL BLOCK DIAGRAM

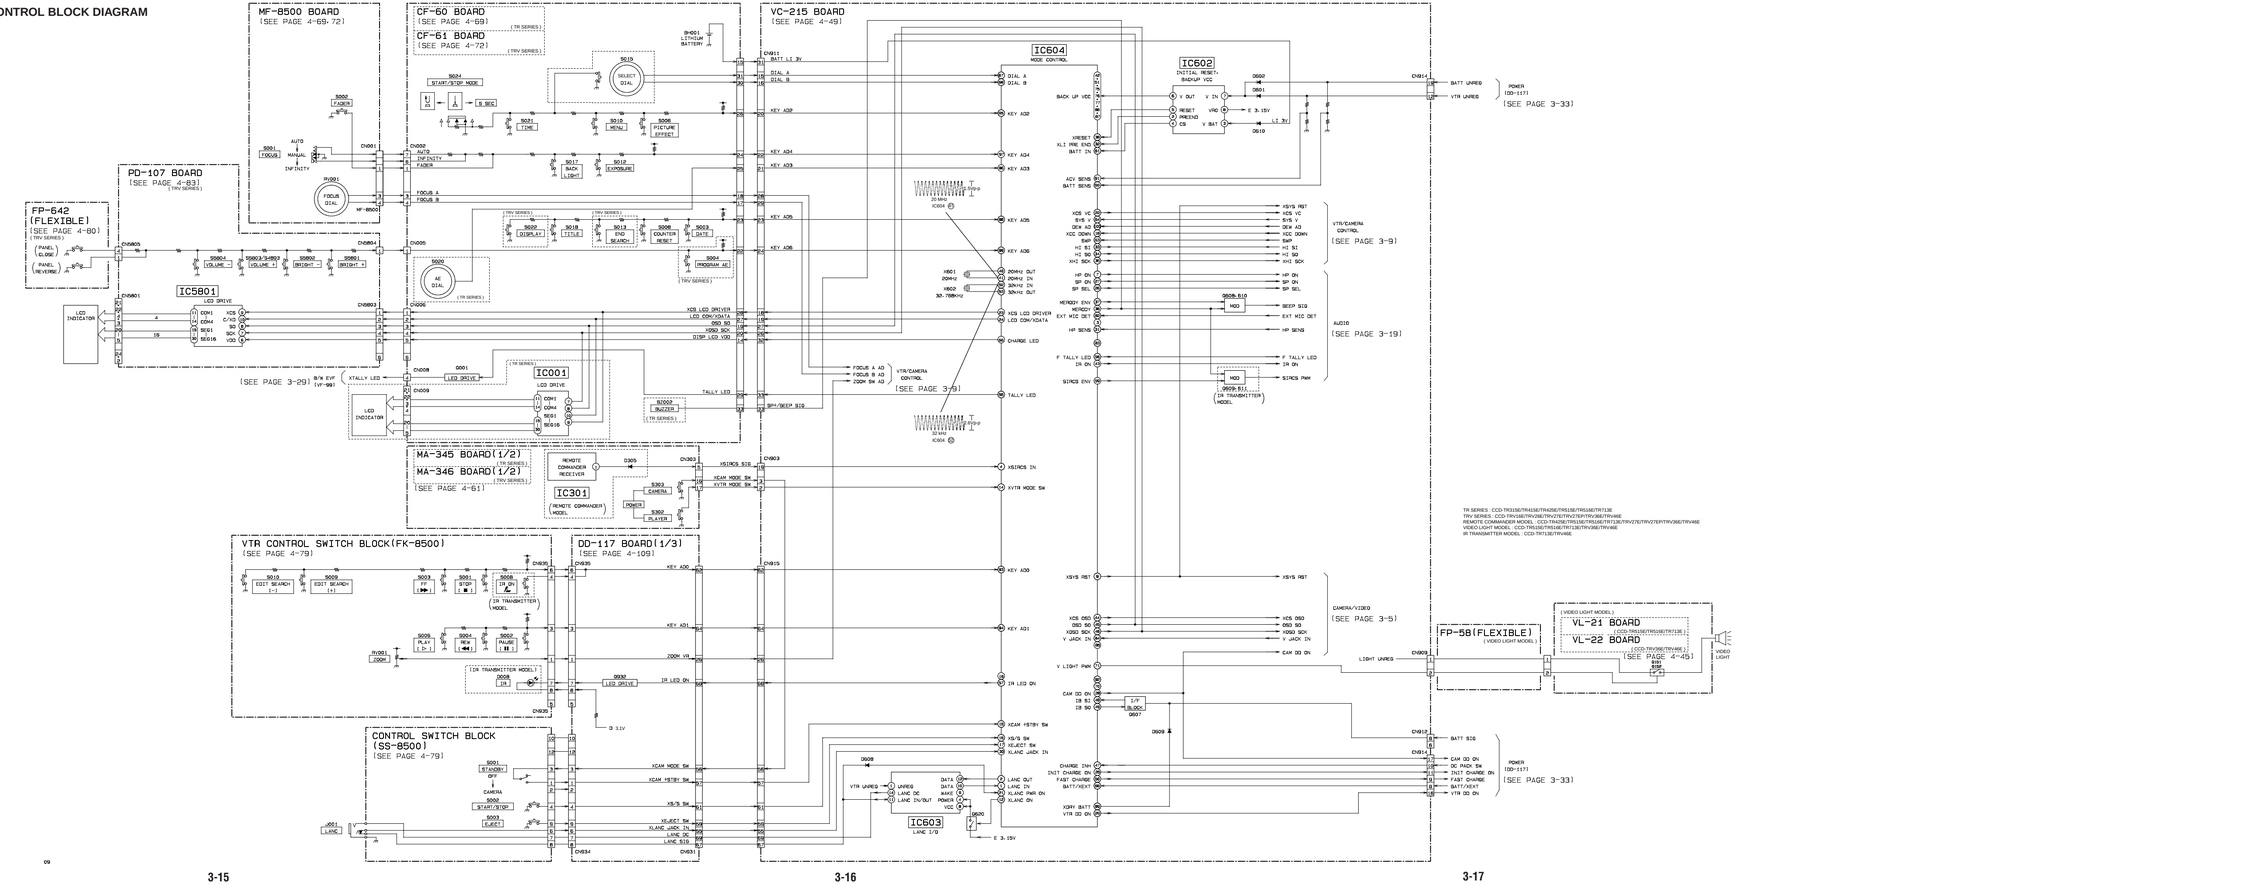

3-6. AUDIO BLOCK DIAGRAM

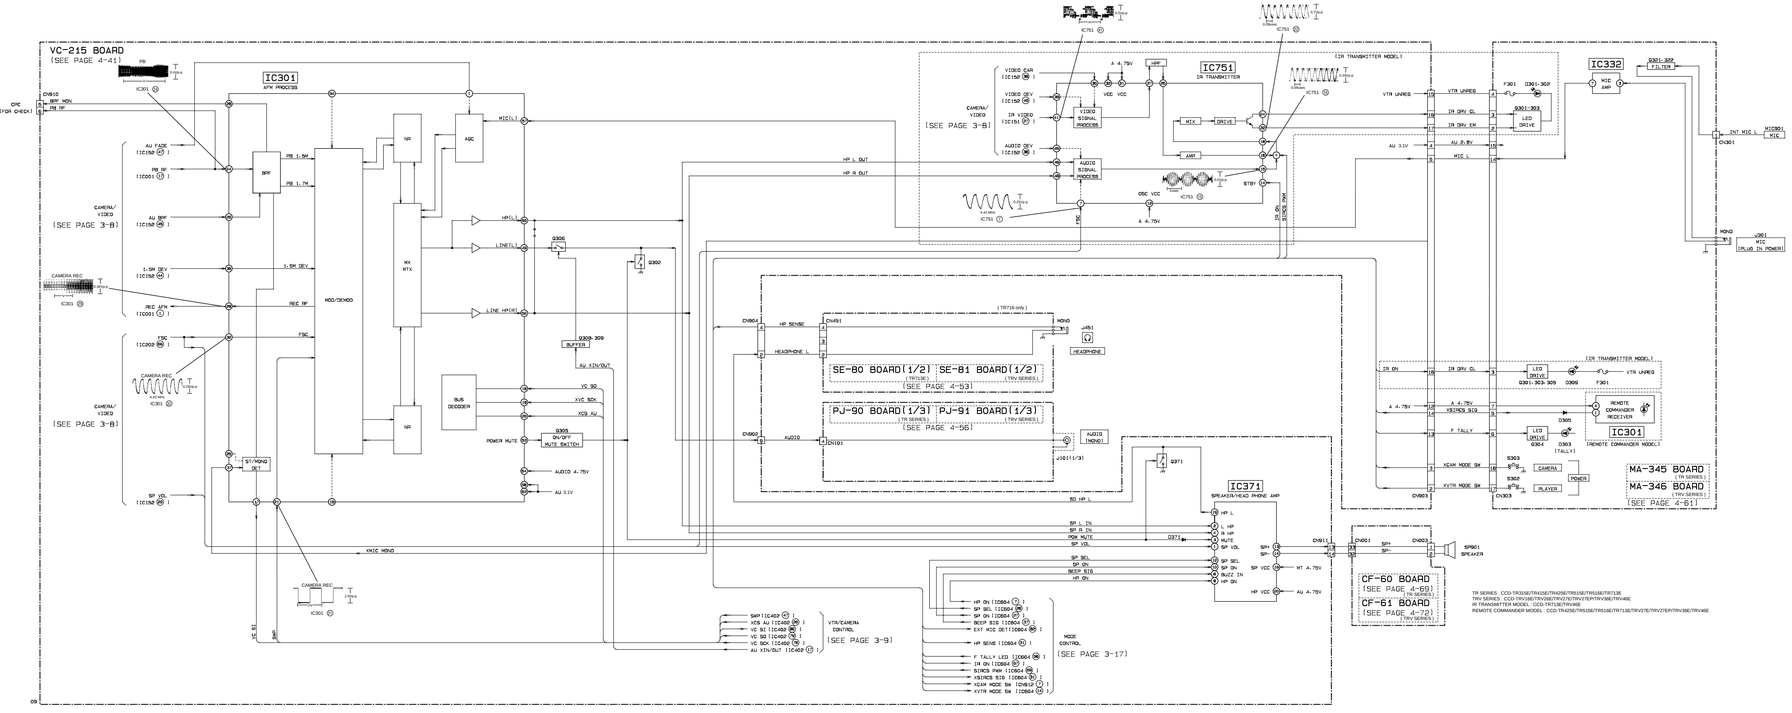

TR SERIES : CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR515E/TR713E
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
IR TRANSMITTER MODEL : CCD-TRT13E/TRV46E
REMOTE COMMANDER MODEL : CCD-TR425E/TR515E/TR516E/TR713E/TRV27E/TRV27EP/TRV36E/TRV46E

3-9. B/W EVF BLOCK DIAGRAM
B/W EVF MODEL

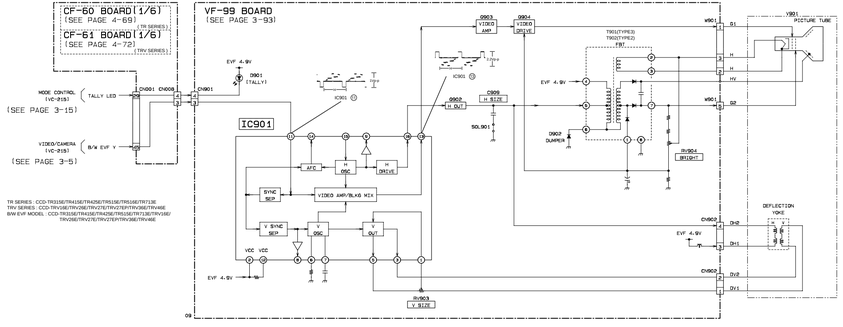

3-10. POWER BLOCK DIAGRAM

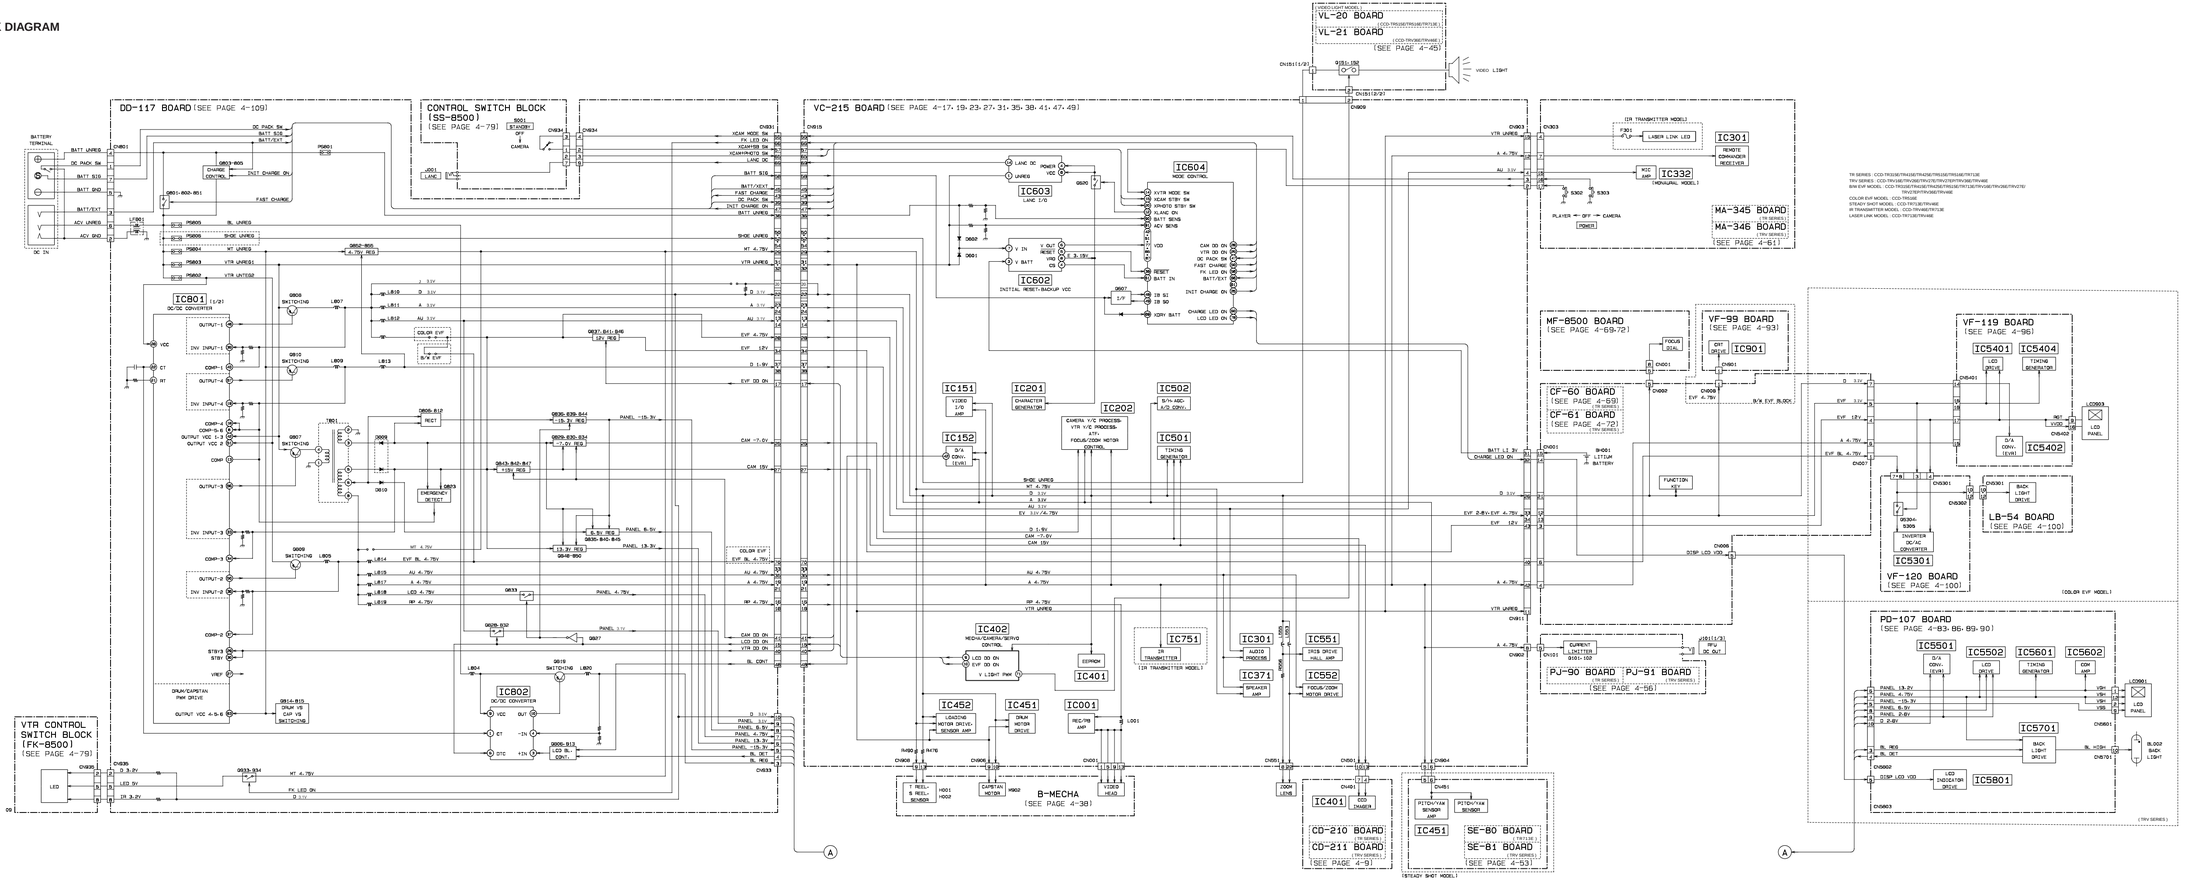
DD-117 BOARD (SEE PAGE 4-109)
CONTROL SWITCH BLOCK (SS-8500) (SEE PAGE 4-79)
VC-215 BOARD (SEE PAGE 4-17, 19, 23, 27, 31, 35, 38, 41, 47, 49)
VL-20 BOARD
VL-21 BOARD
(SEE PAGE 4-25)
VIDEO LIGHT
IC301
IC332
MA-345 BOARD
MA-346 BOARD
(SEE PAGE 4-51)
MF-8500 BOARD
(SEE PAGE 4-69, 72)
VF-99 BOARD
(SEE PAGE 4-93)
CF-60 BOARD
(SEE PAGE 4-59)
CF-61 BOARD
(SEE PAGE 4-72)
VF-119 BOARD
(SEE PAGE 4-96)
LB-54 BOARD
(SEE PAGE 4-100)
VF-120 BOARD
(SEE PAGE 4-100)
PJ-90 BOARD PJ-91 BOARD
(SEE PAGE 4-56)
PD-107 BOARD
(SEE PAGE 4-83, 86, 89, 90)
VTR CONTROL SWITCH BLOCK (FK-8500)
(SEE PAGE 4-79)
B-MECHA
(SEE PAGE 4-38)
CD-210 BOARD
CD-211 BOARD
(SEE PAGE 4-91)
SE-80 BOARD
SE-81 BOARD
(SEE PAGE 4-53)
IC604
MODE CONTROL
IC603
LANC I/O
IC602
INITIAL RESET+BACKUP VCC
IC151
IC201
IC202
IC502
IC152
IC501
IC402
IC751
IC301
IC551
IC552
IC371
IC452
IC451
IC001
IC401
IC802
IC5301
IC5401
IC5404
IC5402
IC5501
IC5502
IC5601
IC5602
IC5701
IC5801
IC901
IC1001
IC1002
IC1003
IC1004
IC1005
IC1006
IC1007
IC1008
IC1009
IC1010
IC1011
IC1012
IC1013
IC1014
IC1015
IC1016
IC1017
IC1018
IC1019
IC1020
IC1021
IC1022
IC1023
IC1024
IC1025
IC1026
IC1027
IC1028
IC1029
IC1030
IC1031
IC1032
IC1033
IC1034
IC1035
IC1036
IC1037
IC1038
IC1039
IC1040

4-1. FRAME SCHEMATIC DIAGRAM (1)

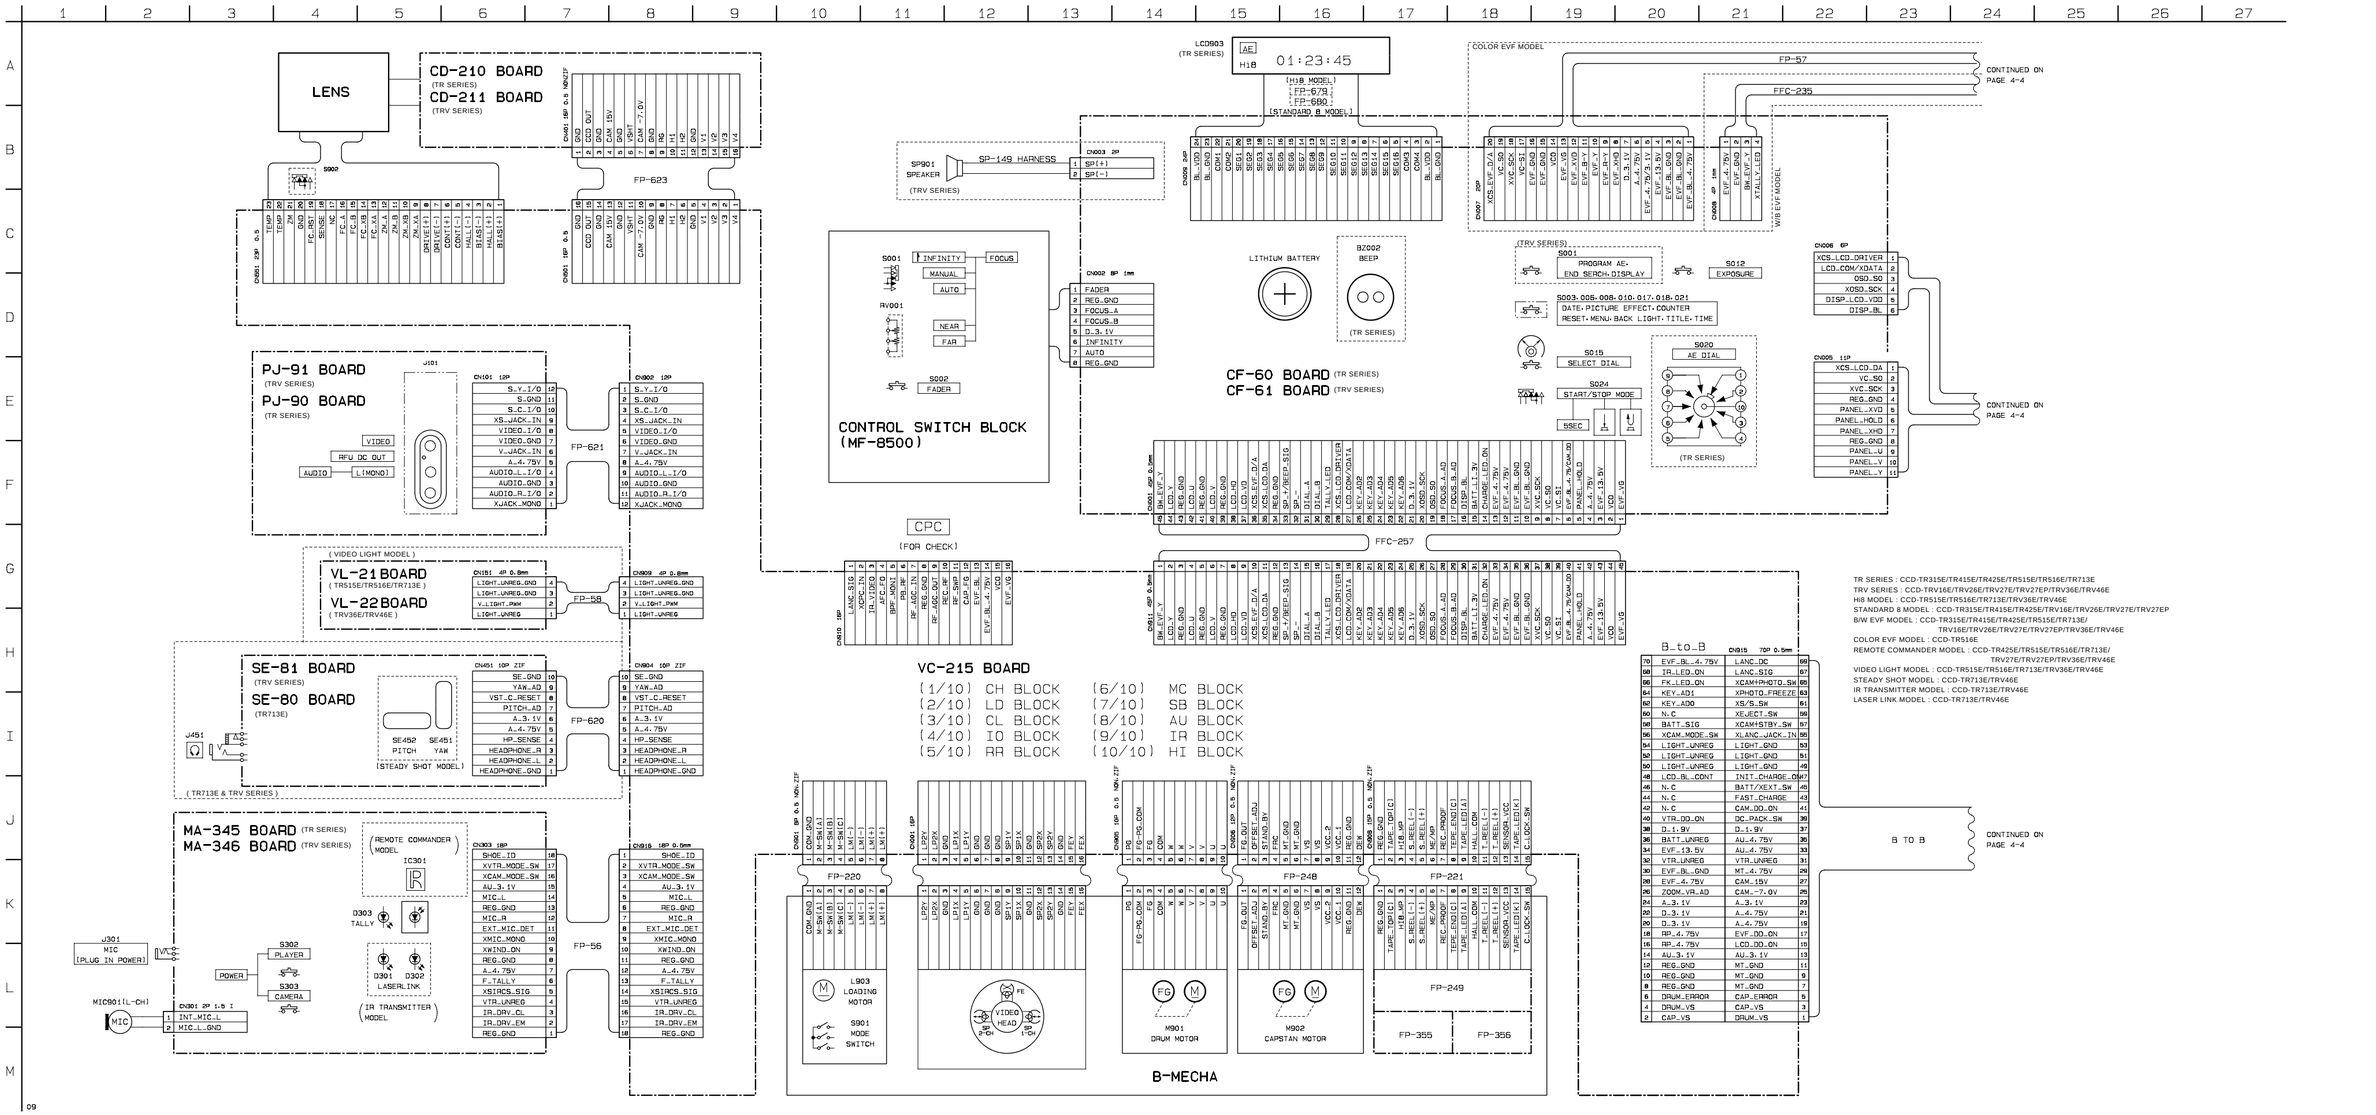

FRAME SCHEMATIC DIAGRAM (2)

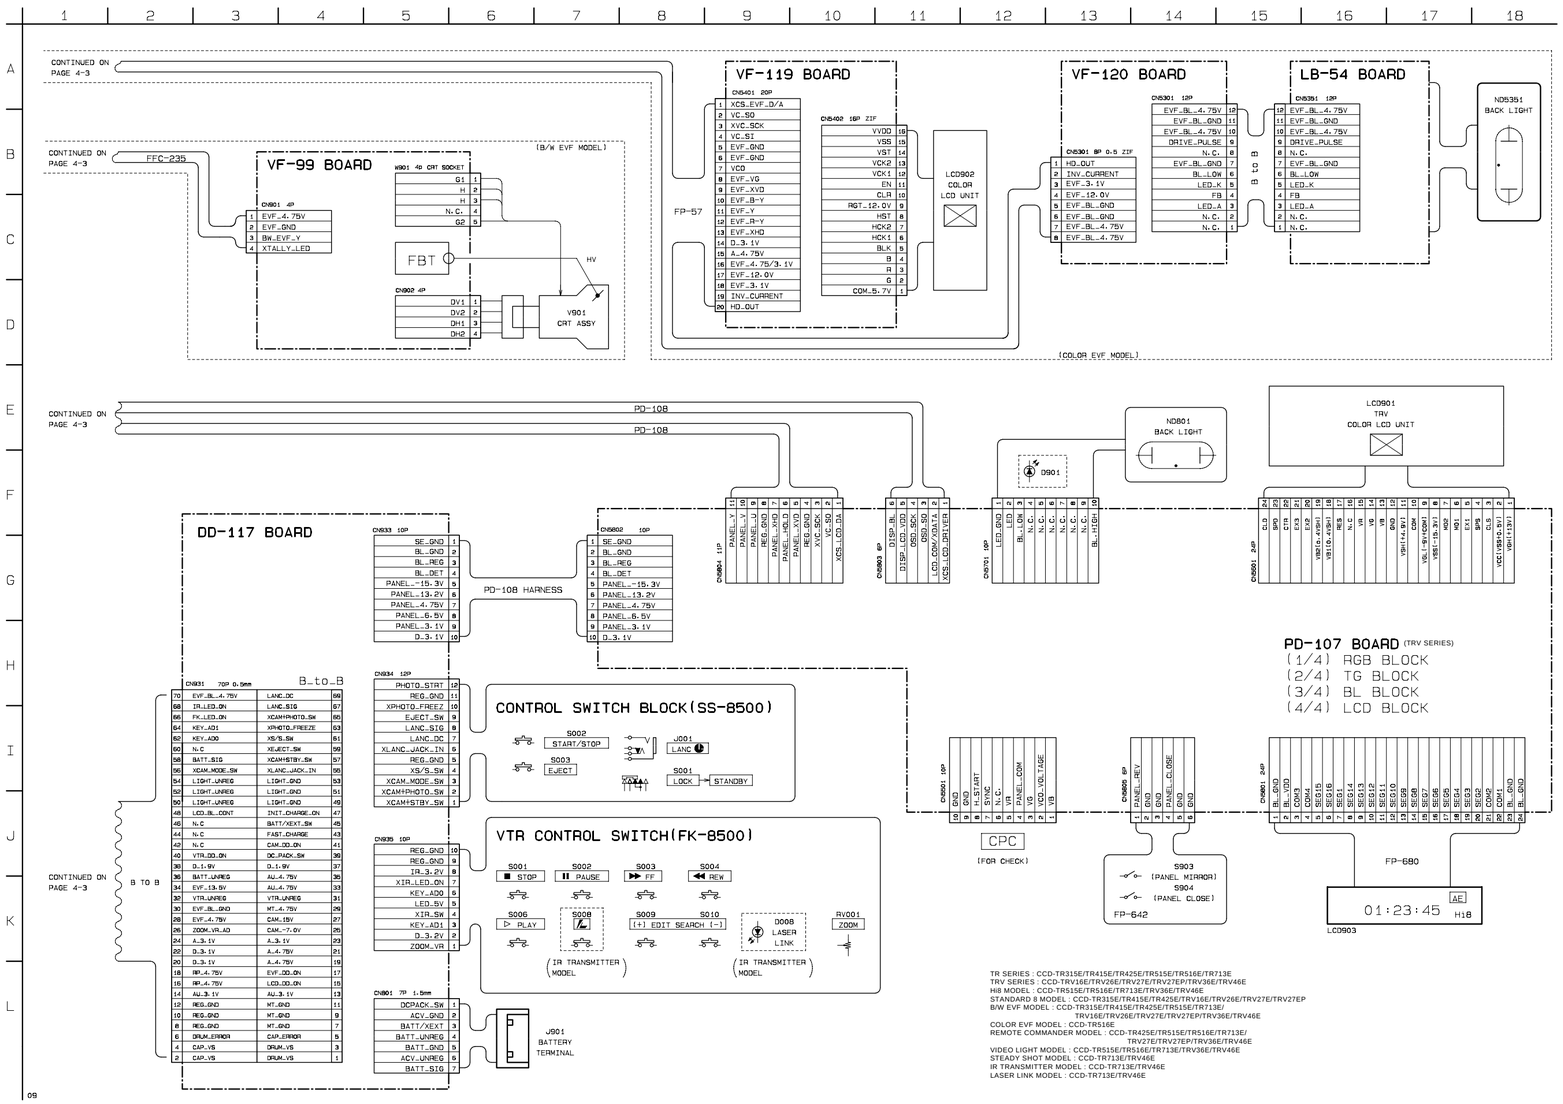

TR SERIES : CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
Hi8 MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STANDARD 8 MODEL : CCD-TR315E/TR415E/TR425E/TR516E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL : CCD-TR315E/TR415E/TR425E/TR515E/TR713E/
TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL : CCD-TR516E
REMOTE COMMANDER MODEL : CCD-TR425E/TR515E/TR516E/TR713E/
TRV27E/TRV27EP/TRV36E/TRV46E
VIDEO LIGHT MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL : CCD-TR713E/TRV46E
IR TRANSMITTER MODEL : CCD-TR713E/TRV46E
LASER LINK MODEL : CCD-TR713E/TRV46E

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

- **For printed wiring boards.**
- ▒▒▒ : Pattern from the side which enable seeing.
  (The other layer's patterns are not indicated.)
- Circled numbers refer to waveforms.
- Through hole is omitted.
- There are few cases that the part printed on diagram isn't mounted in this model.
- Chip parts.

Transistor



Diode

- **For schematic diagrams.**
- All capacitors are in μF unless otherwise noted. pF: μμF.
  50 V or less are not indicated except for electrolytics and tantalums.
- Chip resistor are 1/16W unless otherwise noted.
  kΩ : 1000Ω, MΩ : 1000kΩ.
- Caution when replacing chip parts.
  New parts must be attached after removal of chip.
  Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- Some chip part will be indicated as follows.

Example

C541	L452
22U	10UH
TA A	2520

Kinds of capacitor — Temperature chracteristics — External dimensions (mm)

- Constants of resistors, capasitors, ICs and etc with XX indicate tha they are not used. In such cases, the unused circuits may be indicated.
- Parts with ☆ differ according to the model/destination. Refer to the mount table for each function.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name
  XEDIT → EDIT PB/XREC → PB/REC
- : non flammable resistor.
- : fusible resistor.
- : panel designation.
- : B+ Line
- : B– Line
- : IN/OUT direction of (+, –) B LINE.
- : adjustment for repair.
- Circled numbers refer to waveforms.

The components identified by mark ⚠or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Refer to page 3 as for "Table for difference of functions" of models and classification.

- **Measuring conditions voltage value and waveform.**
- The object is color bar chart of pattern box.
- Voltages and dc between ground and measurement points. Readings are taken with a digital multimeter (DC 10MΩ).
- Voltages variations may be noted due to normal production tolerances.

1.Connection

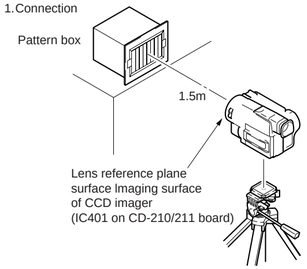

2.Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

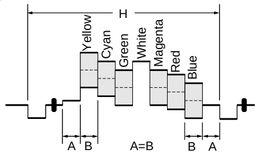

Fig. a (Video output terminal output waveform)

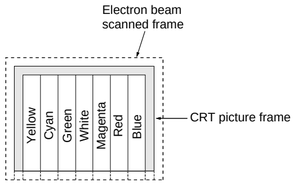

Fig. b (Picture on monitor TV)

CD-210/211 (CCD IMAGER) PRINTED WIRING BOARD

– Ref No. CD-210 BOARD: 4,000 series, CD-211 BOARD: 9,000 series –

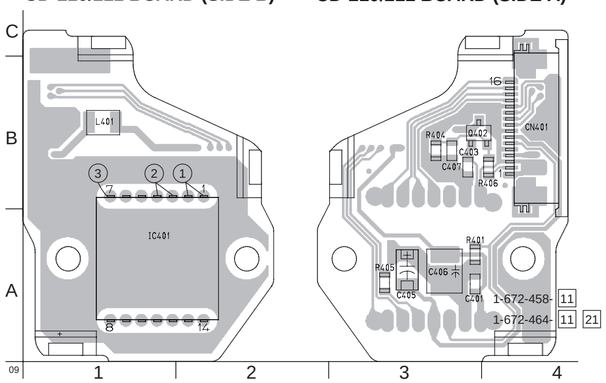

CD-210/ CD-211 BOARD	
C401	A-3
C403	B-3
C405	A-3
C406	A-3
C407	B-3
CN401	B-4
IC401	A-1
L401	B-1
Q402	B-3
R401	A-3
R404	B-3
R405	A-3
R406	B-4

- **For Printed Wiring Boards.**

There are few cases that the part isn't mounted in this model is printed on this diagram.

- Chip transistor

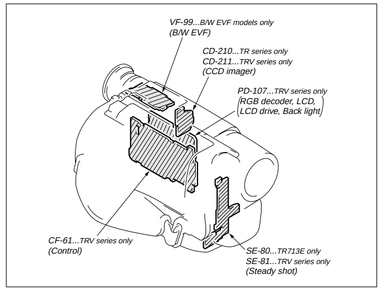

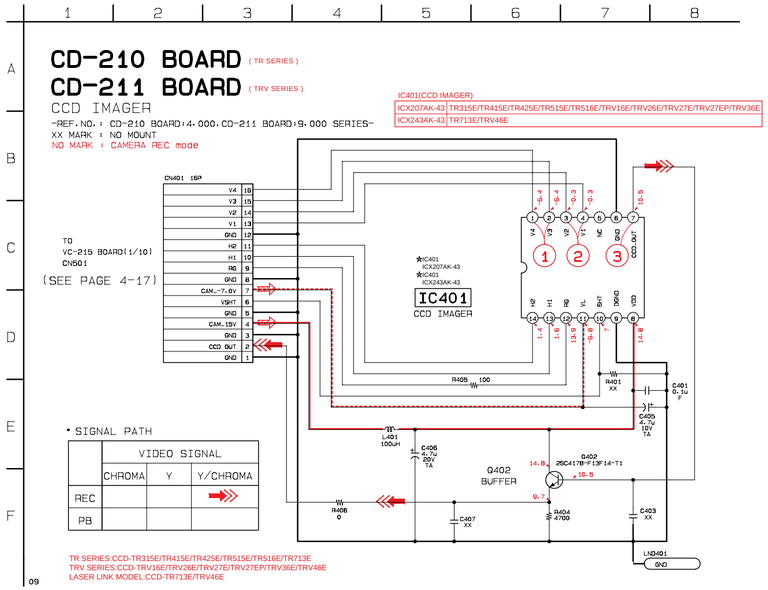

CD-210/211 BOARD CAMERA REC

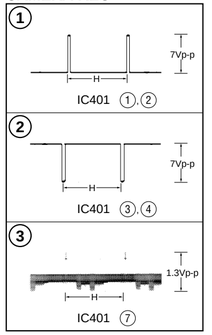

Note on the CCD imager replacement

- The CCD imager is not mounted for the already mounted CD-210/211 board supplied as the repair parts.
  When replacing the CD-210/211 board, remove the CCD imager from the old board and install on the new board.
- Perform all adjustments of the camera block when the CCD imager has been replaced.
- Handle the CCD imager with attention such as MOS IC as it may be broken by static electricity in the structure.
  Also, prevent the receiving light section from dust attached and strong light.

VC-215 BOARD
(SIDE B)

C002	A-5	C227	D-5	C484	A-2	CN904	A-9	Q012	B-5	R058	B-6	R260	D-3	R471	A-2	R645	E-2
C003	A-5	C229	E-5	C485	A-1	CN910	D-1	Q016	B-5	R066	B-6	R261	E-4	R472	A-2	R646	F-2
C008	A-4	C232	D-3	C504	E-6			Q017	B-6	R067	C-6	R262	D-4	R473	A-1	R647	F-2
C011	B-5	C233	D-5	C505	E-6	D001	C-4	Q018	C-5	R068	C-6	R263	E-6	R475	A-1	R648	F-2
C012	B-5	C234	D-5	C506	E-7	D201	D-3	Q019	C-6	R069	C-6	R264	E-4	R477	A-2	R649	F-2
C013	B-6	C235	D-3	C507	E-6	D202	D-3	Q021	B-6	R070	C-6	R265	E-4	R479	A-2	R651	F-2
C014	B-6	C236	D-3	C508	F-5	D371	E-8	Q023	C-6	R076	C-6	R266	E-4	R480	A-2	R652	F-3
C015	B-5	C239	E-4	C509	E-6	D502	F-5	Q025	C-6	R077	C-6	R267	D-4	R481	A-2	R653	F-3
C016	B-5	C241	E-3	C510	E-6	D604	F-2	Q026	C-6	R078	C-6	R304	B-9	R482	A-2	R654	F-3
C017	B-5	C243	F-3	C514	E-5	D608	F-1	Q030	C-5	R079	C-6	R305	C-9	R483	A-1	R655	F-2
C019	B-5	C244	F-3	C515	E-5	D609	F-2	Q031	C-5	R080	C-6	R306	B-9	R484	A-1	R662	E-3
C020	B-6	C246	D-4	C553	G-6	D610	E-2	Q032	C-7	R083	C-5	R307	C-9	R485	A-1	R663	F-3
C022	B-5	C247	D-4	C554	G-7	D611	E-2	Q038	C-5	R084	C-5	R312	C-9	R486	B-1	R664	F-2
C025	B-6	C249	E-4	C556	G-7	D612	E-2	Q039	C-5	R087	C-5	R324	B-9	R487	A-1	R665	F-3
C038	B-6	C252	F-3	C557	G-5			Q041	B-5	R088	C-5	R326	C-9	R504	E-6	R678	F-3
C040	B-6	C301	B-9	C558	G-5	FB204	F-3	Q042	C-4	R089	C-5	R327	C-9	R508	E-5	R686	E-2
C042	B-5	C302	C-9	C559	F-7	FB205	F-3	Q151	D-8	R090	C-5	R371	E-8	R510	E-5	R687	E-2
C043	B-5	C348	F-7	C563	F-6	FB503	E-5	Q204	D-5	R094	C-5	R372	E-8	R511	E-5	R689	F-3
C048	B-6	C371	E-8	C564	F-6	FB504	E-5	Q205	E-5	R095	D-7	R373	D-9	R512	F-5	R691	F-2
C050	C-6	C372	E-7	C566	G-7			Q208	D-6	R105	C-6	R374	E-8	R527	E-5	R692	F-1
C051	B-5	C378	F-7	C569	G-6	IC152	C-8	Q217	D-4	R106	C-6	R376	E-8	R530	F-7	R704	G-8
C054	B-5	C380	E-7	C572	F-6	IC201	E-4	Q303	C-9	R109	B-4	R377	E-8	R535	E-5	R705	G-7
C056	B-5	C381	E-7	C607	E-2	IC204	F-4	Q306	B-9	R110	B-4	R378	E-8	R536	E-5	R716	G-8
C058	B-6	C382	F-8	C610	F-2	IC371	E-7	Q307	C-9	R112	C-7	R379	E-7	R537	E-6	R717	F-8
C060	C-5	C383	E-8	C611	F-2	IC401	C-2	Q451	B-3	R152	D-8	R382	E-8	R552	G-6	R718	F-7
C066	B-6	C384	E-8	C613	E-1	IC451	A-4	Q454	A-1	R154	D-8	R383	E-8	R555	G-7	R719	F-8
C067	C-6	C385	E-8	C625	E-2	IC452	A-2	Q455	A-1	R157	D-8	R384	E-7	R563	G-5	R723	F-7
C068	C-6	C386	F-8	C626	E-2	IC501	E-6	Q551	G-7	R179	D-8	R385	F-8	R564	G-6	R752	A-7
C069	C-5	C387	F-8	C627	F-2	IC552	G-6	Q607	F-2	R180	D-8	R386	F-8	R566	G-5	R753	A-7
C070	C-6	C388	E-8	C630	F-3	IC602	E-2	Q619	E-3	R183	E-8	R388	E-8	R567	G-6	R754	B-7
C072	C-6	C402	C-1	C634	F-3	IC603	F-1	Q705	F-7	R184	E-7	R389	E-8	R570	F-5	R755	B-7
C074	C-6	C451	A-3	C636	F-2	IC751	B-8	Q901	D-2	R185	D-7	R403	C-2	R579	G-6	R756	B-7
C076	C-5	C452	A-3	C704	F-7					R186	D-7	R404	C-3	R582	G-6	R757	A-7
C080	C-5	C453	A-3	C714	F-8	L002	B-4	R001	A-6	R188	D-8	R415	B-2	R584	G-7	R758	A-7
C083	C-5	C454	A-3	C715	F-8	L003	B-4	R002	A-6	R189	C-7	R416	B-2	R603	F-2	R759	A-7
C086	C-4	C455	A-3	C751	B-7	L007	C-6	R008	A-4	R190	C-8	R417	B-2	R604	F-2	R760	B-8
C087	C-4	C456	A-4	C752	A-7	L008	C-6	R009	A-5	R202	D-3	R418	B-2	R608	F-2	R761	A-8
C090	C-6	C457	A-3	C753	A-7	L010	C-6	R010	B-6	R203	D-4	R426	C-2	R612	E-1	R762	A-8
C152	D-8	C458	A-4	C754	A-7	L011	C-6	R011	B-5	R204	D-3	R427	B-2	R618	F-1	R763	A-8
C157	E-8	C459	A-4	C755	A-7	L015	C-5	R012	B-5	R205	D-3	R428	B-2	R619	F-1	R764	B-8
C158	E-8	C460	A-4	C756	A-7	L019	B-6	R013	B-6	R206	D-4	R429	B-2	R620	F-1	R765	B-8
C159	C-8	C461	A-3	C758	A-8	L152	D-8	R014	B-4	R208	D-3	R430	B-2	R621	F-1	R766	A-8
C174	D-8	C462	A-4	C759	B-7	L204	D-4	R015	B-5	R210	D-3	R432	C-2	R622	F-2	R767	B-8
C175	D-8	C463	A-3	C760	B-7	L205	D-6	R016	B-6	R211	D-3	R433	C-2	R624	F-1	R768	A-8
C176	D-8	C464	B-3	C761	B-8	L206	D-5	R017	B-6	R212	D-5	R434	C-2	R625	F-2	R770	A-8
C182	D-8	C465	B-4	C762	B-8	L552	F-7	R018	B-5	R214	E-5	R435	B-2	R627	F-2	R771	A-8
C183	D-8	C466	B-3	C763	B-8	L602	E-3	R019	B-5	R215	D-5	R442	C-2	R628	F-2	R772	A-8
C190	D-8	C467	B-3	C764	B-8	L701	F-7	R020	B-4	R216	D-5	R443	C-2	R629	F-1	R773	B-8
C191	C-7	C468	B-3	C765	A-8	L702	F-7	R021	B-5	R217	E-4	R452	A-3	R630	F-2	R774	B-9
C192	C-7	C469	B-4	C766	A-8	L704	F-8	R022	C-5	R223	D-3	R453	A-3	R631	G-2	R775	A-8
C202	D-3	C470	B-4	C767	B-8	L751	B-8	R023	B-5	R224	D-3	R454	A-3	R632	G-1	R922	D-1
C203	D-3	C471	B-4	C768	B-8	L752	B-8	R025	B-6	R226	D-4	R455	A-3	R633	E-2	R923	C-1
C205	E-4	C473	A-1	C769	A-8	L753	B-8	R029	B-5	R240	D-4	R456	A-3	R634	E-2	R924	D-1
C206	D-4	C474	A-2	C770	A-8			R031	B-5	R244	D-3	R457	A-3	R635	E-2	R925	D-1
C207	D-3	C475	A-2	C771	B-8	Q003	A-5	R040	B-5	R245	D-4	R459	A-3	R636	E-2	R926	D-1
C208	D-3	C476	A-2	C772	A-8	Q004	A-6	R041	B-5	R246	D-3	R460	A-3	R637	G-2	R927	D-2
C209	D-6	C477	A-2	C773	B-8	Q005	A-5	R042	B-5	R247	D-3	R461	A-3	R638	G-2	R933	D-2
C210	D-6	C478	A-2	C774	A-8	Q006	A-5	R047	B-5	R248	E-3	R462	A-3	R639	G-2		
C211	E-3	C479	A-2	C775	A-8	Q007	A-6	R048	B-5	R249	E-3	R463	A-3	R640	F-2	TH401	C-4
C212	D-3	C479	A-2	C776	B-9	Q008	B-6	R049	B-6	R250	F-3	R467	A-2	R641	F-3		
C213	D-5	C480	A-2	C777	A-9	Q009	B-6	R050	B-6	R254	D-2	R468	A-2	R642	G-2	X151	D-7
C217	D-4	C481	A-1	C778	B-9	Q010	B-5	R051	B-6	R255	E-5	R469	A-2	R643	F-2	X401	C-3
C218	D-4	C483	A-2	C781	B-8	Q011	B-5	R056	B-6	R257	D-4	R470	A-2	R644	G-2	X501	F-5

- **For Printed Wiring Boards.**
- This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.

There are few cases that the part isn't mounted in this model is printed on this diagram.

- Chip transistor

Chip diode



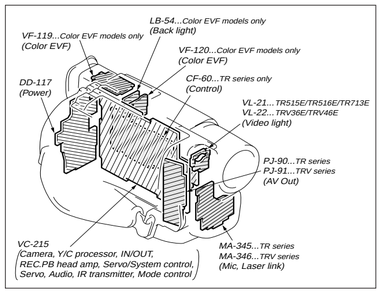

VC-215 (CAMERA, Y/C PROCESSOR, IN/OUT, REC/PB HEAD AMP, SERVO/SYSTEM CONTROL, SERVO, AUDIO, IR TRANSMITTER, MODE CONTROL) PRINTED WIRING BOARD

– Ref No. VC-215 BOARD: 1,000 series –

VC-215 BOARD (SIDE B)

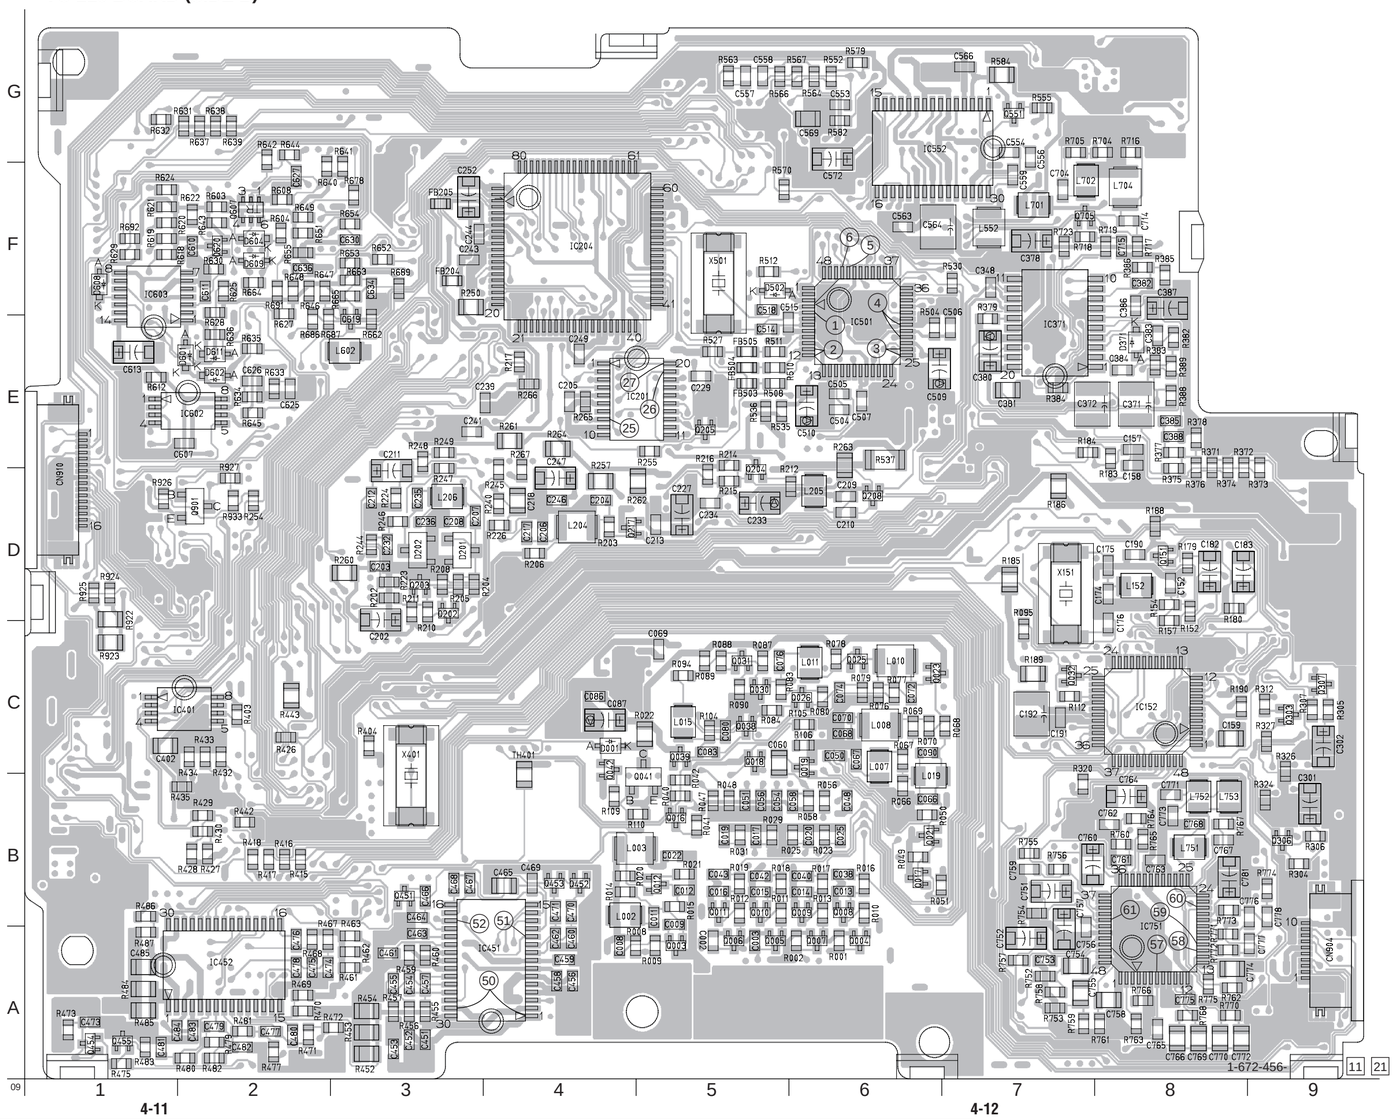

CAMERA, Y/C PROCESSOR, IN/OUT, REC/PB HEAD AMP, SERVO/SYSTEM CONTROL, SERVO, AUDIO, IR TRANSMITTER, MODE CONTROL
VC-215 (SIDE B)

VC-215 BOARD (SIDE A)

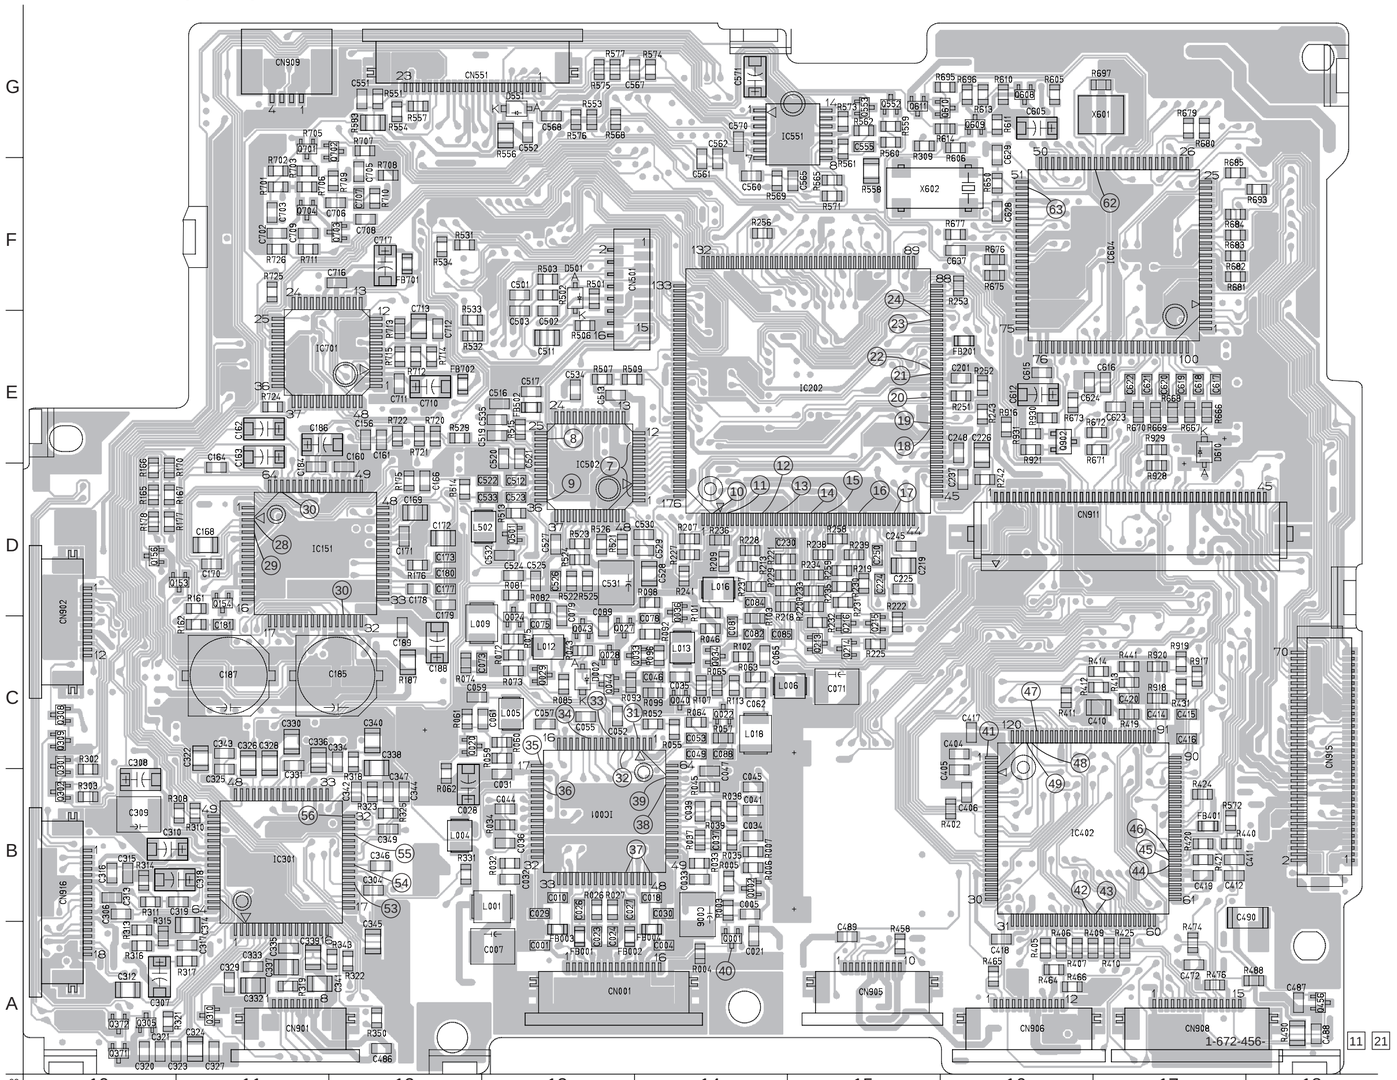

VC-215 BOARD (SIDE A)

C001	A-13	C336	C-11			R093	C-13	R529	E-12
C004	A-14	C337	A-11	D002	C-13	R096	C-14	R531	F-12
C005	B-14	C338	C-12	D501	F-13	R098	D-14	R532	E-12
C006	B-14	C339	A-11	D551	G-13	R099	C-14	R533	E-12
C007	A-13	C340	C-12	D610	E-17	R101	C-14	R534	F-12
C010	B-13	C341	A-11	FB001	A-13	R102	C-14	R551	G-12
C018	B-14	C342	B-12	FB002	A-13	R107	C-14	R553	G-13
C021	A-14	C343	C-11	FB003	A-13	R113	C-14	R554	G-12
C023	A-13	C344	B-12	FB004	A-14	R161	D-11	R556	G-13
C024	A-13	C345	A-12	FB201	E-16	R162	C-11	R557	G-12
C026	B-13	C346	B-12	FB401	B-17	R165	D-10	R558	F-15
C027	B-13	C347	B-12	FB502	E-13	R166	D-10	R559	G-15
C028	B-12	C349	B-12	FB701	F-12	R167	D-10	R560	G-15
C029	B-13	C404	C-16			R170	D-10	R561	G-15
C030	B-14	C405	B-16	IC001	B-13	R175	D-12	R562	G-15
C031	B-13	C406	B-16	IC151	D-11	R176	D-12	R565	F-15
C032	B-13	C410	C-17	IC202	E-15	R177	D-10	R568	G-13
C033	B-14	C411	B-17	IC301	B-11	R178	D-10	R569	F-14
C034	B-14	C412	B-17	IC402	B-16	R187	C-12	R571	F-15
C035	C-14	C414	C-17	IC502	E-13	R207	D-14	R572	B-17
C036	B-13	C415	C-17	IC551	G-15	R209	D-14	R573	G-15
C037	B-14	C416	C-17	IC604	F-17	R213	D-14	R575	G-13
C039	B-14	C417	C-16	IC701	E-11	R218	D-15	R576	G-13
C041	B-14	C418	A-16			R219	D-15	R577	G-13
C044	B-13	C419	B-17	L001	B-13	R220	D-15	R583	G-12
C045	B-14	C420	C-17	L004	B-12	R221	D-14	R605	G-16
C046	C-14	C472	A-17	L006	C-15	R222	C-15	R606	G-16
C047	B-14	C486	A-12	L009	C-12	R225	C-15	R610	G-16
C049	C-14	C487	A-18	L012	C-13	R227	D-14	R611	G-16
C052	C-13	C488	A-18	L013	C-14	R228	D-14	R613	G-16
C053	C-14	C490	B-18	L016	D-14	R229	D-14	R614	G-16
C055	C-13	C501	F-13	L018	C-14	R230	D-15	R650	F-16
C057	C-13	C502	E-13	L502	D-12	R231	D-15	R666	F-17
C059	C-12	C503	E-13			R232	C-15	R667	E-17
C061	C-13	C511	E-13	Q001	A-14	R233	D-15	R668	E-17
C062	C-14	C512	D-13	Q002	B-14	R234	D-15	R669	E-17
C065	C-14	C513	E-13	Q003	C-14	R235	D-15	R670	E-17
C071	C-15	C516	E-13	Q020	C-12	R235	D-15	R671	E-17
C073	C-13	C517	E-13	Q022	C-14	R236	D-14	R672	E-17
C078	C-14	C519	E-13	Q024	C-13	R237	D-14	R673	E-16
C079	C-13	C520	E-13	Q027	C-13	R238	D-15	R675	F-16
C081	C-14	C521	E-13	Q028	C-13	R239	D-15	R676	F-16
C082	C-14	C522	D-13	Q029	C-13	R241	D-14	R677	F-16
C084	D-14	C523	D-13	Q036	D-14	R242	D-16	R679	G-17
C085	C-14	C524	D-13	Q040	C-14	R243	E-16	R680	G-17
C088	C-14	C525	D-13	Q043	C-13	R251	E-16	R681	F-17
C089	C-13	C526	D-13	Q044	C-13	R252	E-16	R682	F-17
C156	E-12	C527	D-13	Q153	D-11	R253	F-16	R683	F-17
C160	D-12	C528	D-14	Q154	D-11	R256	F-14	R684	F-17
C161	E-12	C529	D-14	Q156	D-10	R258	D-15	R685	F-17
C162	E-11	C530	D-14	Q213	C-15	R259	D-15	R693	F-18
C163	E-11	C531	D-13	Q214	C-15	R302	C-10	R695	G-16
C164	D-11	C532	D-13	Q215	C-15	R303	B-10	R696	G-16
C166	D-12	C533	D-13	Q216	C-15	R308	B-11	R697	G-17
C168	D-11	C534	E-13	Q301	C-10	R309	G-15	R701	F-11
C169	D-12	C535	E-13	Q302	B-10	R310	B-11	R702	F-11
C170	D-11	C551	G-12	Q305	A-10	R311	B-10	R703	F-11
C171	D-12	C552	G-13	Q308	C-10	R313	A-10	R705	G-11
C172	D-12	C555	G-15	Q309	C-10	R314	B-10	R706	F-11
C173	D-12	C560	F-14	Q310	A-11	R315	A-10	R707	G-12
C177	D-12	C561	G-14	Q371	A-10	R316	A-10	R708	F-12
C178	D-12	C562	G-14	Q372	A-10	R317	A-11	R709	F-12
C179	D-12	C565	F-15	Q456	A-18	R318	B-12	R710	F-12
C180	D-12	C567	G-14	Q501	D-13	R318	B-12	R711	F-11
C181	C-11	C568	G-13	Q552	G-15	R319	A-11	R712	E-12
C184	D-11	C570	G-14	Q553	G-15	R321	A-10	R713	E-12
C185	C-12	C571	G-14	Q608	G-16	R322	A-12	R714	E-12
C186	E-11	C605	G-16	Q609	G-16	R323	B-12	R715	E-12
C187	C-11	C612	E-16	Q610	G-16	R325	B-12	R720	E-12
C188	C-12	C615	E-16	Q611	G-15	R331	B-12	R721	E-12
C189	C-12	C616	E-17	Q701	G-11	R343	A-12	R722	E-12
C201	E-16	C617	E-17	Q702	G-12	R350	A-12	R724	E-11
C219	D-15	C618	E-17	Q703	F-12	R402	B-16	R725	F-11
C224	D-15	C619	E-17	Q704	F-11	R405	A-16	R726	F-11
C225	D-15	C620	E-17	Q902	E-16	R406	A-16	R916	E-16
C226	E-16	C621	E-17			R407	A-16	R917	C-17
C230	D-15	C622	E-17	R003	B-14	R409	A-17	R918	C-17
C237	D-16	C623	E-17	R004	A-14	R410	A-17	R919	C-17
C245	D-15	C624	E-16	R005	B-14	R411	C-16	R920	C-17
C248	E-16	C628	F-16	R006	B-14	R412	C-17	R921	E-16
C250	D-15	C629	G-16	R007	B-14	R413	C-17	R928	E-17
C275	C-13	C637	F-16	R026	B-13	R414	C-17	R929	E-17
C304	B-12	C702	F-11	R027	B-13	R420	B-17	R930	E-16
C306	B-10	C703	F-11	R032	B-13	R421	B-17	R931	E-16
C307	A-10	C705	F-12	R033	B-14	R424	B-17		
C308	B-10	C706	F-12	R034	B-13	R425	A-17	X601	G-17
C309	B-10	C707	F-12	R035	B-14	R431	C-17	X602	F-15
C310	B-10	C708	F-12	R037	B-14	R440	B-17		
C312	A-10	C709	F-11	R038	B-14	R441	C-17		
C313	B-10	C710	E-12	R039	B-14	R464	A-16		
C314	A-11	C711	E-12	R043	C-13	R465	A-16		
C315	B-10	C712	E-12	R045	B-14	R466	A-16		
C316	B-10	C713	E-12	R046	C-14	R474	A-17		
C317	A-11	C716	F-12	R052	C-14	R476	A-17		
C319	A-11	C717	F-12	R055	C-14	R485	A-15		
C320	A-10	C849	A-15	R057	C-14	R488	A-18		
C321	A-10	C918	B-11	R059	C-13	R490	A-18		
C322	C-11			R060	C-13	R501	F-13		
C323	A-11	CN001	A-13	R061	C-12	R502	F-13		
C324	A-11	CN501	F-13	R062	B-12	R503	F-13		
C325	C-11	CN551	G-12	R063	C-14	R506	E-13		
C326	C-11	CN901	A-11	R064	C-14	R507	E-13		
C327	A-11	CN902	D-10	R065	C-14	R509	E-13		
C328	C-11	CN903	B-10	R072	C-13	R513	D-13		
C329	A-11	CN905	A-15	R073	C-13	R514	D-12		
C330	C-11	CN906	A-16	R074	C-12	R515	E-13		
C331	C-11	CN908	A-17	R075	C-13	R521	D-13		
C332	A-11	CN909	G-11	R081	D-13	R522	D-13		
C333	A-11	CN911	D-16	R082	D-13	R523	D-13		
C334	C-12	CN915	C-18	R085	C-13	R524	D-13		
C335	A-11			R092	C-14	R525	D-13		

CAMERA, Y/C PROCESSOR, IN/OUT, REC/PB HEAD AMP, SERVO/SYSTEM CONTROL, SERVO, AUDIO, IR TRANSMITTER, MODE CONTROL
VC-215 (SIDE A)

VC-215 BOARD (1/10)

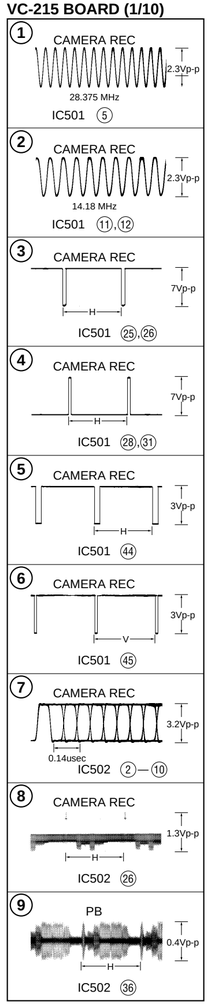

- **For schematic diagrams.**
- Refer to page 4–11 for Printed Wiring Board.

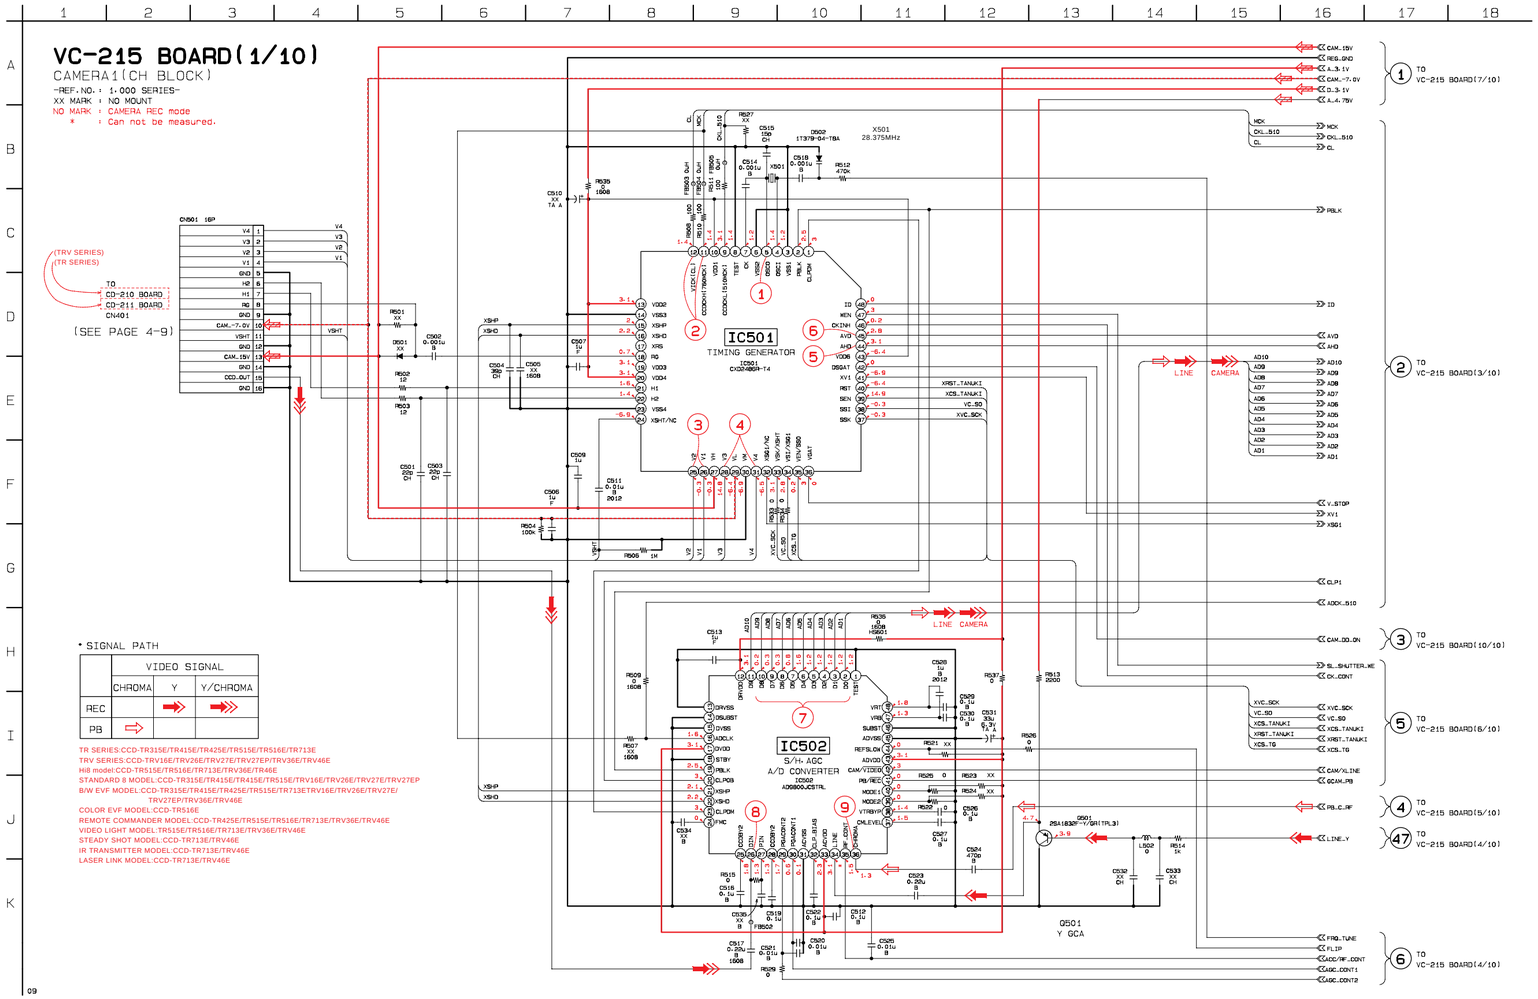

• **For schematic diagrams.**
• Refer to page 4–11 for Printed Wiring Board.

VC-215 BOARD(2/10)

CAMERA2(LD BLOCK)

-REF.NO. : 1-000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode
* : Can not be measured.

IC551
HALL/IRIS
DRIVE AMP

IC552
FOCUS/ZOOM MOTOR
DRIVER
IC552
MPC17A13AVMEL

Q551
ZOOM SENSOR SWITCH

Q552
IRIS METER
DRIVE

Q553
AMP

ZOOM
LENS
BLOCK

CN551 23P
BIAS(+) 1
HALL(+) 2
BIAS(-) 3
HALL(-) 4
CONT(-) 5
CONT(+) 6
DRIVE(-) 7
DRIVE(+) 8
ZM_XA 9
ZM_XB 10
ZM_B 11
ZM_A 12
FC_XA 13
FC_XB 14
FC_B 15
FC_A 16
PLA/SLASS 17
SENSE 18
FC_RST 19
GND 20
ZM 21
TEMP 22
TEMP 23

TO VC-215 BOARD(4/10) 7
HALL_REF
HALL_OFFSET
HALL_GAIN

TO VC-215 BOARD(7/10) 8
CCD_D.RV
REG_GND
ALL-A.75V
WT_GND

TO VC-215 BOARD(6/10) 9
IRIS_PWM
HALL_AD
LENS_FILTER_ON_SW
PLA/SLASS
FC_RST
LENS_RST_LED
ZM_RST
LENS_TEMP_AD

TO VC-215 BOARD(3/10) 10
IRIS_CON
ZM_RST
FC_RST
DIRIB
DIRIA
EN1
EN0
DIRGA
DIRGB

• ZOOM LENS BLOCK is replaced as a block so that these SCHEMATIC DIAGRAM and PRINTED WIRING BOARD are omitted.

TR SERIES : CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
H8 MODEL : CCD-TR515E/TRS16E/TR713E/TRV36E/TRV46E
STANDARD 8 MODEL : CCD-TR315E/TR416E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL : CCD-TR315E/TR415E/TR425E/TR515E/TR713E/
TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL : CCD-TR515E
REMOTE COMMANDER MODEL : CCD-TR425E/TR515E/TR516E/TR713E/
TRV27E/TRV27EP/TRV36E/TRV46E
VIDEO LIGHT MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL : CCD-TR713E/TRV46E
IR TRANSMITTER MODEL : CCD-TR713E/TRV46E
LASER LINK MODEL : CCD-TR713E/TRV46E

09

VC-215 BOARD (3/10)

- **For schematic diagrams.**
- Refer to page 4–11 for Printed Wiring Board.

10	CAMERA REC, 0.34Vp-p, IC202 3	19	CAMERA REC, 3Vp-p, IC202 61
11	CAMERA REC, 0.84Vp-p, IC202 6	20	CAMERA REC, 3.1Vp-p, 4.43 MHz, IC202 66
12	CAMERA REC, 0.5Vp-p, IC202 13	21	CAMERA REC, 3Vp-p, 4V, IC202 71
13	CAMERA REC, 0.4Vp-p, IC202 16	22	CAMERA REC, 3Vp-p, 2V, IC202 72
14	CAMERA REC, 0.18Vp-p, IC202 23	23	PB, 3Vp-p, IC202 80
15	CAMERA REC, 0.18Vp-p, IC202 26	24	CAMERA REC, 3Vp-p, IC202 81
16	CAMERA REC, 0.9Vp-p, IC202 33	25	CAMERA REC, 3.2Vp-p, 7.16 MHz, IC201 8
17	PB, 0.4Vp-p, IC202 40	26	CAMERA REC, 3Vp-p, IC201 19
18	CAMERA REC, 3Vp-p, IC202 60	27	CAMERA REC, 3Vp-p, IC201 20

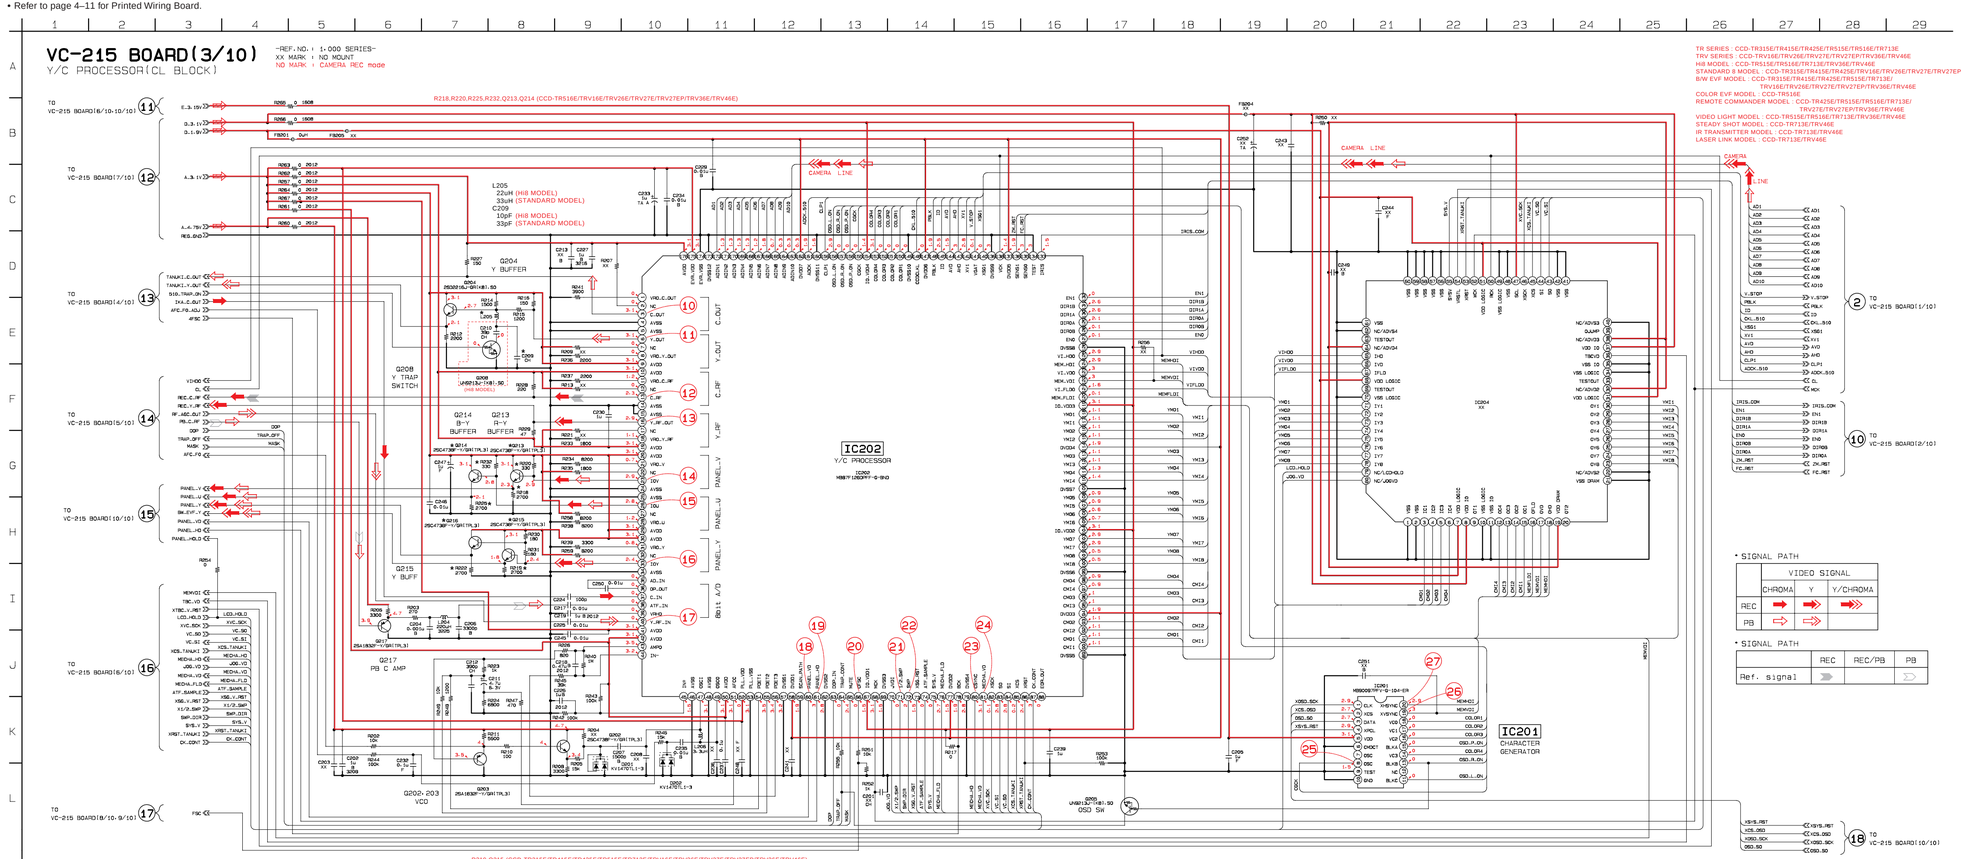

TR SERIES : CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
Hi8 MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STANDARD 8 MODEL : CCD-TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL : CCD-TR515E/TR415E/TR425E/TR515E/TR713E/
TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL : CCD-TR516E
REMOTE COMMANDER MODEL : CCD-TR425E/TR515E/TR516E/TR713E/
TRV27E/TRV27EP/TRV36E/TRV46E
VIDEO LIGHT MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL : CCD-TR713E/TRV46E
IR TRANSMITTER MODEL : CCD-TR713E/TRV46E
LASER LINK MODEL : CCD-TR713E/TRV46E

• SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC	⇨	⇨	⇨
PB	⇦	⇦	

• SIGNAL PATH

	REC	REC/PB	PB
Ref. signal	◀		▷

• **For schematic diagrams.**
• Refer to page 4–11 for Printed Wiring Board.

VC-215 BOARD(4/10)

IN/OUT(TO BLOCK)

-REF.NO. : 1-000 SERIES-
XX MARK : NO MOUNT

NO MARK : CAMERA REC mode
* : Can not be measured.

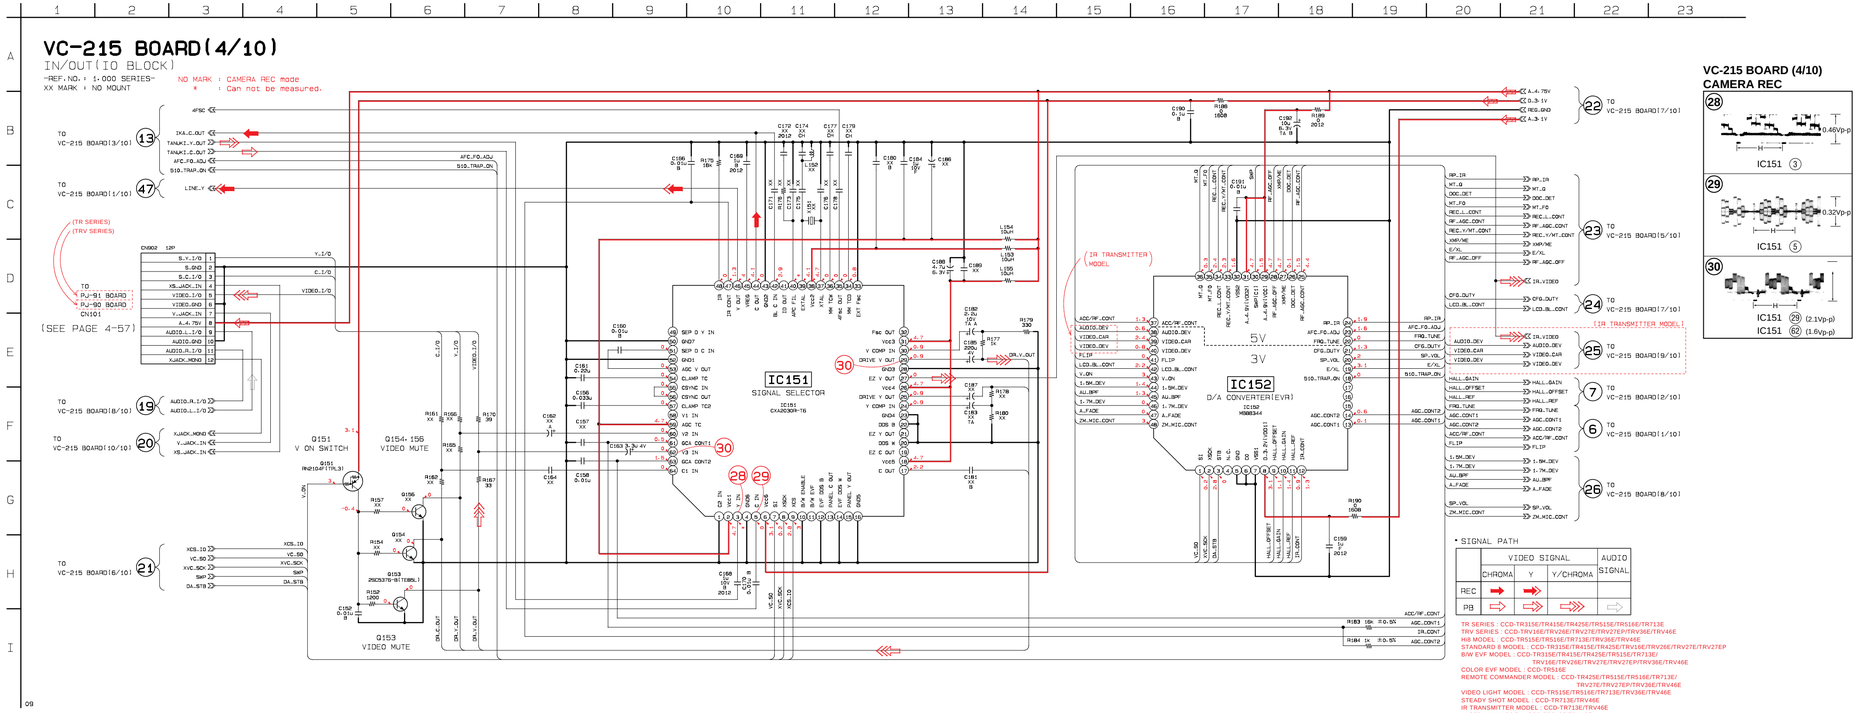

VC-215 BOARD (4/10) CAMERA REC

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→		
PB	⇨	→	⇨	⇨

TR SERIES : CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
H8 MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STANDARD 8 MODEL : CCD-TR315E/TR415E/TR425E/TR516E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL : CCD-TR315E/TR415E/TR425E/TR515E/TR713E/
TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL : CCD-TR516E
REMOTE COMMANDER MODEL : CCD-TR425E/TR515E/TR516E/TR713E/
TRV27E/TRV27EP/TRV36E/TRV46E
VIDEO LIGHT MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL : CCD-TR713E/TRV46E
IR TRANSMITTER MODEL : CCD-TR713E/TRV46E
LASER LINK MODEL : CCD-TR713E/TRV46E

VC-215 BOARD (5/10)

- **For schematic diagrams.**
- Refer to page 4–11 for Printed Wiring Board.

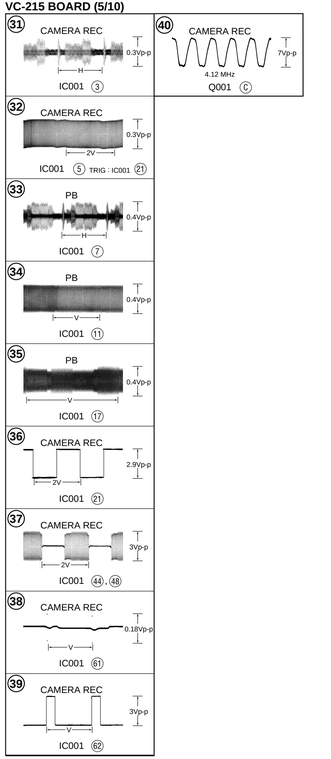

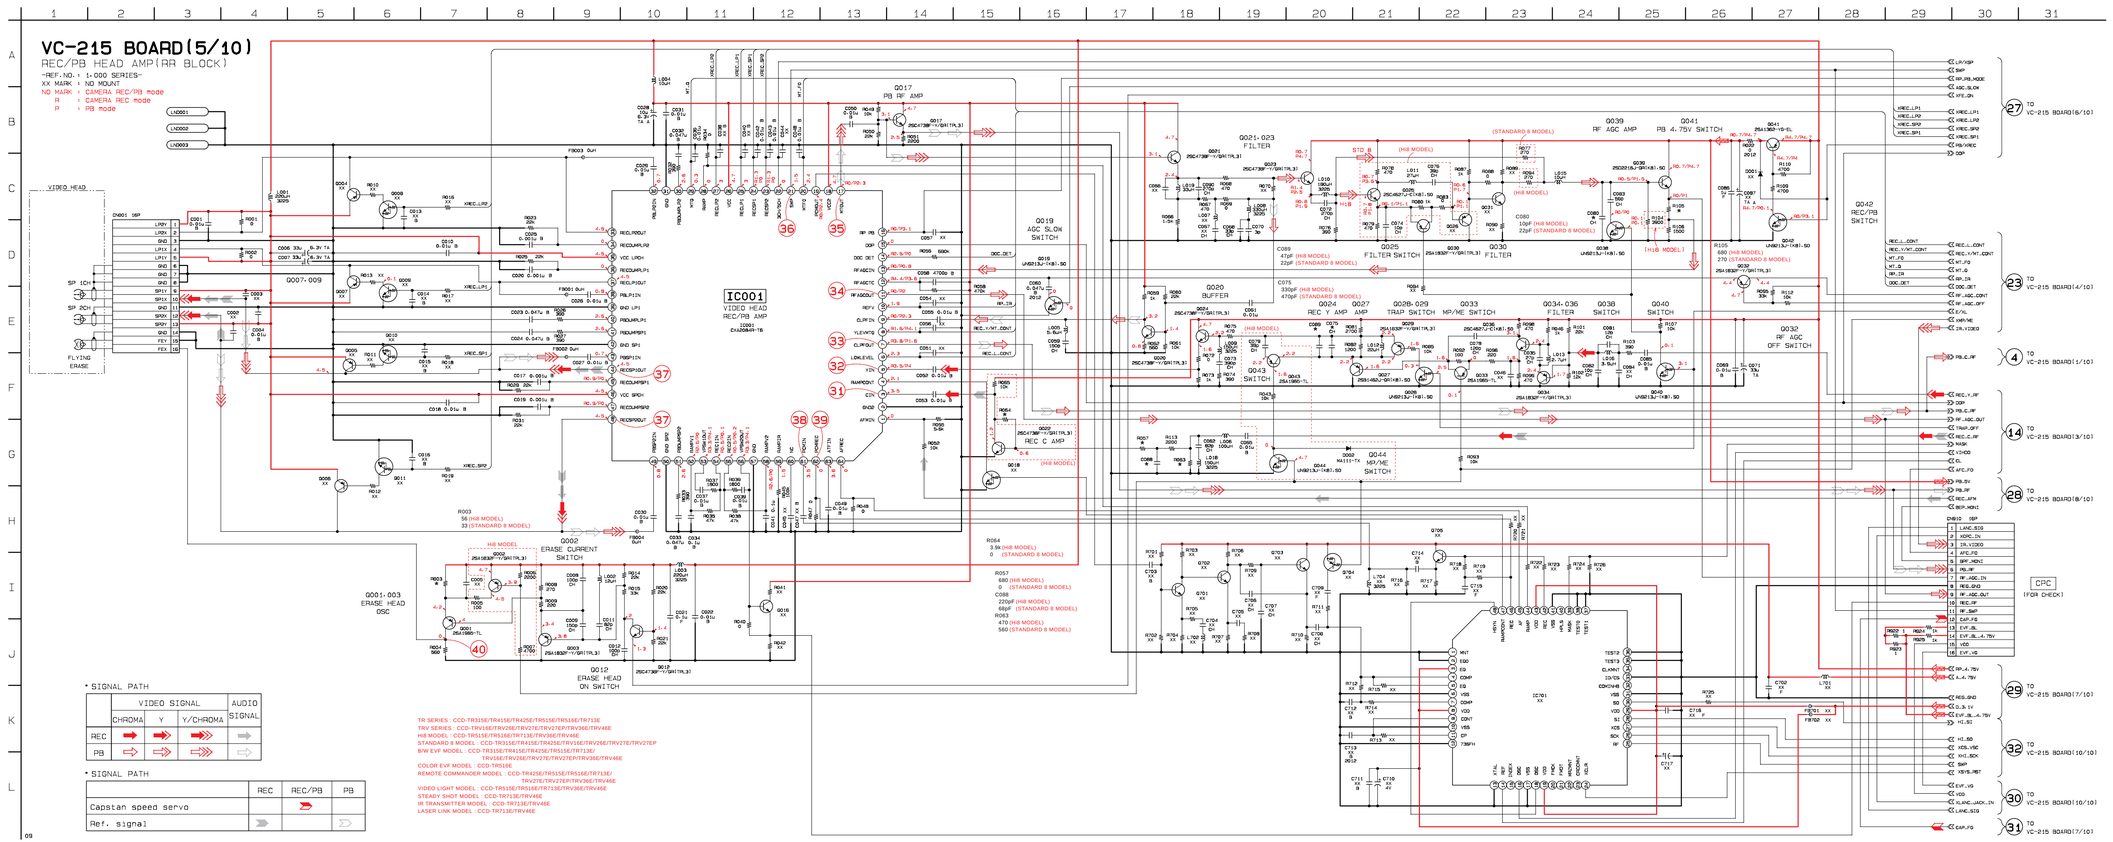

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→	→	→
PB	⇨	⇨	⇨	⇨

• SIGNAL PATH

	REC	REC/PB	PB
Capstan speed servo		→	
Ref. signal	→		⇨

TR SERIES : CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
Hi8 MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STANDARD 8 MODEL : CCD-TR315E/TR415E/TR425E/TR515E/TRV16E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL : CCD-TR315E/TR415E/TR425E/TR515E/TR713E/
TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL : CCD-TR516E
REMOTE COMMANDER MODEL : CCD-TR425E/TR515E/TR516E/TR713E/
TRV27E/TRV27EP/TRV36E/TRV46E
VIDEO LIGHT MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL : CCD-TR713E/TRV46E
IR TRANSMITTER MODEL : CCD-TR713E/TRV46E
LASER LINK MODEL : CCD-TR713E/TRV46E

• **For schematic diagrams.**
• Refer to page 4–11 for Printed Wiring Board.

VC-215 BOARD(6/10)

SERVO/SYSTEM CONTROL
(MC BLOCK)

-REF.NO. : 1,000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode
* : Can not be measured.

TO VC-215 BOARD(8/10) 34
TO VC-215 BOARD(4/10) 21
TO VC-215 BOARD(5/10) 27
TO VC-215 BOARD(3/10) 16
TO VC-215 BOARD(1/10) 5
TO VC-215 BOARD(2/10) 9

• SIGNAL PATH

	REC	REC/PB	PB
Drum speed servo		▶	
Drum phase servo		▶	
Drum servo(speed and phase)		▶	
Capstan speed servo		▶	
Capstan servo(speed and phase)		▶	

TO VC-215 BOARD(7/10) 33
TO VC-215 BOARD(7/10) 35
TO VC-215 BOARD(10/10) 36
TO VC-215 BOARD(8/10) 37
TO VC-215 BOARD(3/10-10/10) 11

IC402
SERVO/SYSTEM CONTROL
IC402
M66119FP-V-G-107-ER

IC401
EEP ROM
IC401
AK6480AM-E2

ENG07 XX 16P

16	SYS_V
15	XCS_STAR
14	XVC_SCK
13	VC_SO
12	VC_SI
11	N.C.
10	N.C.
9	MT_GND
8	CAM_DD_ON
7	MT_4.75V
6	YAW_PWM
5	PITCH_PWM
4	REG_GND
3	REG_GND
2	F_BUSY
1	YAW_POSITION_AD

OPEN

TR SERIES:CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES:CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
Hi8 model:CCD-TR515E/TR516E/TR713E/TRV36E/TR46E
STANDARD 8 MODEL:CCD-TR315E/TR415E/TR515E/TRV16E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL:CCD-TR315E/TR415E/TR425E/TR515E/TR713ETRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL:CCD-TR516E
REMOTE COMMANDER MODEL:CCD-TR425E/TR515E/TR516E/TR713E/TRV36E/TRV46E
VIDEO LIGHT MODEL:TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL:CCD-TR713E/TRV46E
IR TRANSMITTER MODEL:CCD-TR713E/TRV46E
LASER LINK MODEL:CCD-TR713E/TRV46E

★MARKED:MOUNT TABLE

Ref.No. \ Model	TYPE A	TYPEB	TYPE C	TYPE D	TYPE E	TYPE F	TYPE G
R917	47k	22k	22k	47k	10k	10k	10k
R918	100k	100k	100k	100k	100k	100k	100k
R919	47k	47k	56k	56k	100k	100k	100k
R920	100k	100k	68k	68k	47k	22k	10k

TYPE A MODEL:CCD-TRV16E/TRV26E/TRV27E/TRV27EP
TYPE B MODEL:CCD-TR713E
TYPE C MODEL:CCD-TRV36E
TYPE D MODEL:CCD-TRV46E
TYPE E MODEL:CCD-TR315E/TR415E/TR425E
TYPE F MODEL:CCD-TR515E
TYPE G MODEL:CCD-TR516E

VC-215 BOARD (6/10)
CAMERA REC

41 1.7Vp-p 20 MHz IC402 1
42 3Vp-p 2V IC402 47
43 3Vp-p 4V IC402 48
44 3Vp-p 13usec IC402 68
45 3Vp-p 13usec IC402 69
46 3Vp-p 13usec IC402 70
47 3Vp-p 1.2msec IC402 115
48 3Vp-p 2.8msec IC402 116
49 3Vp-p 2V IC402 117

- **For schematic diagrams.**
- Refer to page 4–11 for Printed Wiring Board.

VC-215 BOARD(7/10)

SERVO(SB BLOCK)

-REF.NO. : 1-000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode
* : Can not be measured.

• SIGNAL PATH

	REC	REC/PB	PB
Drum speed servo		▶	
Drum phase servo		▶	
Drum servo(speed and phase)		▶	
Capstan phase servo		▶▶	
Capstan servo(speed and phase)		▶▶	

MECHA DECK

FP-220 (FLEXIBLE)

FP-248 (FLEXIBLE)

FP-356 (FLEXIBLE)

FP-249 (FLEXIBLE)

FP-355 (FLEXIBLE)

FP-221 (FLEXIBLE)

IC451 DRUM MOTOR DRIVER
DRUM PG/FG WAVEFORM SHAPER

IC452 LOADING MOTOR DRIVE SENSOR AMP

Q454, 455 CAPSTAN ERROR AMP

Q452, 453 DRUM MOTOR ON SWITCH

Q456 TAPE LED ON/OFF SWITCH

TO VC-215 BOARD(5/10)

TO VC-215 BOARD(6/10)

TO VC-215 BOARD(4/10)

TO VC-215 BOARD(10/10)

TO DD-117 BOARD CN931 (SEE PAGE 4-109)

TO VC-215 BOARD(10/10)

TO VC-215 BOARD(9/10) (IR TRANSMITTER MODEL)

TO VC-215 BOARD(8/10)

TO VC-215 BOARD(1/10)

TO VC-215 BOARD(2/10)

TO VC-215 BOARD(3/10)

TO VC-215 BOARD(4/10)

TO VC-215 BOARD(5/10)

TO VC-215 BOARD(6/10)

TR SERIES:CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES:CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
Hi8 model:CCD-TR515E/TR516E/TR713E/TRV36E/TR46E
STANDARD 8 MODEL:CCD-TR315E/TR415E/TR415E/TR515E/TRV16E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL:CCD-TR315E/TR415E/TR425E/TR515E/TR713E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL:CCD-TR516E
REMOTE COMMANDER MODEL:CCD-TR425E/TR515E/TR516E/TR713E/TRV36E/TRV46E
VIDEO LIGHT MODEL:TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL:CCD-TR713E/TRV46E
IR TRANSMITTER MODEL:CCD-TR713E/TRV46E
LASER LINK MODEL:CCD-TR713E/TRV46E

VC-215 BOARD (7/10) CAMERA REC

50 — 1.2Vp-p, 5.6msec — IC451 ①, ②, 29

51 — 3Vp-p, 2V — IC451 ⑪

52 — 3Vp-p, 2.8msec — IC451 ⑱

• **For schematic diagrams.**
• Refer to page 4–11 for Printed Wiring Board.

VC-215 BOARD(8/10)

AUDIO(AU BLOCK)

-REF.NO. : 1-000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode

TO VC-215 BOARD(10/10) 44
TO VC-215 BOARD(7/10) 39
TO VC-215 BOARD(4/10) 19
TO VC-215 BOARD(9/10) 45

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				⇒
PB			⇒	⇨

TR SERIES:CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES:CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
Hi8 model:CCD-TR515E/TR516E/TR713E/TRV36E/TR46E
STANDARD 8 MODEL:CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL:CCD-TR315E/TR415E/TR425E/TR515E/TR713E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL CCD-TR516E
REMOTE COMMANDER MODEL:CCD-TR425E/TR515E/TR516E/TR713E/TRV36E/TRV46E
VIDEO LIGHT MODEL:TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL:CCD-TR713E/TRV46E
IR TRANSMITTER MODEL:CCD-TR713E/TRV46E
LASER LINK MODEL:CCD-TR713E/TRV46E

CN303 18P
SHDE..IO 1
XVTR_MODE..SW 2
XCAM_MODE..SW 3
AU..3.1V 4
MIC..L 5
REG..GND 6
MIC..R 7
EXT_MIC..DET 8
XMIC..MONO 9
XAING..IN 10
REG..GND 11
A..4.75V 12
F..TALLY 13
XSTACK..S10 14
VTR..LVARIO 15
IR_DRV..CL 16
IR_DRV..EM 17
REG..GND 18

(TR SERIES)
(TRV SERIES)
TO MA-345 BOARD
MA-346 BOARD CN303
(SEE PAGE 4-63)

(TR 713E)
(TRV SERIES)
CN904 10P
SE..GND 10
YAK..AO 9
VST..C..RESET 8
PITCH..AO 7
A..3.8V 6
A..4.75V 5
HP..SENSE 4
HEADPHONE..R 3
HEADPHONE..L 2
HEADPHONE..GND 1

TO SE-81 BOARD
SE-80 BOARD CN451
(SEE PAGE 4-54)

TO VC-215 BOARD(6/10) 37
PITCH..AO
VST..C..RESET
YAK..AO

TO VC-215 BOARD(9/10) 43
IR_DRV..ME
IR_DRV..CL

IC371
HEADPHONE/SPEAKER OUT AMP
IC371 BA7793FS-E2
SP..GND SP..EN
SP..SEL HP..ON
SP+ SP..BEEP
SP..VCC BIAS
HP..GND R..HP
HP..R MUTE
HP..L L..HP
HP..VCC VOL

Q305 UN5215J-TX81.SO
MUTE SWITCH

Q305 UN5215J-TX81.SO
IN/OUT SWITCH

Q308, 309
AUDIO IN/OUT SWITCH
AU..MIC/LINE

Q302 UN5215J-TX81.SO
AU L SWITCH

Q371 UN5215J-TX81.SO
HP L MUTE

IC301
AFM PROCESSOR
IC301
AN2568FH-EB

LINE OUT(L)
HP OUT(L)
GND
LINE/HP(R)
MUTE
VCCH
VREFH
VCC(3V)
MIC IN(L)
VREF
LINE IN(L)
NC
AGC TC
LINE IN(R)
VCC(3V)
MIC IN(R)

FSC
GND
MUTE DET
REC RF
BPF MONITOR
NC
BPF
MONO/ST DET
PB RF IN
RF AGC TC
GND
SWP
CS
CLOCK
DATA
SO

SP..VOL
AU..BPF
A.F.DET
L.7M..DEV
LPF/XSP
FSC
BPF_MONI
REC..AFM
REC..RF
PB..SV
PB..RF
SWP
VC..SI
VC..SO
XVC..SCK
XCS..AU
AU..XIN/OUT
PB/XREC

TO VC-215 BOARD(4/10) 26
TO VC-215 BOARD(3/10·9/10) 17
TO VC-215 BOARD(5/10) 28
TO VC-215 BOARD(6/10) 34

VC-215 BOARD (8/10)

53 CAMERA REC 2.9Vp-p 2V IC301 21
54 PB 0.4Vp-p V IC301 24
55 CAMERA REC 0.36Vp-p V IC301 29
56 CAMERA REC 0.26Vp-p 4.43 MHz IC301 32

R313(CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E)

09

VL-21/22 (VIDEO LIGHT (VIDEO LIGHT MODEL)) PRINTED WIRING BOARD

– Ref No. VL-21 BOARD: 2,000 series, VL-22 BOARD: 3,000 series –

VL-21/22 BOARD (SIDE B)

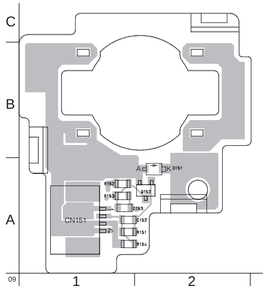

VL-21/22 BOARD (SIDE A)

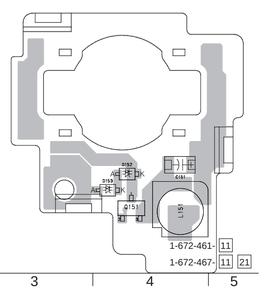

VL-21/22 BOARD

C151	A-4
C152	A-1
C153	A-1
CN151	A-1
D151	A-2
D152	A-4
D153	A-4
L151	A-4
Q151	A-4
Q152	A-2

• **For Printed Wiring Boards.**

There are few cases that the part isn't mounted in this model is printed on this diagram.

• Chip transistor

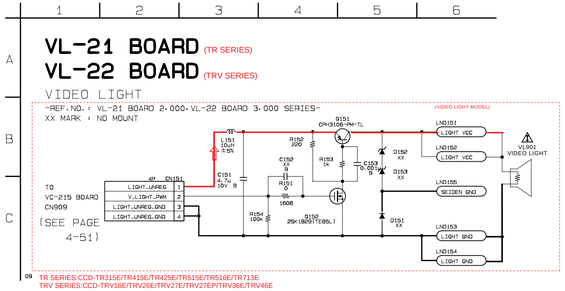

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

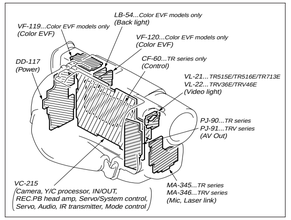
LB-54...Color EVF models only (Back light)
VF-119...Color EVF models only (Color EVF)
VF-120...Color EVF models only (Color EVF)
CF-60...TR series only (Control)
DD-117 (Power)
VL-21...TR515E/TR516E/TR713E
VL-22...TRV36E/TRV46E (Video light)
PJ-90...TR series
PJ-91...TRV series (AV Out)
VC-215 (Camera, Y/C processor, IN/OUT, REC.PB head amp, Servo/System control, Servo, Audio, IR transmitter, Mode control)
MA-345...TR series
MA-346...TRV series (Mic, Laser link)

• **For schematic diagrams.**
• Refer to page 4–11 for Printed Wiring Board.

VC-215 BOARD (9/10) PB

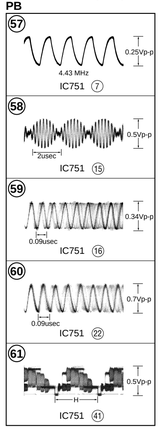

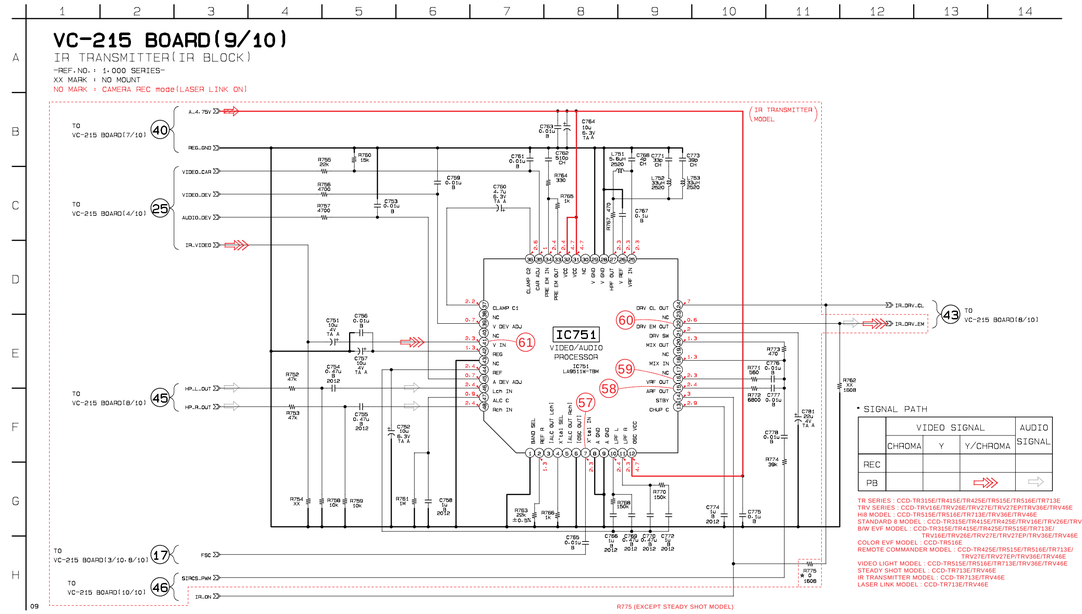

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				
PB				

TR SERIES : CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
H8 MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STANDARD 8 MODEL : CCD-TR315E/TR415E/TR425E/TR516E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL : CCD-TR315E/TR415E/TR425E/TR515E/TR713E/
TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL : CCD-TR516E
REMOTE COMMANDER MODEL : CCD-TR425E/TR515E/TR516E/TR713E/
TRV27E/TRV27EP/TRV36E/TRV46E
VIDEO LIGHT MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL : CCD-TR713E/TRV46E
IR TRANSMITTER MODEL : CCD-TR713E/TRV46E
LASER LINK MODEL : CCD-TR713E/TRV46E

• **For schematic diagrams.**
• Refer to page 4–11 for Printed Wiring Board.

VC-215 BOARD(10/10)

MODE CONTROL(HI BLOCK)

-REF.NO. : 1-000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode

TR SERIES : CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
H8 MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STANDARD 8 MODEL : CCD-TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP
B/W EVF MODEL : CCD-TR315E/TR415E/TR425E/TR515E/TR713E/
TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
COLOR EVF MODEL : CCD-TR516E
REMOTE COMMANDER MODEL : CCD-TR425E/TR515E/TR516E/TR713E/
TRV27E/TRV27EP/TRV36E/TRV46E
VIDEO LIGHT MODEL : CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E
STEADY SHOT MODEL : CCD-TR713E/TRV46E
IR TRANSMITTER MODEL : CCD-TR713E/TRV46E
LASER LINK MODEL : CCD-TR713E/TRV46E

VC-215 BOARD (10/10)

62 — 1.5Vp-p, 20 MHz, IC604 (41)
63 — 2.6Vp-p, 32 kHz, IC604 (52)

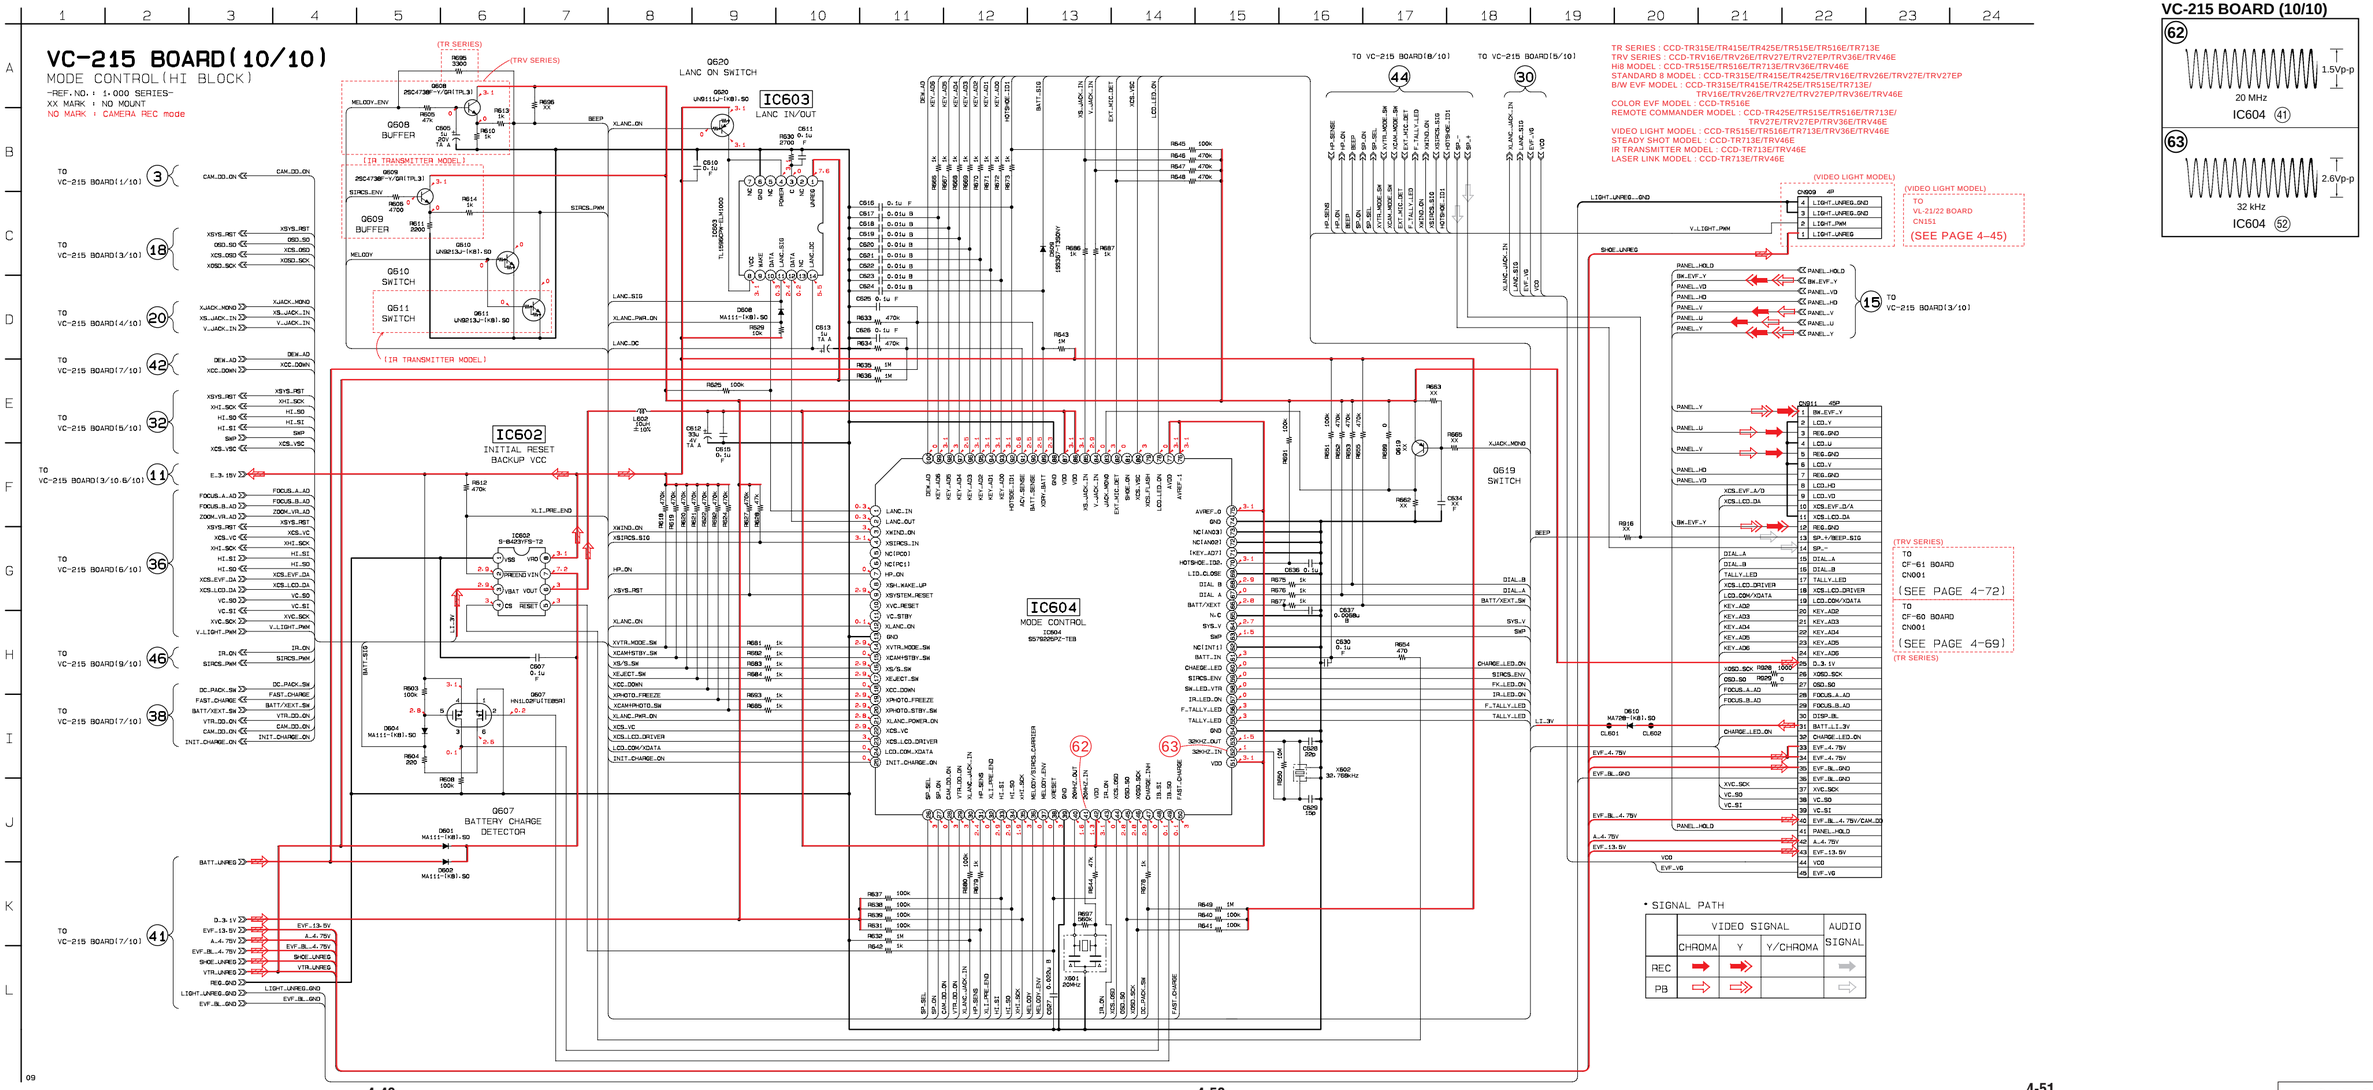

MODE CONTROL
VC-215 (10/10)

SE-80/81 (STEADY SHOT (STEADY SHOT MODEL)) PRINTED WIRING BOARD

– Ref No. SE-80 BOARD: 4,000 series, SE-81 BOARD: 9,000 series –

SE-80/81 BOARD (SIDE B)

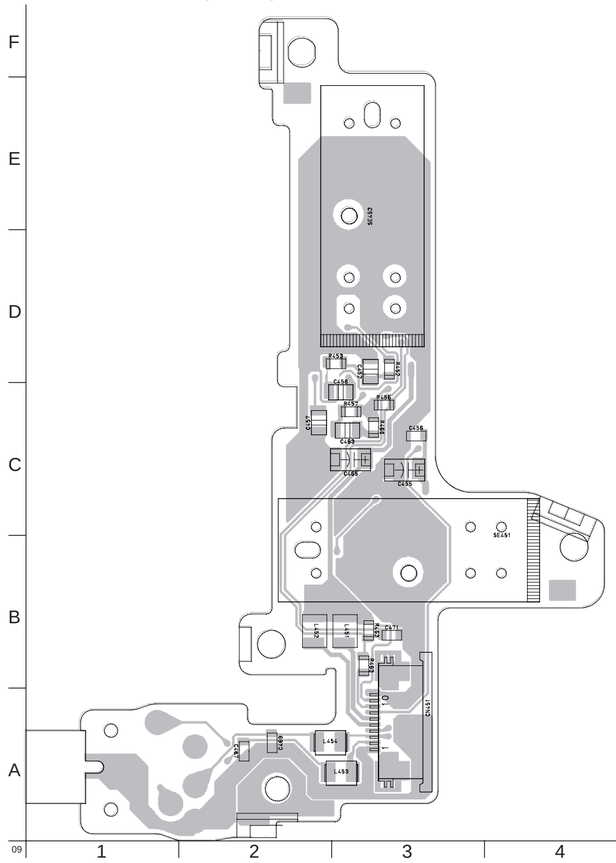

SE-80/81 BOARD (SIDE A)

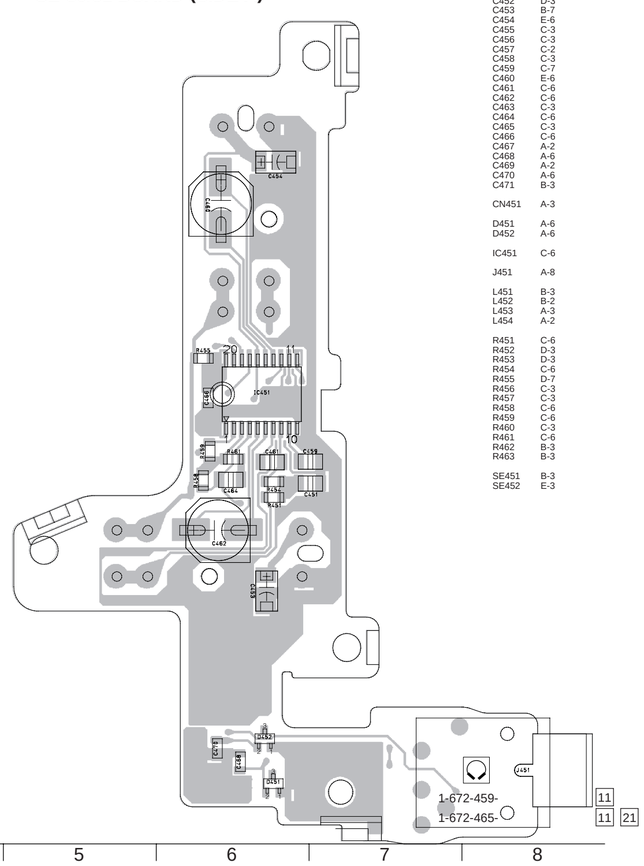

SE-80
SE-81BOARD

C451	C-7
C452	D-3
C453	B-7
C454	E-6
C455	C-3
C456	C-3
C457	C-2
C458	C-3
C459	C-7
C460	E-6
C461	C-6
C462	C-6
C463	C-3
C464	C-6
C465	C-3
C466	C-6
C467	A-2
C468	A-6
C469	A-2
C470	A-6
C471	B-3
CN451	A-3
D451	A-6
D452	A-6
IC451	C-6
J451	A-8
L451	B-3
L452	B-2
L453	A-3
L454	A-2
R451	C-6
R452	D-3
R453	D-3
R454	C-6
R455	D-7
R456	C-3
R457	C-3
R458	C-6
R459	C-6
R460	C-3
R461	C-6
R462	B-3
R463	B-3
SE451	B-3
SE452	E-3

• **For Printed Wiring Boards.**

There are few cases that the part isn't mounted in this model is printed on this diagram.

• Chip diode

SE-80 BOARD (TR 713E)
SE-81 BOARD (TRV SERIES)

STEADY SHOT

-REF.NO.: SE-80 BOARD:4,000.SE-81 BORAD:9,000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode

• SIGNAL PATH

	AUDIO SIGNAL
REC	
PB	⇨

TRV SERIES:CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
STEADY SHOT MODEL:CCD-TR713E/TRV46E

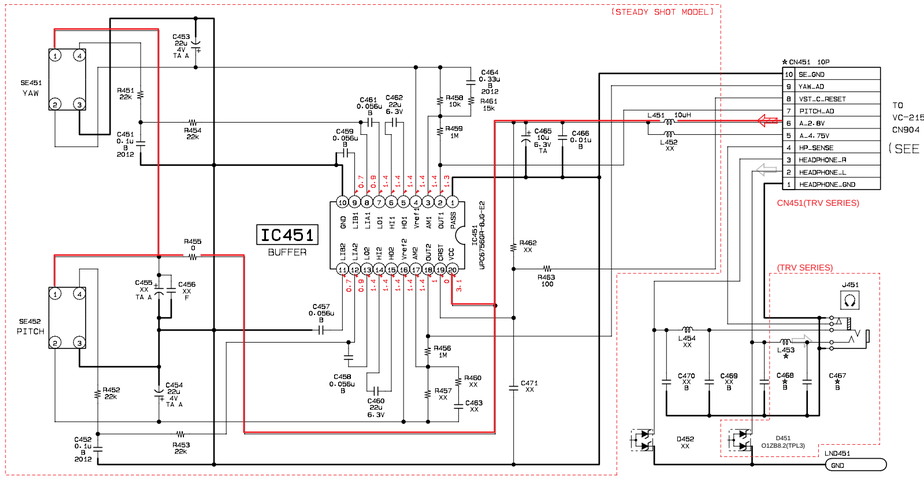

☆MARKED:MOUNT TABLE(IMMUNITY H-PHONE)

TRV46E	A-7073-803-A (AEP,UK,EE,NE,RU) SE81(VMM CE)MOUNT	A-7073-810-A (E,HK,AUS,CN) SE81(VMM)MOUNT
C467	0.001u	XX
C468	0.001u	XX
L453	100uH	0uH

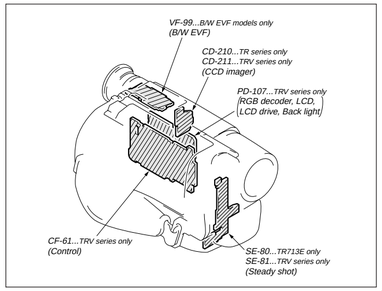
VF-99...B/W EVF models only (B/W EVF)
CD-210...TR series only
CD-211...TRV series only (CCD imager)
PD-107...TRV series only RGB decoder, LCD, LCD drive, Back light)
CF-61...TRV series only (Control)
SE-80...TR713E only
SE-81...TRV series only (Steady shot)

PJ-90/91 (AV OUT) PRINTED WIRING BOARD

– Ref No. PJ-90 BOARD: 4,000 series, PJ-91 BOARD: 9,000 series –

PJ-90/91 BOARD (SIDE B)

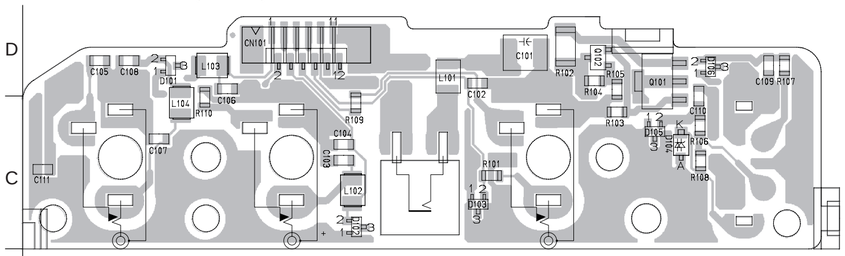

PJ-90/91 BOARD (SIDE A)

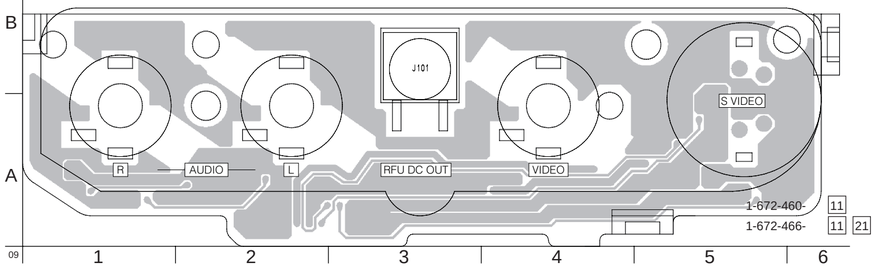

PJ-90/91 BOARD

C101	D-4
C102	D-3
C103	C-3
C104	C-3
C105	D-1
C106	D-2
C107	C-1
C108	D-1
C109	D-5
C110	C-5
C111	C-1
CN101	D-2
D101	D-1
D102	C-3
D103	C-3
D104	C-5
D105	C-5
D106	D-5
J101	B-3
L101	D-3
L102	C-3
L103	D-2
L104	C-2
Q101	D-5
Q102	D-4
R101	C-4
R102	D-4
R103	C-4
R104	D-4
R105	D-4
R106	C-5
R107	D-5
R108	C-5
R109	C-3
R110	C-2

• **For Printed Wiring Boards.**

There are few cases that the part isn't mounted in this model is printed on this diagram.

• Chip diode

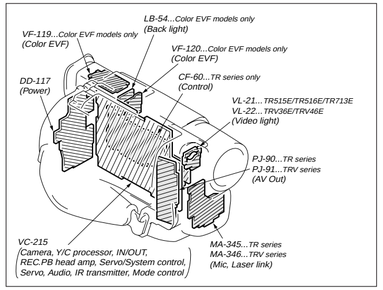

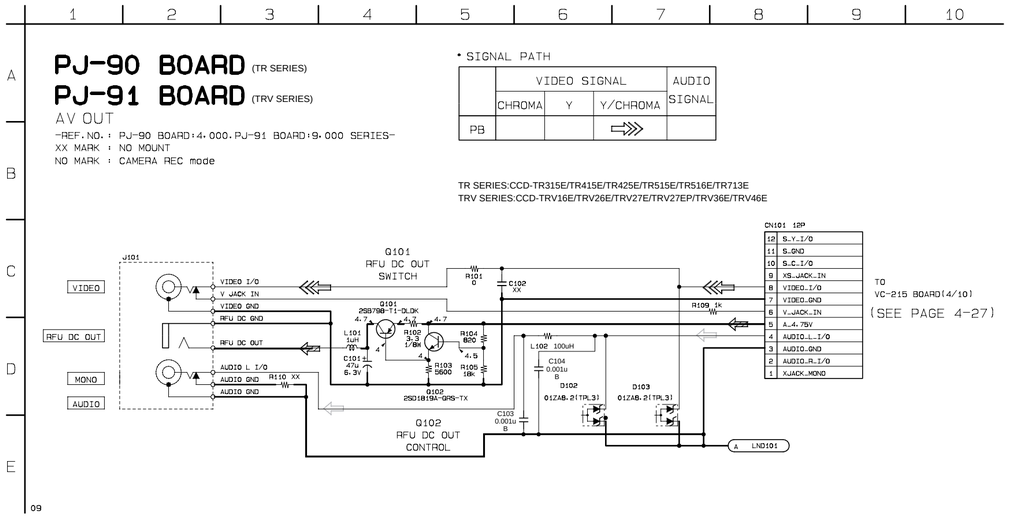

MA-345, 346 (MIC, LASER LINK) PRINTED WIRING BOARD

– Ref No. MA-345 BOARD: 9,000 series, MA-346 BOARD: 9,000 series –

MA-345/346 BOARD (SIDE B)

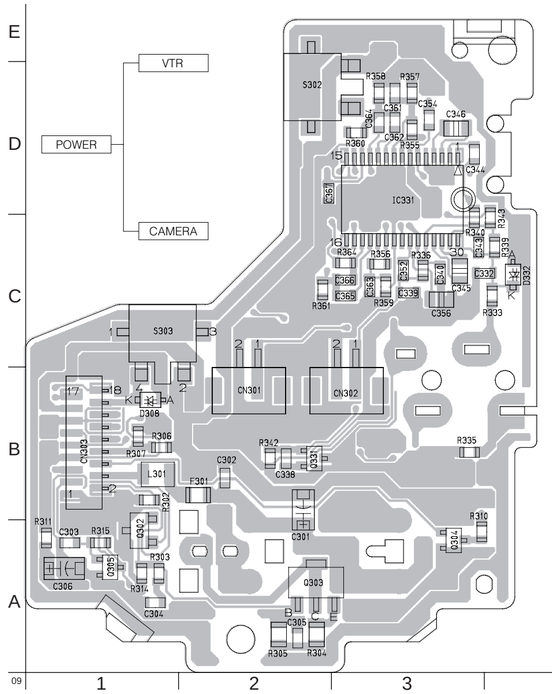

MA-345/346 BOARD (SIDE A)

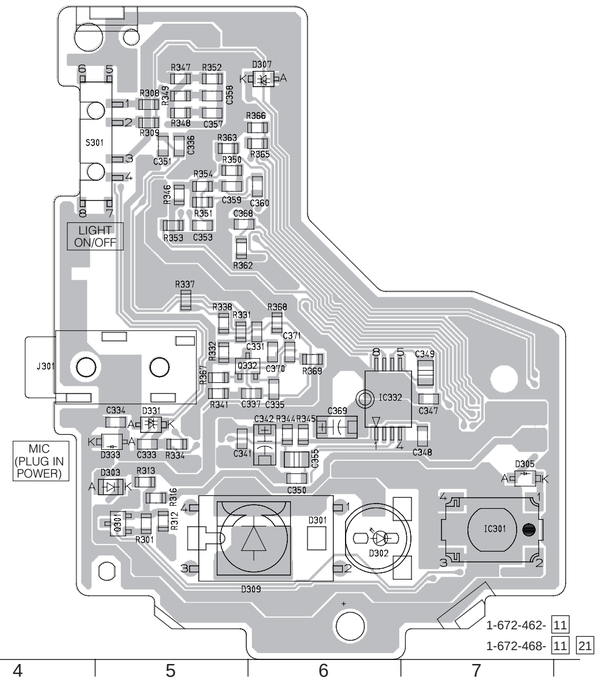

1-672-462- 11
1-672-468- 11 21

• **For Printed Wiring Boards.**

There are few cases that the part isn't mounted in this model is printed on this diagram.

• Chip transistor

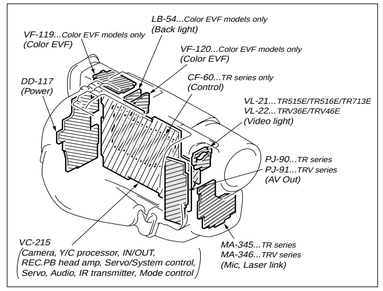
LB-54...Color EVF models only (Back light)
VF-119...Color EVF models only (Color EVF)
VF-120...Color EVF models only (Color EVF)
DD-117 (Power)
CF-60...TR series only (Control)
VL-21...TR515E/TR516E/TR713E
VL-22...TRV36E/TRV46E (Video light)
PJ-90...TR series
PJ-91...TRV series (AV Out)
VC-215 (Camera, Y/C processor, IN/OUT, REC.PB head amp, Servo/System control, Servo, Audio, IR transmitter, Mode control)
MA-345...TR series
MA-346...TRV series (Mic, Laser link)

MA-345/346 BOARD

C801	E-3	C354	D-3	D331	B-5	R309	D-5	R353	C-5		
C301	B-2	C355	B-6	D332	C-4	R310	A-3	R354	D-5		
C302	B-2	C356	C-3	D333	B-5	R311	A-1	R355	D-3		
C303	A-1	C357	D-5			R312	A-5	R356	C-3		
C304	A-1	C358	D-5	F301	B-2	R313	B-5	R357	D-3		
C305	A-2	C359	D-5			R314	A-1	R358	D-3		
C306	A-1	C360	D-6	IC301	A-7	R315	A-1	R359	C-3		
C318	B-7	C361	D-3	IC331	D-3	R316	B-5	R360	D-3		
C331	C-6	C362	D-3	IC332	B-6	R331	C-5	R361	C-2		
C332	C-4	C363	C-3			R332	C-5	R362	C-5		
C333	B-5	C364	D-3	J301	B-4	R333	C-4	R363	D-5		
C334	B-5	C365	C-3			R334	B-5	R364	C-3		
C335	B-6	C366	C-3	L301	B-1	R335	B-3	R365	D-6		
C336	D-5	C367	D-2			R336	C-3	R366	D-6		
C337	B-6	C368	C-5	Q301	A-5	R337	C-5	R367	B-5		
C338	B-2	C369	B-6	Q302	A-1	R338	C-5	R368	C-6		
C339	C-3	C370	C-6	Q303	A-2	R339	C-4	R369	B-6		
C340	C-3	C371	C-6	Q304	A-3	R340	C-3				
C341	B-5			Q305	A-1	R341	B-5	S301	D-4		
C342	B-6	CN301	B-2	Q331	B-2	R342	B-2	S302	D-2		
C343	C-3	CN302	B-3	Q332	B-5	R343	C-4	S303	C-1		
C344	D-3	CN303	B-1			R344	B-6				
C345	C-3			R301	A-5	R345	B-6				
C346	D-3	D301	A-6	R302	B-1	R346	D-5				
C347	B-7	D302	A-6	R303	A-1	R347	D-5				
C349	B-7	D303	B-5	R304	A-2	R348	D-5				
C350	B-6	D305	B-7	R305	A-2	R349	D-5				
C351	D-5	D307	D-6	R306	B-1	R350	D-5				
C352	C-3	D308	B-1	R307	B-1	R351	C-5				
C353	C-5	D309	A-6	R308	D-5	R352	D-5				

MA-345 BOARD (TR SERIES)
MA-346 BOARD (TRV SERIES)

MIC, LASER LINK

-REF. NO. : MA-345 BOARD:9.000
MA-346 BOARD:4.000 SERIES-
NO MARK : CAMERA REC mode
[ ] : LASER LINK ON
XX MARK : NO MOUNT

TR SERIES : CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
REMOTE COMMANDER MODEL : CCD-TR425E/TR515E/TR516E/TR713E/
TRV27E/TRV27EP/TRV36E/TRV46E
IR TRANSMITTER MODEL : CCD-TR713E/TRV46E
LASER LINK MODEL : CCD-TR713E/TRV46E

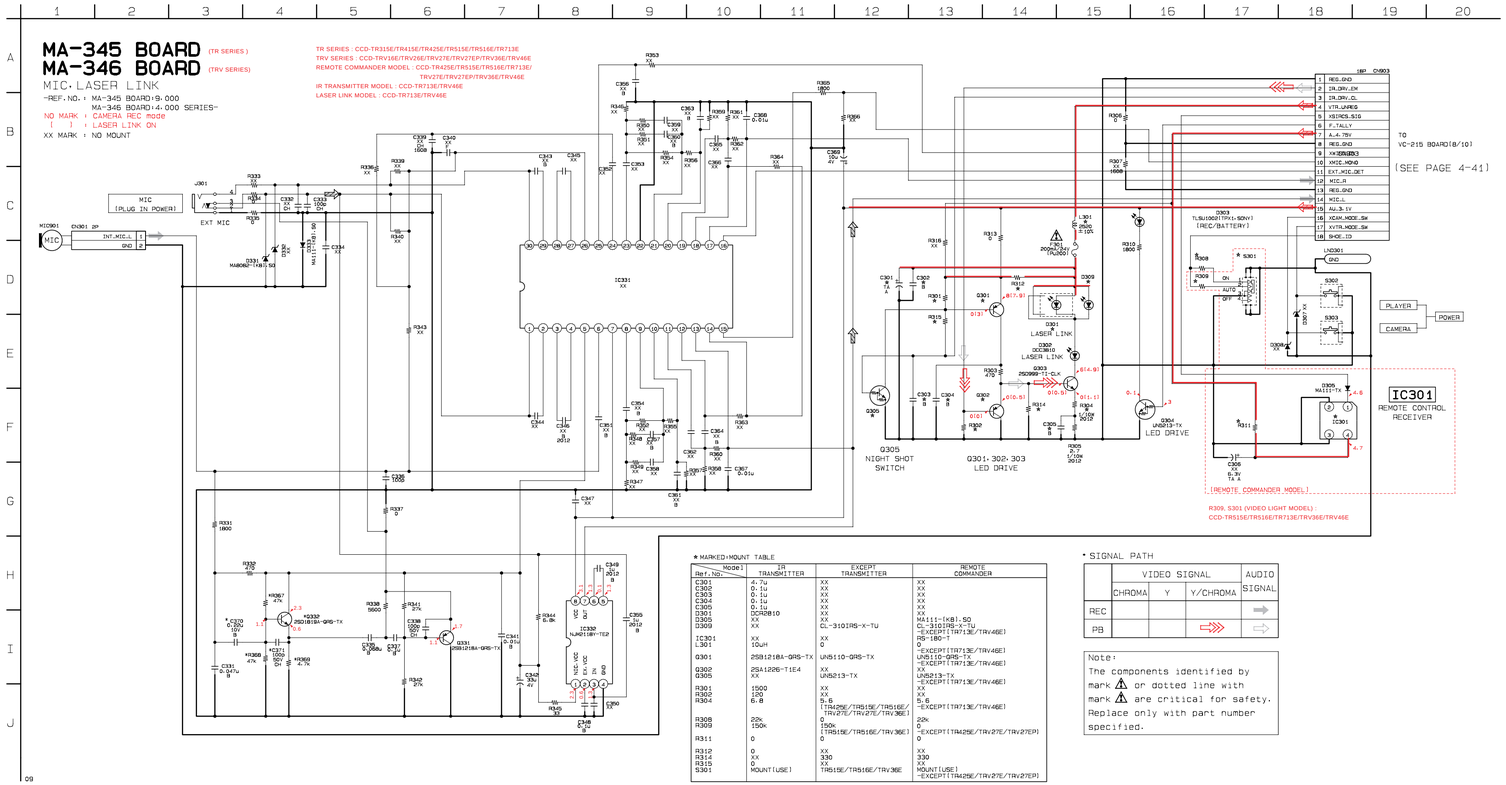

★ MARKED=MOUNT TABLE

Model / Ref.No.	IR TRANSMITTER	EXCEPT TRANSMITTER	REMOTE COMMANDER
C301	4.7u	XX	XX
C302	0.1u	XX	XX
C303	0.1u	XX	XX
C304	0.1u	XX	XX
C305	0.1u	XX	XX
D301	DCR2B10	XX	XX
D305	XX	XX	MA111-(KB),SO
D309	XX	XX	CL-310IRS-X-TU
IC301	XX	XX	-EXCEPT(TR713E/TRV46E)
L301	10uH	0	TC-180-T 0 -EXCEPT(TR713E/TRV46E)
Q301	2SB1218A-QRS-TX	UN5110-QRS-TX	UN5110-QRS-TX -EXCEPT(TR713E/TRV46E)
Q302	2SA1226-T1E4	XX	XX
Q305	XX	UN5213-TX	UN5213-TX -EXCEPT(TR713E/TRV46E)
R301	1500	XX	XX
R302	100	XX	XX
R304	6.8	5.6 (TR425E/TR515E/TR516E/TRV27E/TRV27E/TRV36E)	5.6 -EXCEPT(TR713E/TRV46E)
R308	22k	0	22k
R309	150k	150k (TR515E/TR516E/TRV36E)	0 -EXCEPT(TR425E/TRV27E/TRV27EP)
R311	0	0	0
R312	0	XX	XX
R314	XX	330	330
R315	0	XX	XX
S301	MOUNT(USE)	TR515E/TR516E/TRV36E	MOUNT(USE) -EXCEPT(TR425E/TRV27E/TRV27EP)

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				⇨
PB			⇨	⇨

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

CF-60 (CONTROL (TR Series)) PRINTED WIRING BOARD

– Ref No. CF-60 BOARD: 4,000 series –

CF-61 BOARD

BH001	B-9
C001	B-6
C002	A-6
CN001	C-4
CN002	A-5
CN005	C-7
CN006	B-7
CN007	C-5
CN009	B-6
CN010	A-3
D004	A-13
D005	B-7
D006	A-7
D007	A-14
D008	A-6
D009	B-1
D010	C-3
D012	A-4
Q002	C-1
R001	B-1
R002	B-6
R005	A-13
R007	C-1
R013	A-13
R222	B-13
R023	B-14
R029	C-2
R031	B-4
R032	C-11
R036	C-2
R038	B-4
R039	C-2
R041	A-4
R051	C-5
R052	C-5
R053	A-4
R054	A-12
S006	A-13
S010	B-14
S015	A-15
S022	C-11

CF-60 BOARD (SIDE B)

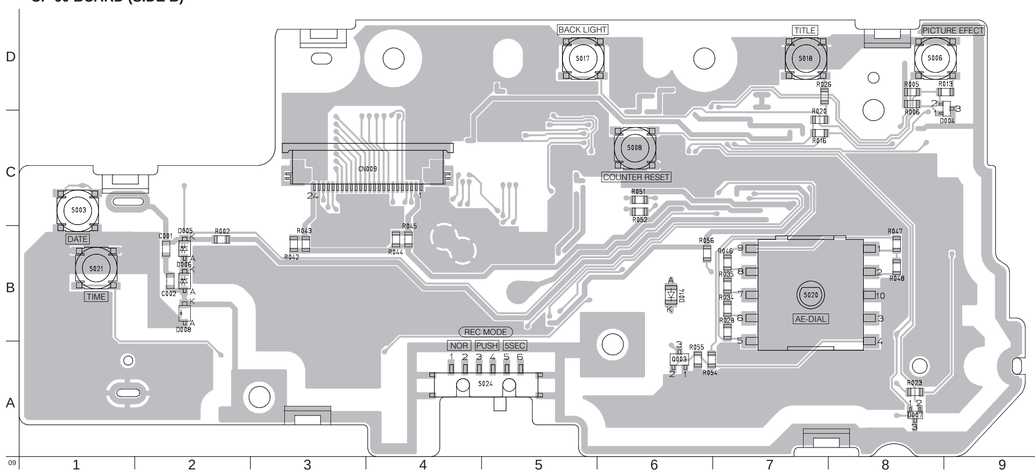

CF-60 BOARD (SIDE A)

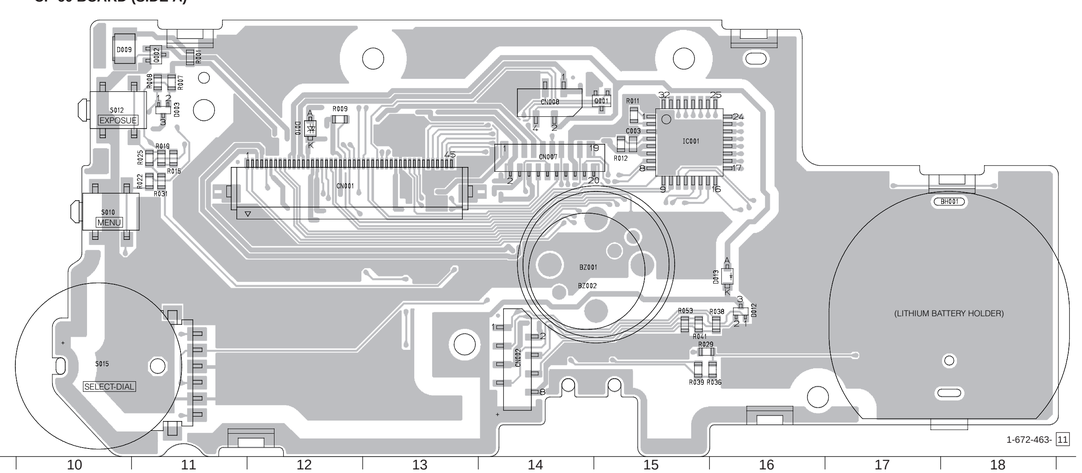

1-672-463-11

- **For Printed Wiring Boards.**

There are few cases that the part isn't mounted in this model is printed on this diagram.

- Chip transistor

Chip diode

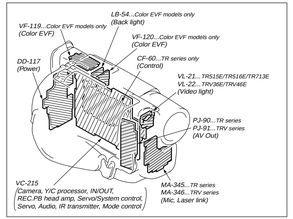
LB-54...Color EVF models only (Back light)
VF-119...Color EVF models only (Color EVF)
VF-120...Color EVF models only (Color EVF)
DD-117 (Power)
CF-60...TR series only (Control)
VL-21...TRS15E/TRS16E/TR713E
VL-22...TRV36E/TRV46E (Video light)
PJ-90...TR series
PJ-91...TRV series (AV Out)
VC-215 (Camera, Y/C processor, IN/OUT, REC PB head amp, Servo/System control, Servo, Audio, IR transmitter, Mode control)
MA-345...TR series
MA-346...TRV series (Mic, Laser link)

CF-60 BOARD (TR SERIES)

-REF.NO. : 4.000 SERIES-
XX MARK : NO MOUNT

Q001(CCD- TR315E/TR415E/TR425E/TR515E/TR713E)

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	⇨	⇨		
PB	⇨	⇨		⇨

TR SERIES:CCD- TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)
IR TRANSMITTER MODEL:CCD-TR713E/TRV46E

CONTROL SWITCH BLOCK(MF-8500)

RV001 20K/20K
FADER
S002
FAR
NEAR
S001
FOCUS
INFINITY
MANUAL
AUTO

CN001 8P
1 FADER
2 REG_GND
3 FOCUS_A
4 FOCUS_B
5 D_3.1V
6 INFINITY
7 AUTO
8 REG_GND

CN002 8P
FADER 1
REG_GND 2
FOCUS_A 3
FOCUS_B 4
D_3.1V 5
INFINITY 6
AUTO 7
REG_GND 8

• CONTROL SWITCH BLOCK(MF-8500) is replaced as a block, so that this PRINTED WIRING BOARD is omitted.

CN001 45P

BW_EVF_Y	45	BW_EVF_Y
LCD_Y	44	LCD_Y
REG_GND	43	
LCD_U	42	LCD_U
REG_GND	41	
LCD_Y	40	LCD_Y
REG_GND	39	
LCD_HD	38	LCD_HD
LCD_VD	37	LCD_VD
XCS_EVF_D/A	36	XCS_EVF_D/A
XCS_LCD_DA	35	XCS_LCD_D4
REG_GND	34	
SP_+/BEEP_SIG	33	
SP_-	32	
DIAL_A	31	
DIAL_B	30	
TALLY_LED	29	
XCS_LCD_DRIVER	28	XCS_LCD
LCD_COM/XDATA	27	COM/XDATA
KEY_AD2	26	
KEY_AD3	25	
KEY_AD4	24	
KEY_AD5	23	
KEY_AD6	22	
D_3.1V	21	
XOSD_SCK	20	XOSD_SCK
OSD_SO	19	OSD_SO
FOCUS_A_AD	18	FOCUS_A
FOCUS_B_AD	17	FOCUS_B
DISP_BL	16	
BATT_LI_3V	15	
CHARGE_LED_ON	14	
EVF_4.75V	13	EVF_4.75V
EVF_4.75V	12	
EVF_BL_GND	11	
EVF_BL_GND	10	
XVC_SCK	9	XVC_SCK
VC_SO	8	VC_SO
VC_SI	7	VC_SI
EVF_BL_4.75V/CAM_DD	6	EVF_BL_4.75V
PANEL_HOLD	5	LCD_HOLD
A_4.75V	4	A_4.75V
EVF_13.5V	3	EVF_13.5V
VCD	2	VCD
EVF_VG	1	EVF_VG

TO VC-215 BOARD(10/10) CN911 {SEE PAGE 4-51}

IC001
IC201 BU972PK-E2
OSC1
OSC2
VSS
VC
VLCD
VDD
SCK
SO
XCS
C/D
COM1
COM2
COM3
COM4
SEG1
SEG2

SELECT DIAL
S015
AE_DIAL
S020
PICTURE EFFECT
S006
MENU
S010
TIME
S021
EXPOSURE
S012
BACK LIGHT
S017
DATE
S003
COUNTER RESET
S008
TITLE
S018
PROGRAM AE
REC MODE
NOR
PUSH
SSEC
S024
AUTO_LOCK
MANUAL
MANUAL_HOLD

D010 MA8082-(K8).SO
D012 XX
D003 XX
D004 XX
D007 XX
D005 MA8082-(K8).SO
D006 MA8082-(K8).SO
D008 MA111-(K8).SO
BZ001 XX
BZ002
BZ002(TR315E/TR516E)
B-001 LITHIUM BATTERY HOLDER
LN0001 CH GND
LN0002 CH GND

*CN007 20P

1	EVF_BL_4.75V
2	EVF_BL_GND
3	EVF_BL_GND
4	EVF_13.5V
5	EVF_4.75/3.1V
6	A_4.75V
7	D_3.1V
8	EVF_XHD
9	EVF_R-Y
10	EVF_Y
11	EVF_B-Y
12	EVF_XVD
13	EVF_VG
14	VCD
15	EVF_GND
16	EVF_GND
17	VC_SI
18	XVC_SCK
19	VC_SO
20	XCS_EVF_D/A

TO VF-119 BOARD CN5401 {SEE PAGE 4-96}

*CN009 24P

24	DISP_BL
23	REG_GND
22	COM1
21	COM2
20	SEG2
19	SEG3
18	SEG4
17	SEG5
16	SEG6
15	SEG7
14	SEG8
13	SEG9
12	SEG10
11	SEG11
10	SEG12
9	SEG13
8	SEG14
7	SEG1
6	SEG16
5	SEG15
4	COM4
3	COM3
2	DISP_BL
1	REG_GND

TO VF-119 BOARD CN5401 {SEE PAGE 4-96}

*CN008 4P

1	EVF_4.75V
2	EVF_GND
3	BW_EVF_Y
4	XTALLY_LED

TO VF-99 BOARD CN901 {SEE PAGE 4-93}

CN008(CCD- TR315E/TR415E/TR425E/TR515E/TR713E)
CN007(CCD- TR516E)

CF-61 BOARD (TRV SERIES)

CONTROL

-REF.NO. : 9.000 SERIES-
XX MARK : NO MOUNT

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO
	CHROMA	Y	Y/CHROMA	SIGNAL
REC	⇨	⇨		
PB	⇨	⇨		⇨

TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E
IR TRANSMITTER MODEL : CCD-TR713E/TRV46E

TO VC-215 BOARD(10/10) CN911 (SEE PAGE 4-51)

CN001 45P

45	BW_EVF_Y
44	LCD_Y
43	REG_GND
42	LCD_U
41	REG_GND
40	LCD_V
39	REG_GND
38	LCD_HD
37	LCD_VD
36	XCS_EVF_D/A
35	XCS_LCD_DA
34	REG_GND
33	SP_+/BEEP_SIG
32	SP_-
31	DIAL_A
30	DIAL_B
29	TALLY_LED
28	XCS_LCD_DRIVER
27	LCD_COM/XDATA
26	KEY_AD2
25	KEY_AD3
24	KEY_AD4
23	KEY_AD5
22	KEY_AD6
21	D_3.1V
20	XOSD_SCK
19	OSD_SO
18	FOCUS_A_AD
17	FOCUS_B_AD
16	DISP_BL
15	BATT_LI_3V
14	CHARGE_LED_ON
13	EVF_4.75V
12	EVF_4.75V
11	EVF_BL_GND
10	EVF_BL_GND
9	XVC_SCK
8	VC_SO
7	VC_SI
6	EVF_BL_4.75V/CAM_D
5	PANEL_HOLD
4	A_4.75V
3	EVF_13.5V
2	VCO
1	EVF_VG

Q001 TALLY LED DRIVE

D001 UN5213-TX

CN005 11P

1	AD6
2	XCS_PANEL_DA
3	VC_SO
4	XVC_SCK
5	REG_GND
6	PANEL_XVD
7	PANEL_HOLD
8	REG_GND
9	PANEL_U
10	PANEL_V
11	PANEL_Y

TO PD-107 BOARD(4/4) CN5804 (SEE PAGE 4-88)

CN006 6P

1	XCS_LCD_DRIVER
2	LCD_COM/XDATA
3	OSD_SO
4	XOSD_SCK
5	DISP_LCD_VDD
6	DISP_BL

TO PD-107 BOARD(4/4) CN5803 (SEE PAGE 4-88)

CN007 XX 20P

20	EVF_BL_4.75V
19	EVF_BL_GND
18	EVF_BL_GND
17	EVF_13.5V
16	EVF_4.75/3.1V
15	A_4.75V
14	D_3.1V
13	EVF_XHD
12	EVF_R-Y
11	EVF_Y
10	EVF_B-Y
9	EVF_XVD
8	EVF_VG
7	VCO
6	EVF_GND
5	EVF_GND
4	VC_SI
3	XVC_SCK
2	VC_SO
1	XCS_EVF_D/A

TO VF-119 BOARD CN5401 (SEE PAGE 4-96)

CN008 4P

1	EVF_4.75V
2	EVF_GND
3	BW_EVF_Y
4	XTALLY_LED

TO VF-99 BOARD CN901 (SEE PAGE 4-93)

S015 SELECT DIAL

REC MODE: 5SEC | PUSH | NOR

S024

D013 XX

PICTURE EFFECT (R013 1200, S006) | MENU (R022 1500, S010) | TIME (R029 3900, S021) | R036 8200 | R039 27K

EXPOSURE (R015 1200, S012) | BACK LIGHT (R025 2000, R031 3900, S017) | R038 8200 | R041 27K | R503 XX

DATE (R016 1200, S003) | COUNTER RESET (R020 1500, S008) | END SEARCH (R026 2000, S013) | TITLE (R030 3900, S018) | DISPLAY (R033 8200, S022)

PROGRAM AE (S004)

R005 10K AD3 | R006 10K AD3(ESK) | R007 10K AD4 | R008 10K AD5 | R009 10K AD6

CONTROL SWITCH BLOCK(MF-8500)

RV001 20K/20K | FADER | S002 | FAR | NEAR | S001 | FOCUS | INFINITY | MANUAL | AUTO

CN001 8P

1	FADER
2	REG_GND
3	FOCUS_A
4	FOCUS_B
5	D_3.1V
6	INFINITY
7	AUTO
8	REG_GND

CN002 8P

1	FADER
2	REG_GND
3	FOCUS_A
4	FOCUS_B
5	D_3.1V
6	INFINITY
7	AUTO
8	REG_GND

CN003 2P

1	SP(+)
2	SP(-)

SP901 SPEAKER

• CONTROL SWITCH BLOCK(MF-8500) is replaced as a block, so that this PRINTED WIRING BOARD is omitted.

LN0001 CH GND | LN0002 CH GND

D012 XX | D001 01ZA8.2(TPL3) | D003 XX | D004 XX | D007 XX

C001 XX | C002 XX | D005 MA8082-(K8).SO | D006 MA8082-(K8).SO | D008 MA111-(K8).SO

BH001 LITHIUM BATTERY HOLDER

CF-61 (CONTROL) (TRV Series) PRINTED WIRING BOARD

– Ref No. CF-61 BOARD: 9,000 series –

CF-61 BOARD (SIDE B)

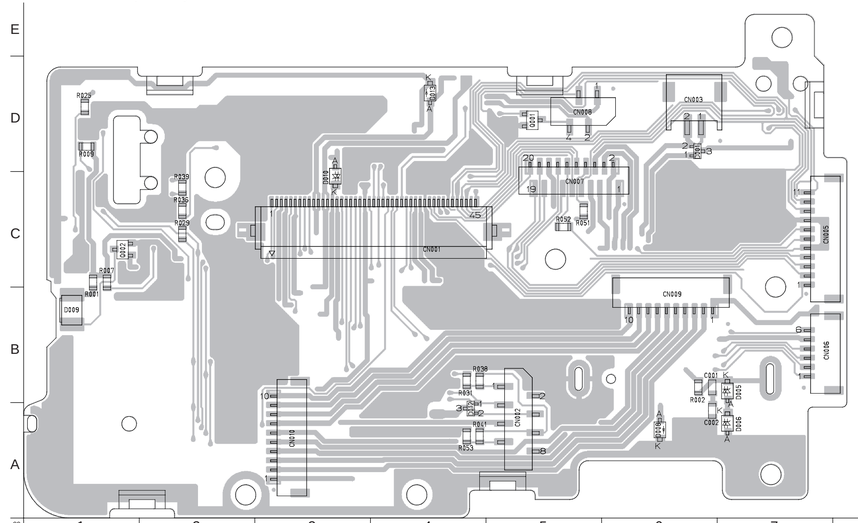
E
D
C
B
A
09
1
2
3
4
5
6
7
8
CN021
CN019
CN007
CN008
CN013
CN005
CN006
CN010
CN012
CN016
D009
R229
R230
R228
R227
R226
R225
R224
R223
R222
R221
R220
R219
R218
R217
R216
R215
R214
R213
R212
R211
R210
R209
R208
R207
R206
R205
R204
R203
R202
R201
R200
R199
R198
R197
R196
R195
R194
R193
R192
R191
R190
R189
R188
R187
R186
R185
R184
R183
R182
R181
R180
R179
R178
R177
R176
R175
R174
R173
R172
R171
R170
R169
R168
R167
R166
R165
R164
R163
R162
R161
R160
R159
R158
R157
R156
R155
R154
R153
R152
R151
R150
R149
R148
R147
R146
R145
R144
R143
R142
R141
R140
R139
R138
R137
R136
R135
R134
R133
R132
R131
R130
R129
R128
R127
R126
R125
R124
R123
R122
R121
R120
R119
R118
R117
R116
R115
R114
R113
R112
R111
R110
R109
R108
R107
R106
R105
R104
R103
R102
R101
R100
R099
R098
R097
R096
R095
R094
R093
R092
R091
R090
R089
R088
R087
R086
R085
R084
R083
R082
R081
R080
R079
R078
R077
R076
R075
R074
R073
R072
R071
R070
R069
R068
R067
R066
R065
R064
R063
R062
R061
R060
R059
R058
R057
R056
R055
R054
R053
R052
R051
R050
R049
R048
R047
R046
R045
R044
R043
R042
R041
R040
R039
R038
R037
R036
R035
R034
R033
R032
R031
R030
R029
R028
R027
R026
R025
R024
R023
R022
R021
R020
R019
R018
R017
R016
R015
R014
R013
R012
R011
R010
R009
R008
R007
R006
R005
R004
R003
R002
R001
C001
C002
C003
C004
C005
C006
C007
C008
C009
C010
C011
C012
C013
C014
C015
C016
C017
C018
C019
C020
C021
C022
C023
C024
C025
C026
C027
C028
C029
C030
C031
C032
C033
C034
C035
C036
C037
C038
C039
C040

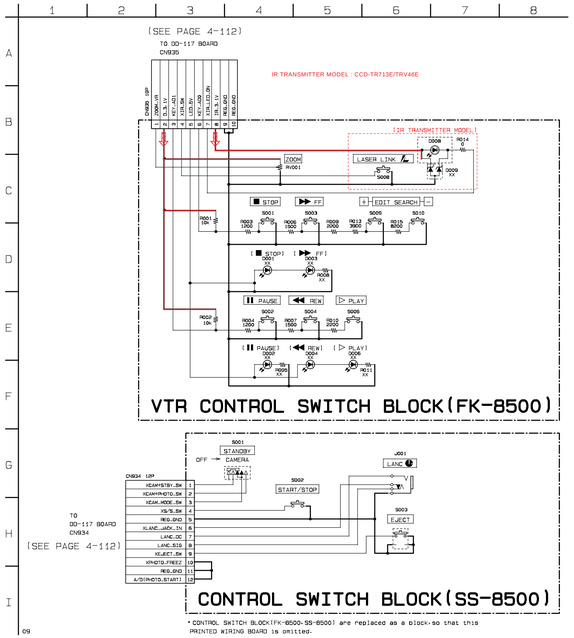

* CONTROL SWITCH BLOCK(FK-8500/SS-8500) are replaced as a block-so that this PRINTED WIRING BOARD is omitted.

CONTROL SWITCH BLOCK, RGB DECODER, LCD DRIVE, BACK LIGHT, LCD
FK-8500, SS-8500 PD-107 (TRV Series)

PD-107 (RGB DECODER, LCD DRIVE, BACK LIGHT, LCD (TRV Series)) PRINTED WIRING BOARD

– Ref No. PD-107 BOARD: 10,000 series –

PD-107 BOARD

C5501	B-10	FB5502	A-2	R5608	C-10	R5695	C-9
C5502	B-10	FB5503	A-2	R5610	B-10	R5696	D-10
C5503	C-2	FB5504	A-2	R5612	B-9	R5697	C-11
C5504	A-10	FB5603	A-9	R5613	B-9	R5698	D-9
C5505	A-10			R5615	B-9	R5701	A-5
C5506	B-2	IC5501	B-10	R5616	B-10	R5702	A-5
C5507	A-3	IC5502	C-2	R5617	B-10	R5703	C-4
C5508	B-2	IC5601	C-9	R5619	B-10	R5704	D-4
C5509	C-3	IC5602	C-8	R5620	B-9	R5705	D-4
C5511	C-2	IC5701	C-4	R5621	C-9	R5706	C-4
C5512	C-2	IC5801	A-4	R5622	B-8	R5707	C-4
C5513	C-1			R5623	B-8	R5708	D-4
C5514	C-2	L5501	A-3	R5624	B-9	R5709	C-4
C5515	C-2	L5601	A-2	R5625	C-10	R5710	D-4
C5516	C-2	L5605	C-9	R5626	C-9	R5801	C-1
C5517	C-2	L5701	C-7	R5627	C-10	R5802	C-1
C5518	C-3			R5628	C-10	R5803	A-1
C5519	B-2	Q5501	C-2	R5629	B-8	R5804	A-1
C5520	C-3	Q5601	B-9	R5630	C-9	R5805	A-7
C5601	A-2	Q5602	B-9	R5631	B-9	R5806	A-1
C5602	A-2	Q5605	C-8	R5632	B-10	R5807	B-7
C5603	B-10	Q5606	C-9	R5637	C-10	R5809	B-7
C5604	C-9	Q5607	C-9	R5640	C-9	R5810	B-9
C5605	B-9	Q5608	C-8	R5641	C-3	R5811	A-4
C5607	B-9	Q5701	C-3	R5643	C-9	R5812	A-4
C5608	C-9	Q5702	D-4	R5644	C-9		
C5609	B-10			R5646	C-10	S5801	D-1
C5610	C-9	R5501	B-2	R5647	D-2	S5802	C-1
C5612	C-10	R5502	B-2	R5648	D-10	S5803	B-1
C5616	B-9	R5503	B-2	R5651	D-2	S5804	A-1
C5618	D-9	R5504	B-2	R5652	D-2		
C5619	D-2	R5505	B-2	R5653	D-9	T5701	B-7
C5620	D-10	R5506	B-2	R5654	D-9		
C5621	C-2	R5507	B-2	R5657	D-9		
C5622	C-11	R5508	B-1	R5658	D-9		
C5623	C-2	R5509	B-1	R5659	D-10		
C5624	B-3	R5510	B-3	R5660	D-10		
C5625	B-2	R5511	B-3	R5661	D-10		
C5633	C-9	R5512	B-1	R5663	C-9		
C5701	C-8	R5513	B-2	R5664	D-10		
C5702	C-8	R5516	B-2	R5665	D-10		
C5703	C-3	R5517	B-1	R5666	D-1		
C5704	C-4	R5518	B-1	R5667	D-1		
C5705	C-6	R5519	C-3	R5668	D-1		
C5706	C-4	R5520	C-3	R5669	D-1		
C5801	A-4	R5521	B-2	R5670	D-1		
		R5522	B-2	R5671	D-9		
CN5501	D-9	R5526	C-1	R5672	D-9		
CN5601	D-10	R5527	B-1	R5673	D-1		
CN5701	D-6	R5528	C-3	R5674	D-1		
CN5801	A-8	R5531	C-2	R5676	D-1		
CN5802	A-7	R5532	C-3	R5678	D-9		
CN5803	A-8	R5537	D-8	R5679	D-2		
CN5804	A-10	R5541	D-2	R5680	D-2		
CN5805	A-6	R5542	D-3	R5681	D-2		
		R5544	C-2	R5682	D-1		
D5601	B-10	R5545	B-3	R5683	D-2		
D5603	B-10	R5602	C-2	R5684	D-2		
D5604	C-10	R5603	D-8	R5685	D-3		
D5605	C-9	R5604	D-3	R5686	D-3		
D5701	A-5	R5605	C-1	R5688	C-9		
D5702	A-5	R5606	C-10	R5692	C-9		
D5703	D-5	R5607	A-2	R5693	C-9		
D5704	D-4	R5608	B-9	R5694	C-9		

PD-107 BOARD (SIDE B)

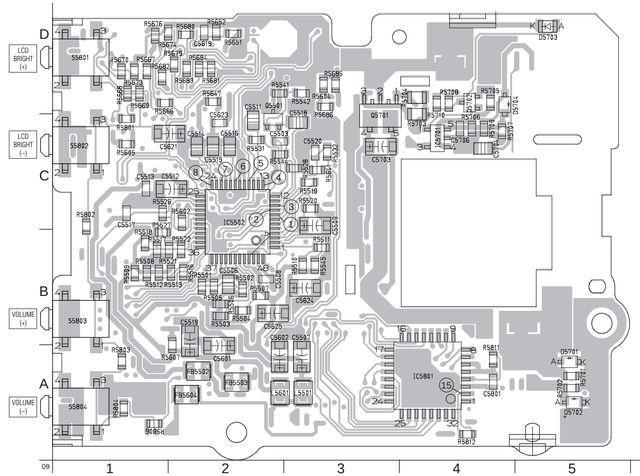

PD-107 BOARD (SIDE A)

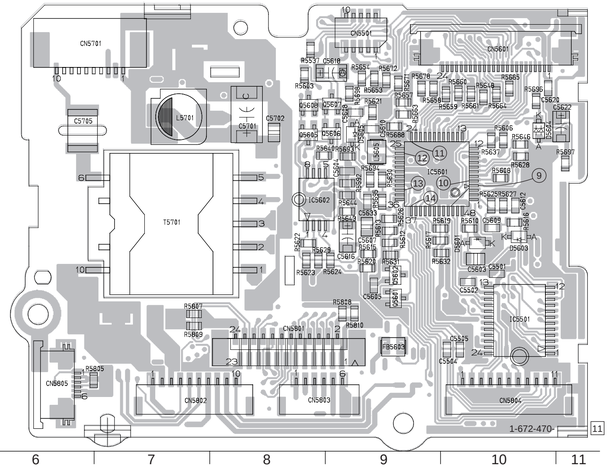

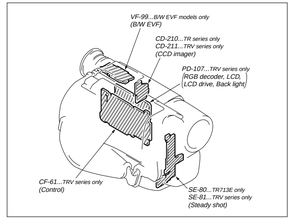
VF-99...B/W EVF models only (B/W EVF)
CD-210...TR series only
CD-211...TRV series only (CCD imager)
PD-107...TRV series only RGB decoder, LCD, LCD drive, Back light
CF-61...TRV series only (Control)
SE-80...TR713E only
SE-81...TRV series only (Steady shot)

- **For Printed Wiring Boards.**
- This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.

There are few cases that the part isn't mounted in this model is printed on this diagram.

- Chip transistor

PD-107 BOARD(1/4)

TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E

(TRV SERIES)

RGB DECODER(RGB BLOCK)

-REF.NO. : 10-000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode

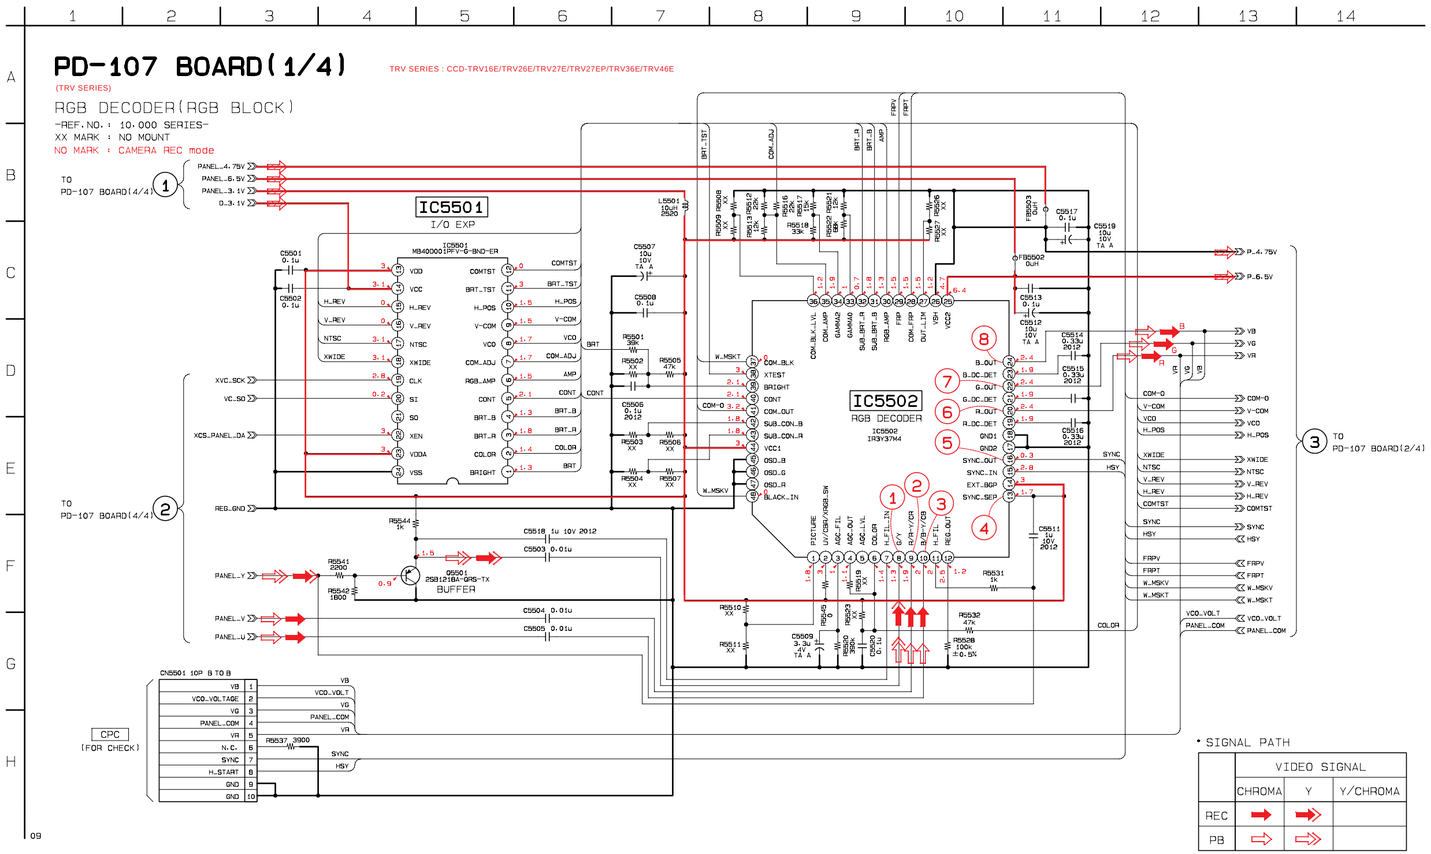

PD-107 BOARD (1/4)
CAMERA REC

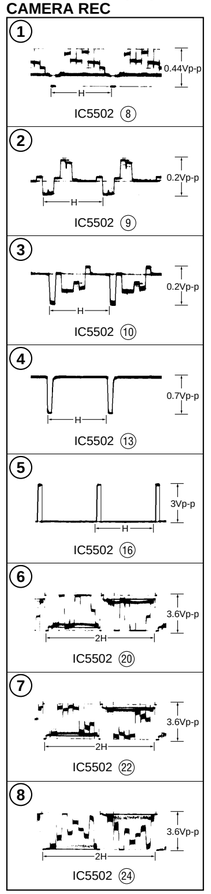

PD-107 BOARD (2/4)
CAMERA REC

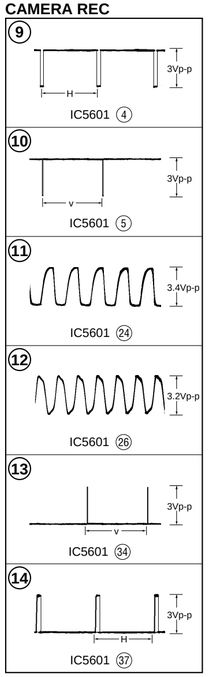

• **For schematic diagrams.**
• Refer to page 4–79 for Printed Wiring Board.

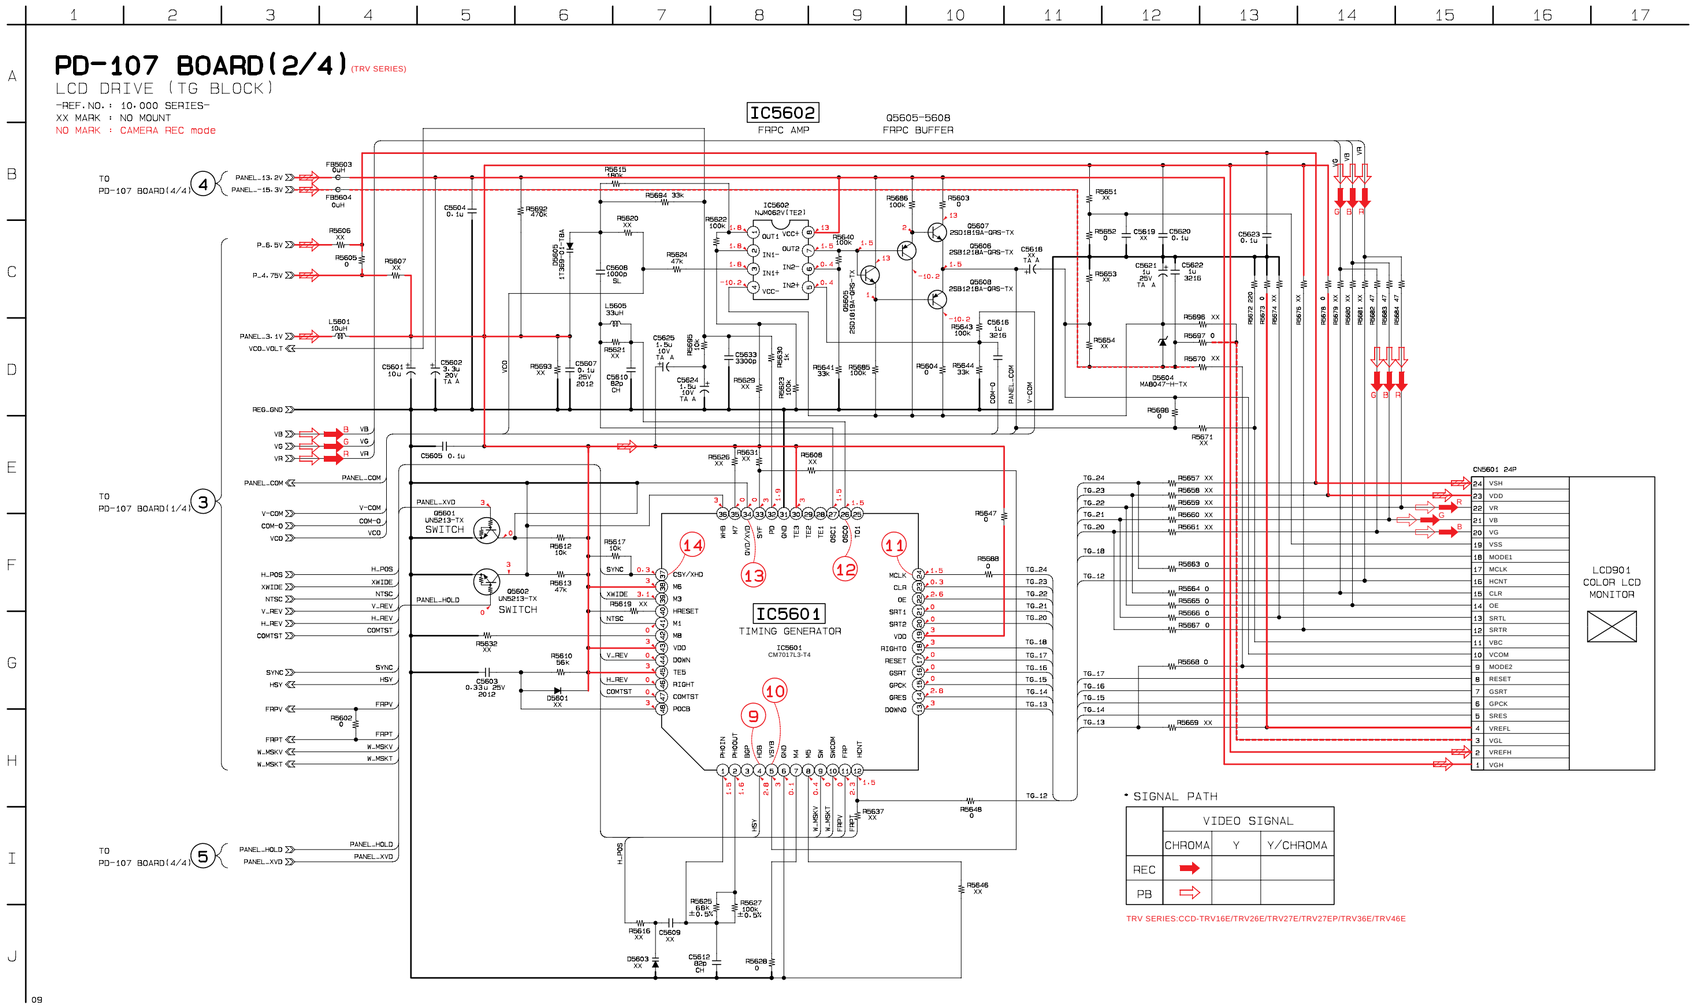

• **For schematic diagrams.**
• Refer to page 4–79 for Printed Wiring Board.

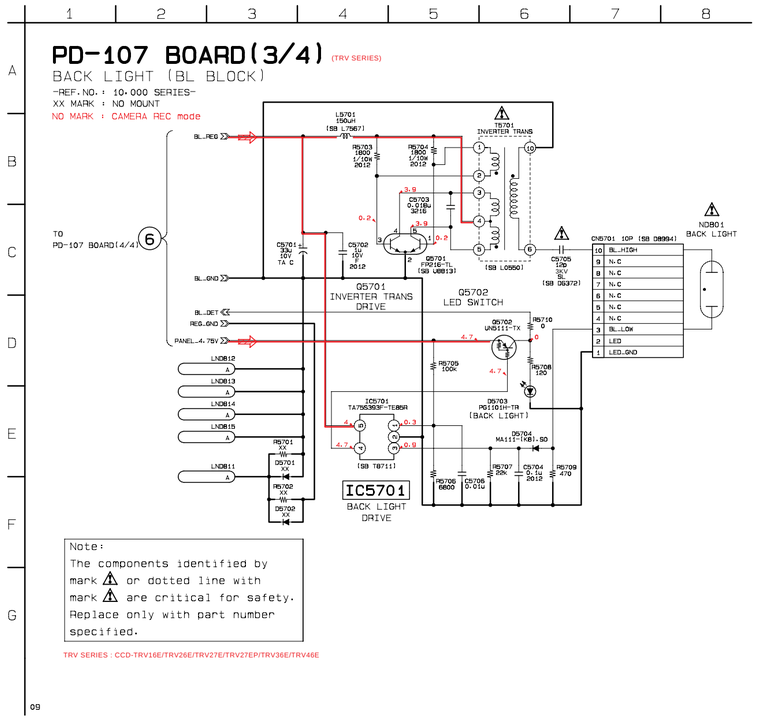
PD-107 BOARD(3/4) (TRV SERIES)
BACK LIGHT (BL BLOCK)
-REF.NO. : 10-000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode
TO PD-107 BOARD(4/4)
Q5701 INVERTER TRANS DRIVE
Q5702 LED SWITCH
IC5701 BACK LIGHT DRIVE
TO INVERTER TRANS
CN5701 10P (SB 08994)
ND801 BACK LIGHT
Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.
TRV SERIES : CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E

• **For schematic diagrams.**
• Refer to page 4–79 for Printed Wiring Board.

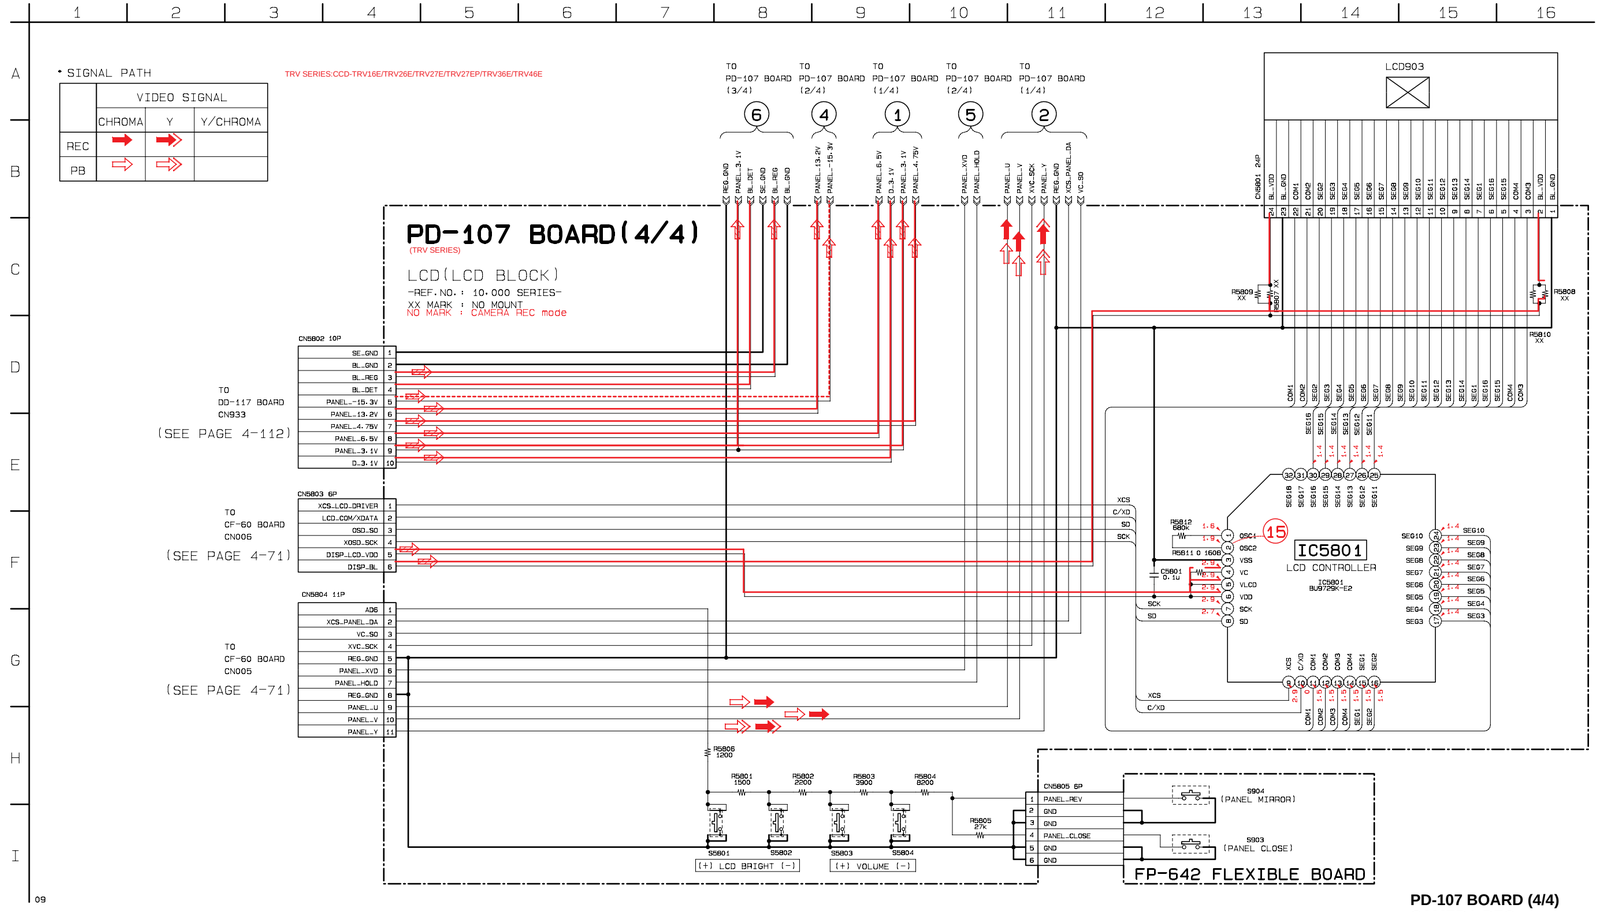

PD-107 BOARD (4/4)
CAMERA REC

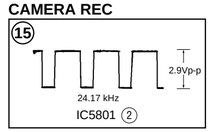

VF-99 (B/W EVF (B/W EVF MODEL)) PRINTED WIRING BOARD

– Ref No. VF-99 BOARD: 10,000 series –

VF-99 BOARD (SIDE B)

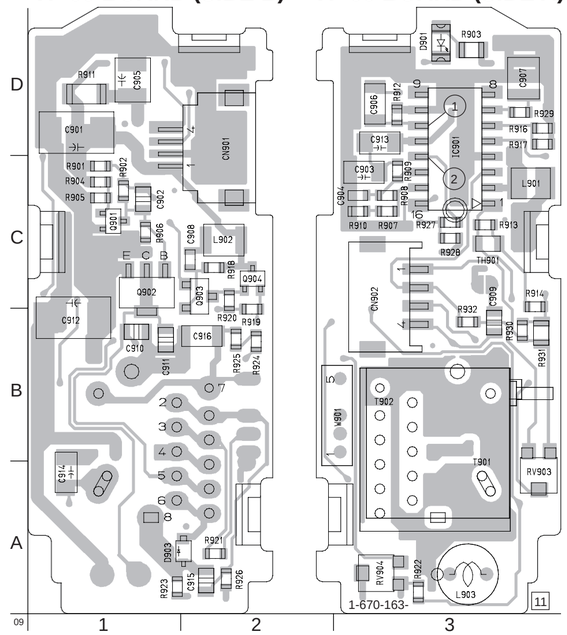

VF-99 BOARD (SIDE A)

VF-99 BOARD (TYPE 2/TYPE 3)

C901	D-1	R919	B-2
C902	C-1	R920	C-2
C903	C-3	R921	A-2
C904	C-3	R922	A-3
C905	D-1	R923	A-1
C906	D-3	R924	B-2
C907	D-3	R925	B-2
C908	C-2	R926	A-2
C909	B-3	R927	C-3
C910	B-1	R928	C-3
C911	B-1	R929	D-3
C912	B-1	R930	B-3
C913	D-3	R931	B-3
C914	A-1	R932	B-3
C915	A-2		
C916	B-2	RV903	A-3
		RV904	A-3
CN901	D-2		
CN902	C-3	T901	B-3
		T902	B-3
D901	D-3		
D903	A-2	TH901	C-3
IC901	D-3	W901	B-3
L901	C-3		
L902	C-2		
L903	A-3		
Q901	C-1		
Q902	C-1		
Q903	C-2		
Q904	C-2		
R901	C-1		
R902	C-1		
R903	D-3		
R904	C-1		
R905	C-1		
R906	C-1		
R907	C-3		
R908	C-3		
R909	C-3		
R910	C-3		
R911	D-1		
R912	D-3		
R913	C-3		
R914	C-3		
R916	D-3		
R917	D-3		
R918	C-2		

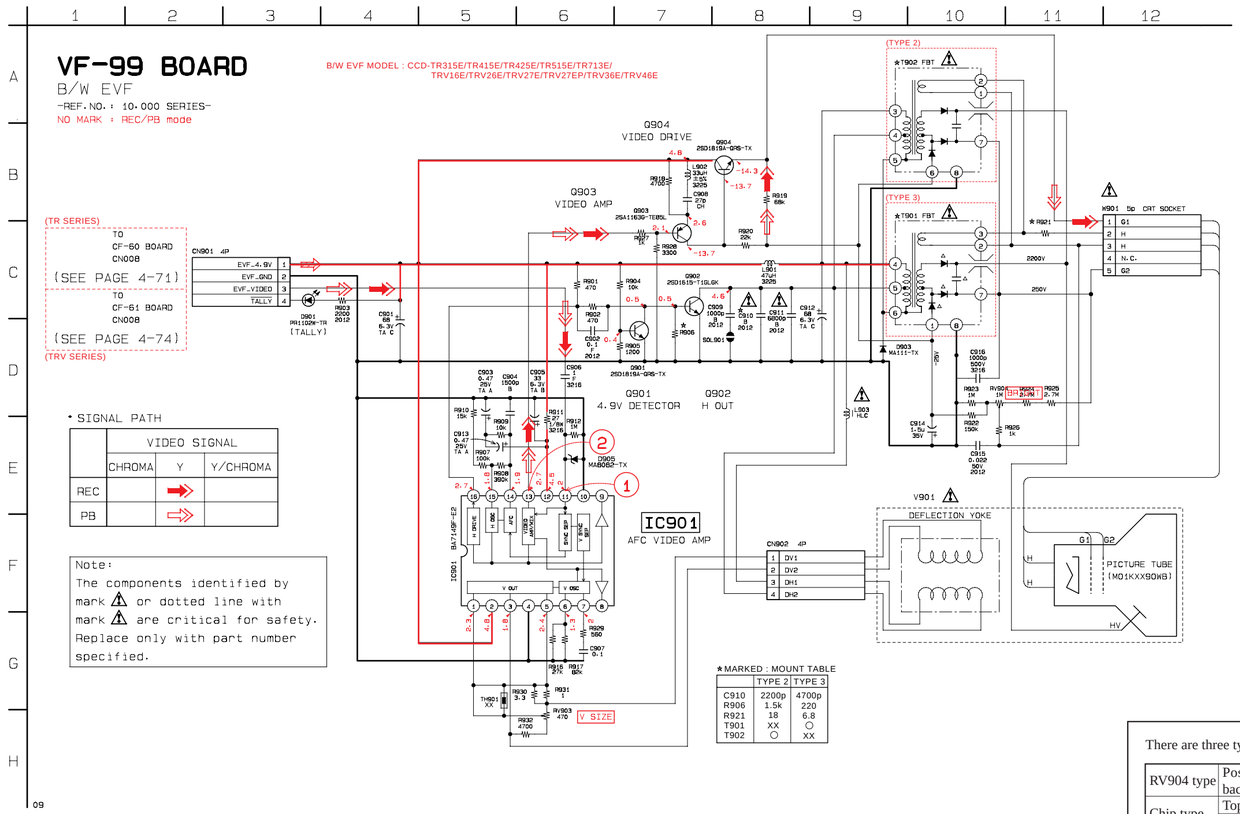

VF-99 BOARD CAMERA REC

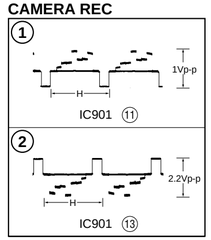

There are three types by combining RV904 and the fly-back transformer.

RV904 type	Position to attach fly-back transformer label	TYPE
Chip type	Top (T902)	TYPE 2
	Side (T901)	TYPE 3

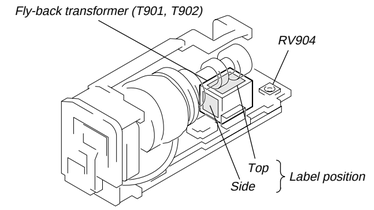

- **For Printed Wiring Boards.**
- This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.

There are few cases that the part isn't mounted in this model is printed on this diagram.

- Chip transistor

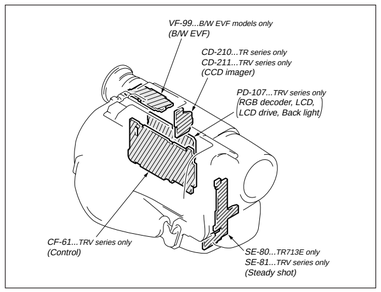
VF-99...B/W EVF models only (B/W EVF)
CD-210...TR series only
CD-211...TRV series only (CCD imager)
PD-107...TRV series only RGB decoder, LCD, LCD drive, Back light)
CF-61...TRV series only (Control)
SE-80...TR713E only
SE-81...TRV series only (Steady shot)

VF-119 (COLOR EVF (COLOR EVF MODEL)) PRINTED WIRING BOARD

– Ref No. VF-119 BOARD: 10,000 series –

VF-119 BOARD (SIDE B)

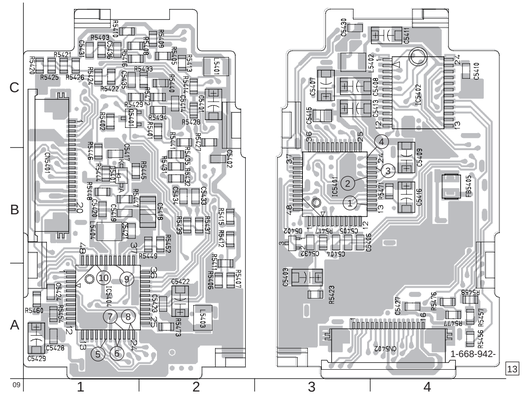

VF-119 BOARD (SIDE A)

- **For Printed Wiring Boards.**
- This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.

There are few cases that the part isn't mounted in this model is printed on this diagram.

- Chip transistor

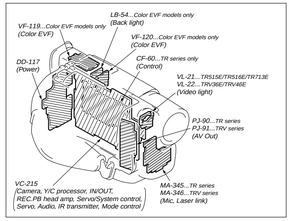
VF-119...Color EVF models only (Color EVF)
LB-54...Color EVF models only (Back light)
VF-120...Color EVF models only (Color EVF)
CF-60...TR series only (Control)
DD-117 (Power)
VL-21...TR515E/TR516E/TR713E
VL-22...TRV36E/TRV46E (Video light)
PJ-90...TR series
PJ-91...TRV series (AV Out)
VC-215 (Camera, Y/C processor, IN/OUT, REC.PB head amp, Servo/System control, Servo, Audio, IR transmitter, Mode control)
MA-345...TR series
MA-346...TRV series (Mic, Laser link)

VF-119 BOARD

C5401	C-2	R5401	C-2
C5402	B-2	R5402	C-1
C5403	A-3	R5403	C-1
C5404	B-3	R5405	C-2
C5405	B-3	R5406	A-2
C5406	B-3	R5407	A-2
C5407	C-3	R5408	C-1
C5408	C-3	R5409	C-2
C5409	B-4	R5410	C-1
C5410	C-4	R5411	A-2
C5411	C-4	R5412	B-2
C5413	C-3	R5413	C-2
C5414	C-2	R5414	C-2
C5415	C-3	R5415	B-2
C5416	B-4	R5416	C-1
C5417	B-1	R5417	B-3
C5418	B-2	R5420	C-1
C5419	B-1	R5421	C-1
C5420	B-1	R5422	C-1
C5421	B-1	R5423	A-3
C5422	A-2	R5424	C-1
C5423	A-2	R5425	C-1
C5424	A-1	R5426	C-1
C5427	A-4	R5427	C-2
C5428	A-1	R5428	C-2
C5429	A-1	R5429	C-1
C5430	C-3	R5431	B-2
C5431	C-1	R5432	B-2
C5432	B-3	R5433	C-2
C5433	B-2	R5434	C-2
C5434	B-2	R5435	B-2
C5435	C-1	R5437	B-2
C5436	C-1	R5439	B-2
		R5440	C-2
CN5401	B-1	R5441	C-2
CN5402	A-4	R5444	B-1
		R5445	B-1
D5401	B-1	R5446	B-1
D5402	B-3	R5447	B-1
		R5448	B-1
FB5405	B-4	R5449	B-2
		R5452	B-2
IC5401	B-3	R5454	A-1
IC5402	C-4	R5456	A-4
IC5404	A-1	R5457	A-4
		R5458	A-4
L5401	C-2	R5460	A-1
L5402	C-3	R5471	B-4
L5403	A-2	R5472	C-2
L5404	B-1	R5473	A-2
		R5476	A-4
Q5401	C-1	R5477	A-4

VF-119 BOARD CAMERA REC

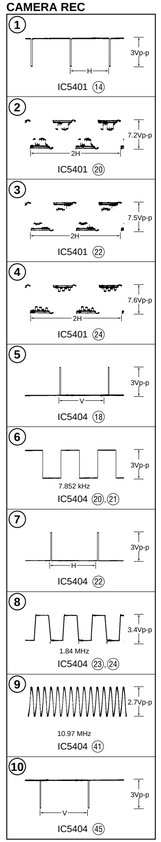

VF-119 BOARD

(COLOR EVF MODEL)

COLOR EVF

-REF.NO. : 10-000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode

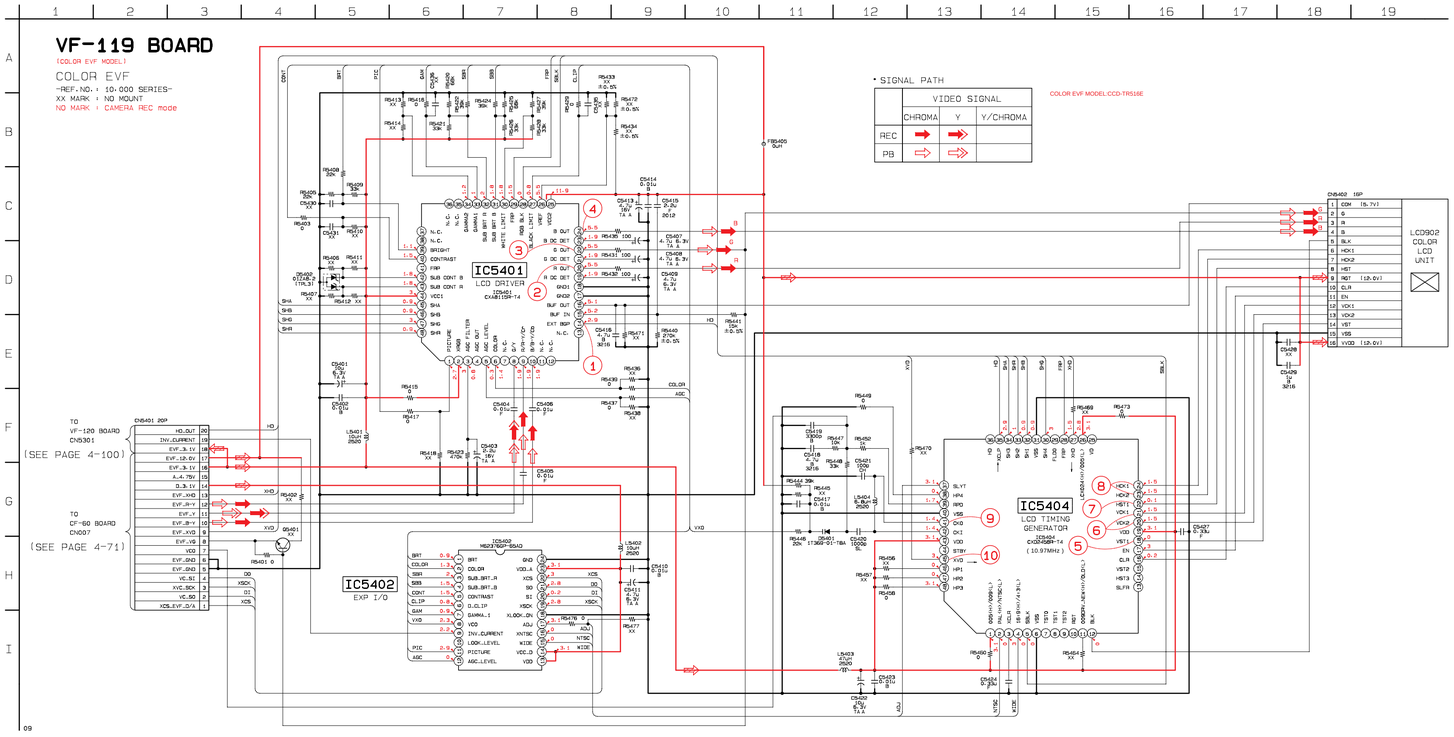

• SIGNAL PATH

COLOR EVF MODEL:CCD-TR516E

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC	→	→	
PB	→	→	

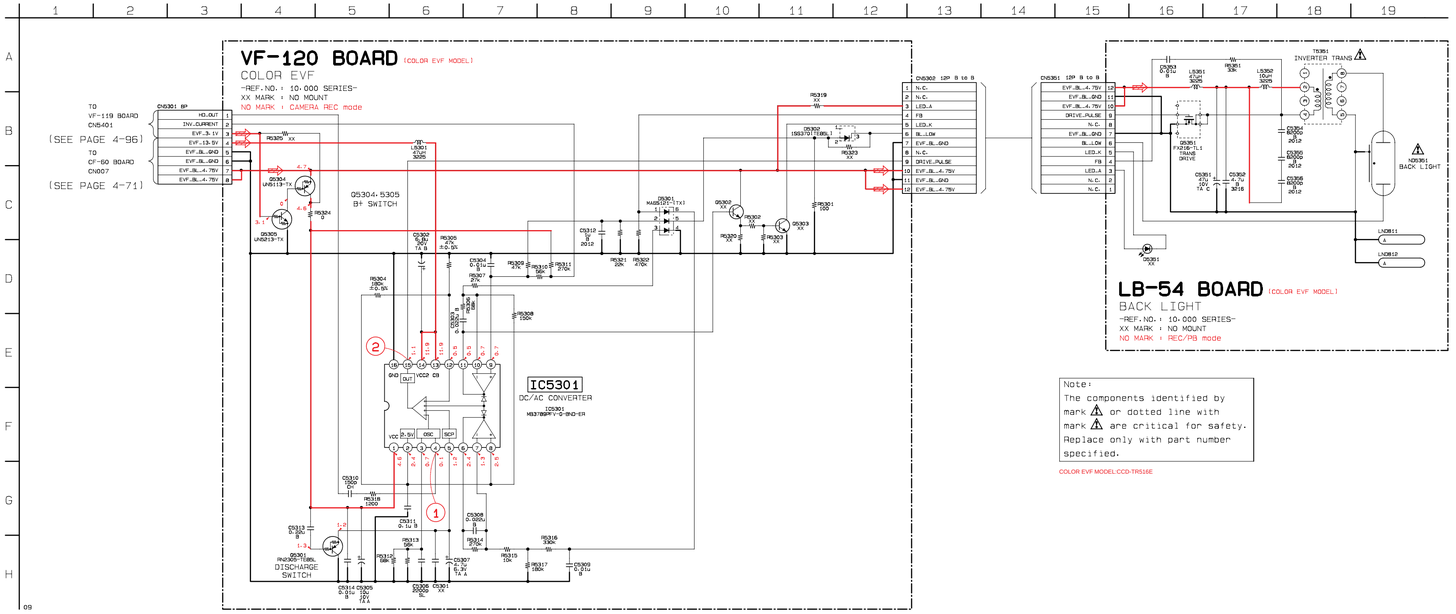
VF-120 BOARD (COLOR EVF MODEL)
COLOR EVF
-REF.NO.: 10-000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode
TO VF-119 BOARD CN5401 (SEE PAGE 4-96)
TO CF-60 BOARD CN907 (SEE PAGE 4-71)
CN5301 8P
CN5302 12P B to B
05304,5305 B+ SWITCH
IC5301
DC/AC CONVERTER
DISCHARGE SWITCH
LB-54 BOARD (COLOR EVF MODEL)
BACK LIGHT
-REF.NO.: 10-000 SERIES-
XX MARK : NO MOUNT
NO MARK : REC/PB mode
CN5351 12P B to B
TR5351 INVERTER TRANS
CN5351 BACK LIGHT
LN5811
LN5812
Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.
COLOR EVF MODEL:CCD-TR516E

VF-120 BOARD
CAMERA REC

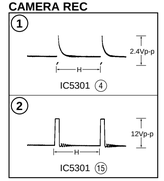

VF-120 (COLOR EVF), LB-54 (BACK LIGHT) (COLOR EVF MODEL) PRINTED WIRING BOARDS

– Ref No. VF-120 BOARD: 10,000 series, LB-54 BOARD: 10,000 series –

VF-120 BOARD (SIDE B)

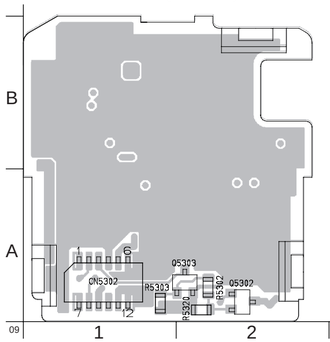

VF-120 BOARD (SIDE A)

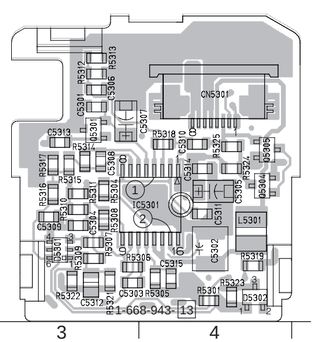

LB-54 BOARD (SIDE B)

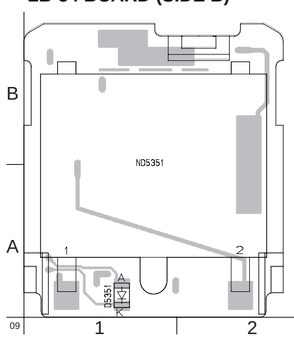

LB-54 BOARD (SIDE A)

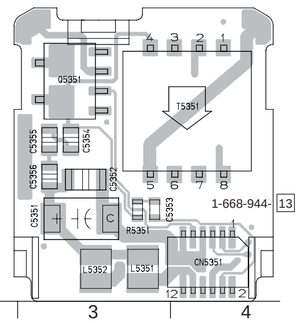

• **For Printed Wiring Boards.**

• This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.

There are few cases that the part isn't mounted in this model is printed on this diagram.

• Chip diode



• Chip transistor

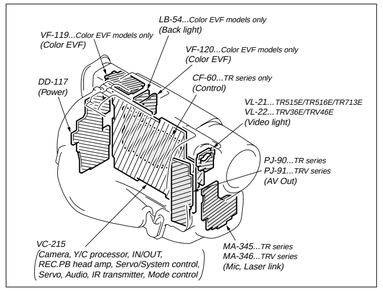

VF-120 BOARD

C5301	B-3	R5301	A-4
C5302	A-4	R5302	A-2
C5303	A-3	R5303	A-1
C5304	A-3	R5304	A-3
C5305	A-4	R5305	A-4
C5306	B-3	R5306	A-3
C5307	B-3	R5307	A-3
C5308	B-3	R5308	A-3
C5309	A-3	R5309	A-3
C5310	B-4	R5310	A-3
C5311	A-4	R5311	A-3
C5312	A-3	R5312	B-3
C5313	B-3	R5313	B-3
C5314	A-4	R5314	B-3
C5315	A-4	R5315	A-3
		R5316	A-3
CN5301	B-4	R5317	B-3
CN5302	A-1	R5318	B-4
		R5319	A-4
D5301	A-3	R5320	A-2
D5302	A-4	R5321	A-3
		R5322	A-3
IC5301	A-4	R5323	A-4
		R5324	A-4
L5301	A-4	R5325	B-4
Q5301	B-3		
Q5302	A-2		
Q5303	A-2		
Q5304	A-4		
Q5305	B-4		

LB-54 BOARD

C5351	A-3
C5352	A-3
C5353	A-3
C5354	B-3
C5355	B-3
C5356	A-3
CN5351	A-4
D5351	A-1
L5351	A-3
L5352	A-3
ND5351	B-1
Q5351	B-3
R5351	A-3
T5351	B-4

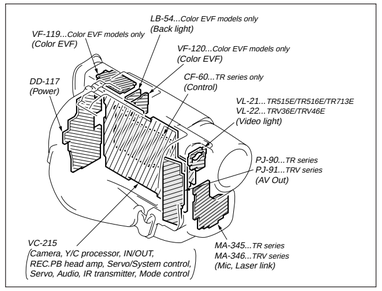

DD-117 (POWER) PRINTED WIRING BOARD

– Ref No. DD-117 BOARD: 2,000 series –

DD-117 BOARD

C801	E-3	L801	D-7	R822	E-3
C802	E-3	L802	D-7	R824	D-2
C803	D-3	L803	D-7	R825	D-3
C804	E-3	L804	E-9	R826	D-3
C805	E-2	L805	B-7	R827	E-3
C806	E-2	L806	C-8	R828	E-3
C807	D-2	L807	C-6	R829	C-2
C808	E-3	L808	B-8	R829	D-2
C809	D-2	L809	C-7	R830	D-2
C810	D-3	L810	B-4	R831	F-3
C811	D-2	L811	B-3	R832	D-3
C812	D-3	L812	B-3	R833	D-2
C813	D-2	L813	B-3	R834	D-2
C814	E-8	L814	A-2	R835	D-3
C815	C-3	L815	A-3	R836	D-3
C816	E-8	L816	B-3	R837	D-2
C817	E-8	L817	A-3	R838	D-3
C818	F-3	L818	A-2	R840	C-3
C819	C-3	L819	A-3	R841	C-3
C820	C-3	L820	D-8	R842	E-2
C821	C-2	L821	A-6	R843	C-2
C822	E-8	L822	A-2	R844	D-6
C823	C-3			R845	D-2
C824	C-2	LF801	D-6	R846	D-6
C825	B-2			R847	E-2
C826	D-8	PS801	F-3	R849	E-2
C827	E-2	PS802	F-2	R850	E-1
C828	E-1	PS803	F-2	R852	D-2
C829	E-1	PS804	F-2	R853	D-1
C830	D-2	PS805	F-2	R854	D-2
C831	E-2	PS806	F-3	R859	E-3
C832	B-3	PS807	F-3	R864	E-3
C833	B-2			R865	B-2
C834	C-3	Q801	F-3	R866	B-2
C836	B-2	Q803	E-3	R867	E-2
C837	C-2	Q804	F-3	R868	A-1
C838	C-3	Q805	F-3	R870	A-7
C840	D-8	Q806	C-2	R871	A-7
C841	B-3	Q807	C-3	R876	B-6
C842	A-5	Q808	C-3	R877	A-7
C843	B-3	Q809	B-2	R878	A-2
C844	A-3	Q810	C-2	R879	B-6
C846	B-3	Q812	C-2	R880	B-6
C847	B-7	Q813	C-2	R881	B-6
C848	B-7	Q814	C-2	R882	B-6
C849	A-2	Q815	C-2	R883	B-8
C850	A-3	Q817	C-2	R884	B-8
C851	B-4	Q819	D-8	R885	A-7
C852	B-7	Q820	E-2	R887	B-8
C853	B-7	Q823	B-2	R888	B-8
C854	B-3	Q824	E-2	R889	A-7
C855	A-3	Q826	A-7	R890	A-7
C856	E-3	Q827	A-2	R891	A-8
C857	A-2	Q828	B-6	R892	A-8
C860	A-6	Q829	A-6	R893	A-8
C861	A-7	Q830	B-6	R894	A-7
C862	A-2	Q831	A-7	R895	A-6
C863	B-5	Q832	B-5	R896	A-8
C864	B-6	Q833	A-2	R897	A-8
C865	A-5	Q834	B-6	R898	A-6
C866	A-5	Q835	A-8	R899	A-7
C867	A-6	Q836	A-8	R900	A-6
C868	A-6	Q837	A-7	R901	A-6
C869	A-5	Q838	A-8	R902	A-6
C870	E-2	Q839	A-8	R903	A-7
C871	B-2	Q840	A-8	R904	A-8
C872	F-3	Q841	A-7	R905	A-7
C873	A-2	Q842	A-6	R906	A-8
C874	A-7	Q843	A-6	R907	A-8
C875	A-2	Q844	A-8	R908	B-2
C876	D-6	Q845	A-8	R910	B-2
C877	D-6	Q846	A-7	R911	B-2
C878	B-2	Q847	A-6	R912	B-2
CN801	C-5	Q848	A-8	R913	F-4
CN931	C-4	Q849	A-7	R914	D-2
CN933	A-4	Q850	A-8	R915	E-1
CN934	D-9	Q851	E-3	R916	A-7
CN935	G-7	Q852	B-2	R917	A-7
CN936	F-6	Q853	B-2	R918	A-1
		Q854	B-2	R919	A-7
D806	B-2	Q855	B-2	R920	A-7
D809	B-7	Q856	A-6	R921	D-7
D810	B-2	Q932	G-3	R922	D-7
D812	B-2	Q933	G-3	R923	D-7
D813	C-4	Q934	G-3	R924	B-6
D814	F-4			R925	A-8
D815	F-3	R801	E-2	R926	C-4
D816	E-3	R802	E-3	R932	G-3
D817	C-4	R803	E-3	R933	F-6
D818	D-1	R804	D-3	R934	F-6
D819	E-2	R805	D-2	R935	F-6
D820	B-7	R806	D-2	R936	F-6
D821	B-7	R807	E-3	R937	F-6
D822	F-3	R808	D-3	R938	F-6
D932	G-2	R809	E-3	R939	F-6
D933	F-3	R810	D-2	R940	F-3
D934	G-3	R811	D-2	R941	G-3
D935	F-3	R812	D-2	R942	E-8
D936	G-2	R813	F-3	R943	G-3
D938	E-9	R814	D-3	R944	B-5
		R815	D-3	R945	B-5
FB931	D-9	R816	D-3		
FB932	E-8	R817	D-3	T801	B-6
FB933	D-9	R818	D-2		
		R819	D-2		
IC802	D-3	R820	D-3		
IC802	E-2	R821	D-2		

DD-117 BOARD (SIDE B)

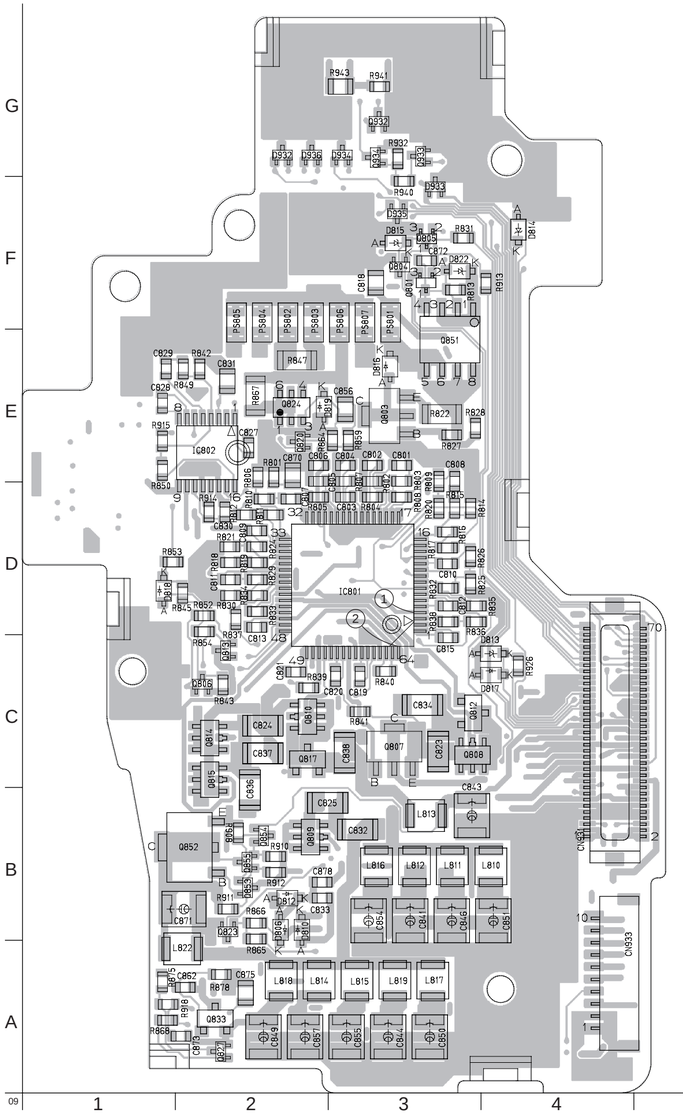

DD-117 BOARD (SIDE A)

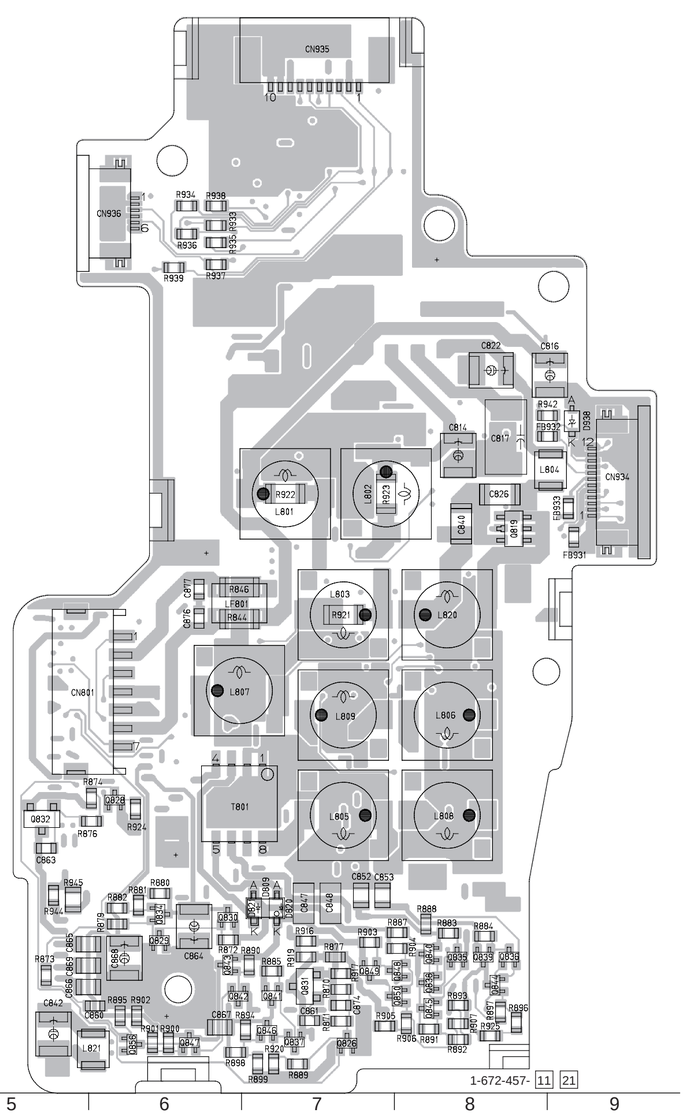

DD-117 BOARD

POWER

-REF.NO.: 2,000 SERIES-
XX MARK : NO MOUNT
NO MARK : CAMERA REC mode(LCD ON)
( ) : CAMERA REC mode(COLOR EVF ON)
< > : CAMERA REC mode(B/W EVF ON)

PS806 (CCD-TR515E/TR516E/TR713E/TRV36E/TRV46E)

Q826(CCD-TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q831,R670,R671(CCD-TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
R867(CCD-TR515E/TR515E/TR713E/TRV36E/TRV46E)
C867,Q841,Q846,R885,R889,R894,R898,R899(CCD-TR516E)

J901 BATTERY TERMINAL

IC801 DRUM/CAPSTAN PWM DRIVE SN10402IPWR-TEB

IC802 BL/LCD POWER

Q801 SWITCHING

Q803-805-Q851 CHARGE CONTROL

Q813-806 BL CONTROL SWITCH

Q810 1.9V REG

Q814 DRUM PWM DRIVE

Q815 DRUM PWM DRIVE

Q852 MT 4.75V REG

Q853-855 MT 4.75V SWITCH

Q817 SWITCHING

Q808 3.1V REG

Q807 SWITCHING

T801 CONVERTER(TRV SERIES) DC/DC CONVERTER (TR SERIES)

Q809 4.7V REG

Q823 EMERGENCY DET

Q819 BL REG SWITCHING

R877(CCD-TR315E/TR415E/TR425E/TR515E/TR713E)

Q824 SHOE UNREG SWITCHING

Q820 SHOE SWITCH

Q826 EVF SWITCH

Q831 EVF 3.1/4.75V SWITCH

Q830 CAM-7.0 REG

Q843 CAM 15V REG

Q829-834 CAM -7.0V SWITCH

Q844 PANEL -15.3 REG

Q842-847-856 CAM 15V SWITCH

Q832 PANEL 3.1V SWITCH

Q838 LCD POWER SWITCH

Q836-839 PANEL -15.3 SWITCH

Q827 LCD POWER SWITCH

Q833 PANEL 4.75V SWITCH

Q840 PANEL 6.5 REG

Q835-845-838 PANEL 6.5 SWITCH

Q849 PANEL 13.3 REG

Q848-850 PANEL 13.3 SWITCH

Q932 UNREG SWITCH

TO VC-215 BOARD(7/10) CN914 (SEE PAGE 4-40)

TO CONTROL SWITCH BLOCK FK-8500 (SEE PAGE 4-79)

TO CONTROL SWITCH BLOCK SS-8500 (SEE PAGE 4-79)

TO VC-215 BOARD(10/10) CN912 (SEE PAGE 4-51)

TO PD-107 BOARD(4/4) CN5802 (SEE PAGE 4-90)

TR SERIES:CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
TRV SERIES:CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E

* SIGNAL PATH

	REC	REC/PB	PB
Drum servo(speed and phase)		▶	
Capstan servo(speed and phase)		▶▶	

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

DD-117 BOARD CAMERA REC

① 0.76Vp-p 507 kHz IC801 ④

② 0.76Vp-p 506 kHz IC801 ⑥

SECTION 5
ADJUSTMENTS

Refer to page 3 as Table for distinction functions of models and classification

5-1. CAMERA SECTION ADJUSTMENTS

1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

1-1-1. List of Service Tools

- Oscilloscope
- Color monitor
- Vectorscope
- Adjusting driver
- Regulated power supply
- Digital voltmeter

Ref. No.	Name	Parts Code	Usage
J-1	Filter for color temperature correction (C14)	J-6080-058-A	Auto white balance adjustment/check White balance adjustment/check
J-2	ND filter 1.0	J-6080-808-A	White balance check
	ND filter 0.3	J-6080-818-A	White balance check
J-3	Pattern box PTB-450	J-6082-200-A	
J-4	Color bar chart for pattern box	J-6020-250-A	
J-5	Adjusting remote commander (RM-95-remodeled partly) (Note 1)	J-6082-053-B	
J-6	Siemens star	J-6080-875-A	For checking the flange back
J-7	Multi CPC jig	J-6082-311-A	For adjusting LCD block
J-8	CPC-7 jig	J-6082-382-A	For adjusting the video section and color viewfinder adjustment
J-9	Power code (Note 2)	J-6082-223-A	For connecting the battery terminal and DC power supply
J-10	AFM DEV jig	J-6082-312-A	For adjusting the deviation
J-11	Clear chart	J-6080-621-A	
J-12	Extension cable (16P, 0.5 mm)	J-6082-357-A	For extension between the CD-210/211 board (CN401) and VC-215 board (CN501)
J-13	IR receiver jig	J-6082-383-A	For adjusting the IR transmitter
J-14	Extension cable (70P, 0.8 mm)	J-6082-439-A	For extension between the DD-117 board (CN931) and VC-215 board (CN915)

Note 1: If the micro processor IC in the adjusting remote commander is not the new micro processor (UPD7503G-C56-12), the pages cannot be switched. In this case, replace with the new micro processor (8-759-148-35).

Note 2: Connect the adjusting remote commander to the LANC jack, and set the HOLD switch to the "ADJ" side, or press the battery switch of the battery terminal using adhesive tape, etc.

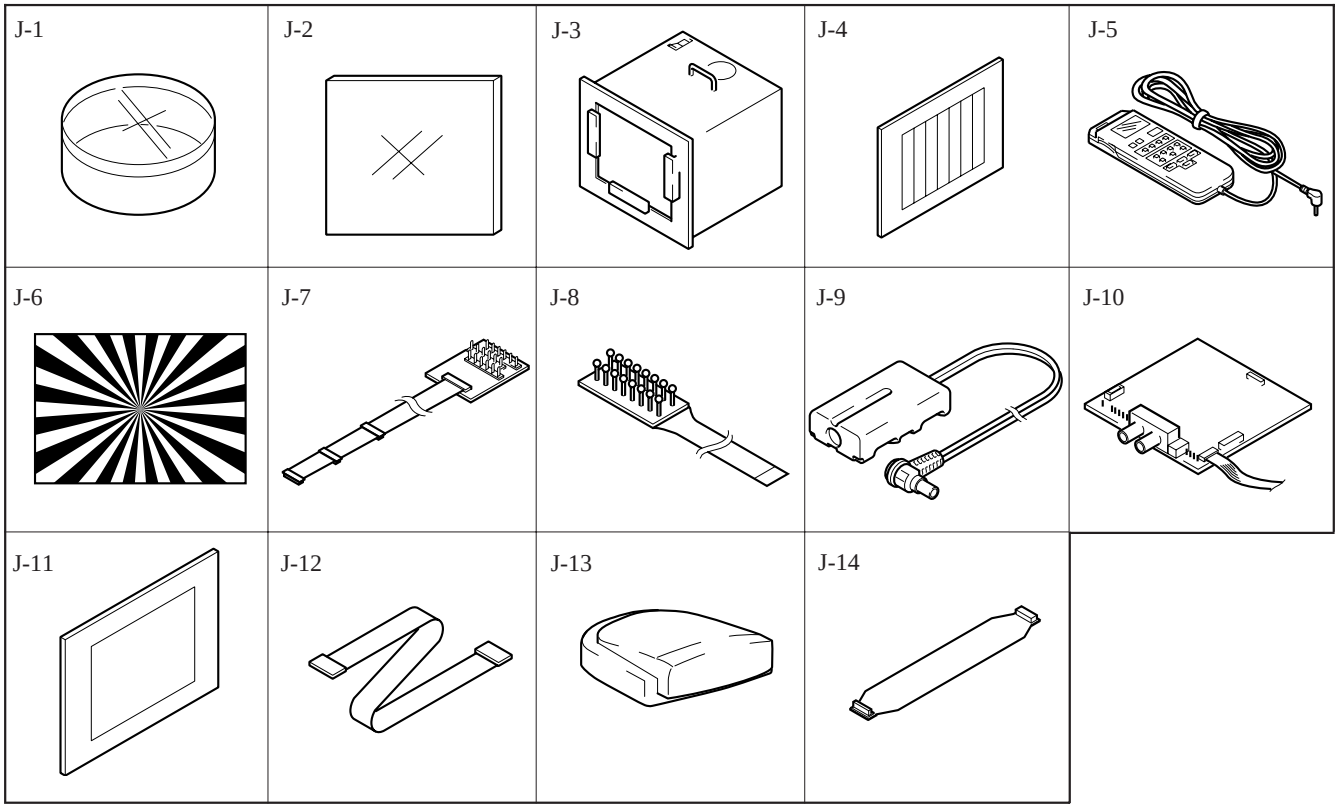

Fig. 5-1-1.

1-1-2. Adjusting items when replacing main parts

When replacing main parts, adjust the items indicated by ● in the following table.

Adjustment Section	Adjusting item	Replacing parts																									
		Lens device	CD-210/211 board IC1401 (CCD imager)	SE-80/81 board SE451 (Pitch sensor)	SE-80/81 board SE452 (Yaw sensor)	VC-215 board IC202 (Y C process)	VC-215 board IC151 (Y, C IN/OUT)	VC-215 board IC001 (REC/PB AMP)	VC-215 board IC751 (IR transmitter)	VC-215 board IC301 (AFM process)	VC-215 board IC501 (Timing generator)	VC-215 board IC502 (S/H, AGC)	VC-215 board IC401 (EEPROM)	Mechanism deck M901 (Drum assembly)	Mechanism deck M902 (Capstan motor)	VF-99 board IC901 (CRT driver)	VF-99 board T901/T902 (FBT)	EVF block V901 (Picture tube)	PD-107 board IC5502 (LCD driver)	PD-107 board IC5601 (Timing generator)	LCD block ND901 (Fluorescent tube)	LCD block LCD901 (LCD panel)	VF-119 board IC5404 (LCD timing genrator)	VF-119 board IC5401 (LCD driver)	LB-54 board T5351 (INVERTER TRANS)
	Initialization of D, E, F page data												●													
Camera	G-CAM flip adj.	●	●										●													
Camera	HALL adj.	●											●													
Camera	Flange back adj.	●	●										●													
Camera	Color reproduction adj.		●									●	●													
Camera	IRIS IN/OUT adj.	●	●									●	●													
Camera	MAX GAIN adj.		●									●	●													
Camera	Auto white balance standard data input		●									●	●													
Camera	Auto white balance adj.		●									●	●													
Camera	Angular velocity sensor sensitivity check			●	●								●													
EVF (color)	EVF initial data input												●													
EVF (color)	VCO adj.												●										●			
EVF (color)	Bright adj.												●											●		
EVF (color)	Contrast adj.												●											●		
EVF (color)	Backlight consumption current adj.												●													●
EVF (color)	White balance adj.												●											●		
EVF (B/W)	Centering adj.																●	●								
EVF (B/W)	Focus adj.																●	●								
EVF (B/W)	Aberration adj.																●	●								
EVF (B/W)	Horizontal amplitude adj.															●	●	●								
EVF (B/W)	Vertical amplitude adj.															●	●	●								
EVF (B/W)	Brightness adj.																●	●								
LCD	LCD initial data input												●													
LCD	VCO adj.												●							●						
LCD	D range adj.												●						●							
LCD	Bright adj.												●						●							
LCD	Contrast adj.												●						●							
LCD	V-COM adj.												●						●							
LCD	Color adj.												●						●							
LCD	V-COM adj.												●						●			●				
LCD	White balance adj.												●						●		●	●				
System Control	Battery end adj.												●	●	●											
Servo	CAP FG offset adj.												●		●											
Servo	RF switching position adj.												●	●												
Video	28MHz origin oscillation adj.										●		●													
Video	AFC f0 adj.					●							●													
Video	Filter f0 adj.						●						●													
Video	Y OUT level adj.					●	●						●													
Video	C OUT level adj.					●	●						●													
Video	RP filter f0 adj.							●					●													
Video	REC Y current adj. (Hi8/Standard 8)					●		●					●													
Video	REC L current adj. (Hi8/Standard 8)					●		●					●													
Video	REC C current adj.					●		●					●													
IR	IR video carrier frequency adj.								●				●													
IR	IR video deviation adj.								●				●													
IR	IR audio deviation adj.								●				●													
Audio	1.5MHz deviation adj.									●			●													
Audio	BPF f0 adj.									●			●													
Mechanism	Tape path adj.													●	●											

1-1-3. Preparations

Note 1: For details of how remove the cabinet and boards, refer to "2. DISASSEMBLY".

Note 2: When performing only the adjustments, the lens block and boards need not be disassembled.

1) Connect the equipment for adjustments according to Fig. 5-1-3, 4.
2) By setting the "Forced Camera Power ON mode", the camera power can be turned ON even if the front panel block (MA-345/346 board, power switch, microphone unit) has been removed. When removing the front panel block disconnect the following connector.
   1. VC-215 board CN903 (18P 0.5mm)
3) The video light model need not be assembled. If removing it. disconnect the following connector.
   1. VC-215 board CN909 (4P 0.8mm)

Note 3: As removing the cabinet (R) (removing the VC-215 board CN911) means removing the lithium 3V power supply (CF-60/61 board) , data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and data on the history use. (Refer to the "Service Mode" of "VIDEO SECTION ADJUSTMENT" for the data on the history use.)

Note 4: Setting the "Forced Camera Power ON" Mode
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjusting remote commander.
The above procedure will enable the camera power to be turned on with the front panel block removed. After completing adjustments, be sure to exit the "Forced Camera Power ON Mode".

Note 5: Exiting the "Forced Camera Power ON" Mode
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjusting remote commander.
3) Select page: 0, address: 01, and set data: 00.

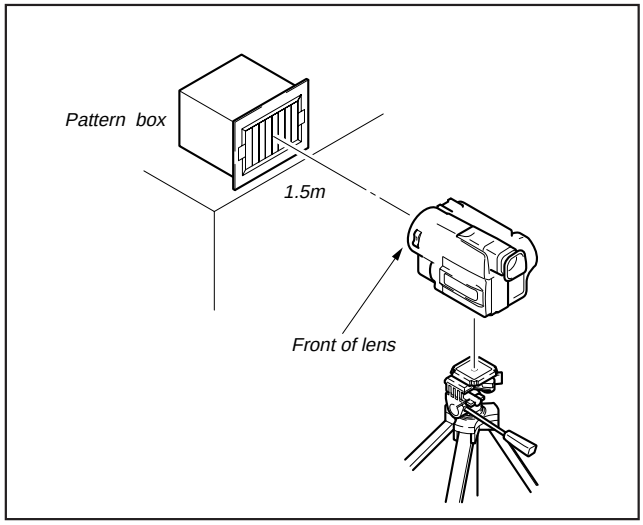

Fig. 5-1-2.

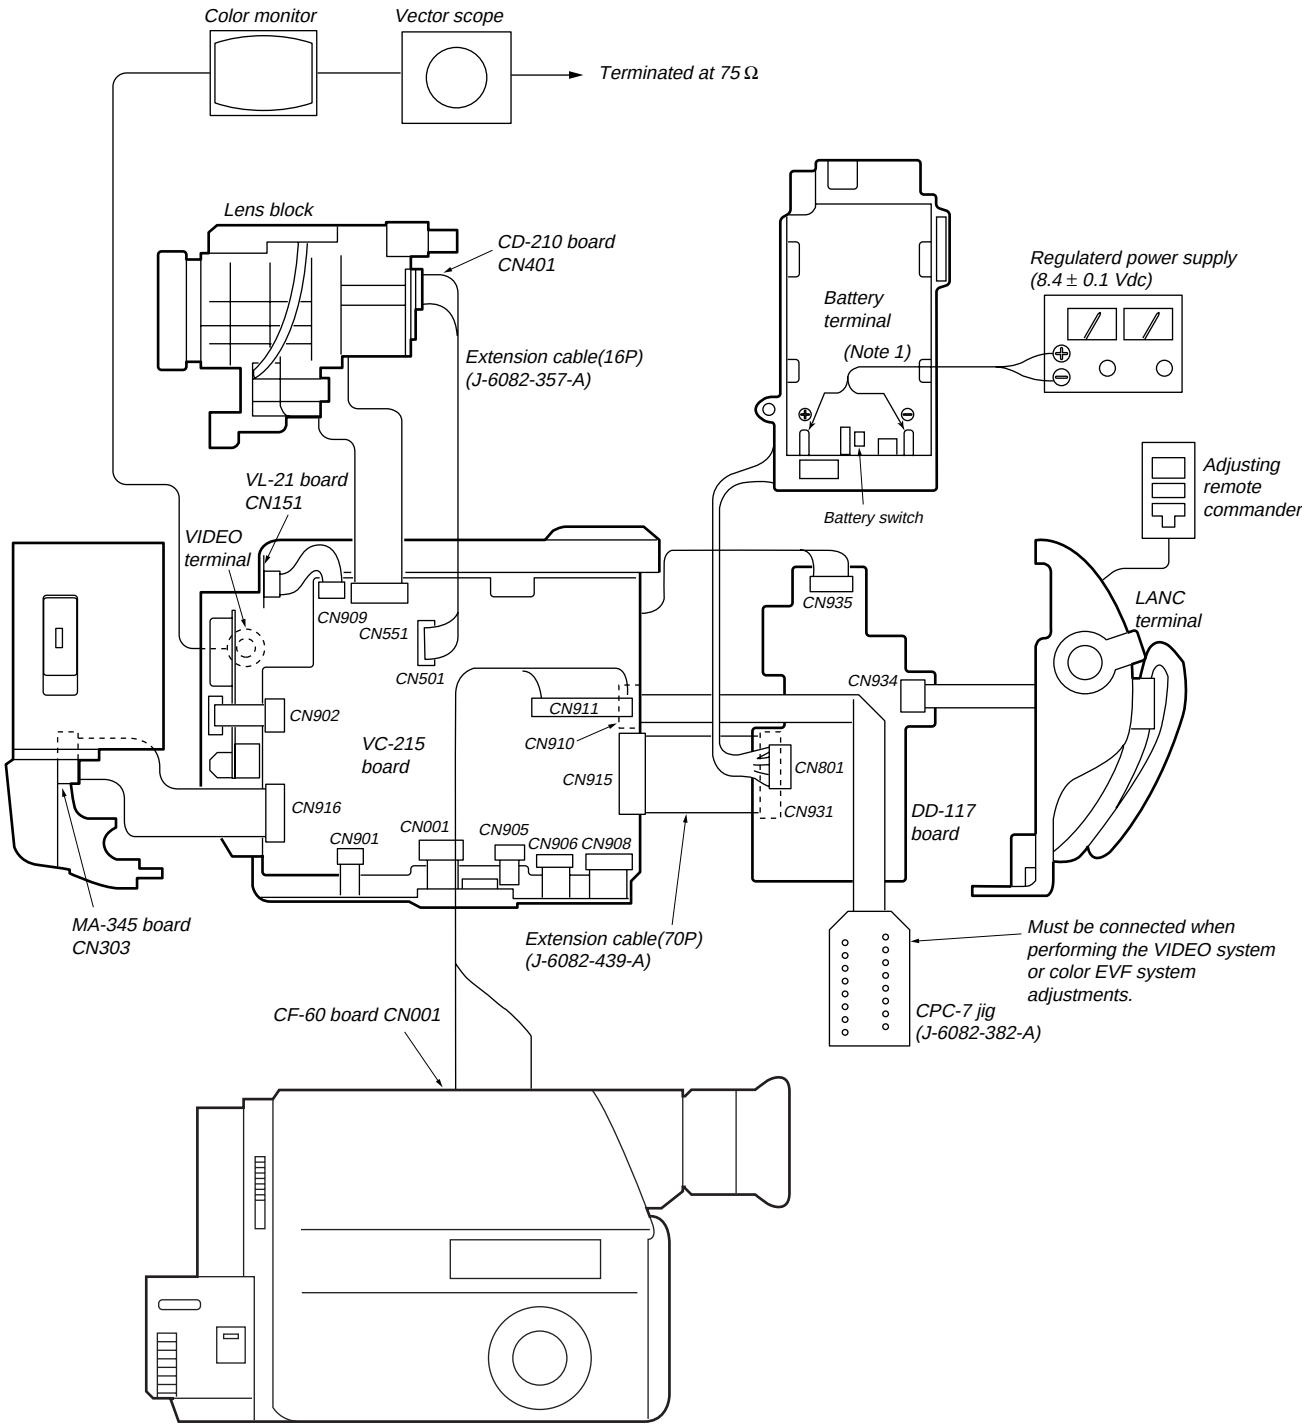

Note 1: Connect the adjusting remote commander to the LANC jack, and set the HOLD switch to the "ADJ" side, or press the battery switch of the battery terminal using adhesive tape, etc. or use the AC power adaptor.

Fig. 5-1-3.

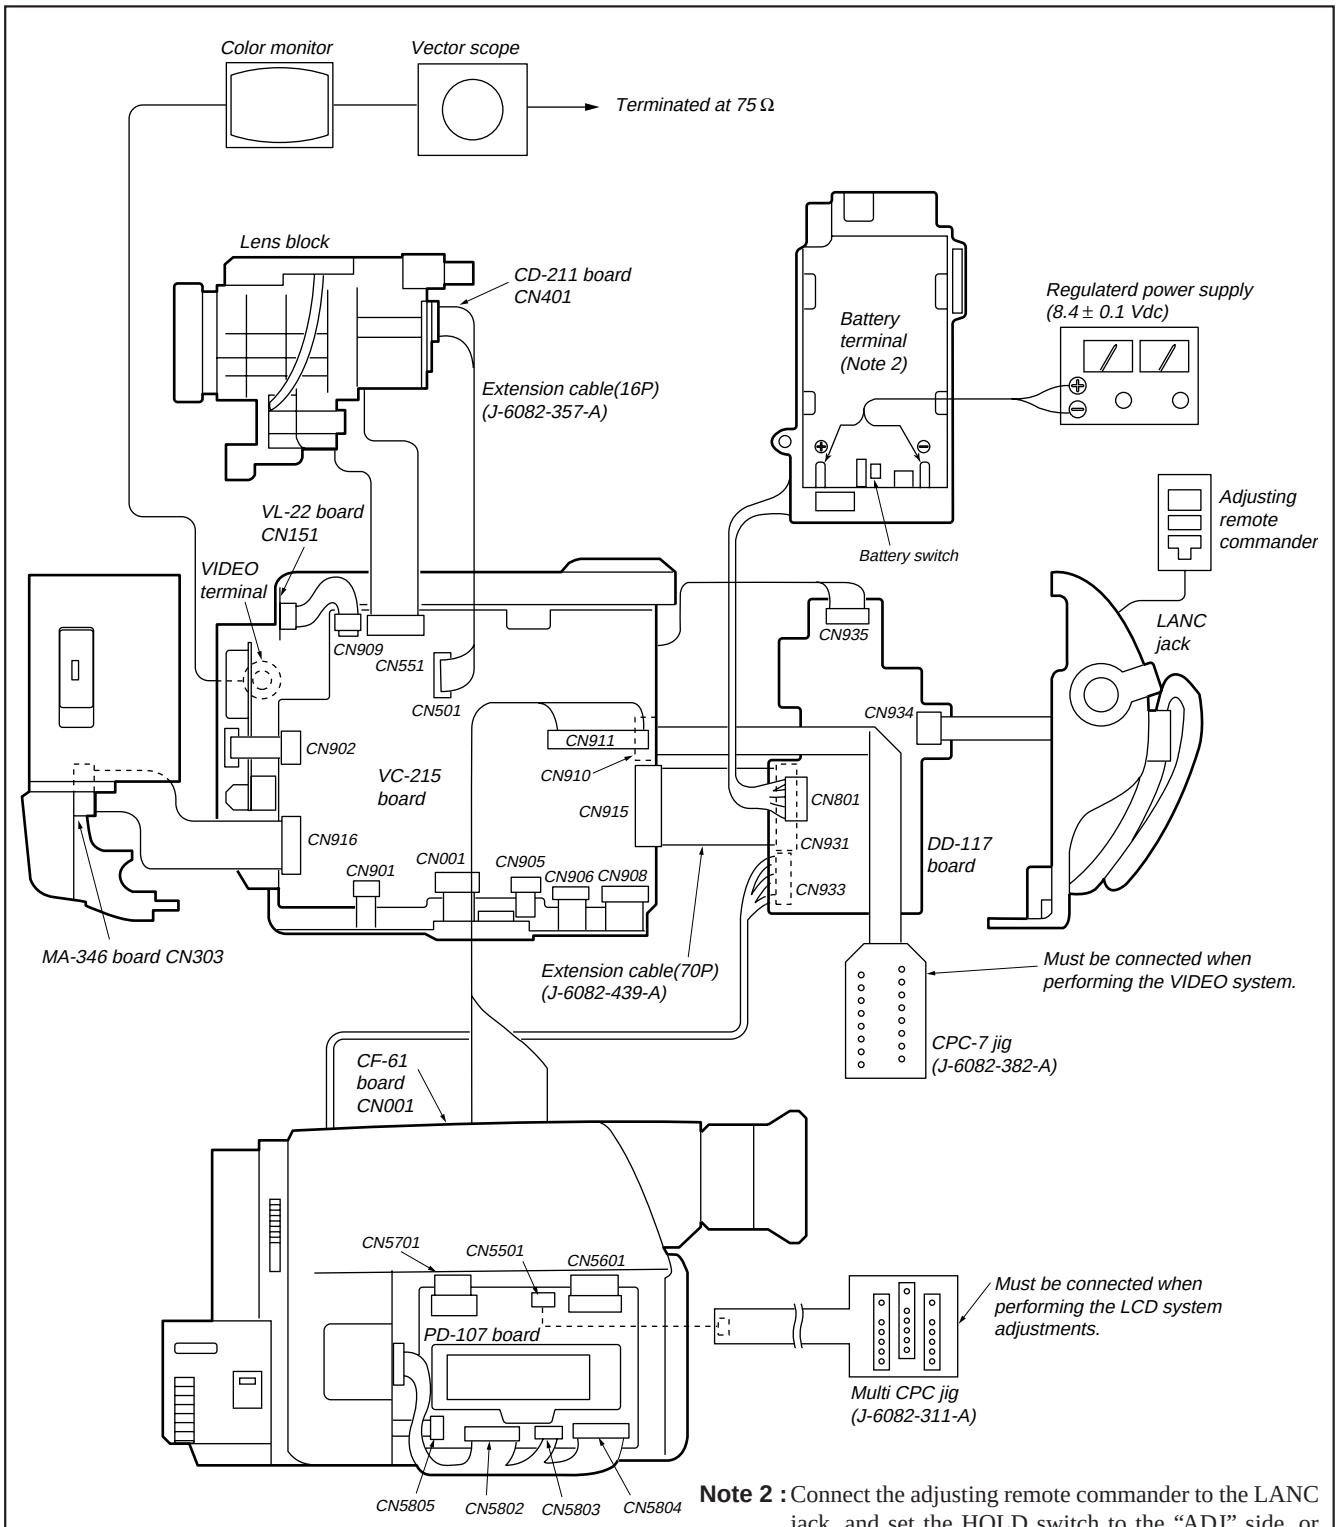

Note 2 : Connect the adjusting remote commander to the LANC jack, and set the HOLD switch to the "ADJ" side, or press the battery switch of the battery terminal using adhesive tape, etc. or use the AC power adaptor.

Fig. 5-1-4.

1-1-4. Precaution

1. Setting the Switch

Unless otherwise specified, set the switches as follows and perform adjustments without loading cassette.

1. POWER switch (MA-345/346 board) ..... CAMERA
2. NIGHT SHOT switch (Lens Block) ..... OFF
3. DEMO MODE (Menu display) ..... OFF
4. DIGITAL ZOOM (Menu display) ..... OFF
5. STEADY SHOT (Menu display) ..... OFF (TR713E/TRV46E)
6. DISPLAY (Menu display) ..... V-OUT/LCD
7. FOCUS switch (MF-8500) ..... MANUAL
8. PROGRAM AE (CF-60/61 board) ..... Auto
9. BACK LIGHT (CF-60/61 board) ..... OFF
10. PICTURE EFECT (CF-60/61 board) ..... OFF
11. 16 : 9 WIDE (Menu display) ..... OFF

2. Adjusting Procedure

Adjust in the given order.

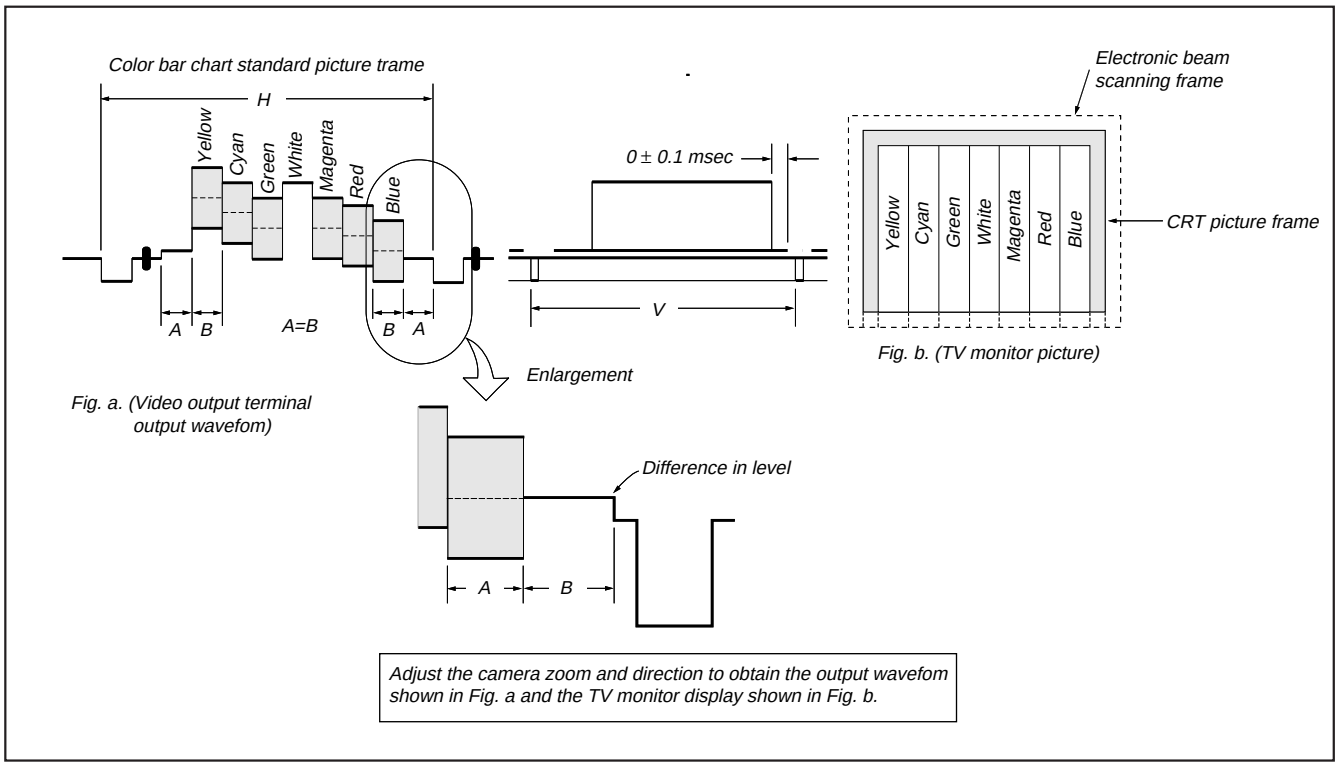

Fig. 5-1-5.

3. Subject

1) Color bar chart (Standard picture frame)
   Adjust the picture frame as shown in Fig. 5-1-5. if adjustments are performed using the color bar chart. (Standard picture frame)
2) White pattern (Standard picture frame)
   Remove the color bar chart from the pattern box, and insert a clear chart in its place. (Do not perform zoom operations during this time.)
3) Chart for flange back adjustment
   Combine a white A0 size (1189 mm x 841 mm) paper to a black one, and make the chart shown in Fig. 5-1-6.

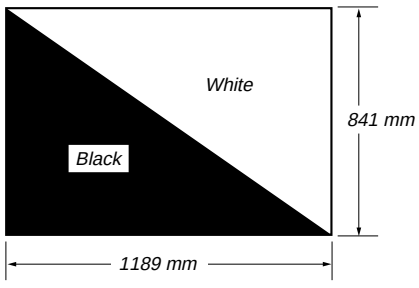

Fig. 5-1-6.

Note : Use the non-reflecting and non-glazing vellum paper whose size is more than A0, and make the boundary between white and black to be smoothly flat.

1-1-5. Adjusting Remote Commander

The adjusting remote commander is used for changing the calculation coefficient in signal processing, EVR data, etc. The adjusting remote commander performs bi-directional communication with the unit using the remote commander signal line (LANC). The resultant data of this bi-directional communication is written in the nonvolatile memory.

1. Using the adjusting remote commander

1) Connect the adjusting remote commander to the LANC terminal.
2) Adjust the HOLD switch of the adjusting remote commander to "HOLD" (SERVICE position).

If it has been properly connected, the LCD on the adjusting remote commander will display as shown in Fig. 5-1-7.

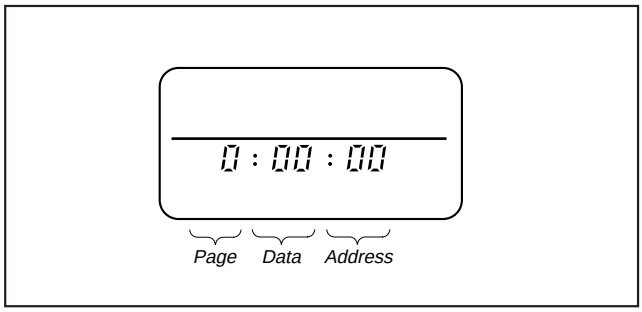

Fig. 5-1-7.

3) Operate the adjusting remote commander as follows.
   - Changing the page
     The page increases when the EDIT SEARCH+ button is pressed, and decreases when the EDIT SEARCH– button is pressed. There are altogether 16 pages, from 0 to F.

Hexadecimal notation	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
LCD Display	0	1	2	3	4	5	6	7	8	9	A	b	c	d	E	F
Decimal notation conversion value	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Table 5-1-1.

   - Changing the address
     The address increases when the FF (▶▶) button is pressed, and decreases when the REW (◀◀) button is pressed. There are altogether 256 addresses, from 00 to FF.
   - Changing the data (Data setting)
     The data increases when the PLAY (▶) button is pressed, and decreases when the STOP (■) button is pressed.
     There are altogether 256 data, from 00 to FF.
   - Writing the adjustment data
     The PAUSE button must be pressed to write the adjustment data (D, E, F page) in the nonvolatile memory.
     (The new adjustment data will not be recorded in the nonvolatile memory if this step is not performed.)
4) Select page: 0, address: 01, and set the data to 01, and enables Page D and E, F to be adjusted.
5) After completing all adjustments, set data: 00 to page: 0, address: 01 and turn off the main power supply (8.4V) once.

2. Precautions upon using the adjusting remote commander

Mishandling of the adjusting remote commander may erase the correct adjustment data at times. To prevent this, it is recommended that all adjustment data be noted down before beginning adjustments and new adjustment data after each adjustment.

1-1-6. Data Processing

The calculation of the DDS display and the adjusting remote commander display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Table 5-1-2. indicates the hexadecimal notation-the decimal notation calculation table.

Hexadecimal notation-Decimal notation

② ↓

The lower digits of the hexadecimal notation / The upper digits of the hexadecimal notation	0	1	2	3	4	5	6	7	8	9	A (A)	B (b)	C (c)	D (d)	E (E)	F (F)
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
4	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
5	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
A (A)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
①→ B (b)	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
C (c)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
D (d)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
E (E)	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
F (F)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255

Note: ( ) indicate the adjusting remote commander display.

(Example) In the case that the DDS display and the adjusting remote commander display are BD (bd).
As the upper digit of the hexadecimal notation is B (b), and the lower digit is D (d), the intersection "189" of the ① and ② in the above table is the decimal notation to be calculated.

Table 5-1-2.

1-2. INITIALIZATION OF D, E, F PAGE DATA

1. Initializing the D,E,F Page Data

Note 1: If "Initializing the D, E, F Page Data" is performed, all data of the D page, E page and F page will be initialized. (It is impossible to initialize a single page.)

Note 2: If the D,E,F page data has been initialized, "Modification of D, E, F Page Data" and all adjustments need to be performed again.

Adjusting page	D
Adjusting Address	00 to 6F
Adjusting page	F
Adjusting Address	00 to FF
Adjusting page	E
Adjusting Address	00 to FF

Initializing Method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 00, and set data: 51.
3) Select page: 2, address: 01, set data: 51 and press the PAUSE button of the adjusting remote commander.
4) Select page: 2, address: 02, and check that the data is 01.
5) Select page: 3, address: 00, and set data: 29.
6) Select page: 3, address: 01, set data: 29, and press the PAUSE button of the adjusting remote commander.
7) Select page: 0, address: 01, and set data: 00.
8) Perform "Modification of D,E,F Page Data".

2. Modification of D, E, F Page Data

If the D, E, F page data has been initialized, change the data of the "Fixed data-2" address shown in the following tables by manual input.

Modifying Method:

1) Before changing the data, select page: 0, address: 01, and set data: 01.
2) New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.

Note : If copy the data built in the different model, the camcorder may not operate.

3) When changing the data, press the PAUSE button of the adjusting remote commander each time when setting new data to write the data in the non-volatile memory.
4) Check that the data of adjustment addresses is the initial value. If not, change the data to the inital value.
5) After compleating "Modification of D, E, F Paga Data" select page: 0, address: 01, and set data: 00. Also perform all adjustments.

3. D Page Table

Note1 :

Fixed data-1 : Initialized data.
(Refer to “1. Initializing the D,E,F Page Data”.)
Fixed data-2 : Modified data.
(Refer to “2. Modification of D, E, F Page Data”).

Address	Initial Value	Remark
00 to 0F		
10	00	Fixed data-1
11	00	
12	00	
13		Fixed data-2 (Modified data, copy the data built in the same model.)
14		
15		
16		
17		
18		
19		
1A		
1B		
1C		
1D		
1E		
1F		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
2A	00	Fixed data-1
2B	00	
2C	00	
2D	00	
2E	12	
2F	50	
30	88	Battery end adj.
31	8D	
32	A8	
33	BD	
34	C8	
35	05	Fixed data-1
36	02	
37	01	
38	05	
39		Fixed data-2 (Modified data, copy the data built in the same model.)
3A		
3B		
3C		
3D	07	Fixed data-1
3E		Fixed data-2 (Modified data, copy the data built in the same model.)
3F		
40		
41		
42	04	Fixed data-1
43		Fixed data-2
44	06	Fixed data-1
45	77	
46		Fixed data-2
47	8F	Fixed data-1
48	06	
49	05	
4A	03	

Address	Initial Value	Remark
4B	01	Fixed data-1
4C	00	
4D	00	
4E	00	
4F	00	
50	0E	
51	2A	
52	47	
53	69	
54	91	
55	BF	
56	EB	
57	FF	
58	E2	
59	B2	
5A	7F	
5B	4D	
5C	11	
5D	00	
5E	00	
5F	00	
60	2D	
61	10	
62	1E	
63	19	
64	00	
65	00	
66	00	
67	00	
68	00	
69	00	
6A	00	
6B	00	
6C	00	
6D	00	
6E	00	
6F	00	

4. F Page table

Note 1:

Fixed data-1 : Initialized data.
(Refer to “1. Initializing the D,E,F Page Data”.)
Fixed data-2 : Modified data.
(Refer to “2. Modification of D, E, F Page Data”).

Note 2 : There are three models classified by VTR formats as shown below, and the initial value of adjustment is different according to the model.

Hi8 model : CCD-TR515E/TR516E/TR713E
CCD-TRV36E/TRV46E
Standard8 model : CCD-TR315E/TR415E/TR425E
CCD-TRV16E/TRV26E/TRV27E/TRV27EP

Address	Initial Value	Remark
00 to 0F		
10	00	Emergency memory address
11	00	
12	00	
13	00	
14	00	
15	00	
16	00	
17	00	
18	00	
19	00	
1A	00	
1B	00	
1C		Fixed data-2
1D		
1E		
1F		
20		
21	50	G-CAM flip adj.
22		Fixed data-2
23		
24		Fixed data-1
25		
26		Fixed data-2
27		Fixed data-1
28		
29		
2A		
2B		Fixed data-2
2C	A0	28MHz origin osc. adj.
2D		Fixed data-2
2E		Fixed data-1
2F	80	Hall adj.
30	80	
31	18	Max gain adj.
32		Fixed data-2
33		Fixed data-1
34	1B	Color reproduction adj.
35		Fixed data-1
36	42	Color reproduction adj.
37		Fixed data-1
38		
39		
3A	89	Auto white balance adj.
3B	59	
3C	38	IRIS IN/OUT adj.
3D	41	
3E	25	Flange back adj.
3F	00	
40	19	
41	00	
42	35	

Address	Initial Value	Remark
43	78	Angular velocity sensor sensitivity check.
44	6C	Address 43, 44 are fixed data-2 address. (CCD-TR713E/TRV46E)
45		Fixed data-1
46	8D	1.5MHz deviation adj.
47	7A	BPF f0 adj.
48		Fixed data-1
49	6B	Y OUT level adj.
4A	40	AFC f0 adj.
4B	9A	C OUT level adj.
4C		Fixed data-1
4D	7B	Filter f0 adj.
4E	60	RP filter f0 adj.
4F		Fixed data-1
50		
51		
52		
53	40	REC Y current adj.
54	40	(Addresses 57 to5A are fixed
55	40	data-2 addresses.)
56	40	
57	A1/80	Note 2 : Hi8 model/ Standard8 model
58	95/80	
59	A1/80	
5A	95/80	
5B	50	REC L level adj.
5C	50	(Addresses 63 to 64 are fixed
5D	50	data-2 addresses.)
5E	50	
5F	66	
60	66	
61	66	
62	66	
63	7A/80	Note 2 : Hi8 model/ Standard8 model
64	7A/80	
65	80	REC C current adj.
66	41	IR video deviation Adj.
67	33	IR audio deviation Adj.
68	C7	IR video carrier freq. Adj.
69	80	CAP FG offset adj.
6A		Fixed data-2
6B		Fixed data-1
6C		
6D		
6E		
6F		
70	3B	AWB standard data input adj.
71	FF	
72	56	
73	7D	
74		Fixed data-1
75		
76	1B	Flange back adj.
77	54	
78	25	
79	80	
7A	10	
7B	FF	
7C	0A	Switching position adj.
7D	00	
7E		Fixed data-1
7F		
80		Fixed data-2
81		
82		Fixed data-1
83		

Address	Initial Value	Remark
84		Fixed data-2
85		Fixed data-1: CCD-TR315E/TR415E/TR425E/TR515E/TR516E CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E Fixed data-2: CCD-TR713E, CCD-TRV46E
86		Fixed data-2
87		Fixed data-1
88		
89		
8A		
8B		
8C		Fixed data-2
8D		Fixed data-1
8E		Fixed data-2
8F		Fixed data-1
90		
91		
92		
93		
94		Fixed data-2
95		Fixed data-1
96		
97		
98		
99		
9A		
9B		
9C		Fixed data-2
9D		Fixed data-1
9E		
9F		
A0		
A1		
A2		Fixed data-2
A3		
A4		
A5		Fixed data-1
A6		Fixed data-2
A7		
A8		
A9		
AA		Fixed data-1
AB		
AC		
AD		
AE		
AF		
B0		
B1		
B2		
B3		
B4		
B5		
B6		
B7		
B8		
B9		
BA		
BB		
BC		
BD		
BE		Fixed data-2
BF		

Address	Initial Value	Remark
C0		Fixed data-1
C1		
C2		
C3		
C4		
C5		
C6		
C7		
C8		
C9		Fixed data-2
CA		Fixed data-1
CB		
CC		
CD		
CE		
CF		
D0		
D1		
D2		
D3		
D4		
D5		
D6		
D7		
D8		
D9		Fixed data-2
DA		Fixed data-1
DB		Fixed data-2
DC		
DD		Fixed data-1
DE		
DF		
E0		
E1		
E2		
E3		Fixed data-2
E4		
E5		Fixed data-1
E6		Fixed data-2
E7		Fixed data-1
E8		
E9		
EA		
EB		Fixed data-2
EC		
ED		Fixed data-1
EE		
EF		
F0		
F1		
F2		Fixed data-2
F3		Fixed data-1
F4		
F5	FF	Color reproduction adj.
F6	F4	
F7		Fixed data-1
F8		
F9		
FA		
FB		
FC		
FD		
FE		
FF		

5. E Page Table

Note 1:

Fixed data-1 : Initialized data.
(Refer to “1. Initializing the D,E,F Page Data”.)

Fixed data-2 : Modified data.
(Refer to “2. Modification of D, E, F Page Data”).

Note 2: See “1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENT”.

Note 3: See “1-5. LCD SYSTEM ADJUSTMENT”.

Note 4: TR series: CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E

TRV series: CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E

Address	Initial Value	Remark
00		Fixed data-1
01		
02		
03		
04		
05		
06		
07		
08		
09		
0A		Fixed data-2
0B		
0C		Fixed data-1
0D		
0E		
0F		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
1A		
1B		
1C		
1D		
1E		
1F		
20		Fixed data-2
21		Fixed data-1
22		
23		
24		
25		
26		
27		
28		
29		
2A		
2B		Fixed data-2
2C		
2D		
2E		
2F		Fixed data-1
30		
31		
32		Fixed data-1
33		
34		
35		
36		
37		
38		
39		
3A		
3B		Fixed data-2
3C		Fixed data-1
3D		
3E		
3F		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49		
4A		
4B		
4C		
4D		
4E		
4F		Fixed data-2
50		Fixed data-1
51		
52		
53		
54		Fixed data-2
55		Fixed data-1
56		
57		
58		
59		Fixed data-2
5A		Fixed data-1
5B		
5C		Fixed data-2
5D		Fixed data-1
5E		
5F		
60		Fixed data-2
61		
62		
63		
64		
65		
66		
67		
68		Fixed data-1
69		
6A		
6B		Fixed data-2
6C		
6D		Fixed data-1
6E		Fixed data-2
6F		
70		

Address	Initial Value	Remark
71		TR series:Fixed data-1/TRV series:Fixed data-2
72		Fixed data-1
73		Fixed data-2
74		Fixed data-1
75		Fixed data-2
76 to 99		Fixed data-1
9A		Fixed data-2
9B		Fixed data-1
9C		Fixed data-2
9D		Fixed data-1
9E		
9F		
A0		Fixed data-2
A1		
A2		TR series:Fixed data-1/TRV series:Fixed data-2
A3		Fixed data-1
A4		
A5		
A6		
A7		
A8		
A9		
AA		
AB		
AC		
AD		
AE		
AF		
B0		
B1		
B2		
B3		
B4		TR series:Fixed data-1/TRV series:Fixed data-2
B5		
B6		
B7		
B8		
B9		
BA		Fixed data-2
BB		Fixed data-1
BC		Fixed data-2
BD		
BE		
BF		TR series : Fixed data-1 TRV series : Fixed data-2
C0		
C1		
C2	Note 2	VCO adj. (Color EVF)
C3	Note 2	Bright adj. (Color EVF)
C4	Note 2	Contrast adj. (Color EVF)
C5	Note 2	White balance adj. (Color EVF)
C6	Note 2	White balance adj. (Color EVF)
C7		Fixed data-1 Fixed data-2 : CCD-TR516E (COLOR EVF MODEL)
C8		
C9		
CA		
CB		
CC	Note 2	Backlight consumption current adj. (Color EVF)
CD		Fixed data-1
CE		
CF	Note 3	Bright adj. (LCD)
D0	Note 3	Color adj. (LCD)
D1	Note 3	White balance adj. (LCD)
D2	Note 3	White balance adj. (LCD)

Address	Initial Value	Remark
D3	Note 3	Contrast adj. (LCD)
D4	Note 3	D range adj. (LCD)
D5	Note 3	V-COM level adj. (LCD)
D6	Note 3	VCO adj. (LCD)
D7	Note 3	V-COM adj. (LCD)
D8		Fixed data-1
D9		
DA		
DB		TR series:Fixed data-1/TRV series:Fixed data-2
DC		Fixed data-1
DD		
DE		
DF		
E0		
E1		
E2		
E3		
E4		
E5		
E6		
E7		
E8		
E9		
EA		Fixed data-2
EB		
EC		Fixed data-1
ED		
EE		
EF		Fixed data-2
F0		Fixed data-1
F1		
F2		
F3		
F4		
F5		
F6		
F7		
F8		
F9		
FA		
FB		
FC to FF		

1-3. CAMERA SYSTEM ADJUSTMENTS

Before perform the camera system adjustments, Check that the specified value of "28MHz Origin Oscillation Adjustment", "Y OUT level Adjustment" and "C OUT level Adjustment" of "VIDEO SYSTEM ADJUSTMENT" are satisfied.

1. G-CAM flip Adjustment

Set the color reproduction conditions to optimum.

Subject	Color bar chart standard picture frame
Measurement Point	Display data of page 1 of the adjusting remote commander (Note 1)
Measuring Instrument	
Adjustment Page	F
Adjustment Address	21

Note 1. Displayed data of page 1 of the adjusting remote commander.



Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 0, address: 03, and set data: 16.
3) Select page 1 of the adjusting remote commander, and compare the higher 2 digits (S1) and lower 2 digits (S2) of the 4-digits display data.
   When S1<S2
   Perform steps 4) onwards.
   When S1≧S2
   Perform steps "Processing after Completing Adjustments".
4) Select page: F, address: 21, set data:
   when the read data is 50, change to D0, and the read data is D0, change to 50, (initial value is 52) and press the PAUSE button of the adjusting remote commander.

Processing after Completing Adjustments

1) Select page: 0, address: 03, and set data: 00.
2) Select page: 0, address: 01, and set data: 00.

2. HALL Adjustment

For detecting the position of the lens iris, adjust the hall AMP gain and offset.

Subject	Not required
Measurement Point	DDS display data of LCD or TV monitor (Note 3)
Measuring Instrument	
Adjustment Page	F
Adjustment Address	2F, 30
Specified Value	7E to 82 during IRIS OPEN (Note 1) 13 to 17 during IRIS CLOSE (Note 2)

Note 1: Select page: 2, address: 01, set data: 01, and press the PAUSE button of the adjusting remote commander.

Note 2: Select page: 2, address: 01, set data: 03, and press the PAUSE button of the adjusting remote commander.

Note 3: DDS display data of LCD or TV monitor.

00 00XX → Object data

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 0, address: 03, and set data: 03.
3) Select page: D, address: 11, set data: 02, and press the PAUSE button of the adjusting remote commander.
4) Select page: 2, address: 01, set data: 03, and press the PAUSE button.
5) Select page: F, address: 30, set data: 80, and press the PAUSE button.
6) Select page: F, address: 2F, set data: 40, and press the PAUSE button.
7) Read the DDS display data (the bottom two digits of the display data at the bottom right of the LCD display or the TV monitor), and this data is named K_2.
8) Select page: F, address: 2F, set data: 30, and press the PAUSE button.
9) Read the DDS display data, and this data is named K_1.
10) Select page: 2, address: 01, set data: 01, and press the PAUSE button.
11) Read the DDS display data, and this data is named W_1.
12) Select page: F, address: 2F, set data: 40, and press the PAUSE button.
13) Read the DDS display data, and this data is named W_2.
14) Convert W_1, W_2, K_1, K_2, to decimal notation, and obtain W_1' , W_2' , K_1' , K_2'. (Refer to Table 5-1-2. “Hexadecimal notation - decimal notation conversion table”.)
15) Calculate X_1' using the following equations (decimal notation calculation).

$A' = W_2' + K_1' - W_1' - K_2'$ Equation 1

$B' = W_1' - K_1'$ Equation 2

$X_1' = [1696 + (48 \times A') - (16 \times B')] / A'$ Equation 3

16) Convert X_1' to hexadecimal notation, and obtain X_1. (Round off to one decimal place)
17) Select page: F, address: 2F, set data: X_1, and press the PAUSE button.
18) Select page: 2, address: 01, and set data: 01, and press the PAUSE button.
19) Select page: F, address: 30, change the data and adjust the DDS display data to “80”.
20) Press the PAUSE button of the adjusting remote commander.
21) Select page: 2, address: 01, and set data: 03, and press the PAUSE button.
22) Read the DDS display data, and this data is named K_0. If K_0 lies within the “13” to “17” range, perform “Processing after completing adjustments”. If it is lies outside the range, perform the following adjustments.
23) Convert K_0 to decimal notation, and obtain K_0'.
24) Calculate X_2' using the following equations (decimal notation calculation).

$C' = 128 - B' - K_0'$ Equation 4

$X_2' = [(106 - B') \times (X_1' - 48) + (48 \times C')] / C'$ Equation 5

(X_1' and B' are values obtained from equations 2) and 3))

25) Convert X_2' to hexadecimal notation, and obtain X_2. (Round off to one decimal place)
26) Select page: F, address: 2F, set data: X_2, and press the PAUSE button.
27) Select page: 2, address: 01, set data: 03, and press the PAUSE button.
28) Select page: F, address: 30, change the data and adjust the DDS display data to “15”.
29) Press the PAUSE button of the adjusting remote commander.
30) Select page: 2, address: 01, set data: 01, and press the PAUSE button.
31) Check the DDS display data lies within the “7E” to “82” range.

Processing after Completing Adjustments

1) Select page: D, address: 11, and set data: 00, and press the PAUSE button.
2) Select page: 0, address: 01, and set data: 00.
3) Select page: 2, address: 01, and set data: 00, and press the PAUSE button.
4) Select page: 0, address: 03, and set data: 00.

3. Flange Back Adjustment

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

3-1. Flange Back Adjustment(1)

Subject	Flange back adjustment chart (2.0 m from the front of the lens) (Luminance: 230 ± 30 lux)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	3E to 42, 76 to 7B

Switch setting:

1) NIGHT SHOT switch ..... OFF

Adjusting method:

1) Check that at both the zoom lens TELE end and WIDE end, the center of the chart for the flange back adjustment and center of the exposure screen coincide.
2) Select page: 0, address: 01, and set data: 01.
3) Check that the data of page: F, address: 3E to 42, 76 to 7B is the initial value (See table below).

Address	Data	Address	Data
3E	25	77	54
3F	00	78	25
40	19	79	80
41	00	7A	10
42	35	7B	FF
76	1B		

4) Select page: 2, address: 02, and check that the data is “00 “.
5) Select page: 2, address: 01, set data: 13, and press the PAUSE button of the adjusting remote commander.
6) Select page: 2, address: 01, set data: 15, and press the PAUSE button of the adjusting remote commander.
   (The adjustment data will be automatically input to page: F, addresses: 3E to 42, 76 to 7B.)
7) Select page: 2, address: 02, and check that the data is „01“.

Processing after Completing Adjustments

1) Turn OFF the main power supply (8.4V).
2) Perform “Flange Adjustment (2)”.

3-2. Flange Back Adjustment (2)

Perform this adjustment after performing “Flange Back Adjustment (1)”.

Subject	Subject more than 500m away (Subjects with clear contrast such as buildings, etc.)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	3E to 42, 76 to 7B

Switch setting:

1) NIGHT SHOT switch ..... OFF

Adjusting method:

1) Set the zoom lens to the TELE end and expose a subject that is more than 500 m away (subject with clear contrast such as building, etc.). (Nearby subjects less than 500 m away should not be in the screen.)
2) Select page: 0, address: 01, and set data: 01.
3) Select page: 2, address: 02, and check that the data is “00”.
4) Select page: 2, address: 01, set data: 13, and press the PAUSE button of the adjusting remote commander.
5) Place a ND filter on the lens so that the optimum image is obtain.
6) Select page: 2, address: 01, set data: 29, and press the PAUSE button of the adjusting remote commander.
   (The adjustment data will be automatically input to page: F, addresses: 3E to 42, 76 to 7B.)
7) Select page: 2, address: 02, and check that the data is “01”.

Processing after Completing Adjustments

1) Select page: 0, address: 01, and set data: 00.
2) Turn OFF the main power supply (8.4V).
3) Perform “Flange Back Check”.

4. Flange Back Check

Subject	Siemens star chart (2.0 m from the front of the lens) (Luminance: approx. 200 lux)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	3E to 42, 76 to 7B

Switch setting:
1) NIGHT SHOT switch ..... OFF

Checking method:
1) Place the Siemens star 2.0m from the front of the lens.
2) To open the IRIS, decrease the luminous intensity to the Siemens star up to a point before noise appear on the image.
3) Select page: 2, address: 40, and set data: 02.
4) Select page: 2, address: 41, and set data: 01.
5) Shoot the Siemens star with the zoom TELE end.
6) Turn on the auto focus.
7) Check that the lens is focused (Note1).
8) Select page: 2, address: 21, and set data: 10.
9) Shoot the Siemens star with the zoom WIDE end.
10) Observe the TV monitor and check that the lens is focused.

Note 1: When the auto focus is ON, the lens can be checked if it is focused or not by observing the data on the page 1 of the adjusting remote commander.
1) Select page: 0, address: 03, and set data: 0F.
2) Page 1 shows the state of the focus.

1 : 00 : XX
→ Odd: Focused
Even: Unfocused

Processing after Completing Adjustments
1) Select page: 2, address: 21, and set data: 00.
2) Select page: 0, address: 03, and set data: 00.
3) Select page: 2, address: 40, and set data: 00.
4) Select page: 2, address: 41, and set data: 00.

5. Picture Frame Setting

Subject	Color bar chart standard picture frame (1.5m from the front of the lens)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope and TV monitor
Specified Value	A=B, C=D, t=0 ± 0.1msec

Setting method:
1) Adjust the zoom and the camera direction, and set to the specified position.
2) Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using “Color bar chart standard picture frame”.

1. Horizontal period

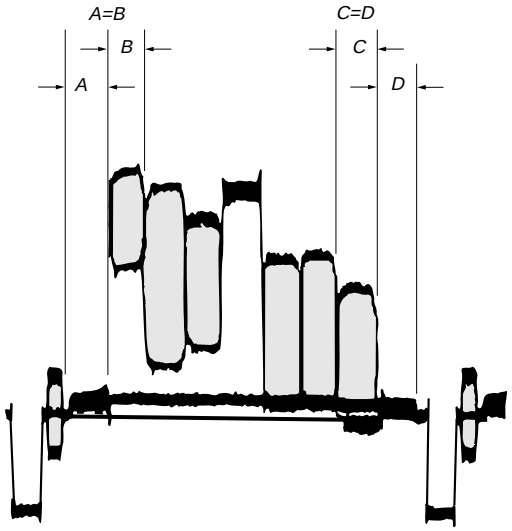

2. Vertical period

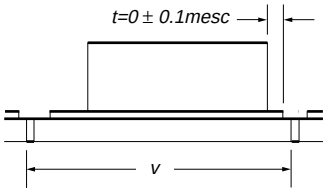

Fig. 5-1-8.

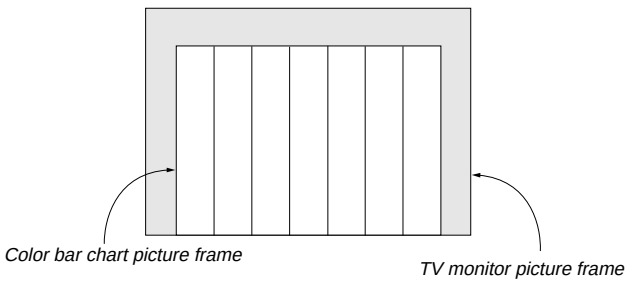

Fig. 5-1-9.

6. Color Reproduction Adjustment

Adjust the color Separation matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	34, 36, F5, F6
Specified Value	All color luminance points should settle within each color reproduction frame.

Switch setting:

1) NIGHT SHOT switch ..... OFF

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 01, set data: 3D, and press the PAUSE button of the adjusting remote commander.
3) Select page: F, address: 25, set data: 3F, and press the PAUSE button of the adjusting remote commander.
4) Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame.
5) Change the data of page: F, address: 34, 36, F5 and F6, and settle each color luminance point in each color reproduction frame.

Note 1: Be sure to press the PAUSE button of the adjusting remote commander before changing the addresses. If not, the new data will not be written to the memory.

6) Press the PAUSE button of the adjusting remote commander.

Processing after Completing Adjustments

1) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
2) Select page: 0, address: 01, and set data: 00.

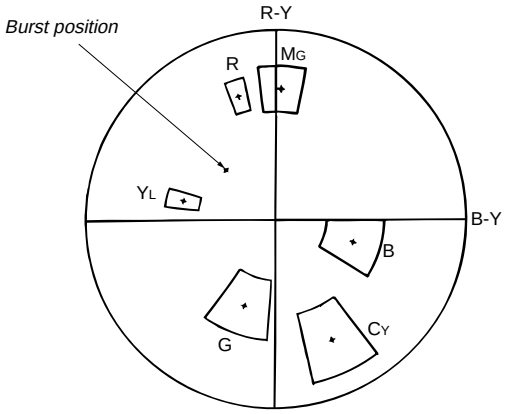

Fig. 5-1-10.

7. IRIS IN/OUT Adjustment

For the unit to judge if the white balance is indoors or outdoors in auto white balance operations, measure the light level and write it in the EEPROM.
If the level is not correct, the white balance will not be accurate.

Subject	Clear chart (Color bar standard picture frame)
Measurement Point	DDS display of LCD or TV monitor (Note 1)
Measuring Instrument	
Adjustment Page	F
Adjustment Address	3C, 3D

Note 1: The right four digits of the display data at the right bottom side of the LCD and TV monitor is the LIGHT LEVEL data.



Switch setting:
1) STEADY SHOT (Menu display) ..... OFF
2) NIGHT SHOT switch ..... OFF

Adjusting method:
1) Select page: 0, address: 01, and set data: 01.
2) Select page: 0, address: 03, and set data: 06.
3) Select page: D, address: 11, and set data: 02, and press the PAUSE button of the adjusting remote commander.
4) Select page: 2, address: 40, and set data: 02.
5) Select page: 2, address: 01, set data: 0B, and press the PAUSE button of the adjusting remote commander.
6) Read the DDS display data (Note 1), and take the upper two digits as D_1 and the lower two as D_2.
7) Convert D_1 to decimal notation, and obtain D_1'. (Refer to Table 5-1-2. “Hexadecimal notation - decimal notation conversion table” of “Service mode”.)
8) Calculate D_3' using the following equations. (Equations 1 and 2 are for decimal notation calculation).
   When $D_2 \geqq D0$
   $D_3' = D_1' - 21$ ..... Equation 1
   When $D_2 < D0$
   $D_3' = D_1' - 22$ ..... Equation 2
9) Convert D_3' to hexadecimal notation, and obtain D_3.
10) Select page: F, address: 3C, set data: D_3, and press the PAUSE button of the adjusting remote commander.
11) Select page: 2, address: 01, set data: 09, and press the PAUSE button of the adjusting remote commander.
12) Read the DDS display data (Note 1), and take the upper two digits as D_4 and the lower two as D_5.
13) Convert D_4 to decimal notation, and obtain D_4'. (Refer to Table 5-1-2. “Hexadecimal notation - decimal notation conversion table”.)
14) Calculate D_6' using the following equations. (Equations 3 and 4 are for decimal notation calculation).
   When $D_5 \geqq F0$
   $D_6' = D_4' - 13$ ..... Equation 3
   When $D_5 < F0$
   $D_6' = D_4' - 14$ ..... Equation 4
15) Convert D_6' to hexadecimal notation, and obtain D_6.
16) Select page: F, address: 3D, set data: D_6, and press the PAUSE button of the adjusting remote commander.

Processing after Completing Adjustments
1) Select page: D, address: 11, and set data: 00, and press the PAUSE button of the adjusting remote commander.
2) Select page: 0, address: 01, and set data: 00.
3) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
4) Select page: 2, address: 40, and set data: 00.
5) Select page: 0, address: 03, and set data: 00.

8. MAX GAIN Adjustment

Setting the minimum illumination.
If it is not consistent, the image level required for taking subjects in low illuminance will not be produced (dark).

Subject	Clear chart (Color bar standard picture frame)
Measurement Point	DDS display of LCD or TV monitor (Note 1)
Measuring Instrument	
Adjustment Page	F
Adjustment Address	31
Specified Value	C0 to FF

Note 1: The right two digits of the display data at the right bottom side of the LCD and TV monitor is the object data.



Switch setting:
1) STEADY SHOT (Menu display) ..... OFF
2) NIGHT SHOT switch ..... OFF

Adjusting method:
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 11, and set data: 02, and press the PAUSE button of the adjusting remote commander.
3) Select of page: 0, address: 03, and set data: 01.
4) Select page: 2, address: 40, and set data: 02.
5) Select page: 2, address: 56, and set data: 40.
6) Select page: 2, address: 01, set data: 19, and press the PAUSE button of the adjusting remote commander.
7) Select page: F, address: 31, set data: 18, and press the PAUSE button of the adjusting remote commander.
8) Check that the DDS display data (Note 1) lies within the specified value.

Processing after Completing Adjustments
1) Select page: D, address: 11, and set data: 00, and press the PAUSE button of the adjusting remote commander.
2) Select page: 0, address: 01, and set data: 00.
3) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
4) Select page: 2, address: 40, and set data: 00.
5) Select page: 2, address: 56, and set data: 00.
6) Select page: 0, address: 03, and set data: 00.

9. Auto White Balance Standard Data Input

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	70 to 73

Note 1: Perform "Color Reproduction Adjustment" before this adjustment.

Note 2: Check that the data of page: 2, address: 02 is data: 00. If not, turn the power of the unit OFF/ON.

Switch setting:

1) NIGHT SHOT switch ..... OFF

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Wait for 2 seconds.
3) Select page: 2, address: 01, and set data: 11, and press the PAUSE button of the adjusting remote commander.
4) Select page: 2, address: 01, and set data: 0D, and press the PAUSE button of the adjusting remote commander.
   (When the standard data is take in, the data will be automatically input to page: F, address: 70 to 73.)
5) Select page: 2, address: 02, and check that the data is "01".
6) Perform "Auto White Balance Adjustment".

Processing after Completing Adjustments

1) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
2) Select page: 0, address: 01, and set data: 00.

10. Auto White Balance Adjustment

Adjust to the proper auto white balance output data.
If it is not correct, auto white balance and color reproducibility will be poor.

Subject	Clear chart (Color bar standard picture frame)
Filter	Filter C14 for color temperature correction
Measurement Point	DDS display of LCD or TV monitor
Measuring Instrument	(Note 1)
Adjustment Page	F
Adjustment Address	3A, 3B
Specified Value	R ratio: 2B40 to 2BC0 B ratio: 5E40 to 5EC0

Note 1: Perform "Auto White Balance Standard Data Input" before this adjustment.

Note 2: The right four digits of the display data at the right bottom side of the LCD and TV monitor is the object data.

00 XXXX → Object data

Switch setting:

1) NIGHT SHOT switch ..... OFF

Adjusting method:

1) Place the C14 filter for color temperature correction on the lens.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: D, address: 11, and set data: 02, and press the PAUSE button of the adjusting remote commander.
4) Select page: 2, address: 01, and set data: 3F, and press the PAUSE button of the adjusting remote commander.
5) Select page: 0, address: 03, and set data: 04.
6) Select page: F, address: 3A, and change the data, and adjust the average value of the DDS display data(Note 2) to the R ratio specified value.
7) Press the PAUSE button of the adjusting remote commander.
8) Select page: 0, address: 03, and set data: 05.
9) Select page: F, address: 3B, and change the data, and adjust the average value of the DDS display data(Note 2) to the B ratio specified value.
10) Press the PAUSE button of the adjusting remote commander.

Processing after Completing Adjustments

1) Select page: D, address: 11, and set data: 00, and press the PAUSE button of the adjusting remote commander.
2) Select page: 0, address: 01, and set data: 00.
3) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
4) Select page: 0, address: 03, and set data: 00.

11. White Balance Check

Subject	Clear chart (Color bar standard picture frame)
Filter	Filter C14 for color temperature correction ND filter 1.0 and 0.3
Measurement Point	video output terminal
Measuring Instrument	Vectorscope
Specified Value	Fig. 5-1-11. A to C

Switch setting:

1) NIGHT SHOT switch ..... OFF

Checking method:

1) Check that the lens is not covered with either filter.
2) Select page: 2, address: 01, set data: 0F, and press the PAUSE button of the adjusting remote commander.
3) Check that the center of the white luminance point is within the circle shown Fig. 5-1-11.A.
4) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
5) Select page: 2, address: 01, set data: 23, and press the PAUSE button of the adjusting remote commander.
6) Place the C14 filter on the lens.
7) Check that the center of the white luminance point settles in the circle shown Fig. 5-1-11.B.
8) Remove the C14 filter, and place the ND filter 1.3 (1.0 +0.3) on the lens.
9) Check that the white luminance point stopped moving, and then remove the ND filter 1.3.
10) Check that the center of the white luminance point settles within the circle shown Fig. 5-1-11.C.

Processing after Completing Adjustments

1) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.

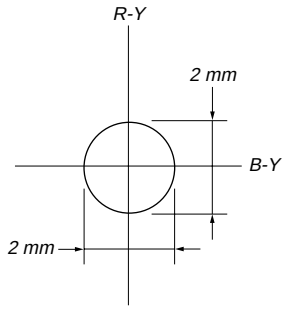

Fig.5-1-11. A

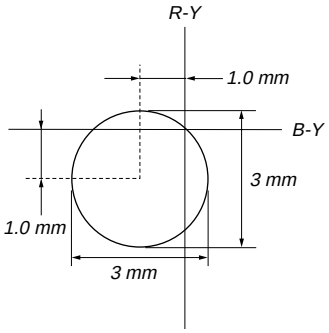

Fig.5-1-11. B

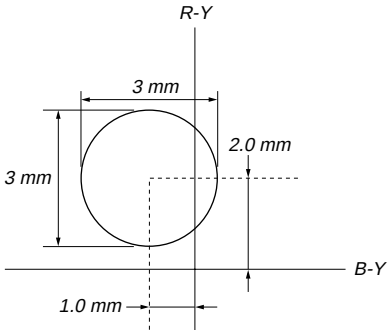

Fig.5-1-11. C

12. Angular Velocity Sensor Sensitivity Check (CCD-TR713E, CCD-TRV46E)

- This adjustment is performed only when replacing the angular velocity sensor.
  Although this adjustment need not be performed when the circuit is damaged, etc., check the operations.
- Note down the sensitivity displayed on the angular velocity sensor of the repair parts. At this time, note down also to which board it was attached to.
  Be sure to check because if attached incorrectly, the screen will vibrate up and down or left and right during hand-shake correction operations.

Precautions on the Parts Replacement
There are two types of repair parts.
Type A : ENC03EA or ENC 03JA
Type B : ENC03EB or ENC 03JB
Replace the broken sensor with a same type sensor. If replace with other parts, the image will vibrate up and down or left and right during hand-shake correction operations. After replacing, re-adjust according to the adjusting method after replacement.

Precautions on Angular Velocity Sensor
The sensor incorporates a precision oscillator. Handle it with care as if it dropped, the balance of the oscillator will be disrupted and operations will not be performed properly.

Page	Address	Data
F	43	78
F	44	6C

Note: The sensor sensitivity of SE451 and SE452 of the SE-80/81 board is written only on the repair parts.

1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENT
(CCD-TR516E)

Note 1: The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

Note 2: When replacing the LCD unit, be careful to prevent damages caused by static electricity.

[Adjusting connector]

Most of the measuring points for adjusting the viewfinder system are concentrated in CN910 of the VC-215 board.

Connect the measuring instruments via the CPC-7 jig (J-6082-382-A).

The following table shows the Pin No. and signal name of CN910.

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	9	RF AGC OUT
2	XCPC IN	10	REC RF
3	IR VIDEO	11	RF SWP
4	AFC F0	12	CAP FG
5	BPF MONI	13	EVF BL
6	PB RF	14	EVF BL 4.75V
7	RF AGC IN	15	VCO
8	REG GND	16	EVF VG

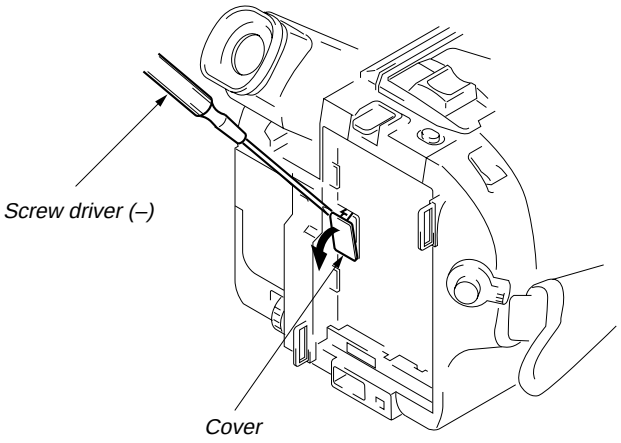

Fig.5-1-12

1. EVF Initial Data Input

Mode	VTR stop
Signal	No signal
Adjustment Page	E
Adjusting Address	C2 to CD

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.

2) Select page: E, and input the data in the following table.

Note: To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

3) Select page: 0, address: 01, and set data: 00.

Address	Data	Remark
C2	B0	VCO adjustment
C3	80	Bright adjustment
C4	77	Contrast adjustment
C5	80	White balance adjustment
C6	80	White balance adjustment
C7	68	Fixed value
C8	50	Fixed value
C9	F8	Fixed value
CA	A8	Fixed value
CB	3C	Fixed value
CC	B0	Backlight Consumption Current Adjustment
CD	70	Fixed value

2. VCO Adjustment (VF-119 board)

Set the VCO free-run frequency. If deviated, the EVF screen will be blurred.

Mode	VTR stop
Signal	No signal
Measurement point	Pin ⑮ of CN910 (VCO) on VC-215 board
Measuring instrument	Oscilloscope (DC range)
Adjustment page	E
Adjustment address	C2
Specified value	A = 1.8 ± 0.1Vdc

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
3) Check the GND level of the oscilloscope.
5) Select page: E, address: C2, change the data and set the VCO output voltage (A) to the specified value.
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
6) Select page: 0, address: 01, and set data: 00.

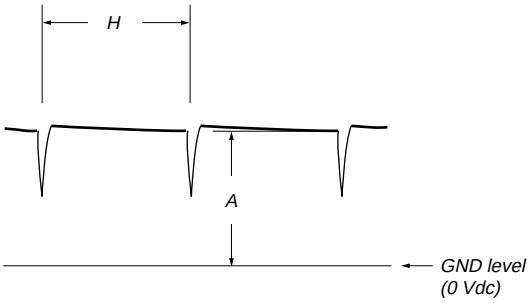

Fig. 5-1-13.

3. Bright Adjustment (VF-119 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement point	Pin ⑯ of CN910 (EVF VG) on VC-215 board
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	C3
Specified value	A = 7.2 ± 0.1 V

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
3) Select page: E, address: C3, change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
6) Select page: 0, address: 01, and set data: 00.

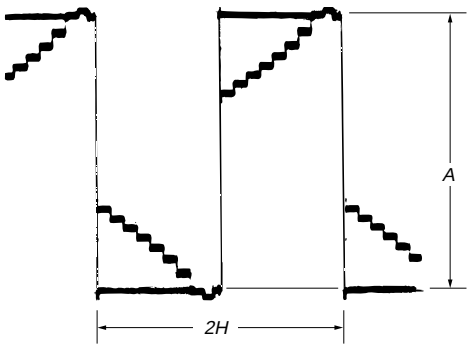

Fig. 5-1-14.

4. Contrast Adjustment (VF-119 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ⑯ of CN910 (EVF VG) on VC-215 board
Measuring Instrument	Oscilloscope
Adjustment Page	E
Adjustment Address	C4
Specified Value	A = 2.0 ± 0.1V

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
3) Select page: E, address: C4, change the data and set the voltage (A) between the 7 step peak and the pedestal to the specified value.
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
6) Select page: 0, address: 01, and set data: 00.

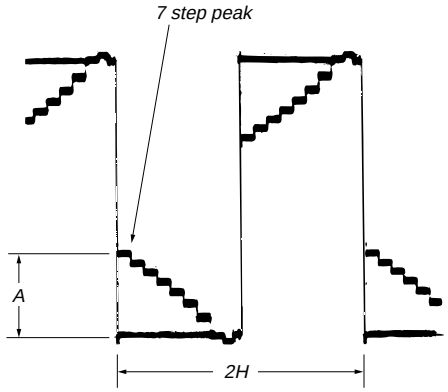

Fig. 5-1-15.

5. Backlight Consumption Current Adjustment (VF-120 board)

Set the backlight luminance and color temperature.
If deviated, the image may become dark or bright.

Mode	VTR stop
Signal	No signal
Measurement Point	+ Probe: Pin ⑭ of CN910 (EVF BL 4.75V) on VC-215 board – Probe: Pin ⑬ of CN910 (EVF BL) on VC-215 board
Measuring Instrument	Digital voltmeter
Adjustment Page	E
Adjustment Address	CC
Specified Value	A = 21.0 ± 1.0 mVdc

Note: Adjust 30 seconds after running on the power supply.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
3) Select page: E, address: CC, change the data and set the voltage difference (A) between Pin ⑭ of CN910 (EVF BL 4.75V) and Pin ⑬ of CN910 (EVF BL) to the specified value.
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
6) Select page: 0, address: 01, and set data: 00.

6. White Balance Adjustment (VF-119 board)

Correct the white balance.
If deviated, the reproduction of the EVF screen may degenerate.

Mode	VTR stop
Signal	No signal
Measurement Point	Check on EVF screen
Measuring Instrument	
Adjustment Page	E
Adjustment Address	C5, C6
Specified Value	The EVF screen should not be colored.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 51, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 7D, and set data: 03.
4) Select page: E, address: C5 and C6, set the data to the initial value.

Note: To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

Address	C5	C6
Data	80	80

5) Check that the LCD screen is not colored. If colored, change the data of page: E, address: C5 and C6 so that the EVF screen is not colored.

Note: To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

6) Select page: 2, address: 7D, and set data: 00.
7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
8) Select page: 0, address: 01, and set data: 00.

1-5. MONOCHROME ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENTS

Note: CCD- TR315E/TR415E/TR425E/TR515E/TR713E
CCD- TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E

1-5-1. Horizontal Slant Check

Mode	Playback
Signal	Alighment tape : For checking operations (WR5-5CSP) Monoscope section
Specified Value	± 1.5 °

Adjusting method:
1) Adjust RV904 (BRIGHT) (VF-99 board) so that the CRT can be seen easily and clearly.
2) Check that the difference between the horizontal line and the tilt of the black mask satisfies the specified value.

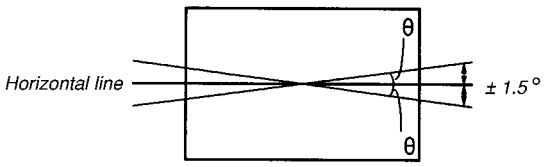

Specified value : The image should be within ± 1.5° of the horizontal line.

Fig. 5-1-16.

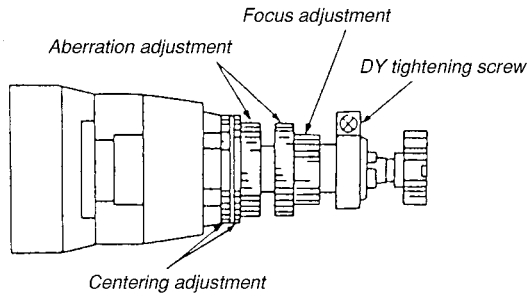

Fig. 5-1-17.

1-5-2. Centering Adjustment

Mode	Playback
Signal	Alighment tape : For checking operations (WR5-5CSP) Monoscope section
Specified Value	± 4%

Adjusting method:
1) Use the centering adjustment ring and adjust so that the left, right, top, and bottom sides of the display are uniform. (Refer to Fig. 5-1-17.)

Note : As the centering position changes due to earth magnetism, rotate it 360˚ in the horizontal direction, and adjust with the center section of the modifying position.

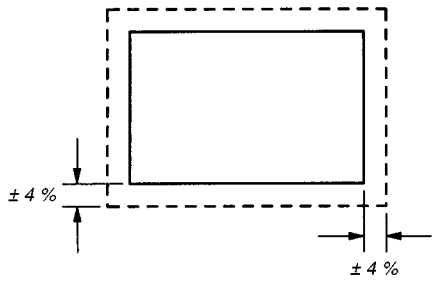

Adjustment value : ± 4 %

Fig. 5-1-18.

1-5-3. Focus Adjustment

Mode	Playback
Signal	Alighment tape : For checking operations (WR5-5CSP) Monoscope section

Adjusting method:
1) Adjust the focus ring to obtain the optimum focus. (Refer to Fig. 5-1-17.)

VF-99 BOARD (SIDE A)

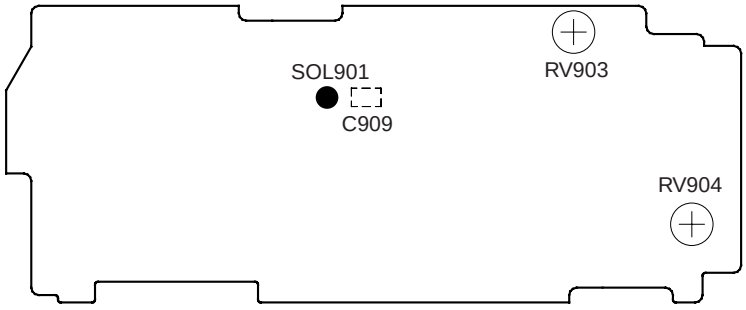

1-5-4. Aberration Adjustment

Mode	VTR stop
Signal	Dot pattern
Specified Value	b1≦2 • a1 b2≦0.8 • a2

Adjusting method:

1) Adjust the aberration adjustment ring so that the tracing of the dot satisfies the specified value.
2) If the centering becomes displaced here, perform the centering adjustment from the beginning again.

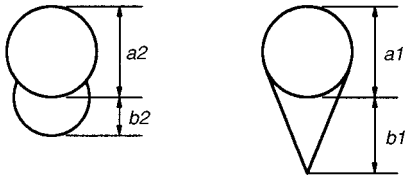

Fig. 5-1-19.

1-5-5. Horizontal Amplitude Adjustment (VF-99 board)

Mode	Playback
Signal	Alighment tape : For checking operations (WR5-5CSP) Monoscope section
Adjusting Element	C909 (SOL901)
Specified Value	± 1.5 °

Adjusting method:

1) Rotate RV903, and adjust the top and bottom sides of the monoscope image to the top and bottom edges of the display.
2) Rotate RV904 so that the brightness is the normal level.
3) Solder or unsolder SOL901 pattern of the H size adjustment capacitor (C909) to “short” or “open”, so that the horizontal direction over scan becomes 14 ± 6% (Left and right totals).

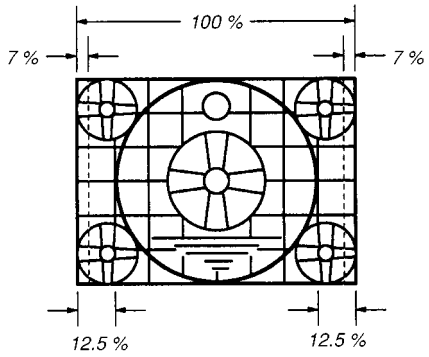

SOL901	Size H
Open	Small
Short	Big

VF-99 BOARD (SIDE A)

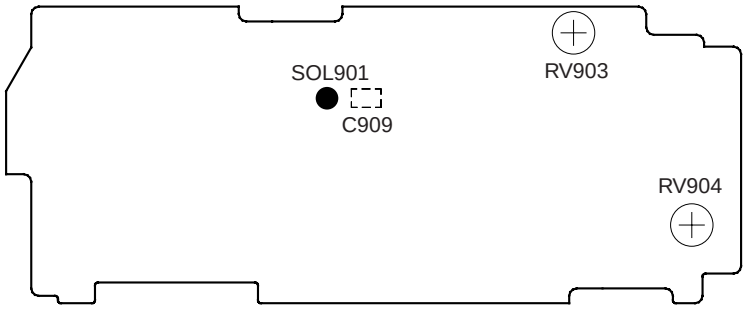

Fig. 5-1-20.

1-5-6. Vertical Amplitude Adjustment (VF-99 board)

Mode	Playback
Signal	Alighment tape : For checking operations (WR5-5CSP) Monoscope section
Adjusting Element	RV903
Specified Value	10 ± 3%

Adjusting method:

1) Adjust RV903 so that the vertical direction over scan becomes 10 ± 3% (Top and bottom totals).

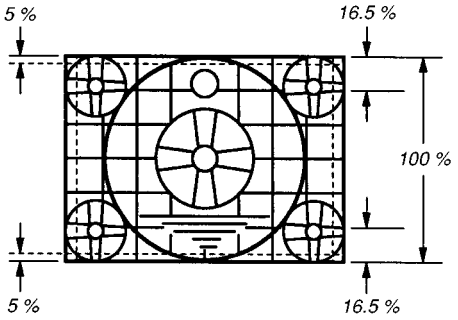

Fig. 5-1-21.

1-5-7. Brightness Adjustments (VF-99 board)

Mode	Playback
Signal	Alighment tape : For checking operations (WR5-5CSP) Monoscope section
Specified Value	RV904

Adjusting method:

1) Rotate RV904, and adjust so that the bright/dark sections of the gray scale are displayed correctly. (The bright section should be unsatisfactory till the cross hatch appears vague in the monoscope circle. The dark section should be unsatisfactory till the darkest section and the second darkest section of the gray scale cannot be differentiated.)

1-5-8. Horizontal Amplitude, Vertical Amplitude, Focus Check

"1-5-5. Horizontal Amplitude Adjustment" and "1-5-6. Vertical Amplitude Adjustment" should both satisfy the specified values. If not, perform the adjustments from the beginning again. In this case, perform "1-5-7. Brightness, Contrast Adjustments" again.
Moreover, check the focus, and if it found to be vague, perform "1-5-3. Focus Adjustment" and "1-5-4. Aberration Adjustment".

VF-99 BOARD (SIDE A)

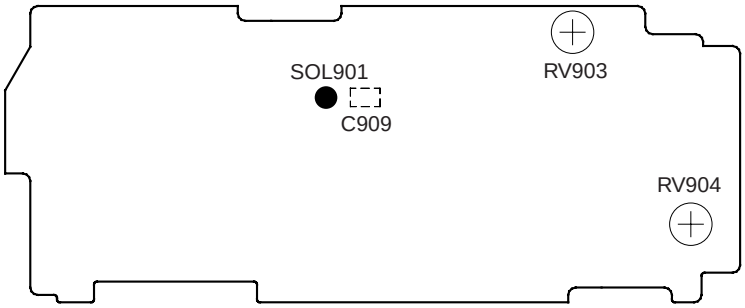

1-6. LCD SYSTEM ADJUSTMENT (TRV SERIES)

Note1: The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

Note2: When replacing the LCD unit, be careful to prevent damages caused by static electricity.

Note3: Set the brightness to the center using the LCD BRIGHT button.

Note4: LCD model :
CCD-TRV16E/TRV26E/TRV27E/TRV27EP/
TRV36E/TRV46E

[Adjusting connector]

Most of the measuring points for adjusting the LCD display are concentrated in the following connector.
CN5501 of the PD-107 board
Connect the measuring instruments via the multi CPC jig (J-6082-311-A).
The following table shows the Pin No. and signal name of the connector.

Pin No.	Signal name	Pin No.	Signal name
1	VB	2	VCO VOLTAGE.
3	VG	4	PANEL COM
5	VR	6	N.C.
7	SYNC / HD	8	H START
9	GND	10	GND

1. LCD Initial Data Input

Mode	VTR stop
Signal	Arbitrary
Adjustment Page	E
Adjustment Address	A5 to A7, B0 to B9, BF, C0, C1, CF, D0 to DD

Adjusting method:
1) Select page: 0, address: 01, and set data: 01.
2) Select page: E, and input the data in the following table.

Note: To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

3) Select page: 0, address: 01, and set data: 00.

Address	Data	Remark
A5	53	Fixed value
A6	96	Fixed value
A7	68	Fixed value
B0	3F	Fixed value
B1	C8	Fixed value
B2	1F	Fixed value
B3	1F	Fixed value
B4	00	Fixed value
B5	00	Fixed value
B6	F0	Fixed value
B7	4E	Fixed value
B8	08	Fixed value
B9	00	Fixed value
BF	80	Fixed value
C0	A4	Fixed value
C1	CF	Fixed value
CF	84	Bright adjustment
D0	77	Color adjustment
D1	98	White balance adjustment
D2	7B	White balance adjustment
D3	DC	Contrast adjustment
D4	80	D range adjustment
D5	89	V-COM level adjustment
D6	80	VCO adjustment
D7	80	V-COM level adjustment
D8	80	Fixed value
D9	77	Fixed value
DA	80	Fixed value
DB	52	Fixed value
DC	99	Fixed value
DD	99	Fixed value

2. VCO Adjustment (PD-107 board)

Set the VCO freerun frequency. If deviated, the LCD screen will be blurred.

Mode	VTR stop
Signal	No signal
Measurement point	Pin ② of CN5501 (VCO VOLTAGE) of PD-107 board
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	D6
Specified value	A = 1.70 ± 0.02V

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 7D, and set data: 00.
4) Select page: E, address: D6, change the data and set the VCO VOLTAGE (A) to the specified value.
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: E, address: D6, and read the data (D_{D6}).
7) Calculate the adjustment data (hexadecimal) from the following equations (hexadecimal calculation), and input to address: BF. (Refer to Table 5-1-2. Hexadecimal-Decimal conversion Table.)

   When $D_{D6} \geqq 55$

   $D_{BF} = D_{D6} - 55$

   When $D_{D6} < 55$

   $D_{BF} = 00$

Note2 : After setting data, be sure to press the PAUSE button.

8) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
9) Select page: 0, address: 01, and set data: 00.

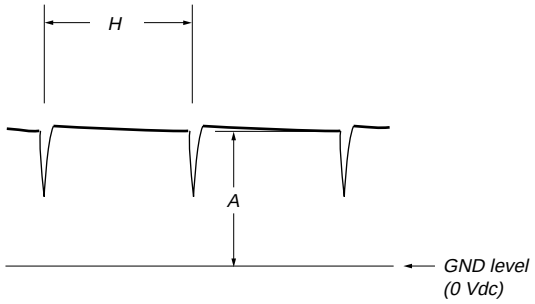

Fig. 5-1-22.

3. D range Adjustment (PD-107 board)

Set the D range of the RGB decoder used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement point	Pin ③ of CN5501 (VG) of PD-107 board External trigger : Pin ④ of CN5501 (PANEL COM)
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	D4
Specified value	A = 2.98 ± 0.05V

Note1 : Press the DISPLAY button and erase the screen indictors on the LCD screen.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 7D, and set data: 00.
4) Select page: E, address: D4, change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
7) Select page: 0, address: 01, and set data: 00.

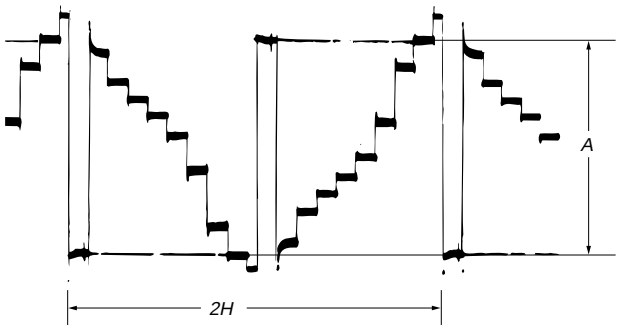

Fig. 5-1-23.

4. Bright Adjustment (PD-107 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement point	Pin ③ of CN5501 (VG) of PD-107 board External trigger : Pin ④ of CN5501 (PANEL COM)
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	CF
Specified value	A = 1.34 ± 0.05V

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 7D, and set data: 40.
4) Select page: E, address: CF, change the data and set the voltage (A) between the pedestal and white to the specified value. (The data of address: CF should be “41” to “BF”.)
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
7) Select page: 2, address: 7D, and set data: 00.
8) Select page: 0, address: 01, and set data: 00.

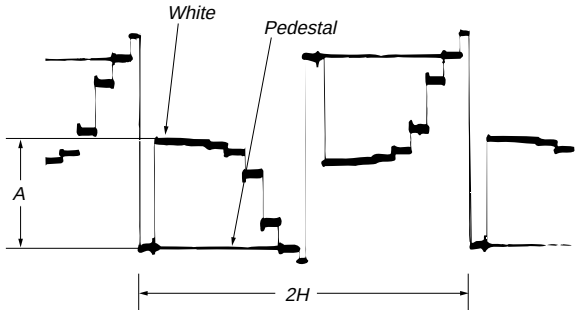

Fig. 5-1-24.

5. Contrast Adjustment (PD-107 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement point	Pin ③ of CN5501 (VG) of PD-107 board External trigger : Pin ④ of CN5501 (PANEL COM)
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	D3
Specified value	A = 2.54 ± 0.07V

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 7D, and set data: 00.
4) Select page: E, address: D3, change the data and set the voltage (A) between the pedestal (0 IRE) and 100 IRE to the specified value.
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
7) Select page: 0, address: 01, and set data: 00.

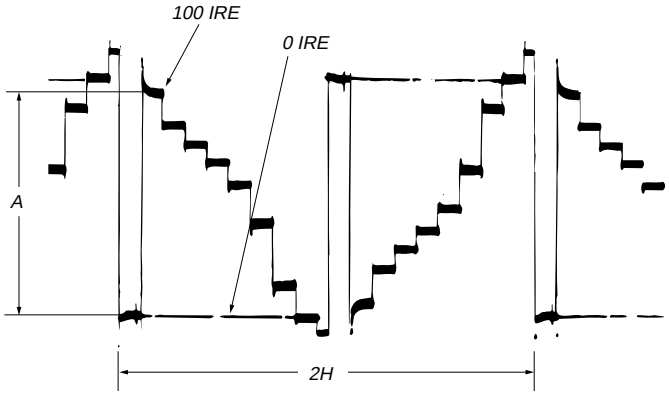

Fig. 5-1-25.

6. V-COM Level Adjustment (PD-107 board)

Set the common electrode drive signal level of LCD to the specified value.

Mode	VTR stop
Signal	No signal
Measurement point	Pin ④ of CN5501 (PANEL COM) of PD-107 board
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	D5
Specified value	A = 5.10 ± 0.05V

Note1 : Perform "Bright Adjustment" and "Contrast Adjustment" before this adjustment.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 7D, and set data: 00.
4) Select page: E, address: D5, change the data and set the PANEL COM signal level (A) to the specified value.
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
7) Select page: 0, address: 01, and set data: 00.

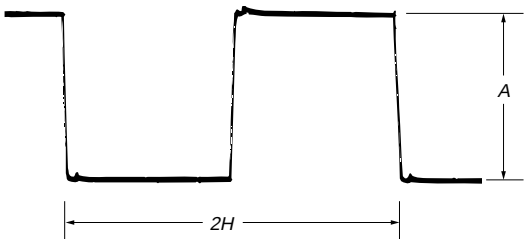

Fig. 5-1-26.

7. Color Adjustment (PD-107 board)

Set the color saturation to the standard value. If deviated, the color will be to dark or light.

Mode	VTR stop
Signal	No signal
Measurement point	Pin ③ of CN5501 (VG) of PD-107 board External trigger : Pin ④ of CN5501 (PANEL COM)
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	D0
Specified value	A = 0.03 ± 0.05V

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 57, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 7D, and set data: 20.
4) Select page: E, address: D0, change the data and set the voltage (A) between the green and white to the specified value.
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: E, address: D9, and set the same data as page: E, address: D0, and press the PAUSE button of the adjusting remote commander.
7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
8) Select page: 2, address: 7D, and set data: 00.
9) Select page: 0, address: 01, and set data: 00.

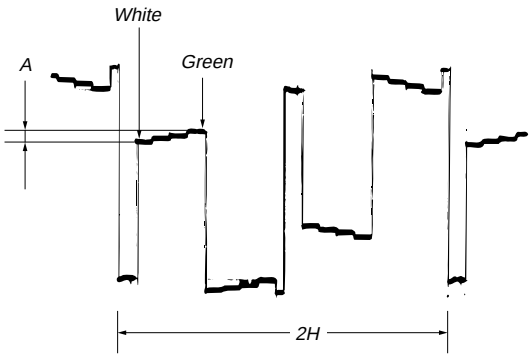

Fig. 5-1-27.

8. V-COM Adjustment (PD-107 board)

Set the DC bias of the common electrode drive signal of LCD to the specified value.
If deviated, the LCD display will move, producing flicker and conspicuous vertical lines.

Mode	VTR stop
Signal	No signal
Measurement point	Check on LCD display
Measuring instrument	
Adjustment page	E
Adjustment address	D7
Specified value	The brightness difference between the section Ⓐ and section Ⓑ is minimum.

Note1 : Perform “Bright Adjustment" and “Contrast Adjustment” before this adjustment.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 51, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 7D, and set data: 87.
4) Select page: E, address: D7, change the data so that the brightness of the section A and that of the section B is equal.
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
7) Select page: 2, address: 7D, and set data: 00.
8) Select page: 0, address: 01, and set data: 00.

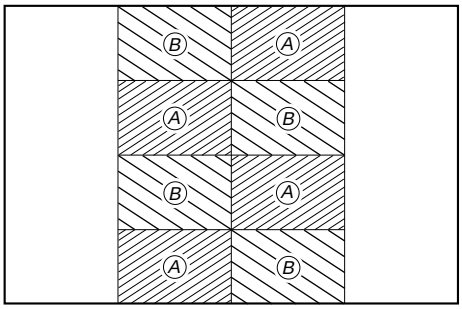

Fig. 5-1-28.

9. White Balance Adjustment (PD-107 board)

Correct the white balance.
If deviated, the LCD screen color cannot be reproduced.

Mode	VTR stop
Signal	No signal
Measurement point	Check on LCD display
Measuring instrument	
Adjustment page	E
Adjustment address	D1, D2
Specified value	The LCD screen should not be colored.

Note1: Check the white balance only when replacing the following parts. If necessary, adjust them.

1. LCD panel
2. Light induction plate
3. IC5502

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 51, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 7D, and set data: 03.
4) Select page: E, address: D1 and D2, and set the data to the initial value.

Note: To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

Address	Data
D1	94
D2	70

5) Check that the LCD screen is not colored. If colored, change the data of page: E, address: D1 and D2 so that the LCD screen is not colored.

Note: To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
7) Select page: 2, address: 7D, and set data: 00.
8) Select page: 0, address: 01, and set data: 00.

5-2. MECHANICAL SECTION ADJUSTMENT

Mechanism Parts Adjustments

For details on the adjustments and checks of mechanical section and replacements of mechanism parts, refer to the separate volume- "8 mm Video Mechanical Adjustment Manual VII B Mechanism ".

2-1. OPERATING WITHOUT A CASSETTE

1) Refer to "Section 2 DISASSEMBLY" and supply the power with the cabinet removed. (So that the mechanical deck can be operated.)
2) Connect the adjusting remote commander to the LANC terminal.
3) Turn on the HOLD switch of the adjusting remote commander.
4) Close the cassette compartment without loading a cassette and complete loading.
5) Select page: 0, address: 01, and set data: 01.
6) Select page: F, address: 2A, and set data: 01, and press the PAUSE button of the adjusting remote commander.
7) Select page: D, address: 10, and set data: 10, and press the PAUSE button of the adjusting remote commander.
8) Disconnect the power supply of the unit.
   By carrying out the above procedure, the unit can be operated without loading a cassette.
   Be sure to carry out "Processing after Operations" after checking the operations.
   Set the data of page: D, address: 10 to the following if the sensor ineffective mode, forced PLAYER (VTR) power supply ON mode or forced camera power supply ON mode are to be used together.
   Forced VTR power supply ON mode 12
   Forced camera power supply ON mode 11

[Processing after Operations]

1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 2A, and set data: 00, and press the PAUSE button of the adjusting remote commander.
3) Select page: D, address: 10, and set data: 00, and press the PAUSE button of the adjusting remote commander.
4) Select page: 0, address: 01, and set data: 00.
5) Disconnect the power supply of the unit.

2-2. TAPE PATH ADJUSTMENT

1. Preparations for adjustments

1) Clean the tape path face (tape guide, drum, capstan shaft, pinch roller).
2) Connect the adjusting remote commander to the LANC terminal.
3) Turn on the HOLD switch of the adjusting remote commander.
4) Select page: 0, address: 01, and set data: 01.
5) Select page: F, address: 2A, and set data: 04 and press the PAUSE button of the adjusting remote commander.
   (Be sure to perform "Processing after operations" after completing adjustments.)
6) Connect the oscilloscope.
   Channel 1: Pin ⑥ of CN910 of VC-215 board
   External trigger: Pin ⑪ of CN910 of VC-215 board
   (Connect the oscilloscope via the CPC-7 jig (J-6082-382-A).)
7) Playback the alignment tape for tracking. (WR5-1CP)
8) Check that the RF waveform of the oscilloscope is flat at both the entrance and the exit.
   If not flat, perform necessary adjustment according to the separate "8 mm Video Mechanical Adjustment Manual VII (B Mechanism)".
9) Perform "Processing after operations", after completing adjustments.

CN910 of VC-215 board

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	9	RF AGC OUT
2	XCPC IN	10	REC RF
3	IR VIDEO	11	RF SWP
4	AFC F_0	12	CAP FG
5	BPF MONI	13	EVF BL
6	PB RF	14	EVF BL 4.75V
7	RF AGC IN	15	VCO
8	REG GND	16	EVF VG

[Processing after operations]

1) Connect the adjusting remote commander, and turn on the HOLD switch.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: F, address: 2A, and set data: 00.
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 0, address: 01, and set data: 00.
6) Remove the power supply from the unit.

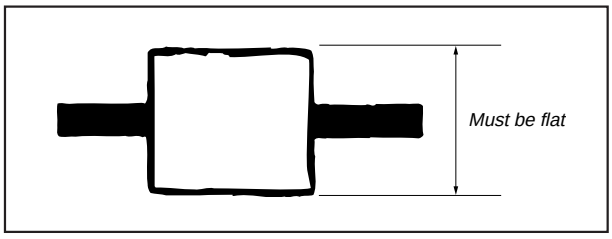

Fig. 5-2-1.

5-3. VIDEO SECTION ADJUSTMENTS

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 5-60.

3-1. PREPARATIONS BEFORE ADJUSTMENT

The following adjusting instruments are used for adjusting the video section.

3-1-1. Equipments to be Used

1) TV monitor
2) Oscilloscope: 2 phenomena, band 30 MHz or wider, with delay mode. (Use a 10:1 probe unless specified otherwise.)
3) Frequency counter
4) Pattern generator with video output terminal
5) Digital voltmeter
6) Audio generator
7) Audio level meter
8) Audio distortion meter
9) Audio attenuater
10) Regulated power supply
11) Alignment tape
    - For tracking adjustment (WR5-1CP)
      Part Code: 8-967-995-07
    - For video frequency characteristics adjustment (WR5-7NE) Part Code: 8-967-995-18
    - For checking Standard 8 mode operations
      For LP (WR5-4CL)
      Part Code: 8-967-995-56
      For SP (WR5-5CSP)
      Part Code: 8-967-995-47
    - For checking Hi8 mode operations
      For SP (WR5-8CSE)
      Part Code: 8-967-995-48
      For LP (WR5-8CLE)
      Part Code: 8-967-995-57

      Note: The following alignment tapes can also be used.
      1) WR5-3CL (8-967-995-36)
      2) WR5-4CSP (8-967-995-46)
    - For checking AFM stereo operations (WR5-9CS)
      Part Code: 8-967-995-28
      For checking BPF adjustment (WR5-11CS)
      Part Code: 8-967-995-76
12) Remote commander for adjustment (J-6082-053-B)
13) CPC-7 jig Part Code: J-6082-382-A

    Note : Connect the adjusting remote commander to the LANC jack, and set the HOLD switch to the "ADJ" side, or press the battery switch of the battery terminal using adhesive tape, etc.
14) Power code Part Code: J-6082-223-A
15) AFM DEV jig (J-6082-312-A)
16) IR Receiving jig (J-6082-383-A)
17) Extension cable (70P, 0.8mm) (J-6082-439-A)

3-1-2. Precautions on Adjusting

1) The adjustments of this unit are performed in the VTR mode or camera mode.
   To set to the VTR mode, set the power switch to “VTR” or set the “Forced VTR Power ON mode” using the adjusting remote commander (Note 1).
   To set to the Camera mode, set the power switch to “CAMERA” or set the “Forced Camera Power ON mode” using the adjusting remote commander (Note 2).
   After completing adjustments, be sure to exit the “Forced VTR Power ON Mode” or “Forced Camera Power ON Mode”. (Note 3)
2) By setting the “Forced VTR Power ON mode” or “Forced Camera Power ON mode”, the video section can be operate even if even if the front panel block (MA-345/346 board, power switch, microphone unit) has been removed. When removing the front panel block disconnect the following connector.
   1. VC-215 board CN916 (18P 0.5mm)
3) The lens block (CD-210/211 board) need not be connected except during battery end adjustment. To remove, disconnect the following connectors.
   1. VC-215 board CN501 (16P, 0.5mm)
   2. VC-215 board CN551 (23P, 0.5mm)
4) The video light model need not be assembled. If removing it. disconnect the following connector.
   1. VC-215 board CN909 (4P, 0.8mm)
5) Cabinet (R) (Camera function switch (CF-60/61board), LCD block, viewfinder) need not be connected. But removing the cabinet (R) (removing the VC-215 board CN911) means removing the lithium 3V power supply (CF-60/61 board) , data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and data on the history use. (Refer to the “Service Mode” for the data on the history use.) To remove the cabinet (R), disconnect the following connectors.
   1. VC-215 board CN911 (45P, 0.5mm)
   2. DD-117 board CN933 (10P, 1.0mm)

Note 1: Setting the “Forced VTR Power ON” mode (VTR mode)
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 02, and press the PAUSE button of the adjusting remote commander.

The above procedure will enable the VTR power to be turned on with the front panel block removed.
After completing adjustments, be sure to exit the “Forced VTR Power ON mode”.

Note 2: Setting the “Forced Camera Power ON” mode (Camera mode)
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjusting remote commander.

The above procedure will enable the camera power to be turned on with the front panel block removed.
After completing adjustments, be sure to exit the “Forced Camera Power ON mode”.

Note 3: Exiting the “Forced Power ON” mode
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjusting remote commander.
3) Select page: 0, address: 01, and set data: 00.

3-1-3. Adjusting Connectors

Some of the adjusting points of the video section are concentrated at VC-215 board CN910. Connect the measuring instruments via the CPC-7 jig (J-6082-382-A). The following table lists the pin numbers and signal names of CN910.

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	9	RF AGC OUT
2	XCPC IN	10	REC RF
3	IR VIDEO	11	RF SWP
4	AFC F0	12	CAP FG
5	BPF MONI	13	EVF BL
6	PB RF	14	EVF BL 4.75V
7	RF AGC IN	15	VCO
8	REG GND	16	EVF VG

Table 5-3-1.

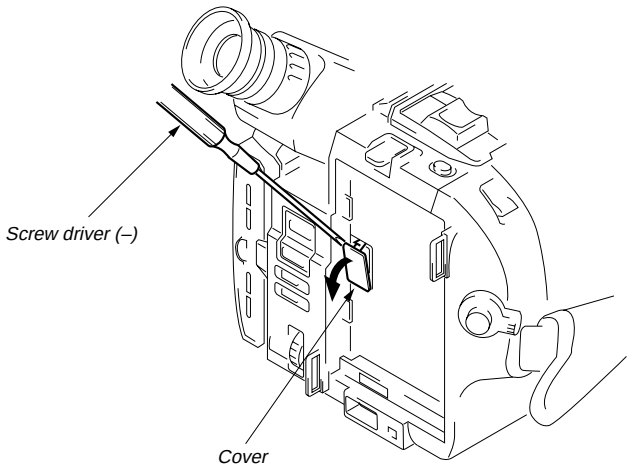

Fig. 5-3-1.

3-1-4. Connecting the Equipments

Connect the measuring instruments as shown in Fig. 5-3-2 and perform the adjustments.

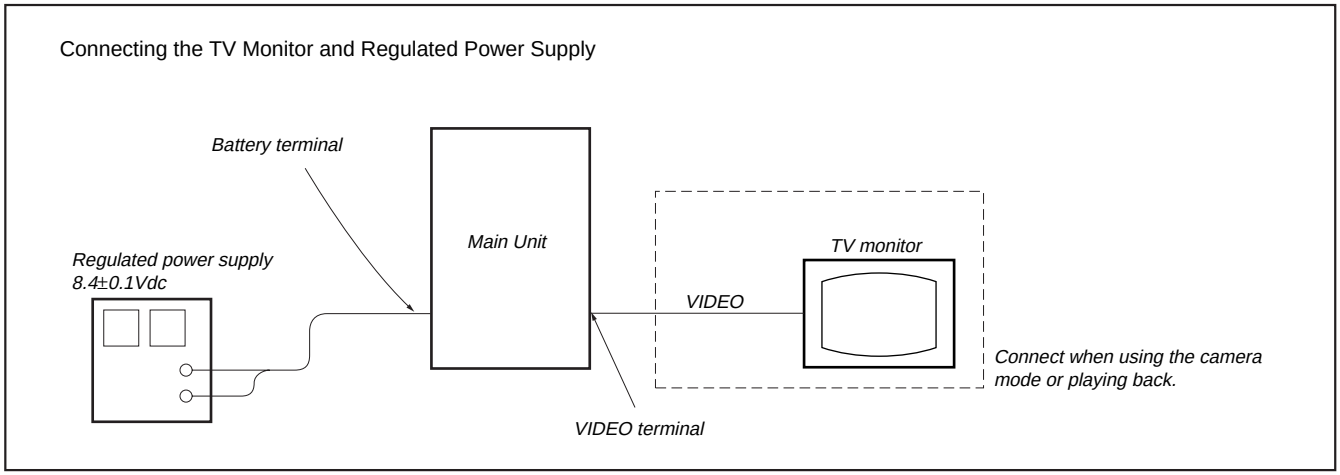

Fig. 5-3-2.

3-1-5. Alignment Tape

The following table lists alignment tapes which are available. Use the tape specified in the signal column for each adjustment. If the type of tape to be used for checking operations is not specified, use whichever type.

Name	Record-ing mode	Tape type	Tape speed	Usage
Tracking WR5-1CP	Standard8	MP	SP	Tape path adjustment Switching position adjustment
Video frequency characteristics WR5-7CE	Hi8	ME	LP	Frequency characteristics adjustment
Operation check (SP mode) WR5-5CSP	Standard8	MP	SP	Checking operations
Operation check (SP mode) WR5-8CSE	Hi8	ME	SP	
Operation check (LP mode) WR5-4CL	Standard8	MP	LP	
Operation check (LP mode) WR5-8CLE	Hi8	ME	LP	
AFM stereo Operation check WR5-9CS	Standard8	MP	SP	AFM stereo Checking operations
BPF adjustment WR5-11CS	Standard8	MP	SP	BPF adjustment

Tape type
MP ..... Particle type metal tape
ME ..... Evaporated type metal tape

Table 5-3-2.

Fig. 5-3-3. shows the 75% color bar signals recorded on the alignment tape.

Note: Measure using the VIDEO terminal (Terminated at 75 Ω).

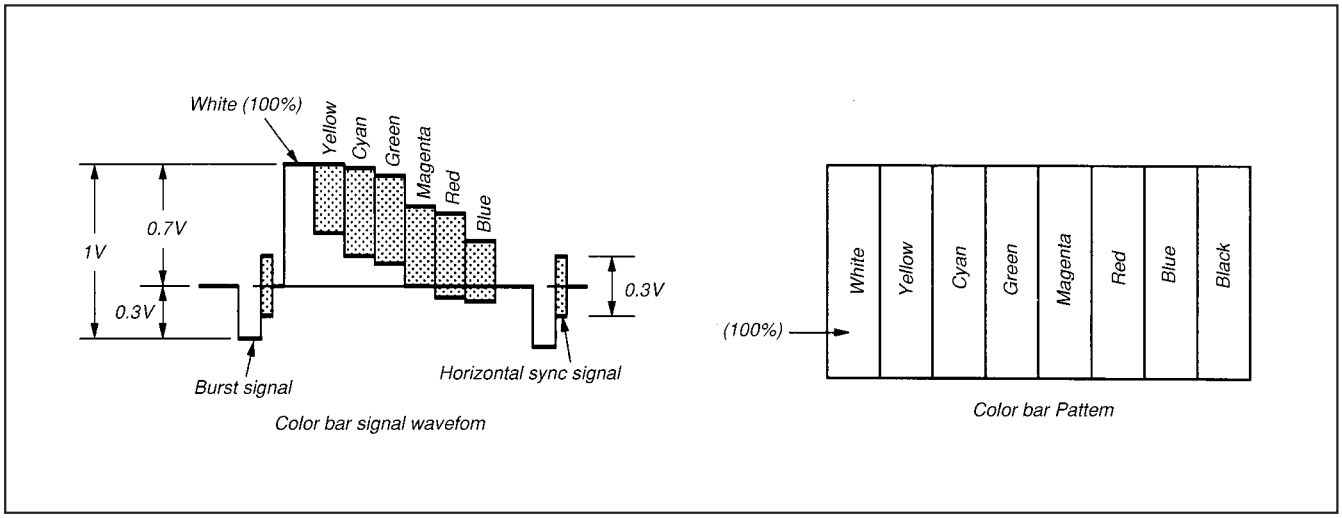

Fig. 5-3-3. Color Bar Signals of the Alignment Tape

3-1-6. Input/Output Level and Impedance

Video output Phono jack, 1 Vp-p, 75Ω, unbalanced, sync negative

Audio output Phono jack, Output: –7.5 dBs, (at load impedance 47 kΩ), impedance less than 2.2 kΩ

3-1-7. Recording Mode (Standard 8/Hi8) switching (Hi8 model)

The record mode (Standard 8/Hi8) of this unit switches as shown in the following table. The playback mode (Standard 8/Hi8) switches automaticaly according to the recording mode of the tape played back.

Tape Used	Recording Mode
ME	Hi8
Hi8 MP	
MP	Standard 8

3-1-8. Service Mode

Additional note on adjustment

Note: After the completion of the all adjustments, cancell the service mode by either of the following ways.

1) Unplug the main power supply and remove the lithium battery. (In this case, date and time and menu setting have been set by users are canceled. Perform resetting.)
2) After data on page: D and F is restored, select page: 0, address: 01, and return the data to 00. And when data on page: 3 is changed, return the data to the original condition.

1. Test mode setting

Set/release each test mode. Select page: 0, address: 01, and set data: 01 before setting the data of page D and F.

Page F	Address 2A

Data	Function
00	Normal
01	Test mode Various emergency prohibitions and releases Drum emergency, capstan emergency, loading motor emergency, reel emergency, tape top and end, DEW detection

Page D	Address 10

Data	Function
00	Normal
01	Camera power ON
02	VTR power ON
03	Camera+VTR power ON

* For page D and F, the data set will be recorded in the nonvolatile memory by pressing the PAUSE button on the adjusting remote commander. Take note that, in this case, the test mode will not be released even if the main power has been turned off (8.4 Vdc).

* Be sure to return this address data to 00 after completing adjustments/repairs and press the PAUSE button of the adjusting remote commander. And select page: 0, address: 01, and set data: 00.

2. Emergency Memory Address

Page F	Address 10 to 1B

Address	Contents
10	1st EMG code
12	Upper: MSW code when the mechanism starts shifting the 1st time Lower: MSW code when the 1st emergency occurs
13	Lower: Target MSW code of the 1st emergency occurs
14	2nd EMG code
16	Upper: MSW code when the mechanism starts shifting the 2nd time Lower: MSW code when the 2nd emergency occurs
17	Lower: Target MSW code of the 2nd emergency occurs
18	Last EMG code
1A	Upper: MSW code when the mechanism starts shifting the last time Lower: MSW code when the last emergency occurs
1B	Lower: Target MSW code of the last emergency occurs

When there are no emergency, data 00 will be written in the above addresses (10 to 1B). When the first emergency occurs, the data corresponding to the emergency will be written in the address (10 to 13) for this first emergency. In the same way, when the second emergency occurs, the data corresponding to the emergency will be written in the address (14 to 17) for this second emergency.
The data corresponding to the emergency occurring the last will be written in the address (18 to 1B) for this last emergency.
Therefore the data of addresses 18 to 1B are renewed each time an emergency occurs.

Note 1: Be sure to rewrite the data of addresses 10 to 1B to 00 after repairs/adjustments.

Note 2: When rewriting the data, be sure to press the PAUSE buttton of the remote commander after setting the data.

2-1. EMG CODE (Emergency Code)

The codes shown in the following table which correspond to errors that occur are recorded in addresses 10, 14, and 18.

Code	Type of Emergency
00	No error
10	Loading motor time-out during load
11	Loading motor time-out during unload
20	T reel emergency (reel slack) during unloading
21	S reel emergency (reel slack) during unloading
22	T reel emergency
23	S reel emergency
30	FG emergency at the start up of the capstan
31	FG emergency during the normal rotation of the capstan
40	FG emergency at the start up of the drum
41	PG emergency at the start up of the drum
42	FG emergency during the normal rotation of the drum
43	PG emergency during the normal rotation of the drum
44	Phase emergency during the normal rotation of the drum

2-2. MSW Codes

- The lower parts of the data of addresses 12, 16 and 1A represent the MSW codes (mode switch, mechanism position) when errors occurs.
- The upper parts of the data of addresses 12, 16 and 1A represent, when the mechanism position is to be moved, the MSW codes at the start of movement (when moving the loading motor).
- The lower parts of the data of addresses 13, 17 and 1B represent the MSW codes of the desired movement when the mechanism position is to be moved.

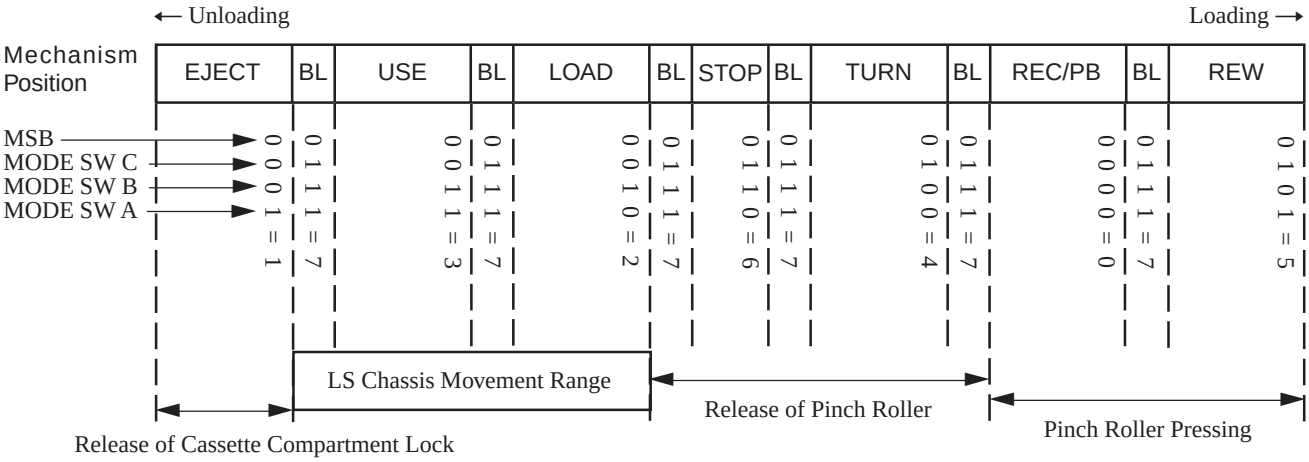

Mechanism Position	MSW Code	Contents
EJECT	1	Position at which the cassette compartment lock is released. The mechanism will not move any further in the unloading direction.
BL	7	BLANC code. Between two codes. The mechanism will not be stopped by this code while it is operating.
USE	3	EJECT completion position. When the cassette is ejected, the mechanism will stop at this position.
LOAD	2	Code during loading/unloading. Code that is used while the LS chassis is moving.
STOP	6	Normal stop position. The pinch roller separates, the tension regulator returns, and the brakes of both reels turn on.
TURN	4	Position at which is used when the pendulum gear swings from S to T or from T to S.
RECP/PB	0	PB, REC, CUE, REV, PAUSE, FF positions. The pinch roller is pressed and tension regulator is on.
REW	5	REW position. REW are carried at this position. The mechanism will not move any further in the loading direction.

3. Bit value discrimination

Bit values must be discriminated using the display data of the adjusting remote commander for the following items. Use the table below to discriminate if the bit value is “1” or “0”.

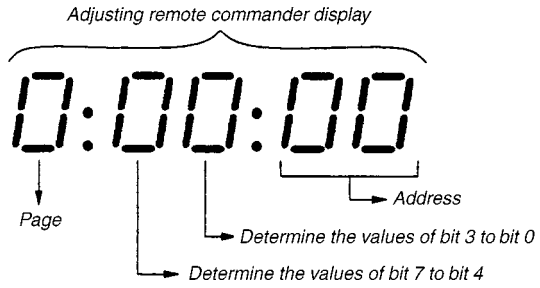
Adjusting remote commander display
0:00:00
Page
Address
Determine the values of bit 3 to bit 0
Determine the values of bit 7 to bit 4

	Remote controller display	Bit value			
		bit 3 or bit 7	bit 2 or bit 6	bit 1 or bit 5	bit 0 or bit 4
	0	0	0	0	0
	1	0	0	0	1
	2	0	0	1	0
	3	0	0	1	1
	4	0	1	0	0
	5	0	1	0	1
	6	0	1	1	0
	7	0	1	1	1
Ⓐ→	8	1	0	0	0
	9	1	0	0	1
	A (R)	1	0	1	0
	B (b)	1	0	1	1
	C (c)	1	1	0	0
	D (d)	1	1	0	1
Ⓑ→	E (E)	1	1	1	0
	F (F)	1	1	1	1

(Example) If the remote commander display data is “8E”, bit values from bit7 to bit4 can be discriminated from column Ⓐ, and those from bit3 to bit0 from column Ⓑ.

4. Switch check (1)

Page 3	Address 43

Bit	Function	When bit value=1	When bit value=0
0	VTR MODE SW	OFF	ON
1	CAM MODE SW	OFF	ON
2	START/STOP SW	OFF	ON
3	EJECT SW	OFF	ON
4	CC DOWN SW	OFF	ON
5			
6			
7			

Using method:

1) Select page: 3, address: 43.
2) By discriminating the bit value of display data, the state of the switches can be discriminated.

5. Switch check (2)

Page 3	Address 60 to 66

Using method:
1) Select page: 3, address: 60 to66.
2) By discriminating the display data, the pressed key can be discriminated.

Address	Data							
	00 to 0D	0E to 29	2A to 46	47 to 68	69 to 90	91 to BE	BF to EA	EB to FF
60 (AD0: IC604 ⑨③)	LASER LINK (FK-8500 S008)	STOP (FK-8500 S001)	FF (FK-8500 S003)		EDIT SEARCH (+) (FK-8500 S009)	EDIT SEARCH (–) (FK-8500 S010)		No key input
61 (AD1: IC604 ⑨④)		PAUSE (FK-8500 S002)	REW (FK-8500 S004)	PLAY (FK-8500 S006)				No key input
62 (AD2: IC604 ⑨⑤)		PICTURE EFFECT (CF-60/61 S006)	MENU (CF-60/61 S010)	EXECUTE (CF-60/61 S015)	TIME (CF-60/61 S021)	5sec REC (CF-60/61 S024)	PUSHING REC (CF-60/61 S024)	NORMAL REC (CF-60/61 S024)
63 (AD3: IC604 ⑨⑥)	PROGRAM AE SPOT LIGHT (CF-60 S020)	PROGRAM AE PORTRAIT (CF-60 S020)	PROGRAM AE SPORT LESSON (CF-60 S020)	PROGRAM AE BEACH & SKI (CF-60 S020)	PROGRAM AE SUNSET & MOON (CF-60 S020)	PROGRAM AE LANDSCAPE (CF-60 S020)		PROGRAM AE AUTO (CF-60 S020)
64 (AD4: IC604 ⑨⑦)			EXPOSURE (CF-60/61 S012)	BACK LIGHT (CF-60/61 S017)	FADER (MF-8500 S002)	FOCUS INFINITY (MF-8500 S001)	FOCUS AUTO (MF-8500 S001)	FOCUS MANUAL (MF-8500 S001)
65 (AD5: IC604 ⑨⑧)	DATE (CF-60/61 S003)	COUNTER RESET (CF-60/61 S008)	END SEARCH (CF-61 S013)	TITLE (CF-60/61 S018)	DISPLAY (CF-61 S022)			No key input
66 (AD6: IC604 ⑨⑨)	PROGRAM AE (CF-61 S004)	BRIGHT(+) (PD-107 S5801)	BRIGHT(–) (PD-107 S5802)	VOLUME(+) (PD-107 S5803)	VOLUME(–) (PD-107 S5804)	PANEL REVERSE (FP-642)	PANEL CLOSE (FP-642)	PANEL NORMAL (FP-642)

6. Headphone jack check

Page 3	Address 45

Bit	Function	When bit value=1	When bit value=0
1	Headphone jack	Headphone jack is used	

Using method:
1) Select page: 3, address: 45.
2) By discriminating the bit value of display data, the state of the headphone jack can be discriminated.

7. Input/output selection check

Page 3	Address 49

Bit	Function	When bit value=1	When bit value=0
1			
2			
3			
4	MIC jack		MIC jack is used
5	AUDIO terminal	Monaural	
6	VIDEO terminal	VIDEO terminal is used	

Using method:
1) Select page: 3, address: 49.
2) By discriminating the bit value of display data, the state of the input/output selection can be discriminated.

8. LED, LCD (display window) check

Page 3	Address 05	Bit5

Using method:
1) Select page: 3, address: 05, and set the bit value of Bit5 to “1”.
2) Check that all LED are lit and all segments of LCD (display window) are lit.
3) Select page: 3, address: 05, and set the bit value of Bit5 to “0”.

9. Record of Use Check

Page 3	Address A2 to AA

Address	Function		Remarks
A2	Drum rotation counted time (BCD code)	Hour (H)	1000th place digit and 100th place digit of counted time (decimal digit)
A3		Hour (L)	10th place digit and 1st place digit of counted time (decimal digit)
A4		Minute	
A5	User initial power on date (BCD code)	Year	After setting the clock, set the date of power on next
A6		Month	
A7		Day	
A8	Final condensation occurrence date (BCD code)	Year	
A9		Month	
AA		Day	

Using method:
1) The record of use data is displayed at page 3, addresses: A2 to AA.

Note: This data will be erased when the coin lithium battery is removed (reset).

3-2. SYSTEM CONTROL SYSTEM ADJUSTMENT

1. Initialization of D, E, F Page Data

If the D, E, F page data is erased due to some reason, perform "1-2. INITIALIZATION OF D, E, F PAGE DATA", of "5-1. CAMERA SECTION ADJUSTMENT".

2. Battery End Adjustment (VC-215 board)

Set the battery end voltage.
If the voltage is incorrect, the life of the battery will shorten.
The image at the battery end will also be rough.

Mode	Camera recording
Subject	Arbitrary
Measurement Point	LCD display of the adjusting remote commander
Measuring Instrument	
Adjustment Page	D
Adjustment Address	30 to 34

Note 1: The lens block and cabinet (R) must be connected.

Switch setting
1) AUTO FOCUS ..... OFF
2) LCD screen ..... Closed
3) NIGHT SHOT ..... OFF
4) VIDEOLIGHT ..... OFF
(VIDEO LIGHT model)

Connection:
1) Connect the regulated power supply and the digital voltmeter to the battery terminal as shown in Fig. 5-3-4.

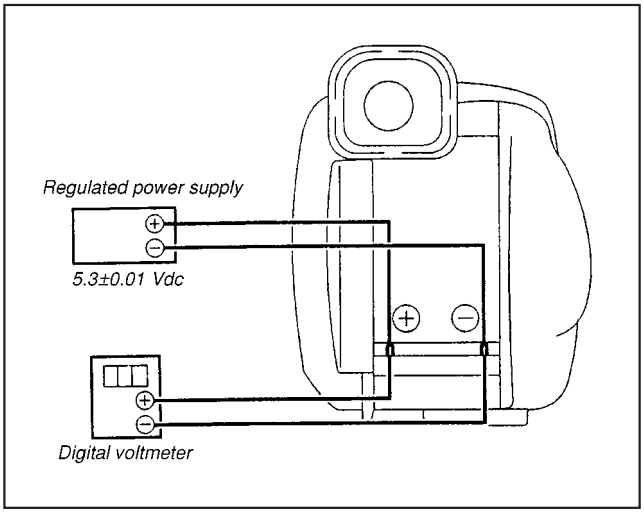

Fig. 5-3-4.

Adjusting method:
1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display is 6.1±0.1Vdc.
2) Turn off the power supply.
3) Turn on the HOLD switch of the adjusting remote commander.
4) Turn on the power supply.
5) Load a cassette, and set to the camera recording mode.
6) Select page: 0, address: 01, and set data: 01.
7) Decrease the output voltage of the regulated power supply so that the digital voltmeter display is 5.30±0.01Vdc.
8) Select page: 0, address: FF, data: 00 (section 00)
9) Select page: 3, address: 5D, read the data, and this data is named Dref.
10) Select page: D, address: 30, set data: Dref, and then press the PAUSE button of the adjusting remote commander.
11) Convert Dref to decimal notation, and obtain Dref '. (Refer to Table 5-1-2. "Hexadecimal-decimal conversion table")
12) Calculate D_{31}', D_{32}', D_{33}' and D_{34}' using following equations (decimal calculation), convert it to a hexadecimal number, and input each adjustment address.
    Address: 31 $D_{31}' = Dref' + 5$
    Address: 32 $D_{32}' = Dref' + 20$
    Address: 33 $D_{33}' = Dref' + 35$
    Address: 34 $D_{34}' = Dref' + 40$

Note 3: After setting each data, be sure to press the PAUSE button.

13) Select page: 3, address: FO, "read the data", and set the same read the data as page: D, address: 5F, and the press the PAUSE button of the adjusting remote commander.
14) Select page: 0, address: 01, and set data: 00.

3-3. SERVO SYSTEM ADJUSTMENTS

1. CAP FG Offset Adjustment (VC-215 board)

Improve the capstan servo characteristic. If it is not correct. jitters will increase.

Mode	Camera recording (SP mode)
Subject	Arbitrary
Measurement Point	Pin ⑫ of CN910 (CAP FG)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	69
Specified value	Duty = 50±0.5%

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 01, and set data: 81, and press the PAUSE button of the adjustment remote commander. (to start up automatic CAP FG offset adjustment.)
3) Select page: 2, address: 02, and check that the data is "01".
4) Check that Duty of CAP FG signal satisfies the specified value. If not, select page: 2, address: 01, set data: 00, and press the PAUSE button, and then, repeat steps 2) to 4).
5) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjustment remote commander.
6) Select page: 0, address: 01, and set data: 00.

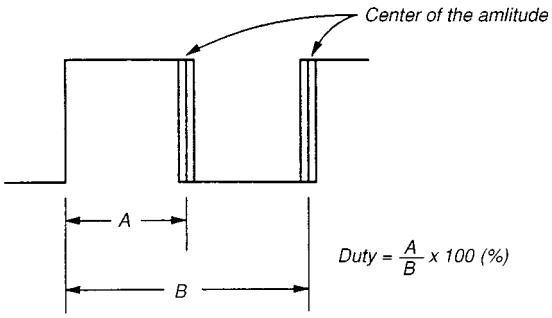

Fig. 5-3-5.

2. RF Switching Position Adjustment (VC-215 Board)

If deviated in this case causes switching noise or jitter on the played back screen.

Mode	Playback
Signal	Alignment tape: For tracking adjustment WR5-1CP
Measurement Point	CH1: Pin ⑪ of CN910 (RF SWP) CH2: Pin ⑥ of CN910 (PB RF)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	7C (upper digits), 7D (lower digits)
Specified Value	t1 = 0±10µsec

Adjusting Method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 2A, and set data: 20, and press the PAUSE button of the adjustment remote commander.
3) Select page: F, address: 7C, change the data and minimize "t1", and then press the PAUSE button of the adjustment remote commander. (Coarse adjustment)
4) Select page: F, address: 7D, change the data and adjust so that the switching position (t1) becomes the specified value. (Fine adjustment)
5) Press the PAUSE button of the adjustment remote commander.
6) Select page: F, address: 2A, and set data: 00, and press the PAUSE button of the adjustment remote commander.
7) Select page: 0, address: 01, and set data: 00.

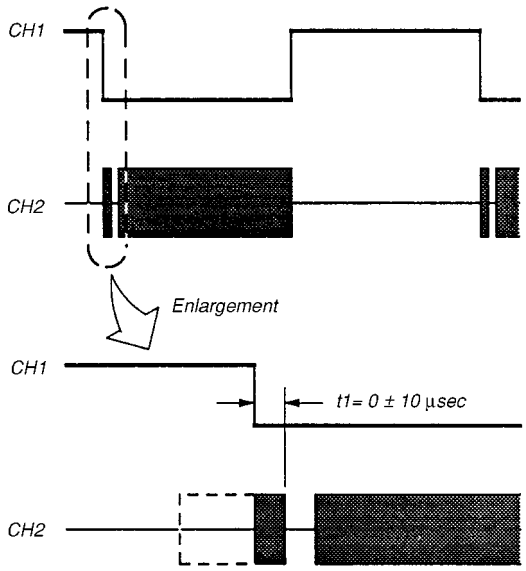

Fig. 5-3-6.

3-4. VIDEO SYSTEM ADJUSTMENTS

Video system adjustments must be performed in the following order.

[Adjusting Order]
1. 28MHz origin oscillation adjustment
2. AFC f0 adjustment
3. Filter f0 adjustment
4. Y OUT level adjustment
5. C OUT level adjustment
6. RP filter f0 adjustment
7. Hi8 REC Y current adjustment
8. Standard REC Y current adjustment
9. Hi8 REC L level adjustment
10. Standard8 REC L level adjustment
11. REC C current adjustment

1. 28 MHz Origin Oscillation Adjustment (VC-215 board)

Set the frequency of the clock for synchronization.
If deviated, the synchronization will be disrupted and the color will become inconsistent.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ㊻ of IC202 or pin ⑫ of IC501
Measuring Instrument	Frequency counter
Adjustment Page	F
Adjustment Address	2C
Specified Value	Pin ㊻ of IC202 : f=4433593.75±17Hz Pin ⑫ of IC501 : f=14187500±55Hz

Adjusting method:
1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 61, and set data: 30.
3) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
4) Select page: F, address: 2C, change the data and set the clock frequency(f) to the specified value.
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: 2, address: 61, and set data: 10.
7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
6) Select page: 0, address: 01, and set data: 00.

2. AFC f0 Adjustment (VC-215 board)

Adjust the pull-in range of the A/D converted clock generator during playback.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ④ of CN910 (AFC f0)
Measuring Instrument	Digital voltmeter
Adjustment Page	F
Adjustment Address	4A
Specified Value	A = 2.10±0.05Vdc

Adjusting method:
1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 4D, and press the PAUSE button of the adjusting remote commander.
3) Select page: F, address: 4A, change the data and set the DC voltage (A) to the specified value.
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
6) Select page: 0, address: 01, and set data: 00.

3. Filter f0 Adjustment (VC-215 board)

Minimize the chroma signal residual components during composite video signal input.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ③ of CN910 (IR VIDEO)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	4D
Specified Value	Minimum residual chroma signal components (A = Bellow 35mV)

Switch setting:

LASER LINK ..... ON (Red LED is lit)

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 4F, and press the PAUSE button of the adjusting remote commander.
3) Select page: F, address: 4D, change the data and minimize the residual chroma signal components (A).
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
6) Select page: 0, address: 01, and set data: 00.

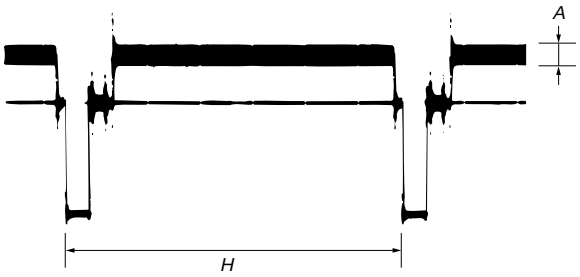

Fig. 5-3-7.

4. Y OUT Level Adjustment (VC-215 board)

Set the Y signal output level.

Mode	VTR stop
Signal	No signal
Measurement Point	VIDEO terminal (75Ω terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	49
Specified Value	A = 300±5mV

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 61, and set data: 30, and press the PAUSE button of the adjusting remote commander.
4) Select page: F, address: 49, change the data and set the SYNC level (A) to the specified value.
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: 2, address: 61, and set data: 10.
7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
8) Select page: 0, address: 01, and set data: 00.

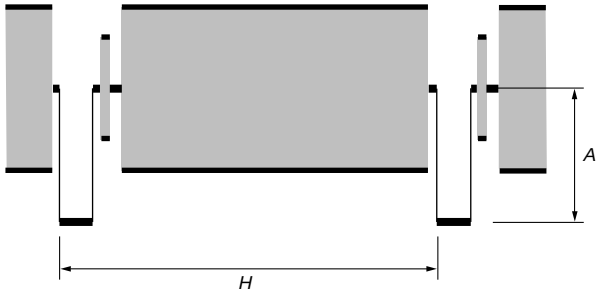

Fig. 5-3-8.

5. C OUT Level Adjustment (VC-215 board)

Set the chroma signal output level.

Mode	VTR stop
Signal	No signal
Measurement Point	VIDEO terminal (75Ω terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	4B
Specified Value	A = 300±5mV

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
3) Select page: 2, address: 61, and set data: 30, and press the PAUSE button of the adjusting remote commander.
4) Select page: F, address: 4B, change the data and set the burst level (A) to the specified value.
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: 2, address: 61, and set data: 10.
7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
8) Select page: 0, address: 01, and set data: 00.

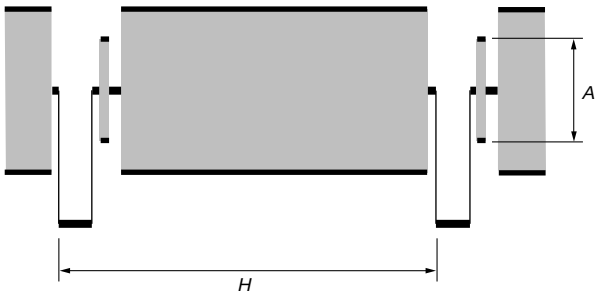

Fig. 5-3-9.

6. RP Filter f0 Adjustment (VC-215 board)

Adjust the LPF of the playback RF amplifier.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ⑨ of CN910 (RF AGC OUT)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	4E
Specified Value	A = Below 10mVp-p

Connection:

1) Input a 14.2MHz, 400mVp-p CW signal to Pin ⑦ of CN910 (RF AGC IN).

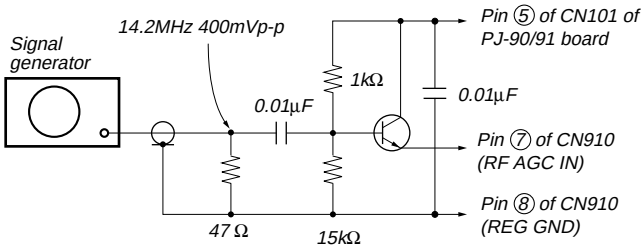

Transistor : General NPN transistor (2SC403. etc)
47Ω resistor : 1-249-401-11
1kΩ resistor : 1-249-417-11
15kΩ resistor : 1-249-431-11
0.01µF capacitor : 1-101-004-00

Fig. 5-3-10.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 35, and press the PAUSE button of the adjusting remote commander.
3) Only for Standard8 model, select page: D, address: 15, after memorizing the data , set the bit value of bit0 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
4) Select page: F, address: 4E, change the data and minimize the 14.2 MHz signal level (A).
5) Press the PAUSE button of the adjusting remote commander.
6) Select page: D, address: 15, and set the data memorized at step 3), and press the PAUSE button of the adjusting remote commander..
7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
8) Select page: 0, address: 01, and set data: 00.

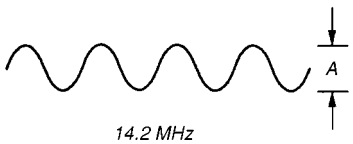

Fig. 5-3-11.

7. Hi8 REC Y Current Adjustment (VC-215 board)
(CCD-TR515E/TR516E/TR713E CCD-TRV36E/TRV46E)

Adjust the Y FM signal recording current.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin ⑩ of CN910 (REC RF)
Measuring Instrument	Oscilloscope (20 MHz BW LIMIT: OFF)
Adjustment Page	F
Adjustment Address	53 to 5A
Specified Value	A = 185±5mV

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
3) Select page: D, address: 15, after memorizing the data , set the bit value of bit7 to "0".
4) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin ⑥ of CN935 of DD-117 board and GND with 4.7kΩ registor for a second.)
   4.7kΩ registor : 1-249-425-11
5) Insert a tape, set to recording mode.
6) Select page: 0, address: 01, and set data: 01.
7) Select page: F, address: 5C, after note down the data , set data: FF, and press the PAUSE button of the adjusting remote commander.
8) Select page: F, address: 65, after note down the data , set data: 00, and press the PAUSE button of the adjusting remote commander.
9) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
10) Select page: F, address: 54, change the data and set the Y signal level (A) to the specified value.
11) Press the PAUSE button of the adjusting remote commander.
12) Select page: F, address: 54, and read the data (D_{54}).
13) Calculate the adjustment data (hexadecimal) from the following equations (hexadecimal calculation), and input each adjustment address. (Refer to Table 5-1-2. Hexadecimal-Decimal conversion Table.)
    Address: 53 $D_{53} = D_{54}$
    Address: 55 $D_{55} = D_{54}$
    Address: 56 $D_{56} = D_{54}$

Note: After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

14) Write the following data in page: F, address: 57 to 5A.

Address	Data
57	A1
58	95
59	A1
5A	95

Note: After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

15) Select page: F, address: 5C, set the data noted down at step 3), press the PAUSE button of the adjusting remote commander.
16) Select page: F, address: 65, set the data noted down at step 4), press the PAUSE button of the adjusting remote commander.
17) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
18) Select page: 0, address: 01, and set data: 00.
19) Select page: 0, address: 01, and set data: 01.
20) Select page: D, address: 14, and set the data memorized at step 2) of "Preparations only for the model without REC switch".
21) Press the PAUSE button of the adjusting remote commander.
22) Select page: D, address: 15, and set the data memorized.
23) Press the PAUSE button of the adjusting remote commander.
24) Select page: 0, address: 01, and set data: 00.

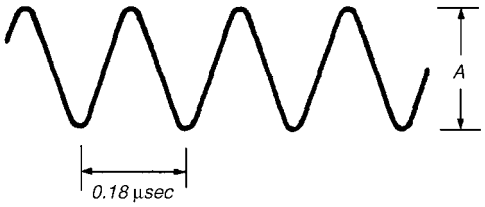

Fig. 5-3-12.

8. Standard8 REC Y Current Adjustment (VC-215 board)
(CCD-TR315E/TR415E/TR425E CCD-TRV16E/TRV26E/TRV27E/TRV27EP)

Adjust the Y FM signal recording current.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin ⑩ of CN910 (REC RF)
Measuring Instrument	Oscilloscope (20 MHz BW LIMIT: OFF)
Adjustment Page	F
Adjustment Address	53 to 5A
Specified Value	A = 185±5mV

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
3) Select page: D, address: 15, after memorizing the data , set the bit value of bit7 to "0".
4) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin ⑥ of CN935 of DD-117 board and GND with 4.7kΩ registor for a second.)
   4.7kΩ registor : 1-249-425-11
5) Insert a tape, set to recording mode.
6) Select page: 0, address: 01, and set data: 01.
7) Select page: F, address: 5C, after note down the data , set data: FF, and press the PAUSE button of the adjusting remote commander.
8) Select page: F, address: 65, after note down the data , set data: 00, and press the PAUSE button of the adjusting remote commander.
9) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
10) Select page: F, address: 54, change the data and set the Y signal level (A) to the specified value.
11) Press the PAUSE button of the adjusting remote commander.
12) Select page: F, address: 54, and read the data (D_{54}).
13) Calculate the adjustment data (hexadecimal) from the following equations (hexadecimal calculation), and input each adjustment address. (Refer to Table 5-1-2. Hexadecimal-Decimal conversion Table.)
    Address: 53 $D_{53} = D_{54}$
    Address: 55 $D_{55} = D_{54}$
    Address: 56 $D_{56} = D_{54}$

Note: After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

14) Write the following data in page: F, address: 57 to 5A.

Address	Data
57	80
58	80
59	80
5A	80

Note: After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

15) Select page: F, address: 5C, set the data noted down at step 3), press the PAUSE button of the adjusting remote commander.
16) Select page: F, address: 65, set the data noted down at step 4), press the PAUSE button of the adjusting remote commander.
17) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
18) Select page: 0, address: 01, and set data: 00.
19) Select page: 0, address: 01, and set data: 01.
20) Select page: D, address: 14, and set the data memorized.
21) Press the PAUSE button of the adjusting remote commander.
22) Select page: D, address: 15, and set the data memorized.
23) Press the PAUSE button of the adjusting remote commander.
24) Select page: 0, address: 01, and set data: 00.

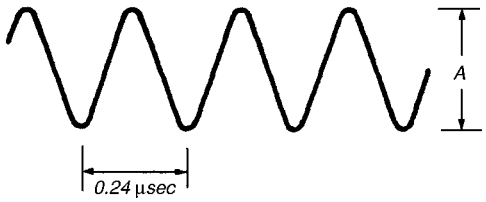

Fig. 5-3-13.

9. Hi8 REC L Level Adjustment (VC-215 board)
(CCD-TR515E/TR516E/TR713E CCD-TRV36E/TRV46E)

Set the recording levels of the REC AFM signal and REC ATF signal. If the level is too low, the audio S/N will deteriorated, tracking will not be stable, or SP/LP will not be discriminated properly. If too high, color beets will be produced on the self-recording/playback image.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin ⑩ of CN910 (REC RF)
Measuring Instrument	Oscilloscope (20MHz BW LIMIT: OFF)
Adjustment Page	F
Adjustment Address	5B to 64
Specified Value	A = 10.1±0.6mV

Connection:
1) Remove C085 (0.01µF, Pin ⑯ of IC202).

Note: After completing "REC L Level Adjustment" and "REC C Current Adjustment", replace C085 with new parts (1-162-970-11 CERAMIC CHIP 0.01µF 10% 25V).

Adjusting method:
1) Insert Hi8 ME tape.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
4) Select page: D, address: 15, after memorizing the data , set the bit value of bit7 to "0".
5) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin ⑥ of CN935 of DD-117 board and GND with 4.7kΩ registor for a second.)
   4.7kΩ registor : 1-249-425-11
6) Insert Hi8 ME tape, set to recording mode.
7) Select page: 0, address: 01, and set data: 01.
8) Select page: F, address: 5B, set data: FF, and press the PAUSE button of the adjusting remote commander.
9) Select page: F, address: 65, set data: 00, and press the PAUSE button of the adjusting remote commander.
10) Select page: F, address: 5C, change the data and set the REC AFM signal level (A) to the specified value.
11) Press the PAUSE button of the adjusting remote commander.
12) Select page: F, address: 5C, read the data (D_{5C}).
13) Calculate the adjustment data (hexadecimal) from the following equations (hexadecimal calculation), and input each adjustment address. (Refer to Table 5-1-2. Hexadecimal-Decimal conversion Table.)

Address: 5B	$D_{5B} = D_{5C}$
Address: 5D	$D_{5D} = D_{5C}$
Address: 5E	$D_{5E} = D_{5C}$
Address: 5F	$D_{5F} = D_{5C} + 12$
Address: 60	$D_{60} = D_{5C} + 12$
Address: 61	$D_{61} = D_{5C} + 12$
Address: 62	$D_{62} = D_{5C} + 12$

Note: After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

14) Write the following data in page: F, address: 63 to 64.

Address	Data
63	7A
64	7A

Note: After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

15) Select page: 0, address: 01, and set data: 00.
16) Perform "REC C Current Adjustment".
17) Select page: 0, address: 01, and set data: 01.
18) Select page: D, address: 14, and set the data memorized.
19) Press the PAUSE button of the adjusting remote commander.
20) Select page: D, address: 15, and set the data memorized at step 4) of "Preparations only for the model without REC switch".
21) Press the PAUSE button of the adjusting remote commander.
22) Select page: 0, address: 01, and set data: 00.

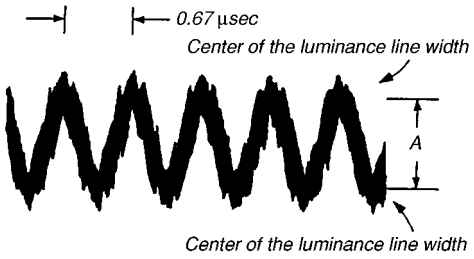

Fig. 5-3-14.

10. Standard8 REC L Level Adjustment (VC-215 board)
(CCD-TR315E/TR415E/TR425E CCD-TRV16E/TRV26E/TRV27E/TRV27EP)

Set the recording levels of the REC AFM signal and REC ATF signal. If the level is too low, the audio S/N will deteriorated, tracking will not be stable, or SP/LP will not be discriminated properly. If too high, color beets will be produced on the self-recording/playback image.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin ⑩ of CN910 (REC RF)
Measuring Instrument	Oscilloscope (20MHz BW LIMIT: OFF)
Adjustment Page	F
Adjustment Address	5B to 64
Specified Value	A = 9.3±0.5mV

Connection:

1) Remove C085 (0.01µF, Pin ⑯ of IC202).

Note: After completing "REC L Level Adjustment" and "REC C Current Adjustment", replace C085 with new parts (1-162-970-11 CERAMIC CHIP 0.01µF 10% 25V).

Adjusting method:

1) Insert Srandrd8 MP tape.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
4) Select page: D, address: 15, after memorizing the data , set the bit value of bit7 to "0".
5) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin ⑥ of CN935 of DD-117 board and GND with 4.7kΩ registor for a second.)
   4.7kΩ registor : 1-249-425-11
6) Insert Srandrd8 MP tape, set to recording mode.
7) Select page: 0, address: 01, and set data: 01.
8) Select page: F, address: 5B, set data: FF, and press the PAUSE button of the adjusting remote commander.
9) Select page: F, address: 65, set data: 00, and press the PAUSE button of the adjusting remote commander.
10) Select page: F, address: 5C, change the data and set the REC AFM signal level (A) to the specified value.
11) Press the PAUSE button of the adjusting remote commander.
12) Select page: F, address: 5C, read the data (D_{5C}).
13) Calculate the adjustment data (hexadecimal) from the following equations (hexadecimal calculation), and input each adjustment address. (Refer to Table 5-1-2. Hexadecimal-Decimal conversion Table.)

Address: 5B	$D_{5B} = D_{5C}$
Address: 5D	$D_{5D} = D_{5C}$
Address: 5E	$D_{5E} = D_{5C}$
Address: 5F	$D_{5F} = D_{5C}$
Address: 60	$D_{60} = D_{5C}$
Address: 61	$D_{61} = D_{5C}$
Address: 62	$D_{62} = D_{5C}$

Note: After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

14) Write the following data in page: F, address: 63 to 64.

Address	Data
63	80
64	80

Note: After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

15) Select page: 0, address: 01, and set data: 00.
16) Perform "REC C Current Adjustment".
17) Select page: 0, address: 01, and set data: 01.
18) Select page: D, address: 14, and set the data memorized at step 3) of "Preparations only for the model without REC switch".
19) Press the PAUSE button of the adjusting remote commander.
20) Select page: D, address: 15, and set the data memorized.
21) Press the PAUSE button of the adjusting remote commander.
22) Select page: 0, address: 01, and set data: 00.

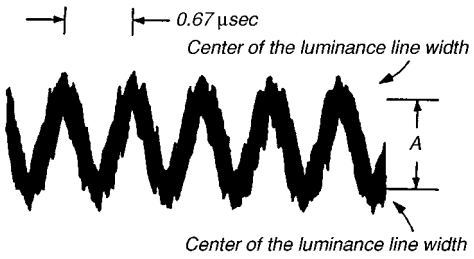

Fig. 5-3-15.

11. REC C Current Adjustment (VC-215 board)

Set the recording current levels of the REC Chroma signal. If it is too low, chroma signal noise in played back picture will increased. If too high, Y signal noises will increase and white modulation noises will be produced.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin ⑩ of CN910 (REC RF)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	65
Specified Value	Hi8 model : A = 34.6±1.2mV Standard8 model : A = 30.0±1.1mV

Note 1: Hi8 model: CCD- TR515E/TR516E/TR713E
CCD-TRV36E/TRV46E
Standard8 model: CCD-TR315E/TR415E/TR425E
CCD-TRV16E/TRV26E/TRV27E/
TRV27EP

Connection:
1) Remove C085 (0.01µF, Pin ⑯ of IC202).

Note: After completing "REC L Level Adjustment" and "REC C Current Adjustment", replace C085 with new parts (1-162-970-11 CERAMIC CHIP 0.01µF 10% 25V).

2) Connect Pin ① of IC001 and GND with a 0.01F capacitor.
0.01µF capacitor: 1-101-004-00

Adjusting method:
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
3) Select page: D, address: 15, after memorizing the data , set the bit value of bit7 to "0".
4) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin ⑥ of CN935 of DD-117 board and GND with 4.7kΩ registor for a second.)
4.7kΩ registor : 1-249-425-11
5) Insert a tape, set to recording mode.
6) Select page: 0, address: 01, and set data: 01.
7) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
8) Select page: 2, address: 61, and set data: 30.
9) Select page: F, address: 65, change the data and set the REC chroma signal level (A) to the specified value.
10) Press the PAUSE button of the adjusting remote commander.
11) Select page: 2, address: 61, and set data: 10.
12) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
13) Select page: 0, address: 01, and set data: 00.
14) Select page: 0, address: 01, and set data: 01.
15) Select page: D, address: 14, and set the data memorized at step 2) of "Preparations only for the model without REC switch".
16) Press the PAUSE button of the adjusting remote commander.
17) Select page: D, address: 15, and set the data memorized.
18) Press the PAUSE button of the adjusting remote commander.
19) Select page: 0, address: 01, and set data: 00.

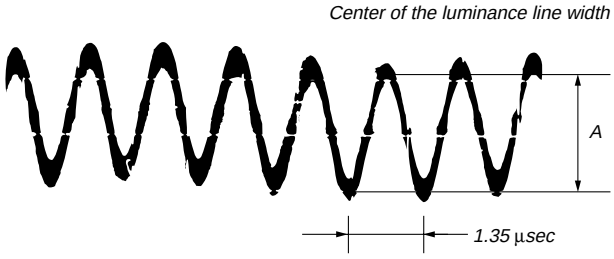

Fig. 5-3-16.

3-5. IR TRANSMITTER ADJUSTMENTS (CCD-TR713E/TRV46E)

Adjust using a IR receiver jig (J-6082-383-A).

Switch setting:
LASER LINK ..... (Red LED is lit)

1. IR Video Carrier Frequency Adjustment (VC-215 board)

Mode	Camera standby
Subject	Arbitrary
Measurement Point	Pin ⑤ of CN003 of IR receiver jig (RF) (Or Pin ⑯ of IC751 of VC-215 board)
Measuring Instrument	Frequency counter
Adjustment Page	F
Adjustment Address	68
Specified Value	f = 11.85±0.05MHz

Connection of Equipment
Connect the measuring device as shown in the following figure, and adjust.

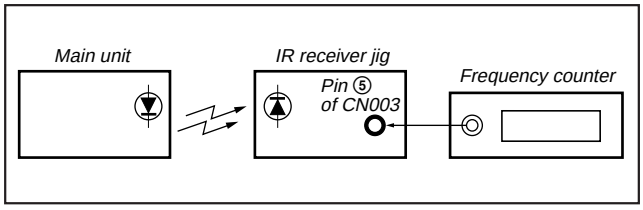

Fig. 5-3-17.

Adjusting method:
1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 37, and press the PAUSE button of the adjusting remote commander.
3) Select page: F, address: 68, change the data, and set the video carrier frequency (f) to the specified value.
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
6) Select page: 0, address: 01, and set data: 00.

2. IR Video Deviation Adjustment (VC-215 board)

Mode	Camera standby
Subject	Arbitrary
Measurement Point	VIDEO OUT terminal of IR receiver jig (Terminated at 75Ω)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	66
Specified Value	A = 0.87±0.04V

Connection of Equipment
Connect the measuring device as shown in the following figure, and adjust.

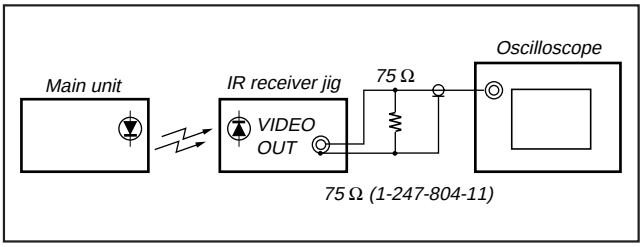

Fig. 5-3-18.

Adjusting method:
1) Select page: 0, address: 01, and set data: 01.
2) Select page: 3, address: 01, set data: 39, and press the PAUSE button of the adjusting remote commander.
3) Select page: F, address: 66, and change the data, set the video signal amplitude (A) to the specified value.
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
6) Select page: 0, address: 01, and set data: 00.

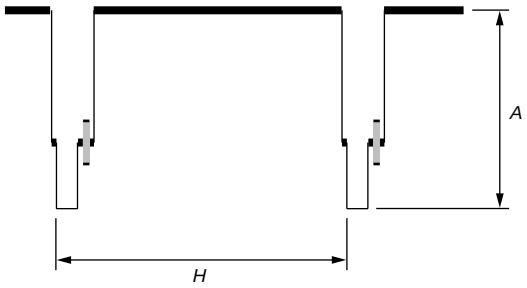

Fig. 5-3-19.

3. IR Audio Deviation Adjustment (VC-215 board)

Mode	VTR recording
Signal	Audio signal : 400Hz, –7.5dBs : AUDIO terminal Video signal : Color bar signal : VIDEO terminal
Measurement Point	AUDIO terminal of IR receiver jig (Terminated at 47kΩ)
Measuring Instrument	Audio level meter
Adjustment Page	F
Adjustment Address	67
Specified Value	Signal level: –7.5±2.0dBs

Connection of Equipment
Connect the measuring device as shown in the following figure, and adjust.

Adjusting method:
1) Select page: 0, address: 01, and set data: 01.
2) Connect the audio level meter to the AUDIO terminal of the IR receiver jig.
3) Select page: F, address: 67, change the data and set the 400Hz audio signal level to the specified value.
4) Press the PAUSE button of the adjusting remote commander.
5) Select page: 0, address: 01, and set data: 00.

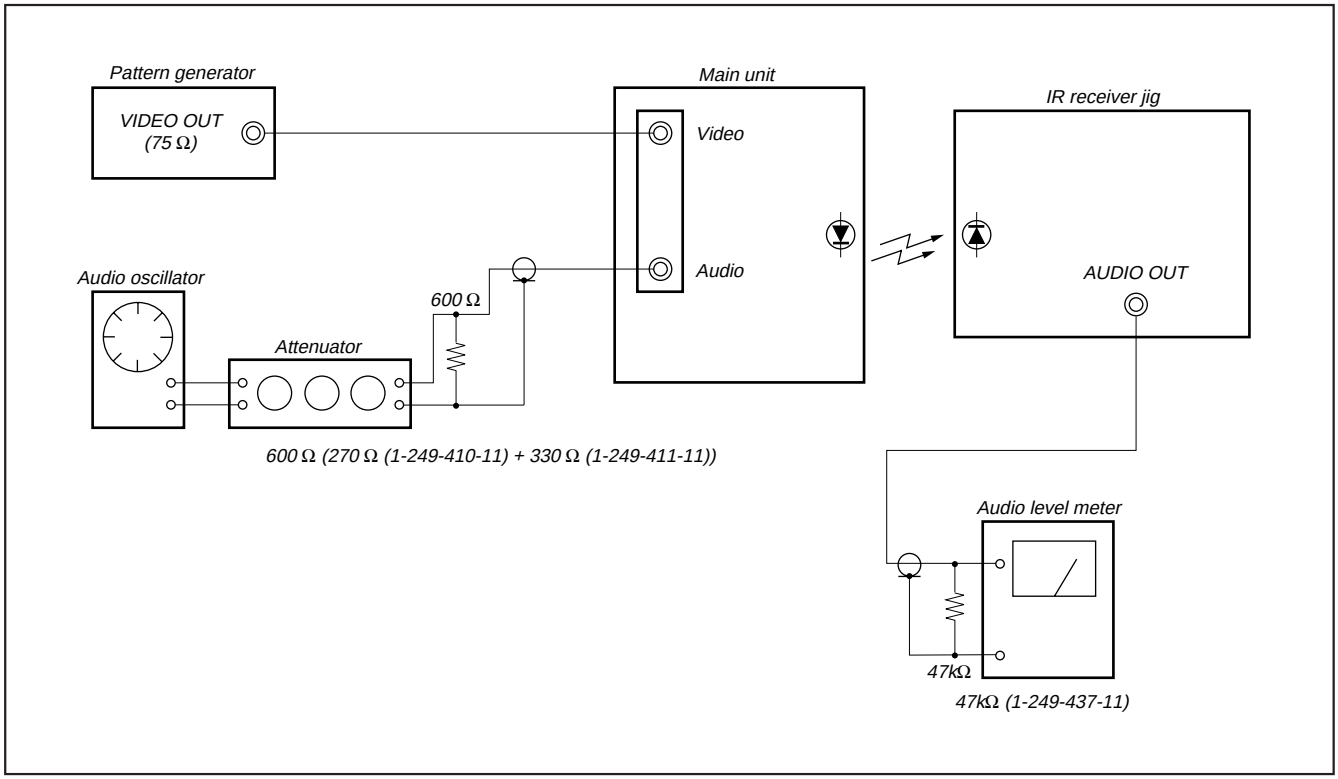

Fig. 5-3-20.

3-6. AUDIO SYSTEM ADJUSTMENT

[Connecting the measuring instruments for the audio]
Connect the audio system measuring instruments besides the video system measuring instruments as shown Fig. 5-3-25.

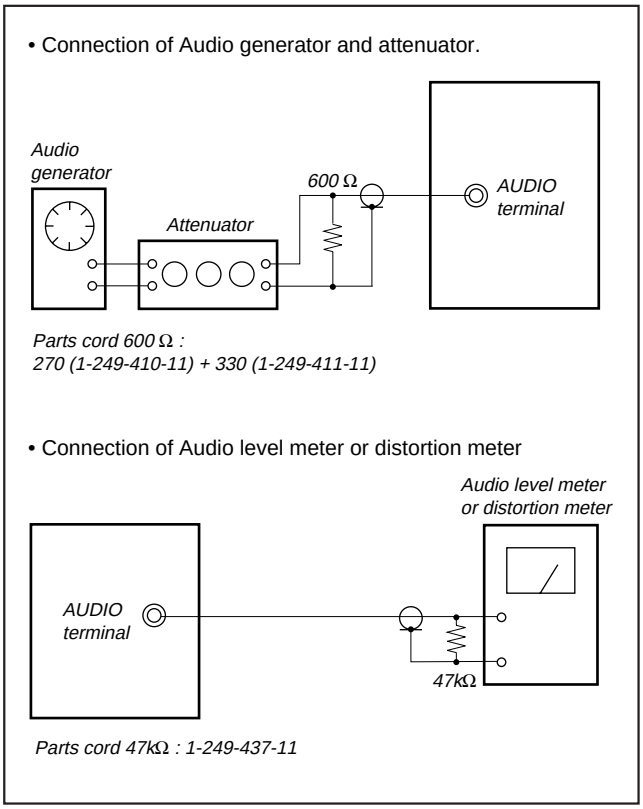

Fig. 5-3-21.

1. 1.5 MHz Deviation Adjustment (VC-215 board)

Adjust to the optimum audio FM signal distortion.
If the adjustment is not correct, its playback level will differ from that of other units.

Mode	Playback
Signal	Alignment tape: For checking the operation (WR5-5CSP)
Measurement Point	Audio output terminal
Measuring Instrument	Audio level meter
Adjustment Page	F
Adjustment Address	46
Specified Value	–7.5±0.5dBs

Adjusting method :
1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 46, change the data and set the 400Hz signal level to the specified value.
3) Press the PAUSE button of the adjusting remote commander.
4) Select page: 0, address: 01, and set data: 00.

2. BPF Adjustment (VC-215 board)

Adjust to the optimum audio BPF characteristics of the IC.
If the adjustment is not correct, the distortion rate and S/N ratio will worsen.

Mode	Playback
Signal	Alignment tape: For BPF adjustment (WR5-11CS)
Measurement Point	Audio output terminal
Measuring Instrument	distortion meter
Adjustment Page	F
Adjustment Address	47
Specified Value	The distortion rate should be and minimum.

Adjusting method :
1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 47, change the data and minimize the distortion rate.
3) Press the PAUSE button of the adjusting remote commander.
4) Select page: 0, address: 01, and set data: 00.

3-7. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS

VC-215 BOARD (SIDE A)

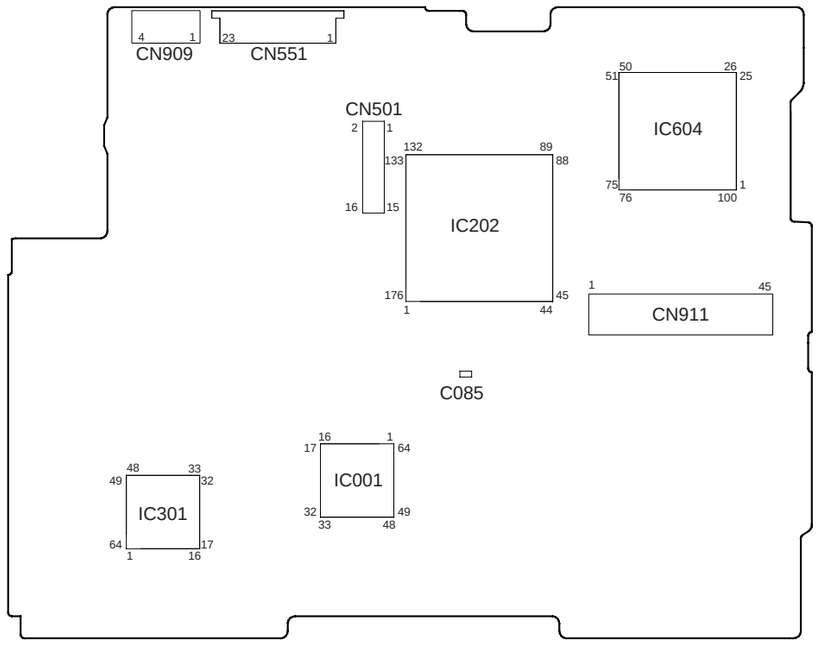

VC-215 BOARD (SIDE B)

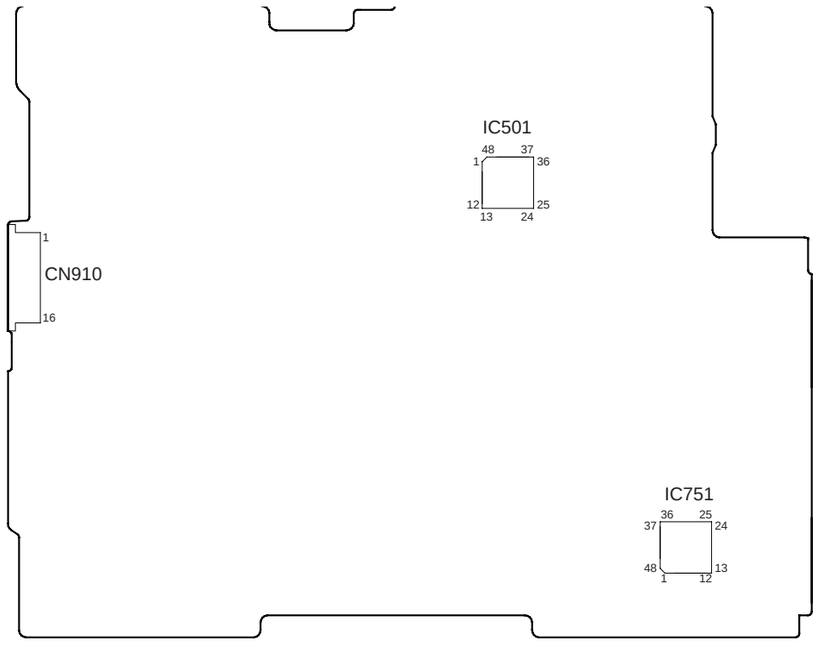

SECTION 6
REPAIR PARTS LIST

6-1. EXPLODED VIEWS

NOTE:

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
  East European model is abbreviated as EE.
  North European model is abbreviated as NE.
  Russian model is abbreviated as RU.
  Hong Kong model is abbreviated as HK.
  Australian model is abbreviated as AUS.
  Chinese model is abbreviated as CN.
  Tourist model is abbreviated as JE.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

6-1-1. REMOTE COMMANDER AND CASSETTE LID ASSEMBLY

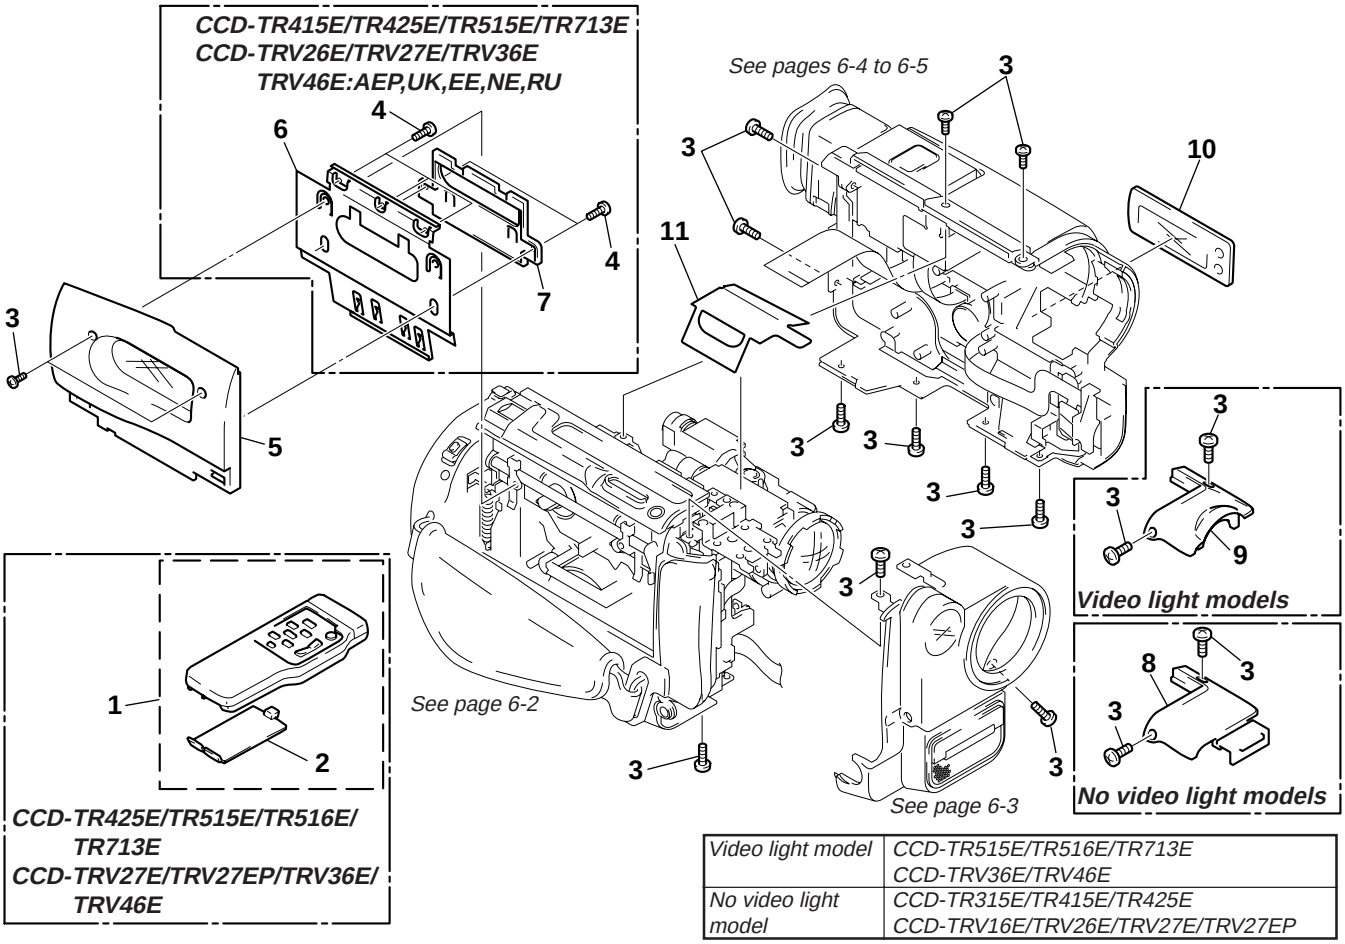

Video light model	*CCD-TR515E/TR516E/TR713E CCD-TRV36E/TRV46E*
No video light model	*CCD-TR315E/TR415E/TR425E CCD-TRV16E/TRV26E/TRV27E/TRV27EP*

Ref. No.	Part No.	Description	Remark
1	1-467-574-21	REMOTE COMMANDER (RMT-708) (TR425E/TR515E/TR516E/TR713E/TRV27E/TRV27EP/TRV36E/TRV46E)	
2	3-958-131-01	LID, BATTERY CASE (for RMT-708) (TR425E/TR515E/TR516E/TR713E/TRV27E/TRV27EP/TRV36E/TRV46E)	
3	3-962-826-01	SCREW (2 x 4)	
4	3-713-791-01	SCREW (M1.7 x 4), TAPPING, P2 (TR515E/TR713E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)	
4	3-713-791-51	SCREW (M1.7 x 3.5), TAPPING, P2 (TR415E/TR425E/TRV26E/TRV27E)	
5	X-3948-222-1	LID ASSY, CASSETTE (TR516E/TRV46E:E,HK,AUS,CN,JE)	
5	X-3948-223-1	LID ASSY, CASSETTE (TR315E/TRV16E/TRV27EP)	
5	X-3949-177-1	LID (IM) ASSY, CASSETTE (TR515E/TR713E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)	
5	X-3949-529-1	LID (IM) ASSY, CASSETTE (TR415E/TR425E/TRV26E/TRV27E)	
6	3-987-678-11	PLATE, CASSETTE SHIELD (TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)	
7	3-987-677-01	COVER (C), FERRITE (TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)	
8	3-987-645-01	CABINET (N) (No video light models)	
9	3-987-652-01	CABINET (LT) (TR516E)	
9	3-987-652-02	CABINET (LT) (TR515E/TR713E/TRV36E/TRV46E)	
10	3-053-274-11	WINDOW (900), LCD (TR713E)	
10	3-053-274-31	WINDOW (900), LCD (TR515E)	
10	3-053-274-51	WINDOW (900), LCD (TR516E)	
10	3-053-275-11	WINDOW (910), LCD (TRV46E)	
10	3-053-275-31	WINDOW (910), LCD (TRV36E)	
10	3-053-275-91	WINDOW (910), LCD (TRV26E)	
10	3-054-607-11	WINDOW (900), LCD (TR415E)	
10	3-054-607-21	WINDOW (900), LCD (TR315E)	
10	3-054-607-31	WINDOW (900), LCD (TR425E)	
10	3-054-642-01	WINDOW (910), LCD (TRV16E)	
10	3-054-642-11	WINDOW (910), LCD (TRV27E/TRV27EP)	
11	3-053-276-01	SHEET (M), LENS INSULATING	

6-1-2. CABINET (L) AND BATTERY PANEL ASSEMBLY

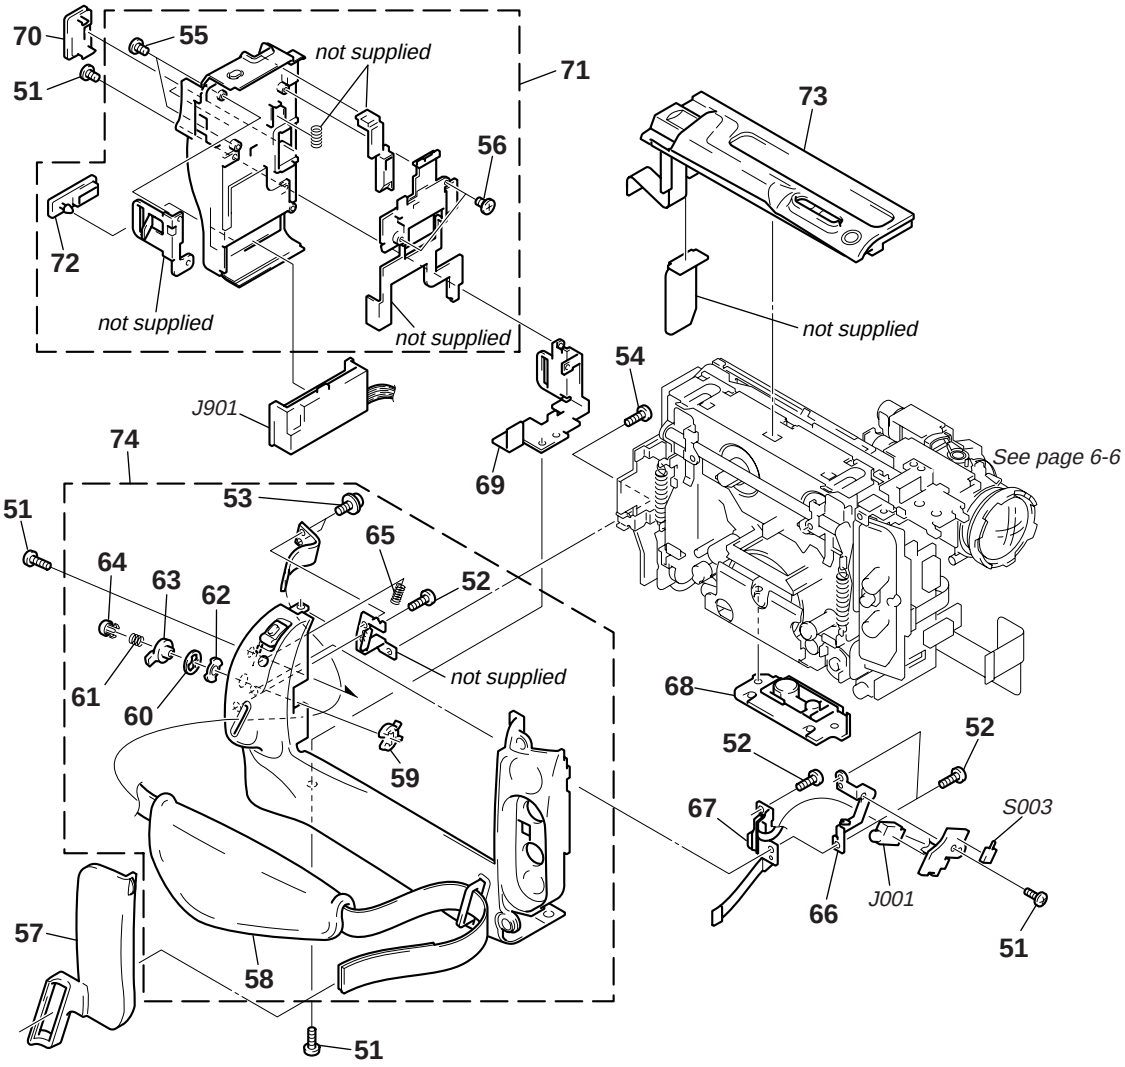

Ref. No.	Part No.	Description	Remark
51	3-962-826-01	SCREW (2 x 4)	
52	3-948-339-61	TAPPING	
53	3-679-362-11	SCREW	
54	3-713-786-21	SCREW (M2 x 3)	
55	3-968-729-61	SCREW (M2 x 3), LOCK ACE, P2	
56	3-713-791-51	SCREW (M1.7 x 3.5), TAPPING, P2	
57	3-975-522-11	COVER, JACK	
58	3-052-815-01	BELT (ES), GRIP	
59	3-949-192-01	HOLDER, STAND-BY KNOB	
60	3-970-854-01	SPRING, STAND-BY	
61	3-979-642-01	SPRING, COMPRESSION	
62	3-975-966-01	SHEET METAL (2), SS	
63	3-969-081-01	KNOB, STAND-BY	
64	3-960-566-01	BUTTON, S/S	
65	3-302-492-00	SPRING, COMPRESSION	
* 66	3-975-532-01	HOLDER, EL	
67	1-475-619-11	SWITCH BLOCK, CONTROL (SS-8500)	
68	3-987-717-01	SCREW, TRIPOD	

Ref. No.	Part No.	Description	Remark
69	3-987-679-01	SHEET METAL (LOWER), STRAP	
70	3-975-752-01	LID (BT), CPC	
71	X-3948-171-1	PANEL ASSY, BATTERY	
72	3-987-656-01	LID, JACK	
73	1-418-215-21	SWITCH BLOCK, CONTROL (FK-8500) (TR415E/TR425E/TR515E/TRV26E/TRV27E/TRV27EP/TRV36E)	
73	1-418-215-61	SWITCH BLOCK, CONTROL (FK-8500) (TR713E/TRV46E:AEP,UK,EE,NE,RU)	
73	1-475-617-11	SWITCH BLOCK, CONTROL (FK-8500) (TR315E/TR516E/TRV16E)	
73	1-475-617-21	SWITCH BLOCK, CONTROL (FK-8500) (TRV46E:E,HK,AUS,CN,JE)	
74	X-3948-207-1	CABINET (L) ASSY (TRV series)	
74	X-3948-208-1	CABINET (L) ASSY (TR series)	
J001	1-565-276-31	JACK, ULTRA SMALL 1P (LANC)	
J901	1-694-384-11	TERMINAL BOARD, BATTERY	
S003	1-572-688-11	SWITCH, PUSH (EJECT)	

6-1-3. FRONT PANEL BLOCK ASSEMBLY

Video light model	*CCD-TR515E/TR516E/TR713E* *CCD-TRV36E/TRV46E*
No video light model	*CCD-TR315E/TR415E/TR425E* *CCD-TRV16E/TRV26E/TRV27E/TRV27EP*

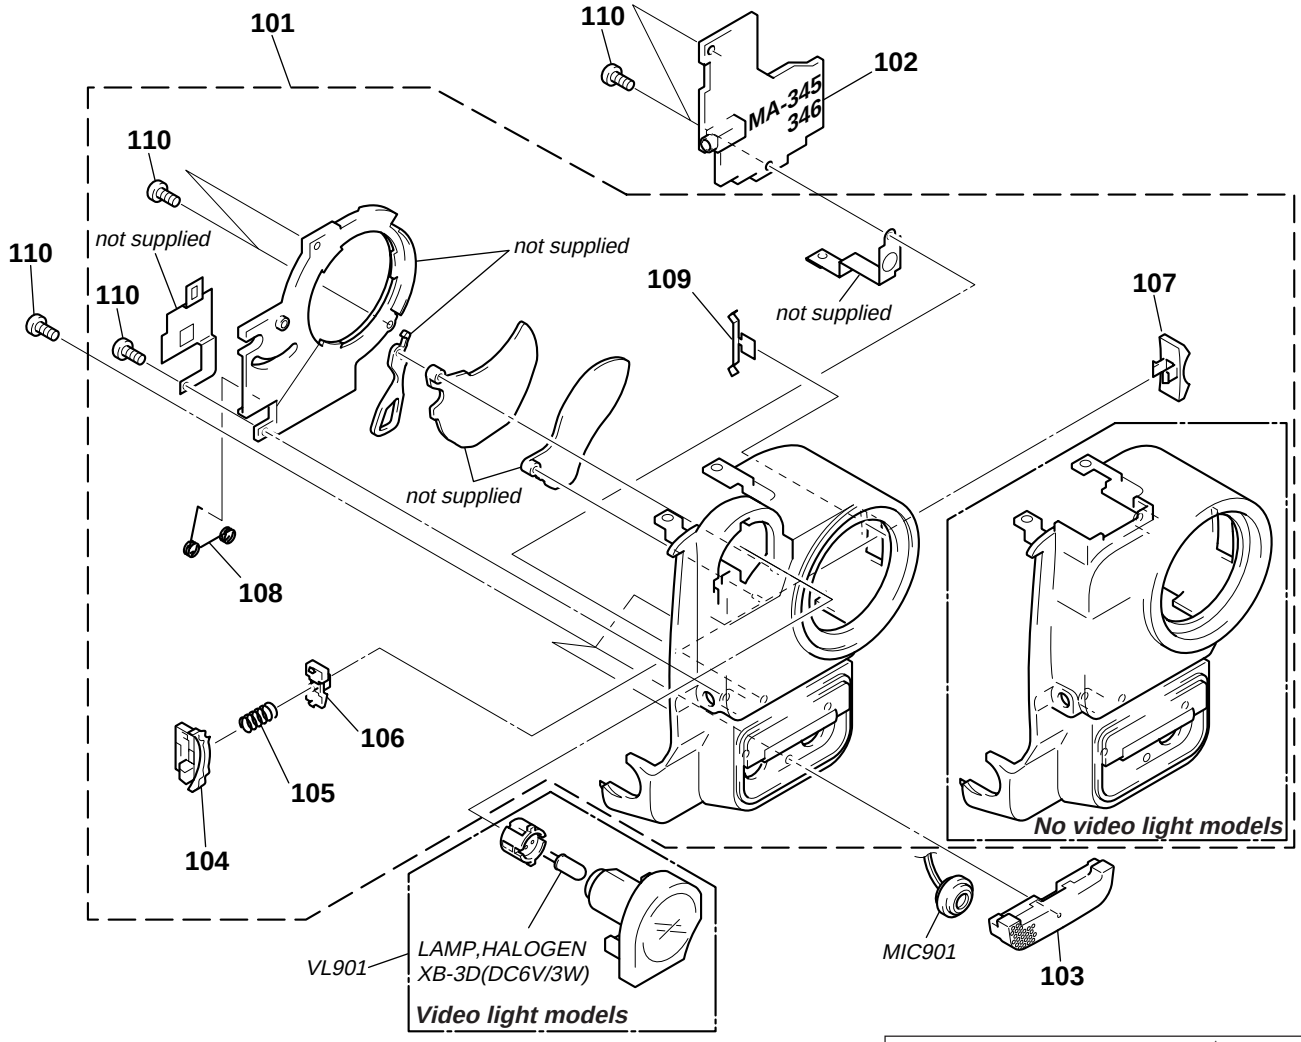

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
101	X-3949-168-1	PANEL ASSY, FRONT (TR515E/TR516E)	
101	X-3949-169-1	PANEL ASSY, FRONT (TR713E)	
101	X-3949-453-1	PANEL ASSY (V), FRONT (TRV46E)	
101	X-3949-454-1	PANEL ASSY (V), FRONT (TRV36E)	
101	X-3949-503-1	PANEL ASSY, FRONT (TR315E/TR415E)	
101	X-3949-513-1	PANEL ASSY, FRONT (TR425E)	
101	X-3949-514-1	PANEL ASSY (V), FRONT (TRV16E/TRV26E)	
101	X-3949-515-1	PANEL ASSY (V), FRONT (TRV27E/TRV27EP)	
102	A-7073-782-A	MA-345 (B) BOARD, COMPLETE (TR515E/TR516E)	
102	A-7073-794-A	MA-345 (IB) BOARD, COMPLETE (TR713E)	
102	A-7073-812-A	MA-346 (VIB) BOARD, COMPLETE (TRV46E)	
102	A-7073-820-A	MA-345 (SL) BOARD, COMPLETE (TR315E/TR415E)	
102	A-7073-823-A	MA-346 (VZB) BOARD, COMPLETE (TRV36E)	
102	A-7073-873-A	MA-346 (VZL) BOARD, COMPLETE (TRV16E/TRV26E)	
102	A-7073-888-A	MA-345 (Z0) BOARD, COMPLETE (TR425E)	
102	A-7073-889-A	MA-346 (V) BOARD, COMPLETE (TRV27E/TRV27EP)	
* 103	X-3948-493-1	GRILLE ASSY (G), MICROPHONE	
104	3-987-632-01	HOLDER, P KNOB	
105	3-973-619-01	SPRING, COMPRESSION	
106	3-987-633-01	BUTTON, LOCK	
107	3-987-631-01	KNOB, P	
108	3-987-882-01	SPRING, TORSION	
109	3-987-642-01	SPRING, CLICK	
110	3-948-339-61	TAPPING	
MIC901	1-542-312-11	MICROPHONE	
⚠VL901	1-517-760-11	LIGHT, VIDEO (for Video light models)	

6-1-4. CABINET (R) BLOCK ASSEMBLY (TR series)

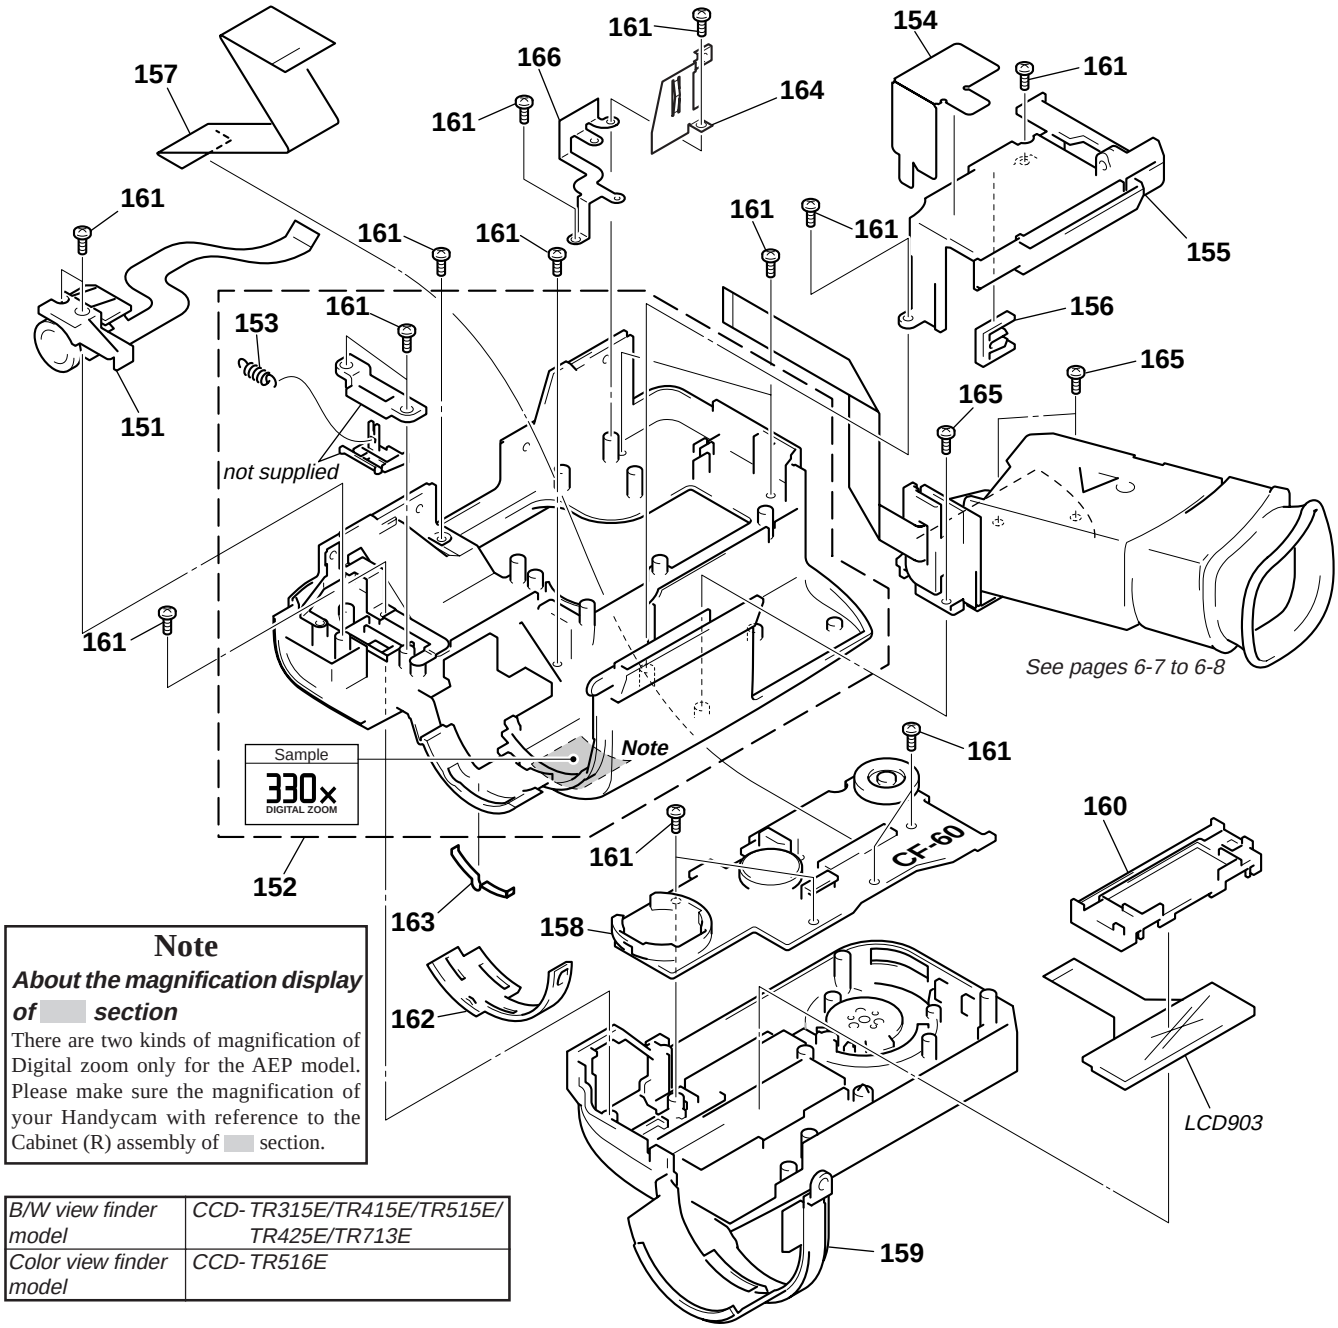

Note

About the magnification display of section

There are two kinds of magnification of Digital zoom only for the AEP model. Please make sure the magnification of your Handycam with reference to the Cabinet (R) assembly of section.

B/W view finder model	*CCD- TR315E/TR415E/TR515E/ TR425E/TR713E*
Color view finder model	*CCD- TR516E*

Ref. No.	Part No.	Description	Remark
151	1-475-620-11	SWITCH BLOCK, CONTROL (MF-8500)	
152	X-3949-170-1	CABINET (R) ASSY (Digital zoom : 72x) (TR515E:AEP,UK/TR713E:AEP,UK)	
152	X-3949-179-1	CABINET (R) ASSY (Digital zoom : 330x) (TR515E:AEP,EE,NE,RU/TR516E/TR713E:AEP,EE,NE,RU)	
152	X-3949-501-1	CABINET (R) ASSY (TR315E)	
152	X-3949-516-1	CABINET (R) ASSY (Digital zoom : 36x) (TR415E:AEP,UK)	
152	X-3949-517-1	CABINET (R) ASSY (Digital zoom : 72x) (TR425E:AEP,UK)	
152	X-3949-518-1	CABINET (R) ASSY (Digital zoom : 220x) (TR415E:AEP,EE,NE,RU)	
152	X-3949-519-1	CABINET (R) ASSY (Digital zoom : 330x) (TR425E:AEP,EE,NE,RU)	
153	3-989-121-01	SPRING, TENSION	
* 154	3-987-842-01	SHEET, VF FLEXIBLE RETAINER (for B/W View finder models)	
155	X-3948-603-1	BASE ASSY, VF	
156	3-987-783-01	LOCK, TILT	
157	1-790-334-11	CABLE, FLEXIBLE FLAT (FFC-257F)	
158	A-7073-783-A	CF-60 (CN) BOARD, COMPLETE (TR516E)	
158	A-7073-795-A	CF-60 (P) BOARD, COMPLETE (TR415E/TR425E/TR515E/TR713E)	
158	A-7073-821-A	CF-60 (N) BOARD, COMPLETE (TR315E)	
159	X-3949-172-1	COVER ASSY, TR (TR515E/TR516E/TR713E)	
159	X-3949-500-1	COVER ASSY, TR (TR315E/TR415E/TR425E)	
160	3-053-195-01	HOLDER, LCD	
161	3-948-339-61	TAPPING	
162	3-987-744-01	KNOB, IR	
163	3-987-739-01	SPRING, LINK PLATE	
164	9-987-742-01	PLATE (878), GROUND	
165	3-948-339-01	SCREW, TAPPING	
* 166	3-053-202-01	SHEET METAL, ELECTROSTATIC	
LCD903	A-7093-473-A	INDICATION LCD BLOCK ASSY	

6-1-5. CABINET (R) BLOCK ASSEMBLY (TRV series)

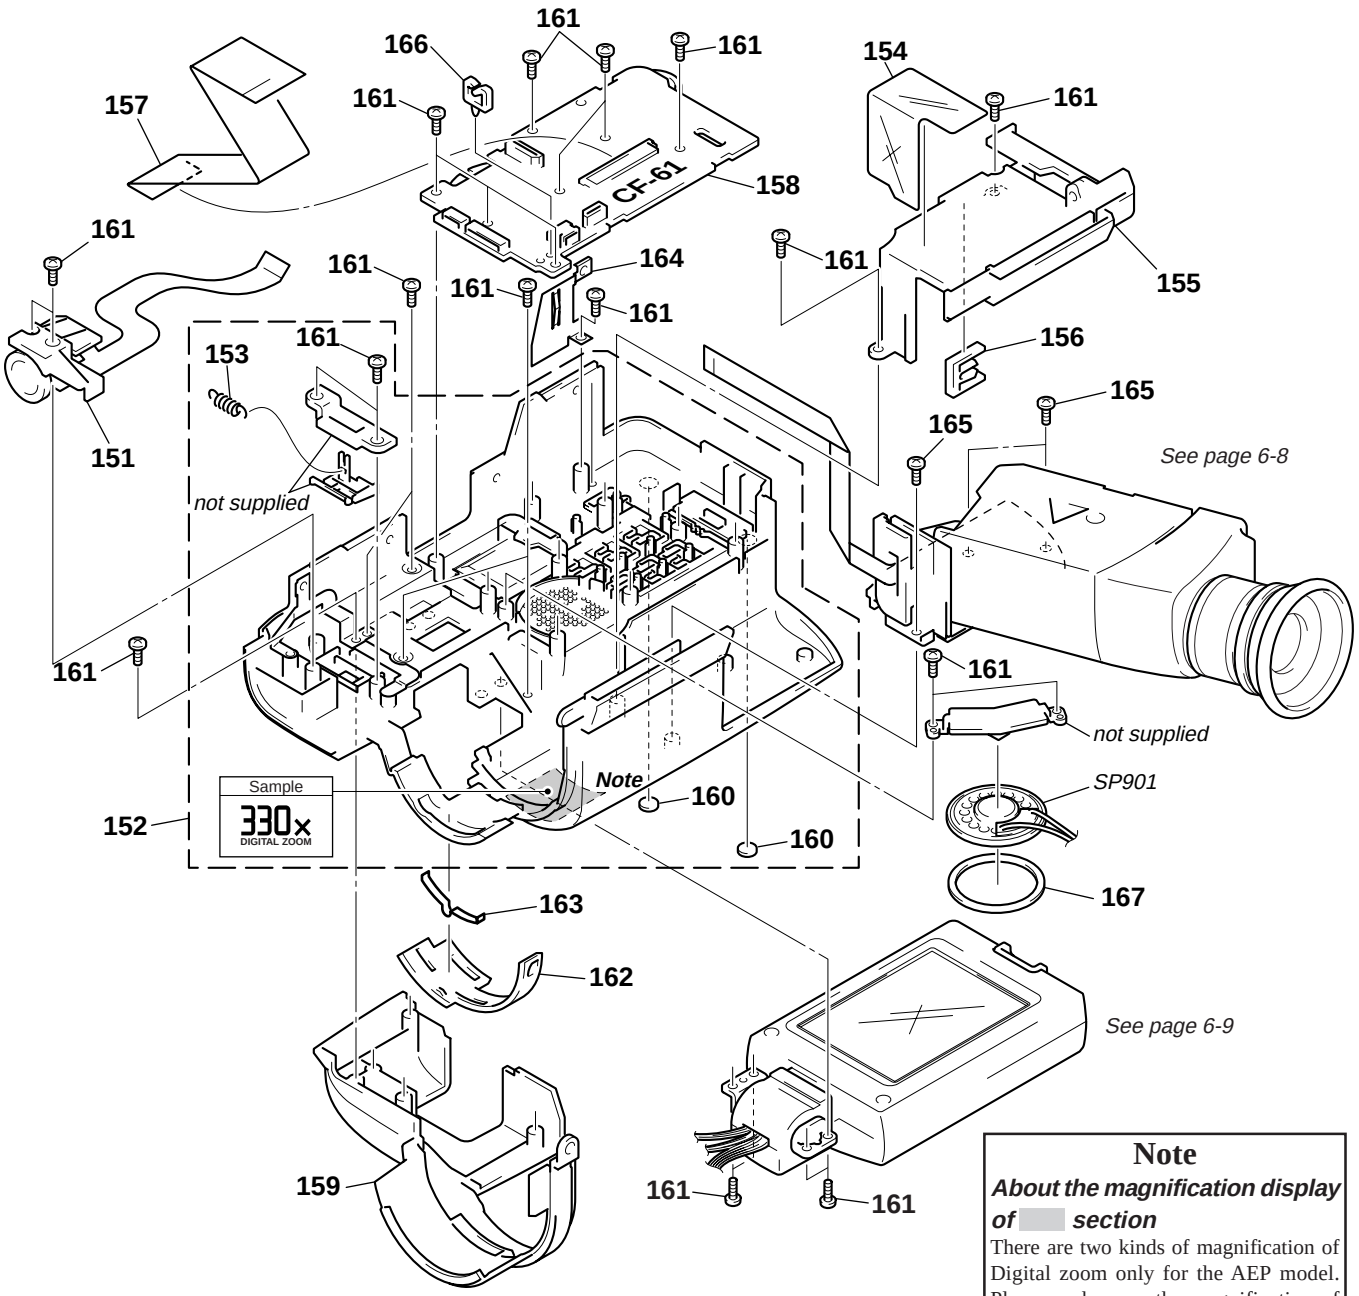

Note

About the magnification display of section

There are two kinds of magnification of Digital zoom only for the AEP model. Please make sure the magnification of your Handycam with reference to the Cabinet (R) assembly of section.

Ref. No.	Part No.	Description	Remark
151	1-475-620-11	SWITCH BLOCK, CONTROL (MF-8500)	
152	X-3949-171-1	CABINET (R) ASSY (Digital zoom : 72x) (TRV36E:AEP,UK/TRV46E:AEP,UK)	
152	X-3949-280-1	CABINET (R) ASSY (Digital zoom : 330x) (TRV36E:AEP,EE,NE,RU/TRV46E:AEP,E,EE,NE,RU,HK,AUS,CN,JE)	
152	X-3949-520-1	CABINET (R) ASSY (Digital zoom : 36x) (TRV26E:AEP,UK)	
152	X-3949-521-1	CABINET (R) ASSY (Digital zoom : 72x) (TRV27E:AEP,UK)	
152	X-3949-522-1	CABINET (R) ASSY (TRV16E)	
152	X-3949-523-1	CABINET (R) ASSY (Digital zoom : 220x) (TRV26E:AEP,EE,NE,RU)	
152	X-3949-524-1	CABINET (R) ASSY (Digital zoom : 330x) (TRV27E:AEP,EE,NE,RU/TRV27EP)	
153	3-989-121-01	SPRING, TENSION	
* 154	3-987-842-01	SHEET, VF FLEXIBLE RETAINER	
155	X-3948-603-1	BASE ASSY, VF	
156	3-987-783-01	LOCK, TILT	
157	1-790-334-11	CABLE, FLEXIBLE FLAT (FFC-257F)	
158	A-7073-811-A	CF-61 BOARD, COMPLETE	
159	X-3949-173-1	COVER ASSY, IR (TRV46E)	
159	X-3949-349-1	COVER ASSY, IR (TRV36E)	
159	X-3949-530-1	COVER ASSY, IR (TRV16E/TRV26E/TRV27E/TRV27EP)	
160	3-959-978-02	CUSHION, PANEL	
161	3-948-339-61	TAPPING	
162	3-987-744-01	KNOB, IR	
163	3-987-739-01	SPRING, LINK PLATE	
164	9-987-742-01	PLATE (878), GROUND	
165	3-948-339-01	SCREW, TAPPING	
* 166	3-053-798-01	CLAMP, HARNESS	
167	3-965-367-01	SPACER, SP	
SP901	1-504-753-41	SPEAKER (2.8 CM)	

6-1-6. MAIN BOARDS BLOCK ASSEMBLY

Video light model	*CCD-TR515E/TR516E/TR713E* *CCD-TRV36E/TRV46E*
No video light model	*CCD-TR315E/TR415E/TR425E* *CCD-TRV16E/TRV26E/TRV27E/TRV27EP*

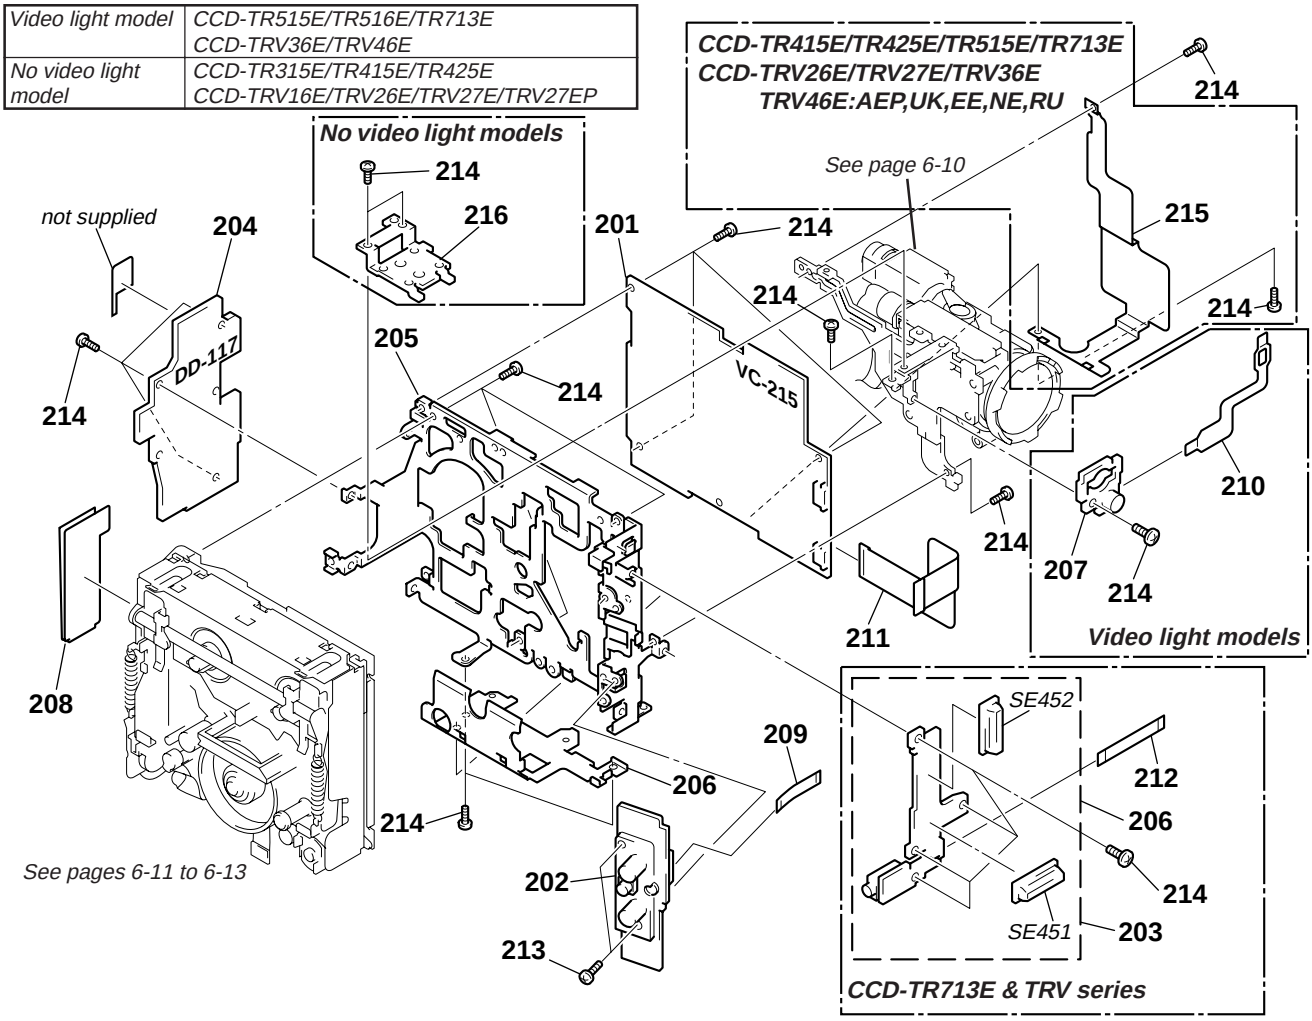

Ref. No.	Part No.	Description	Remark
201	A-7094-113-A	VC-215 (ZSL0PE) BOARD, COMPLETE	(TR315E/TR415E/TR425E)
201	A-7094-114-A	VC-215 (ZB0) BOARD, COMPLETE (TR515E)	
201	A-7094-115-A	VC-215 (ZCB0) BOARD, COMPLETE (TR516E)	
201	A-7094-116-A	VC-215 (MMIB0) BOARD, COMPLETE (TR713E)	
201	A-7094-119-A	VC-215 (VMMIB0P) BOARD, COMPLETE	(TRV46E)
201	A-7094-120-A	VC-215 (VZLB0) BOARD, COMPLETE (TRV36E)	
201	A-7094-203-A	VC-215 (VZL0P) BOARD, COMPLETE	(TRV16E/TRV26E/TRV27E/TRV27EP)
202	A-7073-788-A	PJ-90 BOARD, COMPLETE (TR315E/TR516E)	
202	A-7073-793-A	PJ-90 (CE) BOARD, COMPLETE	(TR415E/TR425E/TR515E/TR713E)
202	A-7073-802-A	PJ-91 (VCE) BOARD, COMPLETE	(TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)
202	A-7073-809-A	PJ-91 (V) BOARD, COMPLETE	(TRV16E/TRV27EP/TRV46E:E,HK,AUS,CN,JE)
203	A-7073-789-A	SE-80 (MM) BOARD, COMPLETE (TR713E)	
203	A-7073-803-A	SE-81 (VMMCE) BOARD, COMPLETE	(TRV46E:AEP,UK,EE,NE,RU)
203	A-7073-810-A	SE-81 (VMM) BOARD, COMPLETE	(TRV46E:E,HK,AUS,CN,JE)
203	A-7073-825-A	SE-81 (V) BOARD, COMPLETE	(TRV16E/TRV27EP)
203	A-7073-849-A	SE-81 (VCE) BOARD, COMPLETE	(TRV26E/TRV27E/TRV36E)
204	A-7073-785-A	DD-117 (MMCB0) BOARD, COMPLETE (TR516E)	
204	A-7073-791-A	DD-117 (MMIB0) BOARD, COMPLETE (TR713E)	
204	A-7073-806-A	DD-117 (VMMIB0) BOARD, COMPLETE (TRV46E)	

Ref. No.	Part No.	Description	Remark
204	A-7073-818-A	DD-117 (ZL0) BOARD, COMPLETE	(TR315E/TR415E/TR425E)
204	A-7073-824-A	DD-117 (VZB0) BOARD, COMPLETE (TRV36E)	
204	A-7073-830-A	DD-117 (ZB0) BOARD, COMPLETE (TR515E)	
204	A-7073-874-A	DD-117 (VZL0) BOARD, COMPLETE	(TRV16E/TRV26E/TRV27E/TRV27EP)
205	3-987-711-11	FRAME (A), MD	
206	3-987-675-01	FRAME (B), MD (TR315E/TR516E/TRV16E/	TRV27EP/TRV46E:E,HK,AUS,CN,JE)
206	3-987-675-11	FRAME (B), MD (TR415E/TR425E/TR515E/	TR713E/TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)
207	A-7073-787-A	VL-21 BOARD, COMPLETE	(TR515E/TR516E/TR713E)
207	A-7073-808-A	VL-22 BOARD, COMPLETE (TRV36E/TRV46E)	
* 208	3-987-716-01	PROTECTOR, LS FLEXIBLE	
209	1-668-957-11	FP-621 FLEXIBLE BOARD	
210	1-672-454-11	FP-58 FLEXIBLE BOARD (for Video light models)	
211	1-672-453-11	FP-56 FLEXIBLE BOARD	
212	1-668-956-11	FP-620 FLEXIBLE BOARD (TR713E & TRV series)	
213	3-962-826-01	SCREW (2 x 4)	
214	3-713-786-21	SCREW (M2 x 3)	
215	X-3949-183-1	SHIELD ASSY, RP(TR415E/TR425E/TR515E/	TR713E/TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)
216	3-987-719-01	BRACKET, SHOE (for No video light models)	
SE451	1-803-041-11	SENSOR, ANGULAR VELOCITY (YAW)	(TR713E/TRV46E)
SE452	1-803-041-21	SENSOR, ANGULAR VELOCITY (PITCH)	(TR713E/TRV46E)

6-1-7. COLOR EVF BLOCK ASSEMBLY (Color View Finder model CCD-TR516E)

Note : As for the model whitch carries a B/W view finder, refer to page 6-8.

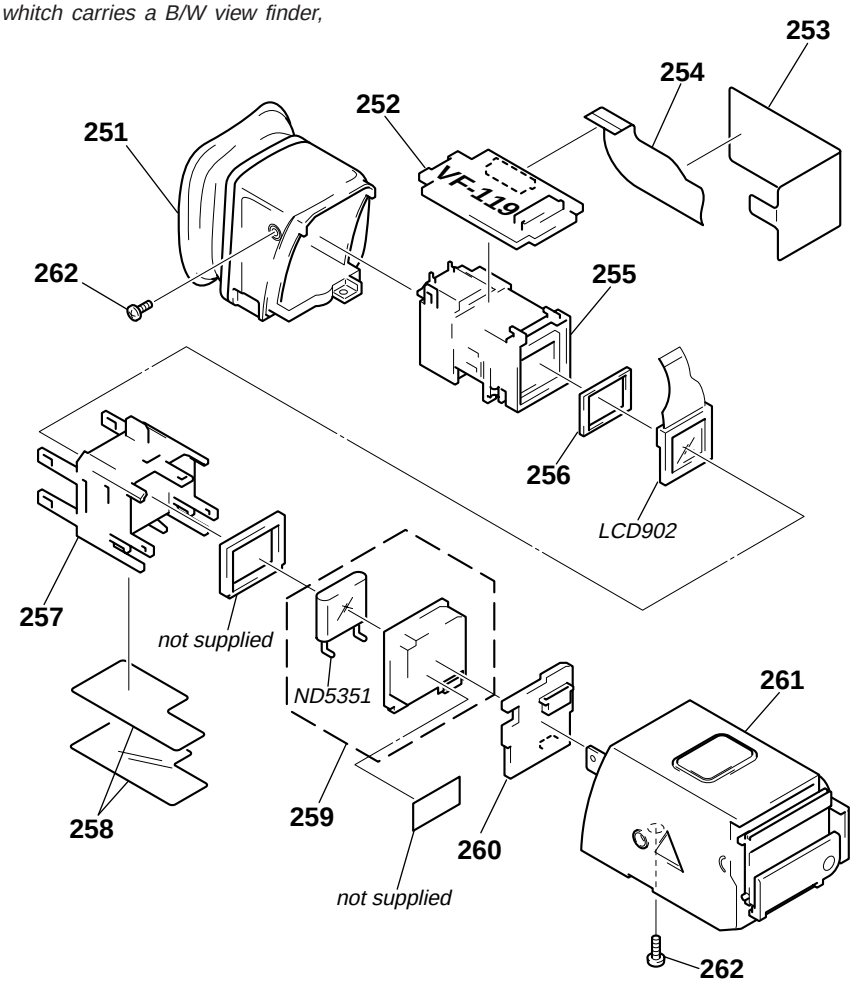

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
251	X-3948-237-1	CABINET (REAR) (SC) (N) ASSY, EVF	
252	A-7073-437-A	VF-119 BOARD, COMPLETE	
253	3-053-224-01	SHEET ,FLEXIBLE RETAINER	
254	1-672-455-11	FP-57 FLEXIBLE BOARD	
255	X-3948-229-1	LENS ASSY (860), VF	
* 256	3-960-302-11	CUSHION (1), LCD	
257	X-3949-174-1	HOLDER ASSY, BL	
258	3-050-905-01	SHEET, VF LIGHT INTERCEPTION	
259	A-7073-439-A	LB-54 BOARD, COMPLETE	
260	A-7073-438-A	VF-120 BOARD, COMPLETE	
261	X-3949-175-1	CABINET (FRONT) ASSY, EVF	
262	3-968-729-61	SCREW (M2 x 3), LOCK ACE, P2	
LCD902	8-753-023-37	LCX024AK-4/5 COMPLE	
⚠ ND5351	1-517-325-21	LAMP, FLUORESCENT (0.55 INCH)	

6-1-8. B/W EVF BLOCK ASSEMBLY
(B/W View Finder models CCD-TR315E/TR415E/TR425E/TR515E/TR713E & TRV series)

Note : As for the model whitch carries a color view finder, refer to page 6-7.

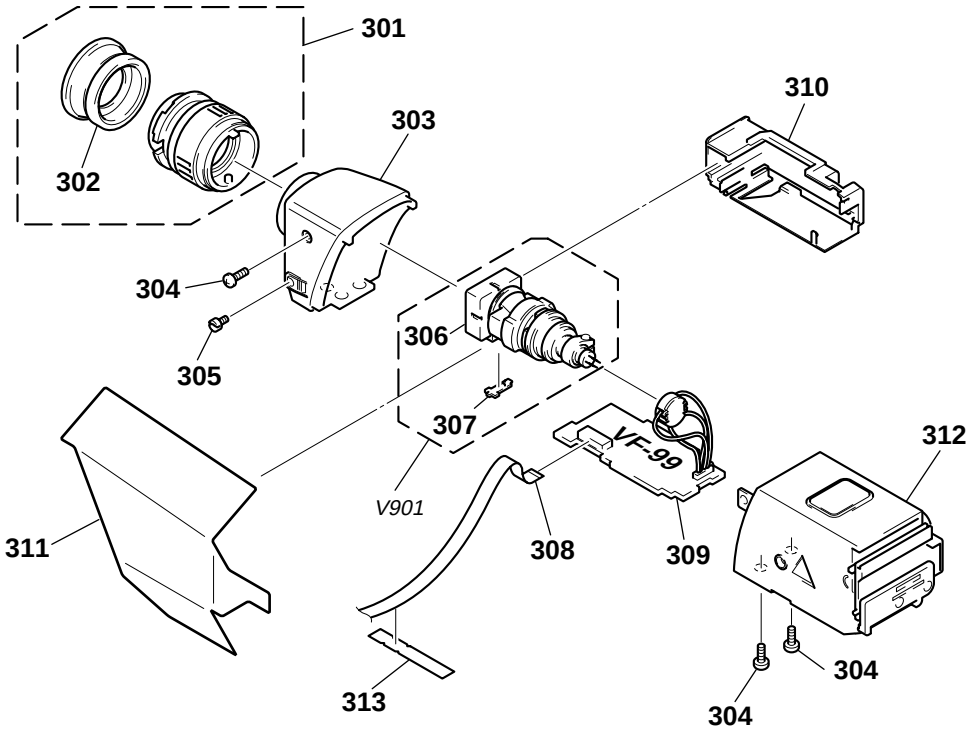

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
301	X-3949-273-1	FINDER ASSY	
302	3-963-391-01	EYE CUP	
303	X-3948-278-1	CABINET (REAR) (878) B ASSY	
304	3-968-729-61	SCREW (M2 x 3), LOCK ACE, P2	
305	3-975-898-01	SCREW (T), F LOCK	
306	3-977-292-01	MASK, CRT	
307	3-725-130-01	COVER, HINGE VOLTAGE	
308	1-783-241-11	CABLE, FLEXIBLE FLAT (FFC-235)	
309	A-7066-774-A	VF-99 (HP) BOARD, COMPLETE	
310	X-3948-279-1	HOLDER (878) ASSY, CRT	
* 311	3-989-914-01	SHEET, VF (B/W) ELECTROSTATIC	
312	X-3948-364-1	CABINET (FRONT) (845) B ASSY (TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)	
312	X-3949-176-1	CABINET (FRONT) ASSY, EVF (TR515E/TR713E/TRV36E/TRV46E)	
* 313	3-987-843-01	SHEET, VF FLEXIBLE LOCK	
⚠V901	1-452-673-61	CRT ASSY (M01KXX90WB)	

6-1-9. LCD BLOCK ASSEMBLY (TRV series)

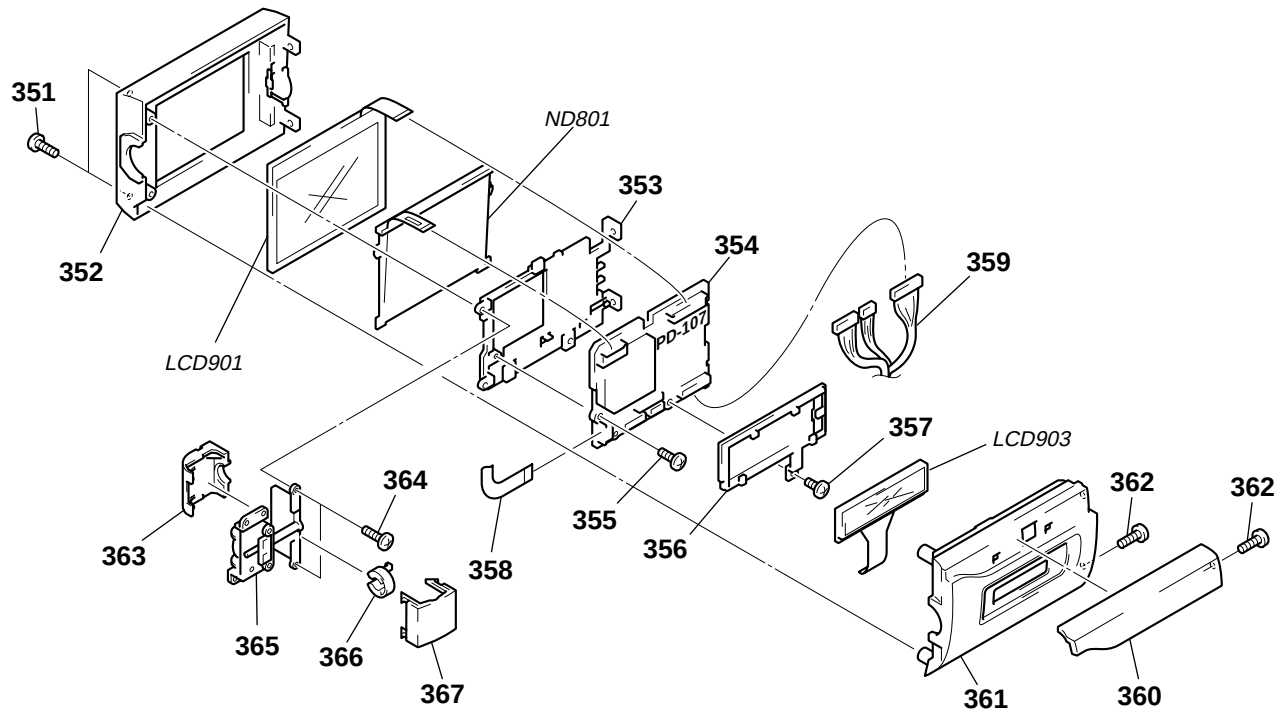

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
351	3-948-339-11	SCREW, TAPPING	
352	X-3948-162-1	CABINET (M) (870) ASSY, P	
353	3-053-206-01	FRAME (S), PANEL	
354	A-7073-804-A	PD-107 (C6P) BOARD, COMPLETE	
355	3-713-786-21	SCREW (M2 x 3)	
356	3-987-584-11	HOLDER (870), LCD	
357	4-981-286-01	SCREW (M1.7 x 2) (IB LOCK)	
358	1-668-963-21	FP-642 FLEXIBLE BOARD	
359	1-959-271-11	HARNESS (DP-108)	
360	3-053-205-01	CABINET (U), P	
361	3-053-203-01	CABINET (C), P (TRV36E/TRV46E)	
361	3-053-203-21	CABINET (C), P (TRV16E/TRV26E/TRV27E/TRV27EP)	

Ref. No.	Part No.	Description	Remark
362	3-962-826-01	SCREW (2 x 4)	
363	3-987-625-01	COVER (M), HINGE	
364	3-948-339-01	SCREW, TAPPING	
365	X-3948-169-7	HINGE ASSY	
366	3-987-623-01	CLAMP, HARNESS	
367	3-503-204-01	COVER (C), HINGE (TRV36E/TRV46E)	
367	3-503-204-21	COVER (C), HINGE (TRV16E/TRV26E/TRV27E/TRV27EP)	
LCD901	1-803-356-21	MODULE, CRYSTAL INDICATION	
LCD903	A-7093-473-A	INDICATION LCD BLOCK ASSY	
⚠ND801	1-517-752-11	TUBE, FLUORESCENT, COLD CATHODE	

6-1-10. ZOOM LENS BLOCK ASSEMBLY

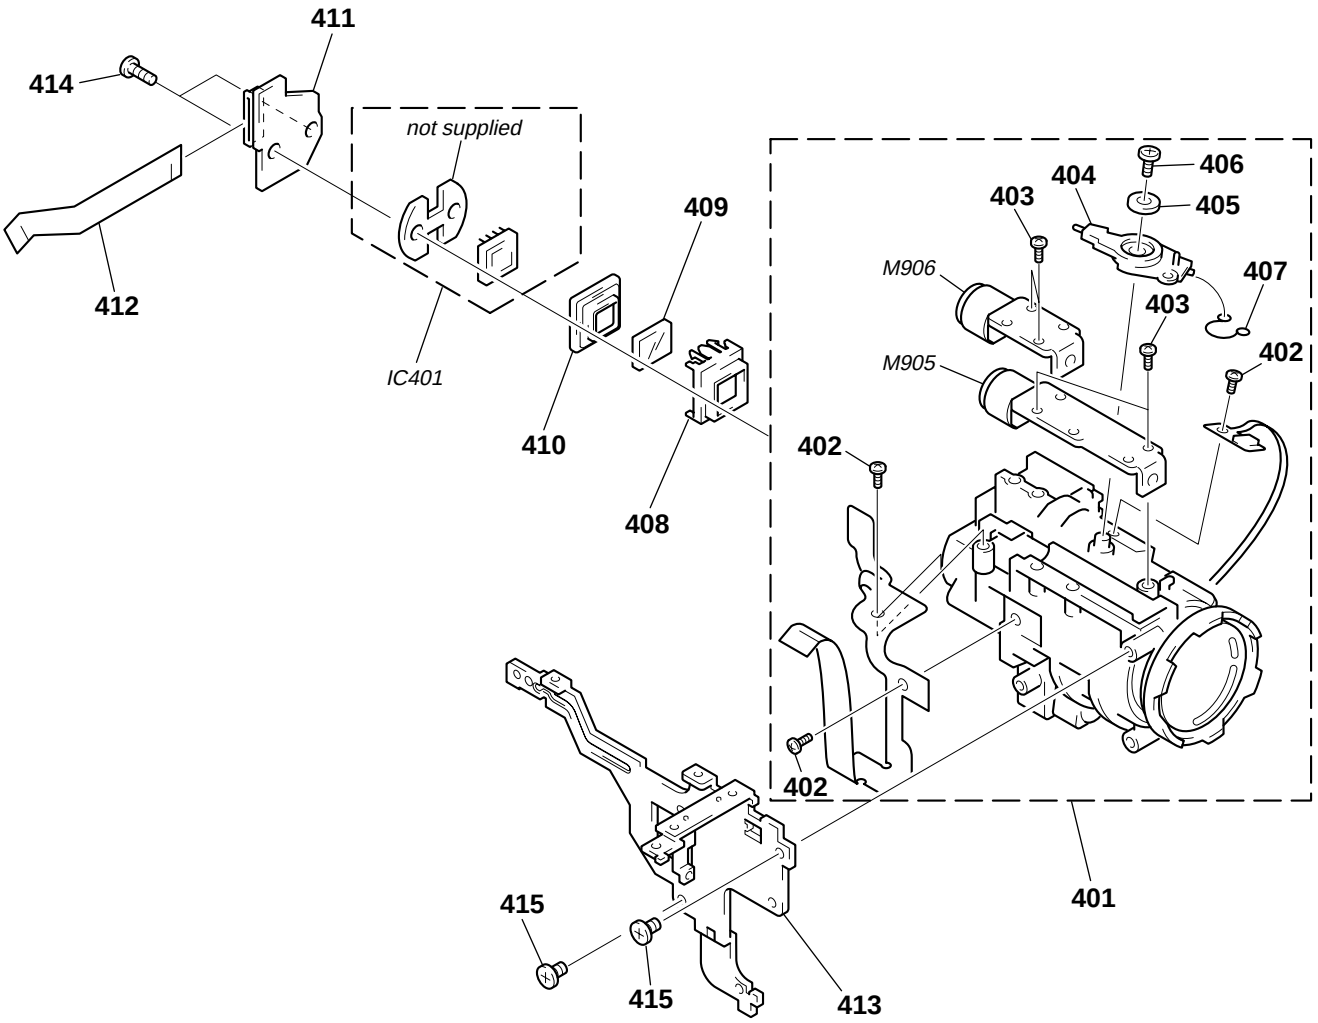

Be sure to read "Note on the CCD Imager replacement" on page 4–9 when changing the CCD imager.

Ref. No.	Part No.	Description	Remark
401	8-848-722-01	DEVICE, LENS LSV-600A (SOC)	
402	3-713-791-51	SCREW (M1.7 x 3.5), TAPPING, P2	
403	3-713-791-41	SCREW (M1.7 x 5), TAPPING PS	
404	3-979-029-01	LEVER, IR	
405	2-327-405-01	WASHER	
406	2-623-756-21	SCREW (B1.7 x 5), P	
407	3-979-037-11	SPRING, RETURN	
408	3-978-981-11	ADAPTOR (FK), CCD FITTING	
409	1-758-133-21	FILTER BLOCK, OPTICAL	
410	3-953-817-01	RUBBER (F), SEAL	

Ref. No.	Part No.	Description	Remark
411	A-7073-786-A	CD-210 (NT) BOARD, COMPLETE (TR series)	
411	A-7073-807-A	CD-211 (NT) BOARD, COMPLETE (TRV series)	
412	1-668-959-11	FP-623 FLEXIBLE BOARD	
413	3-987-712-01	FRAME, LENS	
414	3-318-203-11	SCREW (B1.7 x 6), TAPPING	
415	3-948-339-61	TAPPING	
IC401	A-7030-961-A	CCD BLOCK ASSY (207 SERVICE)	(Except TR713E/TRV46E)
IC401	A-7030-962-A	CCD BLOCK ASSY (243 SERVICE)	(TR713E/TRV46E)
M905	1-763-047-11	MOTOR, FOCUS STEPPING	
M906	1-763-046-11	MOTOR, ZOOM STEPPING	

6-1-9. CASSETTE COMPARTMENT ASSEMBLY

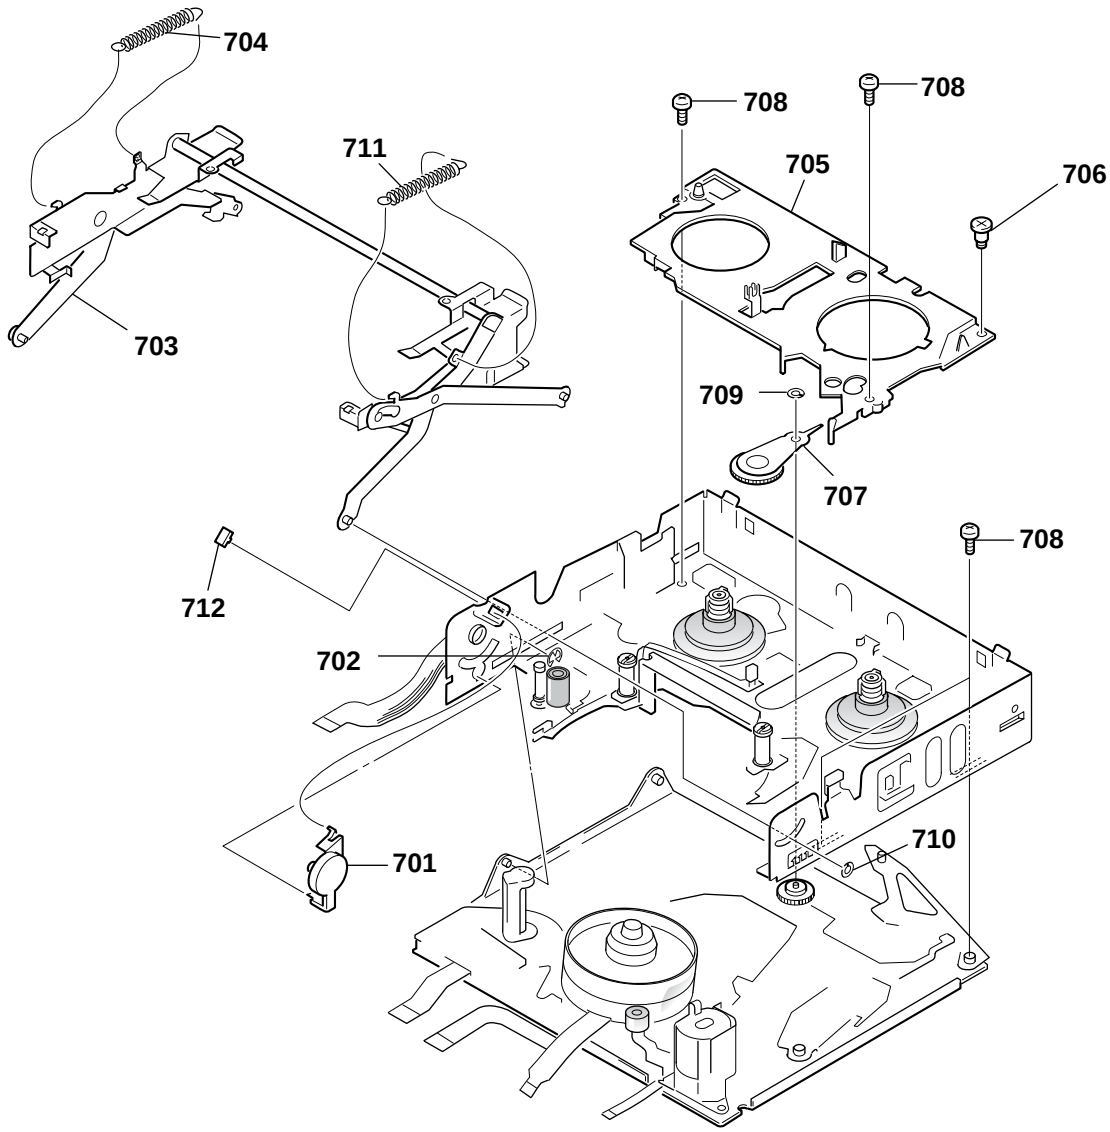

Ref. No.	Part No.	Description	Remark
701	A-7040-421-A	DAMPER ASSY	
702	7-624-102-04	STOP RING 1.5, TYPE -E	
703	X-3945-400-X	CASSETTE COMPARTMENT ASSY	
704	3-965-587-03	SPRING, TENSION	
705	3-965-584-08	RETAINER, GOOSENECK	
706	3-976-055-01	SCREW (M1.4 x 1)	
707	X-3945-399-1	GEAR ASSY, GOOSENECK	
708	3-947-503-01	SCREW (M1.4 x 2.5)	
709	3-331-007-21	WASHER	
710	3-727-176-01	WASHER, STOPPER	
711	3-973-268-01	SPRING, TENSION	
712	3-971-076-01	FASTENER, D	

6-1-10. LS CHASSIS ASSEMBLY

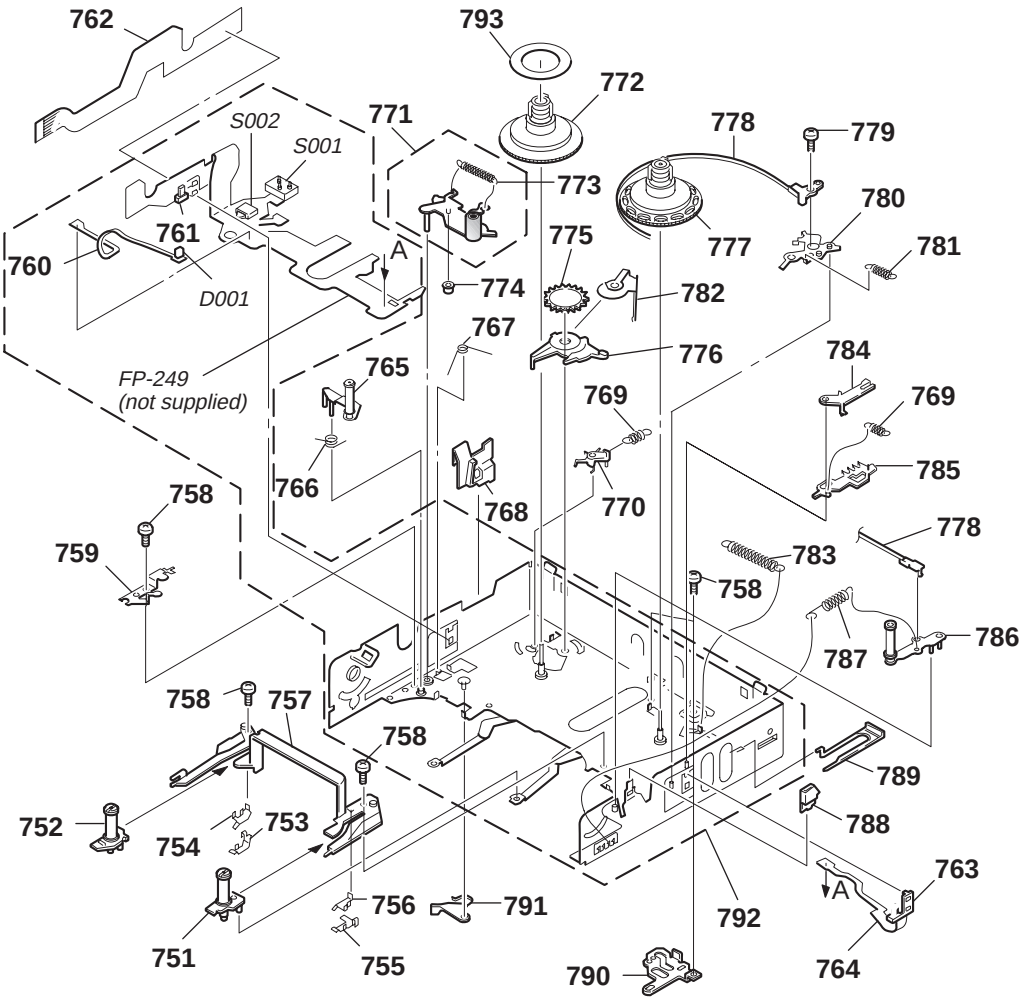

Ref. No.	Part No.	Description	Remark
751	A-7040-419-A	BASE (S) BLOCK ASSY, GUIDE	
752	A-7040-418-B	BASE (T) BLOCK ASSY, GUIDE	
753	3-965-559-01	STOPPER (T)	
754	3-965-557-01	STOPPER (T), GB	
755	3-965-558-01	STOPPER (S)	
756	3-965-556-01	STOPPER (S), GB	
757	3-965-553-01	RAIL, GUIDE	
758	3-947-503-01	SCREW (M1.4X2.5)	
759	3-965-573-01	RETAINER, TG4	
760	1-658-213-11	FP-355 FLEXIBLE BOARD	
761	3-965-552-01	HOLDER (T), SENSOR	
762	1-657-786-13	FP-221 FLEXIBLE BOARD	
763	3-965-551-01	HOLDER (S), SENSOR	
764	1-658-214-11	FP-356 FLEXIBLE BOARD	
765	A-7040-417-A	ARM BLOCK ASSY, TG4	
766	3-965-574-01	SPRING, TORSION	
767	3-965-575-01	SPRING (PINCH), TORSION	
768	3-965-568-01	GUIDE, LOCK	
769	3-965-562-01	SPRING (RATCHET), TENSION	
770	3-965-581-03	RATCHET, T	
771	X-3945-394-1	ARM ASSY, PINCH	
772	X-3945-398-2	DECK ASSY, REEL, T	
773	3-965-648-01	SPRING (PINCH), TENSION	
774	3-965-579-01	ROLLER, PINCH PRESS	

Ref. No.	Part No.	Description	Remark
775	3-965-563-01	GEAR, T SOFT	
776	3-965-565-01	CLAW, T SOFT	
777	X-3945-397-1	DECK ASSY, REEL, S	
778	X-3945-396-1	BAND ASSY, TENSION REGULATOR	
779	3-945-756-01	SCREW (M1.4X3)	
780	3-965-583-01	ARM, RVS	
781	3-965-580-01	SPRING, TENSION	
782	3-966-384-01	SPRING, T SOFT	
783	3-965-578-01	SPRING, TENSION COIL	
784	3-965-560-01	RATCHET, S	
785	3-965-561-01	PLATE, RELEASE, S RATCHET	
786	X-3945-395-1	ARM ASSY, TG1	
787	3-965-576-01	SPRING (TG1), TENSION	
788	3-965-567-01	LID OPEN	
789	3-965-566-01	COVER, LS GUIDE	
* 790	3-965-577-01	PLATE, CAM, LS	
791	3-965-569-01	ARM, EJ	
792	A-7040-427-A	CHASSIS (S1) ASSY, LS	
* 793	3-972-838-01	SPACER, REEL	
D001	8-719-988-42	DIODE GL453	
S001	1-692-614-11	SWITCH, PUSH (3 KEY) (Hi8 MP, ME/MP, REC PROOF)	
S002	1-572-688-11	SWITCH, PUSH (1 KEY)(C.C. LOCK)	

6-1-11. MECHANISM CHASSIS ASSEMBLY

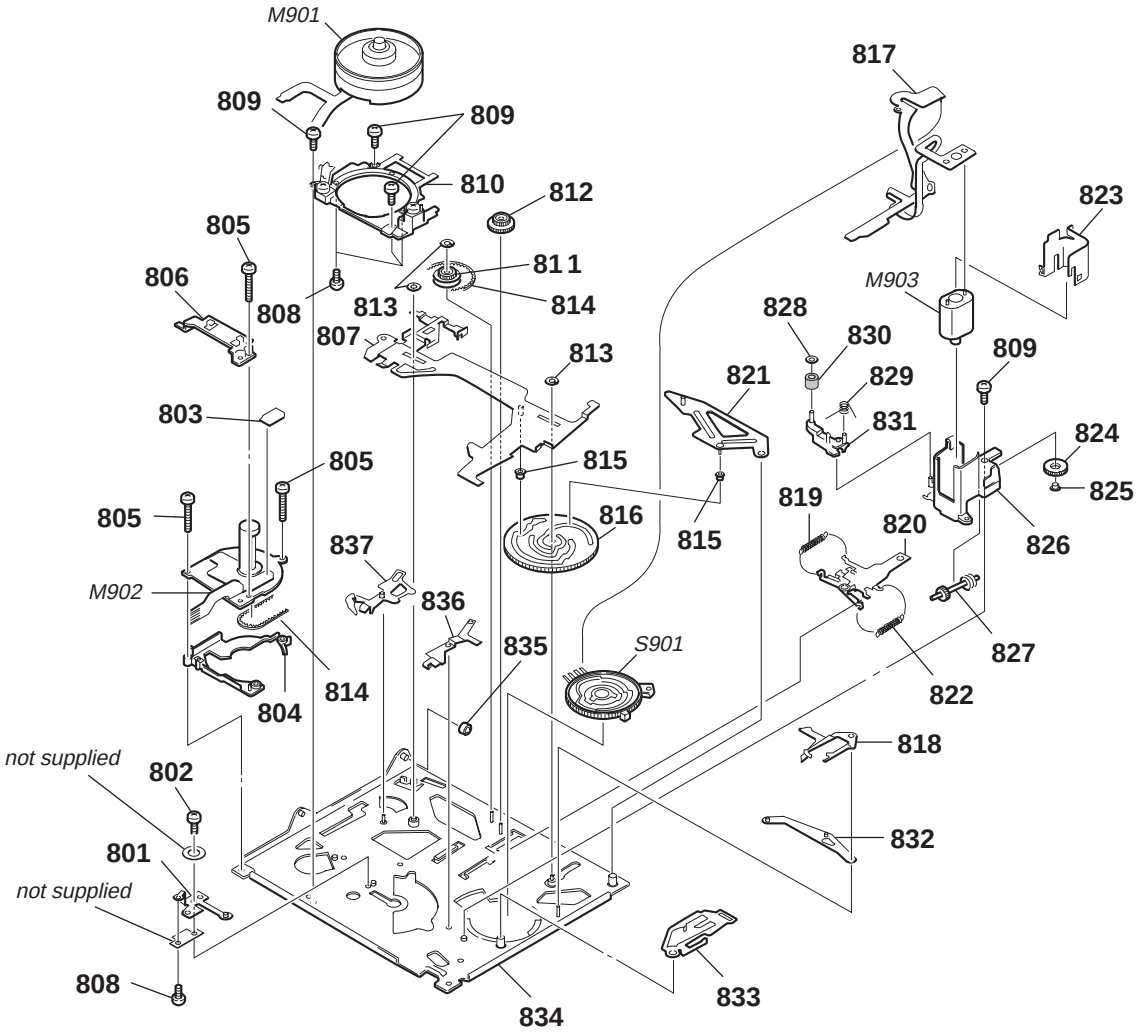

Ref. No.	Part No.	Description	Remark
801	X-3947-343-1	GROUND (IM) ASSY, SHAFT	
802	3-965-550-02	SCREW (M1.7X1.6)	
803	1-657-785-11	FP-248 FLEXIBLE BOARD (DEW SENSOR)	
804	3-965-545-01	SPACER, CAPSTAN	
805	3-965-549-01	SCREW (M1.4 X 6.5)	
806	3-966-349-01	HOLDER, FLEXIBLE	
807	3-971-644-01	SLIDER (2), M	
808	3-971-939-01	SCREW (M1.4)	
809	3-947-503-01	SCREW (M1.4X2.5)	
810	A-7040-416-A	BASE BLOCK ASSY, DRUM	
811	3-965-527-01	GEAR, CHANGE	
812	3-965-544-01	GEAR, RELAY	
813	3-331-007-21	WASHER	
814	3-965-546-01	BELT, TIMING	
815	3-965-533-01	ROLLER, LS	
816	3-965-528-01	GEAR, CAM	
817	1-657-784-11	FP-220 FLEXIBLE BOARD	
818	3-965-529-01	PLATE, REGULATOR (LIMITTER ARM T), COIL	
819	3-965-536-01	SPRING (LIMITTER ARM T), COIL	
820	X-3945-388-1	SLIDER ASSY, GL	
821	3-965-532-01	ARM, LS	

Ref. No.	Part No.	Description	Remark
822	3-965-535-01	SPRING (LIMITTER ARM S), COIL	
823	3-965-542-01	SHIELD, MOTOR	
824	3-965-539-01	GEAR (A)	
825	3-965-538-01	SLEEVE, MOTOR HOLDER	
826	3-965-540-01	HOLDER, MOTOR	
827	3-965-541-01	SHAFT, WORM	
828	3-321-393-01	WASHER, STOPPER	
829	3-965-724-01	SPRING, TORSION	
830	A-7040-423-A	ROLLER BLOCK ASSY, HC	
831	X-3945-407-1	ARM ASSY, HC ROLLER	
832	3-965-531-01	ARM, GL	
833	3-965-530-01	PLATE (2), REGULATOR, TENSION	
834	X-3947-915-2	CHASSIS ASSY, MECHANICAL	
835	3-965-526-02	ROLLER, LS GUIDE	
836	3-965-547-01	ARM, HC DRIVING	
837	3-965-534-01	PLATE, PRESS, PINCH	
M901	A-7048-875-A	DRUM ASSY (DGH-0E2A-R)	
M902	8-835-531-32	CAPSTAN ASSY	
M903	X-3945-401-1	MOTOR ASSY, DC (LOADING)	
S901	1-762-436-15	SWITCH, ROTARY (ENCODER)	

6-2. ELECTRICAL PARTS LIST

Note:

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
  All resistors are in ohms
  METAL: Metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F : nonflammable
- SEMICONDUCTORS
  In each case, u: µ , for example:
  uA...: µ A..., uPA...: µ PA..., uPB...: µ PB..., uPC...: µ PC..., uPD...: µ PD...
- CAPACITORS
  uF : µ F
- COILS
  uH : µ H
- Abbreviation
  East European model is abbreviated as EE.
  North European model is abbreviated as NE.
  Russian model is abbreviated as RU.
  Hong Kong model is abbreviated as HK.
  Australian model is abbreviated as AUS.
  Chinese model is abbreviated as CN.
  Tourist model is abbreviated as JE.

Ref. No.	Part No.	Description			Remark
	A-7073-786-A	CD-210(NT) BOARD, COMPLETE			
		**********			
		(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)			
		(Ref. No. 4,000 Series)			
	A-7073-807-A	CD-211(NT) BOARD, COMPLETE			
		**********			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
		(Ref. No. 9,000 Series)			
		(IC401 is not including to the mounted board.)			
		< CAPACITOR >			
C401	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C405	1-135-210-11	TANTALUM CHIP	4.7uF	20%	10V
C406	1-135-214-21	TANTAL. CHIP	4.7uF	20%	20V
		< CONNECTOR >			
CN401	1-766-346-21	CONNECTOR, FFC/FPC 16P			
		< IC >			
IC401	A-7030-961-A	CCD BLOCK ASSY (207 SERVICE)(CCD IMAGER)			
		(TR315E/TR415E/TR425E/TR515E/TR516E/TRV16E/TRV26E/TRV27E/ TRV27EP/TRV36E)			
IC401	A-7030-962-A	CCD BLOCK ASSY (243 SERVICE)(CCD IMAGER)			
		(TR713E/TRV46E)			
		< COIL >			
L401	1-414-757-11	INDUCTOR	100uH		
		< TRANSISTOR >			
Q402	8-729-117-73	TRANSISTOR 2SC4178-F13F14-T1			
		< RESISTOR >			
R404	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R405	1-216-809-11	METAL CHIP	100	5%	1/16W
R406	1-216-864-11	METAL CHIP	0	5%	1/16W

Ref. No.	Part No.	Description			Remark
	A-7073-783-A	CF-60(CN) BOARD, COMPLETE (TR516E)			
		**********			
	A-7073-795-A	CF-60(P) BOARD, COMPLETE			
		**********			
		(TR415E/TR425E/TR515E/TR713E)			
	A-7073-821-A	CF-60(N) BOARD, COMPLETE (TR315E)			
		**********			
		(Ref. No. 4,000 Series)			
	A-7073-811-A	CF-61 BOARD, COMPLETE			
		**********			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
		(Ref. No. 9,000 Series)			
		< BATTERY HOLDER >			
BH001	1-550-104-11	HOLDER, BATTERY			
		< BUZZER >			
BZ002	1-529-104-21	BUZZER, PIEZOELECTRIC			
		(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)			
		< CAPACITOR >			
C003	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)			
		< CONNECTOR >			
CN001	1-774-054-21	CONNECTOR, FFC/FPC (ZIF) 45P			
CN002	1-774-765-11	CONNECTOR, FFC/FPC 8P			
* CN003	1-580-055-21	PIN, CONNECTOR (SMD) 2P			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
CN005	1-778-509-21	PIN, CONNECTOR (PC BOARD) 11P			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
CN006	1-778-508-21	PIN, CONNECTOR (PC BOARD) 6P			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
CN007	1-779-334-11	CONNECTOR, FFC/FPC 20P (TR516E)			
* CN008	1-778-283-11	CONNECTOR, FFC/FPC 4P			
		(TR315E/TR415E/TR425E/TR515E/TR713E/TRV16E/TRV26E/TRV27E/ TRV27EP/TRV36E/TRV46E)			
CN009	1-691-362-11	CONNECTOR, FFC/FPC (ZIF) 24P			
		(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)			

Be sure to read "Note on the CCD Imager replacement" on page 4–9 when changing the CCD imager.

Ref. No.	Part No.	Description			Remark
		< DIODE >			
D001	8-719-062-16	DIODE 01ZA8.2(TPL3) (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
D005	8-719-073-03	DIODE MA8082-(K8).S0			
D006	8-719-073-03	DIODE MA8082-(K8).S0			
D008	8-719-073-01	DIODE MA111-(K8).S0			
D010	8-719-073-03	DIODE MA8082-(K8).S0			
		< IC >			
IC001	8-759-573-02	IC BU9729K-E2 (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)			
		< TRANSISTOR >			
Q001	8-729-402-42	TRANSISTOR UN5213-TX (TR315E/TR415E/TR425E/TR515E/TR713E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
		< RESISTOR >			
R002	1-216-864-11	METAL CHIP	0	5%	1/16W
R005	1-216-833-11	METAL CHIP	10K	5%	1/16W
R006	1-216-833-11	METAL CHIP	10K	5%	1/16W
R007	1-216-833-11	METAL CHIP	10K	5%	1/16W
R008	1-216-833-11	METAL CHIP	10K	5%	1/16W
R009	1-216-833-11	METAL CHIP	10K	5%	1/16W
R011	1-216-855-11	METAL CHIP	680K	5%	1/16W (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)
R012	1-216-864-11	METAL CHIP	0	5%	1/16W (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)
R013	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R015	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R016	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R019	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R020	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R022	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R023	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R025	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R026	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R028	1-216-822-11	METAL CHIP	1.2K	5%	1/16W (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)
R029	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R031	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R032	1-216-828-11	METAL CHIP	3.9K	5%	1/16W (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
R034	1-216-823-11	METAL CHIP	1.5K	5%	1/16W (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)
R035	1-216-825-11	METAL CHIP	2.2K	5%	1/16W (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)
R036	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R038	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R039	1-216-838-11	METAL CHIP	27K	5%	1/16W
R041	1-216-838-11	METAL CHIP	27K	5%	1/16W
R046	1-216-828-11	METAL CHIP	3.9K	5%	1/16W (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)
R047	1-216-832-11	METAL CHIP	8.2K	5%	1/16W (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)
R048	1-216-838-11	METAL CHIP	27K	5%	1/16W (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)
R051	1-216-821-11	METAL CHIP	1K	5%	1/16W
R052	1-216-821-11	METAL CHIP	1K	5%	1/16W

Ref. No.	Part No.	Description	Remark
		< SWITCH >	
S003	1-771-138-61	SWITCH, KEY BOARD (DATE)	
S004	1-771-029-21	SWITCH, TACTILE (PROGRAM AE) (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)	
S006	1-771-138-61	SWITCH, KEY BOARD (PICTURE EFFECT)	
S008	1-771-138-61	SWITCH, KEY BOARD (COUNTER RESET)	
S010	1-771-029-21	SWITCH, TACTILE (MENU) (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)	
S010	1-771-138-61	SWITCH, KEY BOARD (MENU) (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)	
S012	1-771-029-21	SWITCH, TACTILE (EXPOSURE)	
S013	1-771-138-61	SWITCH, KEY BOARD (END SEARCH) (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)	
S015	1-771-025-21	SWITCH, ROTARY (SELECT DIAL)(ENCODER)	
S017	1-771-029-21	SWITCH, TACTILE (BACK LIGHT) (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)	
S017	1-771-138-61	SWITCH, KEY BOARD (BACK LIGHT) (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)	
S018	1-771-138-61	SWITCH, KEY BOARD (TITLE)	
S020	1-762-442-21	SWITCH, ROTARY (AE DIAL) (TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)	
S021	1-771-138-61	SWITCH, KEY BOARD (TIME)	
S022	1-771-138-61	SWITCH, KEY BOARD (DISPLAY) (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)	
S024	1-762-648-21	SWITCH, SLIDE (START/STOP MODE)	

	A-7073-785-A	DD-117(MMCB0) BOARD, COMPLETE (TR516E) **********			
	A-7073-791-A	DD-117(MMIB0) BOARD, COMPLETE (TR713E) **********			
	A-7073-806-A	DD-117(VMMIB0) BOARD, COMPLETE (TRV46E) **********			
	A-7073-818-A	DD-117(ZL0) BOARD, COMPLETE ********** (TR315E/TR415E/TR425E)			
	A-7073-824-A	DD-117(VZB0) BOARD, COMPLETE (TRV36E) **********			
	A-7073-830-A	DD-117(ZB0) BOARD, COMPLETE (TR515E) **********			
	A-7073-874-A	DD-117(VZL0) BOARD, COMPLETE ********** (TRV16E/TRV26E/TRV27E/TRV27EP) (Ref. No. 2,000 Series)			
		< CAPACITOR >			
C801	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C802	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C803	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C804	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C805	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C806	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C807	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C808	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C809	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C810	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C811	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V

Ref. No.	Part No.	Description			Remark
C812	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C813	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C815	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C817	1-113-991-11	TANTAL. CHIP	33uF	20%	16V
C818	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C819	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C820	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C821	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C823	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C824	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C825	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C826	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C827	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C828	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C829	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C830	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C831	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C832	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C833	1-162-974-11	CERAMIC CHIP	0.01uF		50V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C834	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C836	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C837	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C838	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C840	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C841	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C842	1-135-216-11	TANTALUM CHIP	10uF	20%	10V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C843	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V
C844	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V
C846	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C847	1-164-506-11	CERAMIC CHIP	4.7uF		16V
C848	1-164-506-11	CERAMIC CHIP	4.7uF		16V
C849	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C850	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C851	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V
C852	1-164-505-11	CERAMIC CHIP	2.2uF		16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C853	1-165-319-11	CERAMIC CHIP	0.1uF		50V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C854	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V
					(TR516E)
C855	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C857	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V
C860	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C861	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C861	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
					(TR516E)
C862	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C863	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C864	1-113-985-11	TANTAL. CHIP	10uF	20%	20V
C865	1-117-720-11	CERAMIC CHIP	4.7uF		10V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C866	1-164-505-11	CERAMIC CHIP	2.2uF		16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C867	1-164-346-11	CERAMIC CHIP	1uF		16V
					(TR516E)
C868	1-135-214-21	TANTAL. CHIP	4.7uF	20%	20V
C869	1-164-505-11	CERAMIC CHIP	2.2uF		16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C871	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V
C872	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C873	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C875	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C876	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C877	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		< CONNECTOR >			
* CN801	1-580-756-21	PIN, CONNECTOR 7P			
CN931	1-774-597-41	CONNECTOR, BOARD TO BOARD 70P			
CN933	1-785-627-21	PIN, CONNECTOR (PC BOARD) 10P			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
CN934	1-766-342-21	CONNECTOR, FFC/FPC 12P			
CN935	1-764-709-11	CONNECTOR, FFC/FPC (LIF) 10P			
		< DIODE >			
D806	8-719-027-76	DIODE 1SS357-TPH3			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
D809	8-719-027-77	DIODE MA796-TX			
D810	8-719-027-76	DIODE 1SS357-TPH3			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
D812	8-719-027-76	DIODE 1SS357-TPH3			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
D813	8-719-073-03	DIODE MA8082-(K8).S0			
D814	8-719-073-03	DIODE MA8082-(K8).S0			
D815	8-719-073-03	DIODE MA8082-(K8).S0			
D816	8-719-027-76	DIODE 1SS357-TPH3			
D817	8-719-073-02	DIODE MA728-(K8).S0			
D818	8-719-027-76	DIODE 1SS357-TPH3			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
D822	8-719-056-89	DIODE MA8120-TX			
D933	8-719-062-16	DIODE 01ZA8.2(TPL3)			
D934	8-719-062-16	DIODE 01ZA8.2(TPL3)			
D936	8-719-062-16	DIODE 01ZA8.2(TPL3)			
		< FERRITE BEAD >			
FB931	1-414-760-21	FERRITE 0UH			
FB932	1-414-760-21	FERRITE 0UH			
FB933	1-414-760-21	FERRITE 0UH			
		< IC >			
IC801	8-759-384-78	IC SN104241PM-TEB			
IC802	8-759-492-30	IC MB3817PFV-G-BND			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
		< COIL >			
L804	1-412-056-11	INDUCTOR CHIP	4.7uH		
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
L805	1-409-532-41	INDUCTOR	33uH		
L805	1-424-675-51	INDUCTOR	33uH		
L806	1-409-532-41	INDUCTOR	33uH		

Ref. No.	Part No.	Description	Remark
L806	1-424-675-51	INDUCTOR 33uH	
L807	1-424-674-11	INDUCTOR 22uH	
L807	1-424-674-51	INDUCTOR 22uH	
L808	1-424-674-11	INDUCTOR 22uH	
L808	1-424-674-51	INDUCTOR 22uH	
L809	1-424-674-11	INDUCTOR 22uH	
L809	1-424-674-51	INDUCTOR 22uH	
L810	1-414-396-21	INDUCTOR 4.7uH	
L811	1-414-396-21	INDUCTOR 4.7uH	
L812	1-414-396-21	INDUCTOR 4.7uH	
L813	1-414-396-21	INDUCTOR 4.7uH	
L814	1-414-396-21	INDUCTOR 4.7uH	
L815	1-414-396-21	INDUCTOR 4.7uH	
L816	1-414-396-21	INDUCTOR 4.7uH (TR516E)	
L817	1-414-396-21	INDUCTOR 4.7uH	
L818	1-414-396-21	INDUCTOR 4.7uH	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
L819	1-414-400-11	INDUCTOR 22uH	
L820	1-424-674-11	INDUCTOR 22uH	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
L820	1-424-674-51	INDUCTOR 22uH	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
L821	1-412-056-11	INDUCTOR CHIP 4.7uH	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
		< IC LINK >	
⚠PS801	1-576-286-21	FUSE, MICRO (1.4A)	
⚠PS803	1-576-286-21	FUSE, MICRO (1.4A)	
⚠PS804	1-576-286-21	FUSE, MICRO (1.4A)	
⚠PS805	1-576-286-21	FUSE, MICRO (1.4A)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
⚠PS806	1-576-286-21	FUSE, MICRO (1.4A)	(TR515E/TR516E/TR713E/TRV36E/TRV46E)
		< TRANSISTOR >	
Q801	8-729-024-48	TRANSISTOR 2SK1830-TE85L	
Q803	8-729-804-41	TRANSISTOR 2SB1122-ST-TD	
Q804	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q804	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q805	8-729-024-48	TRANSISTOR 2SK1830-TE85L	
Q806	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q806	8-729-042-29	TRANSISTOR RN1104F(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q807	8-729-804-41	TRANSISTOR 2SB1122-ST-TD	
Q808	8-729-046-98	TRANSISTOR CPH6702-TL	
Q809	8-729-046-98	TRANSISTOR CPH6702-TL	
Q810	8-729-046-98	TRANSISTOR CPH6702-TL	
Q813	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q814	8-729-046-98	TRANSISTOR CPH6702-TL	
Q815	8-729-046-98	TRANSISTOR CPH6702-TL	
Q819	8-729-046-98	TRANSISTOR CPH6702-TL	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q823	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q823	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q826	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	(TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q826	8-729-042-29	TRANSISTOR RN1104F(TPL3)	(TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q827	8-729-037-61	TRANSISTOR RN2104F(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q828	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q828	8-729-042-29	TRANSISTOR RN1104F(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q829	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q830	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q831	8-729-041-23	TRANSISTOR NDS356AP	(TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q832	8-729-041-23	TRANSISTOR NDS356AP	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q833	8-729-041-23	TRANSISTOR NDS356AP	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q834	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q835	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q836	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q837	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)(TR516E)	
Q838	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q839	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q840	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q841	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)(TR516E)	
Q842	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q843	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q844	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q845	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q846	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)(TR516E)	
Q847	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q848	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q849	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q850	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
Q851	8-729-046-77	TRANSISTOR SI4963DY-T1	
Q852	8-729-017-61	TRANSISTOR 2SB1581-T1	
Q853	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q854	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q855	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q856	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q932	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	(TR713E/TRV46E)
Q932	8-729-042-29	TRANSISTOR RN1104F(TPL3)	(TR713E/TRV46E)
		< RESISTOR >	
R801	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R802	1-218-893-11	RES,CHIP 82K 0.50% 1/16W	
R803	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R804	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R805	1-216-835-11	METAL CHIP 15K 5% 1/16W	
R806	1-218-879-11	RES,CHIP 22K 0.50% 1/16W	
R807	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R808	1-218-879-11	RES,CHIP 22K 0.50% 1/16W	
R809	1-216-813-11	METAL CHIP 220 5% 1/16W	
R810	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R811	1-218-883-11	RES,CHIP 33K 0.50% 1/16W	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

DD-117

Ref. No.	Part No.	Description			Remark
R812	1-218-901-11	RES,CHIP	180K	0.50%	1/16W
R813	1-216-853-11	METAL CHIP	470K	5%	1/16W
R814	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
R815	1-216-813-11	METAL CHIP	220	5%	1/16W
R816	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
R817	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
R818	1-216-813-11	METAL CHIP	220	5%	1/16W
R819	1-218-887-11	RES,CHIP	47K	0.50%	1/16W
R820	1-216-845-11	METAL CHIP	100K	5%	1/16W
R821	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
R822	1-216-150-91	RES,CHIP	10	5%	1/8W
R824	1-216-837-11	METAL CHIP	22K	5%	1/16W
R825	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
R826	1-216-821-11	METAL CHIP	1K	5%	1/16W
R827	1-216-821-11	METAL CHIP	1K	5%	1/16W
R828	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R829	1-216-837-11	METAL CHIP	22K	5%	1/16W
R830	1-218-883-11	RES,CHIP	33K	0.50%	1/16W
R831	1-216-841-11	METAL CHIP	47K	5%	1/16W
R832	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
R833	1-216-839-11	METAL CHIP	33K	5%	1/16W
R834	1-218-883-11	RES,CHIP	33K	0.50%	1/16W
R835	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
R836	1-216-837-11	METAL CHIP	22K	5%	1/16W
R837	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R838	1-216-837-11	METAL CHIP	22K	5%	1/16W
R839	1-216-837-11	METAL CHIP	22K	5%	1/16W
R840	1-216-839-11	METAL CHIP	33K	5%	1/16W
R841	1-216-834-11	METAL CHIP	12K	5%	1/16W
R842	1-218-903-11	RES,CHIP	220K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R843	1-218-895-11	RES,CHIP	100K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R844	1-216-296-91	SHORT	0		
R845	1-218-847-11	RES,CHIP	1K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R846	1-216-296-91	SHORT	0		
R847	1-216-296-91	SHORT	0		
R849	1-216-837-11	METAL CHIP	22K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R850	1-216-857-11	METAL CHIP	1M	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R852	1-218-851-11	RES,CHIP	1.5K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R853	1-216-849-11	METAL CHIP	220K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R854	1-218-887-11	RES,CHIP	47K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R865	1-216-841-11	METAL CHIP	47K	5%	1/16W
R866	1-216-837-11	METAL CHIP	22K	5%	1/16W
R867	1-216-296-91	SHORT	0		
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R868	1-216-849-11	METAL CHIP	220K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R870	1-216-857-11	METAL CHIP	1M	5%	1/16W
		(TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R871	1-216-857-11	METAL CHIP	1M	5%	1/16W
		(TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R872	1-216-845-11	METAL CHIP	100K	5%	1/16W
R873	1-216-841-11	METAL CHIP	47K	5%	1/16W
R874	1-216-857-11	METAL CHIP	1M	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R875	1-216-849-11	METAL CHIP	220K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R876	1-216-845-11	METAL CHIP	100K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R877	1-216-864-11	METAL CHIP	0	5%	1/16W
		(TR315E/TR415E/TR425E/TR515E/TR713E)			
R878	1-216-857-11	METAL CHIP	1M	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R879	1-216-837-11	METAL CHIP	22K	5%	1/16W
R880	1-218-895-11	RES,CHIP	100K	0.50%	1/16W
R881	1-216-864-11	METAL CHIP	0	5%	1/16W
R882	1-218-903-11	RES,CHIP	220K	0.50%	1/16W
R883	1-216-841-11	METAL CHIP	47K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R884	1-216-845-11	METAL CHIP	100K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R885	1-216-845-11	METAL CHIP	100K	5%	1/16W
					(TR516E)
R887	1-216-849-11	METAL CHIP	220K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R888	1-216-845-11	METAL CHIP	100K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R889	1-216-837-11	METAL CHIP	22K	5%	1/16W
					(TR516E)
R890	1-216-845-11	METAL CHIP	100K	5%	1/16W
R891	1-218-895-11	RES,CHIP	100K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R892	1-218-903-11	RES,CHIP	220K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R893	1-216-835-11	METAL CHIP	15K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R894	1-216-861-11	METAL CHIP	2.2M	5%	1/16W
					(TR516E)
R895	1-216-837-11	METAL CHIP	22K	5%	1/16W
R896	1-218-903-11	RES,CHIP	220K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R897	1-218-891-11	RES,CHIP	68K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R898	1-218-895-11	RES,CHIP	100K	0.50%	1/16W
					(TR516E)
R899	1-218-883-11	RES,CHIP	33K	0.50%	1/16W
					(TR516E)
R900	1-218-895-11	RES,CHIP	100K	0.50%	1/16W
R901	1-218-887-11	RES,CHIP	47K	0.50%	1/16W
R902	1-216-864-11	METAL CHIP	0	5%	1/16W
R903	1-216-845-11	METAL CHIP	100K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R904	1-216-849-11	METAL CHIP	220K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R905	1-218-901-11	RES,CHIP	180K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R906	1-216-833-11	METAL CHIP	10K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R907	1-218-903-11	RES,CHIP	220K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R908	1-216-841-11	METAL CHIP	47K	5%	1/16W
R910	1-216-833-11	METAL CHIP	10K	5%	1/16W
R911	1-218-883-11	RES,CHIP	33K	0.50%	1/16W
R912	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
R913	1-216-857-11	METAL CHIP	1M	5%	1/16W
R914	1-216-811-11	METAL CHIP	150	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R915	1-218-911-11	RES,CHIP	470K	0.50%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			

Ref. No.	Part No.	Description			Remark
R917	1-216-864-11	METAL CHIP	0	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R918	1-216-849-11	METAL CHIP	220K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R921	1-216-296-91	SHORT	0		
R922	1-216-296-91	SHORT	0		
R923	1-216-296-91	SHORT	0		
R924	1-216-849-11	METAL CHIP	220K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R925	1-216-864-11	METAL CHIP	0	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R926	1-216-821-11	METAL CHIP	1K	5%	1/16W
R933	1-216-821-11	METAL CHIP	1K	5%	1/16W
R934	1-216-821-11	METAL CHIP	1K	5%	1/16W
R935	1-216-821-11	METAL CHIP	1K	5%	1/16W
R936	1-216-821-11	METAL CHIP	1K	5%	1/16W
R937	1-216-821-11	METAL CHIP	1K	5%	1/16W
R938	1-216-821-11	METAL CHIP	1K	5%	1/16W
R939	1-216-821-11	METAL CHIP	1K	5%	1/16W
R941	1-216-821-11	METAL CHIP	1K	5%	1/16W
R943	1-216-029-00	METAL CHIP	150	5%	1/10W
R944	1-216-864-11	METAL CHIP	0	5%	1/16W
		< TRANSFORMER >			
⚠T801	1-429-565-21	TRANSFORMER, CONVERTER			
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
⚠T801	1-431-749-21	TRANSFORMER, DC/DC CONVERTER			
		(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)			

	1-658-214-11	FP-249 FLEXIBLE BOARD			
		**********			
		(Ref. No. 10,000 Series)			
		< HALL ELEMENT >			
H001	8-719-033-37	ELEMENT, HALL HW-105C			
H002	8-719-033-37	ELEMENT, HALL HW-105C			
		< TRANSISTOR >			
Q001	8-729-907-25	PHOTO TRANSISTOR PT4850F			
Q002	8-729-907-25	PHOTO TRANSISTOR PT4850F			
		< SWITCH >			
S001	1-692-614-11	SWITCH, PUSH (3 KEY)			
		(Hi8 MP, ME/MP, REC PROOF)			
S002	1-572-688-11	SWITCH, PUSH (1 KEY)(C.C. LOCK)			

	1-658-213-11	FP-355 FLEXIBLE BOARD			
		**********			
		(Ref. No. 10,000 Series)			
		< DIODE >			
D001	8-719-988-42	DIODE GL453			

Ref. No.	Part No.	Description			Remark
	A-7073-439-A	LB-54 BOARD, COMPLETE (TR516E)			
		**********			
		(Ref. No. 10,000 Series)			
		< CAPACITOR >			
C5351	1-113-642-11	TANTAL. CHIP	47uF	20%	10V
C5352	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C5353	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5354	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V
C5355	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V
C5356	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V
		< CONNECTOR >			
CN5351	1-784-564-11	CONNECTOR, BOARD TO BOARD 12P			
		< COIL >			
L5351	1-412-031-11	INDUCTOR CHIP	47uH		
L5352	1-412-029-11	INDUCTOR CHIP	10uH		
		< FLUORESCENT INDICATOR >			
⚠ND5351	1-517-325-21	LAMP, FLUORESCENT (0.55 INCH)			
		< TRANSISTOR >			
Q5351	8-729-039-24	TRANSISTOR FX216-TL1			
		< RESISTOR >			
R5351	1-216-839-11	METAL CHIP	33K	5%	1/16W
		< TRANSFORMER >			
⚠T5351	1-426-849-41	TRANSFORMER, INVERTER			

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
	A-7073-782-A	MA-345(B) BOARD, COMPLETE ********** (TR515E/TR516E)	
	A-7073-794-A	MA-345(IB) BOARD, COMPLETE (TR713E) **********	
	A-7073-820-A	MA-345(SL) BOARD, COMPLETE ********** (TR315E/TR415E)	
	A-7073-888-A	MA-345(Z0) BOARD, COMPLETE (TR425E) ********** (Ref. No. 9,000 Series)	
	A-7073-812-A	MA-346(VIB) BOARD, COMPLETE (TRV46E) **********	
	A-7073-823-A	MA-346(VZB) BOARD, COMPLETE (TRV36E) **********	
	A-7073-873-A	MA-346(VZL) BOARD, COMPLETE ********** (TRV16E/TRV26E)	
	A-7073-889-A	MA-346(V) BOARD, COMPLETE ********** (TRV27E/TRV27EP) (Ref. No. 4,000 Series)	
		< CAPACITOR >	
C301	1-107-686-11	TANTAL. CHIP 4.7uF 20% 16V (TR713E/TRV46E)	
C302	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V (TR713E/TRV46E)	
C303	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V (TR713E/TRV46E)	
C304	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V (TR713E/TRV46E)	
C305	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V (TR713E/TRV46E)	
C331	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C333	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C335	1-110-563-11	CERAMIC CHIP 0.068uF 10% 16V	
C336	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C337	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	
C338	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C341	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C342	1-119-749-11	TANTAL. CHIP 33uF 20% 4V	
C348	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	
C349	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
C355	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
C367	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C368	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C369	1-135-201-11	TANTALUM CHIP 10uF 20% 4V	
C370	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V	
C371	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
		< CONNECTOR >	
* CN301	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P	
CN303	1-764-526-11	CONNECTOR, FFC/FPC 18P	
		< DIODE >	
D301	8-719-061-86	DIODE DCR2810 (TR713E/TRV46E)	
D302	8-749-060-65	DIODE DCC3810	
D303	8-719-061-82	DIODE TLSU1002(TPX1,SONY)	
D305	8-719-073-01	DIODE MA111-(K8).S0 (TR425E/TR515E/TR516E/TR713E/TRV27E/TRV27EP/TRV36E/TRV46E)	
D309	8-719-067-44	DIODE CL-310IRS-X-TU (TR315E/TR415E/TR425E/TR515E/TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E)	
D331	8-719-073-03	DIODE MA8082-(K8).S0	
D333	8-719-073-01	DIODE MA111-(K8).S0	
		< FUSE >	
⚠F301	1-533-874-21	FUSE, MICRO (200mA/24V)	
		< IC >	
IC301	8-749-012-83	IC RS-180-T (TR425E/TR515E/TR516E/TR713E/TRV27E/TRV27EP/TRV36E/TRV46E)	
IC332	8-759-339-63	IC NJM2118V-TE2	
		< JACK >	
J301	1-568-027-11	JACK, SMALL TYPE (MIC (PLUG IN POWER))	
		< COIL >	
L301	1-216-295-91	SHORT 0 (TR315E/TR415E/TR425E/TR515E/TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E)	
L301	1-414-754-11	INDUCTOR 10uH (TR713E/TRV46E)	
		< TRANSISTOR >	
Q301	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX (TR713E/TRV46E)	
Q301	8-729-422-51	TRANSISTOR UN5110-QRS-TX (TR315E/TR415E/TR425E/TR515E/TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E)	
Q302	8-729-122-63	TRANSISTOR 2SA1226-T1E4 (TR713E/TRV46E)	
Q303	8-729-140-75	TRANSISTOR 2SD999-T1-CLCK	
Q304	8-729-402-42	TRANSISTOR UN5213-TX	
Q305	8-729-402-42	TRANSISTOR UN5213-TX (TR315E/TR415E/TR425E/TR515E/TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E)	
Q331	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	
Q332	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
		< RESISTOR >	
R301	1-216-823-11	METAL CHIP 1.5K 5% 1/16W (TR713E/TRV46E)	
R302	1-216-810-11	METAL CHIP 120 5% 1/16W (TR713E/TRV46E)	
R303	1-216-817-11	METAL CHIP 470 5% 1/16W	
R304	1-216-309-00	METAL CHIP 5.6 5% 1/10W (TR315E/TR415E/TR425E/TR515E/TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E)	
R304	1-216-311-00	METAL CHIP 6.8 5% 1/10W (TR713E/TRV46E)	
R305	1-216-302-00	METAL CHIP 2.7 5% 1/10W	
R306	1-216-864-11	METAL CHIP 0 5% 1/16W	
R308	1-216-837-11	METAL CHIP 22K 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
R309	1-216-847-11	METAL CHIP 150K 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
R310	1-216-824-11	METAL CHIP 1.8K 5% 1/16W	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description			Remark
R311	1-216-864-11	METAL CHIP	0	5%	1/16W
	(TR425E/TR515E/TR516E/TR713E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R312	1-216-864-11	METAL CHIP	0	5%	1/16W
				(TR713E/TRV46E)	
R313	1-216-864-11	METAL CHIP	0	5%	1/16W
R314	1-216-815-11	METAL CHIP	330	5%	1/16W
	(TR315E/TR415E/TR425E/TR515E/TR516E/TRV16E/TRV26E/TRV27E/				
				TRV27EP/TRV36E)	
R315	1-216-864-11	METAL CHIP	0	5%	1/16W
				(TR713E/TRV46E)	
R331	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R332	1-216-817-11	METAL CHIP	470	5%	1/16W
R334	1-216-864-11	METAL CHIP	0	5%	1/16W
R335	1-216-864-11	METAL CHIP	0	5%	1/16W
R338	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R341	1-216-838-11	METAL CHIP	27K	5%	1/16W
R342	1-216-838-11	METAL CHIP	27K	5%	1/16W
R344	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R345	1-216-803-11	METAL CHIP	33	5%	1/16W
R367	1-216-841-11	METAL CHIP	47K	5%	1/16W
R368	1-216-841-11	METAL CHIP	47K	5%	1/16W
R369	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
		< SWITCH >			
S301	1-692-605-11	SWITCH, SLIDE (LIGHT ON/OFF)			
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
S302	1-771-040-21	SWITCH, PUSH (POWER (PLAYER))			
S303	1-771-039-11	SWITCH, PUSH (POWER (CAMERA))			

A-7073-804-A PD-107(C6P) BOARD, COMPLETE

****

(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)

(Ref. No. 10,000 Series)

< CAPACITOR >

C5501	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5502	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5503	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5504	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5505	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5506	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C5507	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C5508	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5509	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V
C5511	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C5512	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C5513	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5514	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V
C5515	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V
C5516	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V
C5517	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5518	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C5519	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C5520	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5601	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C5602	1-107-687-11	TANTAL. CHIP	3.3uF	20%	20V
C5603	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V
C5604	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5605	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5607	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C5608	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C5610	1-162-926-11	CERAMIC CHIP	82PF	5%	50V
C5612	1-162-926-11	CERAMIC CHIP	82PF	5%	50V
C5616	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C5620	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5621	1-135-177-21	TANTALUM CHIP	1uF	20%	20V
C5622	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C5623	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5624	1-107-688-11	TANTAL. CHIP	1.5uF	20%	10V
C5625	1-107-688-11	TANTAL. CHIP	1.5uF	20%	10V
C5633	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C5701	1-104-911-11	TANTAL. CHIP	33uF	20%	10V
C5702	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C5703	1-164-661-11	CERAMIC CHIP	0.018uF	10%	50V
C5704	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
⚠C5705	1-113-521-91	CERAMIC CHIP	12PF	10%	3KV
C5706	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5801	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V

< CONNECTOR >

* CN5501	1-573-984-11	CONNECTOR, BOARD TO BOARD 10P	
CN5601	1-691-362-11	CONNECTOR, FFC/FPC (ZIF) 24P	
CN5701	1-764-709-11	CONNECTOR, FFC/FPC (LIF) 10P	
CN5801	1-750-360-21	CONNECTOR, FFC/FPC (ZIF) 24P	
CN5802	1-785-627-21	PIN, CONNECTOR (PC BOARD) 10P	
CN5803	1-778-508-21	PIN, CONNECTOR (PC BOARD) 6P	
CN5804	1-778-509-21	PIN, CONNECTOR (PC BOARD) 11P	
CN5805	1-766-336-21	CONNECTOR, FFC/FPC 6P	

< DIODE >

D5604	8-719-422-23	DIODE	MA8047-TX
D5605	8-713-102-80	DIODE	1T369-01-T8A
D5703	8-719-058-86	DIODE	PG1101H-TR
D5704	8-719-073-01	DIODE	MA111-(K8).S0

< FERRITE BEAD >

FB5502	1-500-238-22	FERRITE	0UH
FB5503	1-500-238-22	FERRITE	0UH
FB5603	1-500-238-22	FERRITE	0UH
FB5604	1-500-238-22	FERRITE	0UH

< IC >

IC5501	8-759-530-19	IC	MB40D001PFV-G-BND-ER
IC5502	8-759-539-27	IC	IR3Y37A4
IC5601	8-759-530-20	IC	CM7017L3-T4
IC5602	8-759-327-01	IC	NJM062V(TE2)
IC5701	8-759-075-70	IC	TA75S393F-TE85R
IC5801	8-759-573-02	IC	BU9729K-E2

< COIL >

L5501	1-414-754-11	INDUCTOR	10uH
L5601	1-414-754-11	INDUCTOR	10uH
L5605	1-412-957-11	INDUCTOR	33uH
L5701	1-416-919-21	INDUCTOR	150uH

< TRANSISTOR >

Q5501	8-729-420-24	TRANSISTOR	2SB1218A-QRS-TX
Q5601	8-729-402-42	TRANSISTOR	UN5213-TX
Q5602	8-729-402-42	TRANSISTOR	UN5213-TX
Q5605	8-729-230-63	TRANSISTOR	2SD1819A-QRS-TX

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description			Remark
Q5606	8-729-420-24	TRANSISTOR	2SB1218A-QRS-TX		
Q5607	8-729-230-63	TRANSISTOR	2SD1819A-QRS-TX		
Q5608	8-729-420-24	TRANSISTOR	2SB1218A-QRS-TX		
Q5701	8-729-039-43	TRANSISTOR	FP216-TL		
Q5702	8-729-015-74	TRANSISTOR	UN5111-TX		
		< RESISTOR >			
R5501	1-216-840-11	METAL CHIP	39K	5%	1/16W
R5505	1-216-841-11	METAL CHIP	47K	5%	1/16W
R5512	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5513	1-216-834-11	METAL CHIP	12K	5%	1/16W
R5516	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5517	1-216-835-11	METAL CHIP	15K	5%	1/16W
R5518	1-216-839-11	METAL CHIP	33K	5%	1/16W
R5520	1-216-852-11	METAL CHIP	390K	5%	1/16W
R5521	1-216-834-11	METAL CHIP	12K	5%	1/16W
R5522	1-216-843-11	METAL CHIP	68K	5%	1/16W
R5528	1-218-895-11	RES,CHIP	100K	0.50%	1/16W
R5531	1-216-821-11	METAL CHIP	1K	5%	1/16W
R5532	1-216-841-11	METAL CHIP	47K	5%	1/16W
R5537	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R5541	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R5542	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R5544	1-216-821-11	METAL CHIP	1K	5%	1/16W
R5545	1-216-864-11	METAL CHIP	0	5%	1/16W
R5602	1-216-864-11	METAL CHIP	0	5%	1/16W
R5603	1-216-864-11	METAL CHIP	0	5%	1/16W
R5604	1-216-864-11	METAL CHIP	0	5%	1/16W
R5605	1-216-864-11	METAL CHIP	0	5%	1/16W
R5610	1-216-842-11	METAL CHIP	56K	5%	1/16W
R5612	1-216-833-11	METAL CHIP	10K	5%	1/16W
R5613	1-216-841-11	METAL CHIP	47K	5%	1/16W
R5615	1-216-848-11	METAL CHIP	180K	5%	1/16W
R5617	1-216-833-11	METAL CHIP	10K	5%	1/16W
R5622	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5623	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5624	1-216-841-11	METAL CHIP	47K	5%	1/16W
R5625	1-218-891-11	RES,CHIP	68K	0.50%	1/16W
R5627	1-218-895-11	RES,CHIP	100K	0.50%	1/16W
R5628	1-216-864-11	METAL CHIP	0	5%	1/16W
R5630	1-216-821-11	METAL CHIP	1K	5%	1/16W
R5640	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5641	1-216-839-11	METAL CHIP	33K	5%	1/16W
R5643	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5644	1-216-839-11	METAL CHIP	33K	5%	1/16W
R5647	1-216-864-11	METAL CHIP	0	5%	1/16W
R5648	1-216-864-11	METAL CHIP	0	5%	1/16W
R5652	1-216-864-11	METAL CHIP	0	5%	1/16W
R5663	1-216-864-11	METAL CHIP	0	5%	1/16W
R5664	1-216-864-11	METAL CHIP	0	5%	1/16W
R5665	1-216-864-11	METAL CHIP	0	5%	1/16W
R5666	1-216-864-11	METAL CHIP	0	5%	1/16W
R5667	1-216-864-11	METAL CHIP	0	5%	1/16W
R5668	1-216-864-11	METAL CHIP	0	5%	1/16W
R5672	1-216-849-11	METAL CHIP	220K	5%	1/16W
R5673	1-216-864-11	METAL CHIP	0	5%	1/16W
R5678	1-216-864-11	METAL CHIP	0	5%	1/16W
R5682	1-216-805-11	METAL CHIP	47	5%	1/16W
R5683	1-216-805-11	METAL CHIP	47	5%	1/16W

Ref. No.	Part No.	Description			Remark
R5684	1-216-805-11	METAL CHIP	47	5%	1/16W
R5685	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5686	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5688	1-216-864-11	METAL CHIP	0	5%	1/16W
R5692	1-216-853-11	METAL CHIP	470K	5%	1/16W
R5694	1-216-839-11	METAL CHIP	33K	5%	1/16W
R5695	1-216-833-11	METAL CHIP	10K	5%	1/16W
R5697	1-216-864-11	METAL CHIP	0	5%	1/16W
R5698	1-216-864-11	METAL CHIP	0	5%	1/16W
R5703	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R5704	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R5705	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5706	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R5707	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5708	1-216-810-11	METAL CHIP	120	5%	1/16W
R5709	1-216-817-11	METAL CHIP	470	5%	1/16W
R5710	1-216-864-11	METAL CHIP	0	5%	1/16W
R5801	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R5802	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R5803	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R5804	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R5805	1-216-838-11	METAL CHIP	27K	5%	1/16W
R5806	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R5811	1-216-864-11	METAL CHIP	0	5%	1/16W
R5812	1-216-855-11	METAL CHIP	680K	5%	1/16W
		< SWITCH >			
S5801	1-692-088-41	SWITCH, TACTILE (LCD BRIGHT +)			
S5802	1-692-088-41	SWITCH, TACTILE (LCD BRIGHT -)			
S5803	1-692-088-41	SWITCH, TACTILE (VOLUME +)			
S5804	1-692-088-41	SWITCH, TACTILE (VOLUME -)			
		< TRANSFORMER >			
⚠T5701	1-433-452-11	TRANSFORMER, INVERTER			

A-7073-788-A PJ-90 BOARD, COMPLETE
****
(TR315E/TR516E)

A-7073-793-A PJ-90(CE) BOARD, COMPLETE
****
(TR415E/TR425E/TR515E/TR713E)
(Ref. No. 4,000 Series)

A-7073-802-A PJ-91(VCE) BOARD, COMPLETE
****
(TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)

A-7073-809-A PJ-91(V) BOARD, COMPLETE
****
(TRV16E/TRV27EP/TRV46E:E,HK,AUS,CN)
(Ref. No. 9,000 Series)

< CAPACITOR >

C101	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C103	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
(TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E:AEP,UK,EE,NE,RU)					
C104	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
(TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E:AEP,UK,EE,NE,RU)					

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description				Remark
		< CONNECTOR >				
* CN101	1-764-521-11	CONNECTOR, FFC/FPC (ZIF) 12P				
		< DIODE >				
D102	8-719-062-16	DIODE 01ZA8.2(TPL3)				
D103	8-719-062-16	DIODE 01ZA8.2(TPL3)				
		< JACK >				
J101	1-537-747-41	TERMINAL BOARD (VIDEO/AUDIO)				
		< COIL >				
L101	1-414-072-11	INDUCTOR	1uH			
L102	1-216-295-91	SHORT	0			
		(TR315E/TR516E/TRV16E/TRV27EP/TRV46E:E,HK,AUS,CN)				
L102	1-412-963-11	INDUCTOR	100uH			
		(TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)				
		< TRANSISTOR >				
Q101	8-729-101-07	TRANSISTOR 2SB798-T1-DLDK				
Q102	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX				
		< RESISTOR >				
R101	1-216-864-11	METAL CHIP	0	5%	1/16W	
R102	1-216-138-00	METAL CHIP	3.3	5%	1/8W	
R103	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R104	1-216-820-11	METAL CHIP	820	5%	1/16W	
R105	1-216-836-11	METAL CHIP	18K	5%	1/16W	
R109	1-216-821-11	METAL CHIP	1K	5%	1/16W	

	A-7073-789-A	SE-80(MM) BOARD, COMPLETE (TR713E) ********** (Ref. No. 4,000 Series)
	A-7073-803-A	SE-81(VMMCE) BOARD, COMPLETE ********** (TRV46E:AEP,UK,EE,NE,RU)
	A-7073-810-A	SE-81(VMM) BOARD, COMPLETE ********** (TRV46E:E,HK,AUS,CN)
	A-7073-825-A	SE-81(V) BOARD, COMPLETE ********** (TRV16E/TRV27EP)
	A-7073-849-A	SE-81(VCE) BOARD, COMPLETE ********** (TRV26E/TRV27E/TRV36E) (Ref. No. 9,000 Series)

		< CAPACITOR >				
C451	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	(TR713E/TRV46E)
C452	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	(TR713E/TRV46E)
C453	1-104-847-11	TANTAL. CHIP	22uF	20%	4V	(TR713E/TRV46E)
C454	1-104-847-11	TANTAL. CHIP	22uF	20%	4V	(TR713E/TRV46E)
C457	1-164-343-11	CERAMIC CHIP	0.056uF	10%	25V	(TR713E/TRV46E)
C458	1-164-343-11	CERAMIC CHIP	0.056uF	10%	25V	(TR713E/TRV46E)
C459	1-164-343-11	CERAMIC CHIP	0.056uF	10%	25V	(TR713E/TRV46E)
C460	1-110-666-11	ELECT CHIP	22uF	20%	6.3V	(TR713E/TRV46E)
C461	1-164-343-11	CERAMIC CHIP	0.056uF	10%	25V	(TR713E/TRV46E)
C462	1-110-666-11	ELECT CHIP	22uF	20%	6.3V	(TR713E/TRV46E)
C464	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V	(TR713E/TRV46E)
C465	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	(TR713E/TRV46E)
C466	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	(TR713E/TRV46E)
C467	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	(TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)
C468	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	(TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)
		< CONNECTOR >				
CN451	1-766-646-21	CONNECTOR, FFC/FPC 10P				(TR713E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
		< DIODE >				
D451	8-719-062-16	DIODE 01ZA8.2(TPL3)				(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
		< IC >				
IC451	8-759-489-19	IC uPC6756GR-8JG-E2 (TR713E/TRV46E)				
		< JACK >				
J451	1-695-514-11	JACK (SMALL TYPE) 1P (HEADPHONE)				(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
		< COIL >				
L451	1-414-754-11	INDUCTOR	10uH (TR713E/TRV46E)			
L453	1-216-295-91	SHORT	0			
		(TRV16E/TRV27EP/TRV46E:E,HK,AUS,CN)				
L453	1-412-963-11	INDUCTOR	100uH			
		(TRV26E/TRV27E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)				
		< RESISTOR >				
R451	1-216-837-11	METAL CHIP	22K	5%	1/16W	(TR713E/TRV46E)
R452	1-216-837-11	METAL CHIP	22K	5%	1/16W	(TR713E/TRV46E)
R453	1-216-837-11	METAL CHIP	22K	5%	1/16W	(TR713E/TRV46E)
R454	1-216-837-11	METAL CHIP	22K	5%	1/16W	(TR713E/TRV46E)
R455	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR713E/TRV46E)
R456	1-216-857-11	METAL CHIP	1M	5%	1/16W	(TR713E/TRV46E)
R458	1-216-833-11	METAL CHIP	10K	5%	1/16W	(TR713E/TRV46E)
R459	1-216-857-11	METAL CHIP	1M	5%	1/16W	(TR713E/TRV46E)
R461	1-216-835-11	METAL CHIP	15K	5%	1/16W	(TR713E/TRV46E)
R463	1-216-809-11	METAL CHIP	100	5%	1/16W	(TR713E/TRV46E)

Ref. No.	Part No.	Description	Remark
		< SENSOR >	
SE451	1-803-041-11	SENSOR, ANGULAR VELOCITY (PITCH)	(TR713E/TRV46E)
SE452	1-803-041-21	SENSOR, ANGULAR VELOCITY (YAW)	(TR713E/TRV46E)

	A-7094-113-A	VC-215 (ZSL0PE) BOARD, COMPLETE			
		**********			(TR315E/TR415E/TR425E)
	A-7094-114-A	VC-215(ZB0) BOARD, COMPLETE (TR515E)			
		**********			
	A-7094-115-A	VC-215 (ZCB0) BOARD, COMPLETE (TR516E)			
		**********			
	A-7094-116-A	VC-215(MMIB0) BOARD, COMPLETE (TR713E)			
		**********			
	A-7094-119-A	VC-215(VMMIB0P) BOARD, COMPLETE			
		**********			(TRV46E)
	A-7094-120-A	VC-215(VZLB0) BOARD, COMPLETE (TRV36E)			
		**********			
	A-7094-203-A	VC-215(VZL0P) BOARD, COMPLETE			
		**********			(TRV16E/TRV26E/TRV27E/TRV27EP)
					(Ref. No. 1,000 Series)
		< CAPACITOR >			
C001	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C004	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C006	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
C007	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
C008	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C009	1-164-217-11	CERAMIC CHIP	150PF	5%	50V
C010	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C011	1-162-926-11	CERAMIC CHIP	82PF	5%	50V
C012	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C017	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C018	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C019	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C021	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C022	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C023	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C024	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C026	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C027	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C028	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C029	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C030	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C031	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C032	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C033	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C034	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C035	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C036	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C037	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C039	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C041	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C042	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C043	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C048	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C049	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C050	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C052	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C053	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C055	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C058	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C059	1-164-217-11	CERAMIC CHIP	150PF	5%	50V
C060	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C061	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C062	1-162-926-11	CERAMIC CHIP	82PF	5%	50V
C065	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C068	1-162-921-11	CERAMIC CHIP	33PF	5%	50V
C069	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C070	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C071	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
C072	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C073	1-164-392-11	CERAMIC CHIP	390PF	5%	50V
C074	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V (TR515E/TR516E/TR713E/TRV36E/TRV46E)
C075	1-162-959-11	CERAMIC CHIP	330PF	5%	50V (TR515E/TR516E/TR713E/TRV36E/TRV46E)
C075	1-164-315-11	CERAMIC CHIP	470PF	5%	50V (TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)
C076	1-162-922-11	CERAMIC CHIP	39PF	5%	50V (TR515E/TR516E/TR713E/TRV36E/TRV46E)
C078	1-162-928-11	CERAMIC CHIP	120PF	5%	50V
C079	1-162-922-11	CERAMIC CHIP	39PF	5%	50V (TR515E/TR516E/TR713E/TRV36E/TRV46E)
C080	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V (TR515E/TR516E/TR713E/TRV36E/TRV46E)
C080	1-162-919-11	CERAMIC CHIP	22PF	5%	50V (TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)
C081	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C082	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C083	1-162-924-11	CERAMIC CHIP	56PF	5%	50V
C085	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C086	1-115-156-11	CERAMIC CHIP	1uF		10V
C088	1-162-925-11	CERAMIC CHIP	68PF	5%	50V (TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)
C088	1-162-957-11	CERAMIC CHIP	220PF	5%	50V (TR515E/TR516E/TR713E/TRV36E/TRV46E)
C089	1-162-919-11	CERAMIC CHIP	22PF	5%	50V (TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)
C089	1-162-923-11	CERAMIC CHIP	47PF	5%	50V (TR515E/TR516E/TR713E/TRV36E/TRV46E)
C090	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C152	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C156	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C158	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C159	1-164-346-11	CERAMIC CHIP	1uF		16V
C160	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C161	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C163	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V
C166	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C168	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C169	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C170	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C182	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V

Ref. No.	Part No.	Description			Remark
C184	1-115-156-11	CERAMIC CHIP	1uF		10V
C185	1-126-246-11	ELECT CHIP	220uF	20%	4V
C188	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C190	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C191	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C192	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V
C202	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C204	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C205	1-115-156-11	CERAMIC CHIP	1uF		10V
C206	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C207	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C209	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
C209	1-162-921-11	CERAMIC CHIP	33PF	5%	50V
		(TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)			
C210	1-162-922-11	CERAMIC CHIP	39PF	5%	50V
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
C211	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C212	1-164-392-11	CERAMIC CHIP	390PF	5%	50V
C217	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C218	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C219	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C224	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C225	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C226	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C227	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C229	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C230	1-115-156-11	CERAMIC CHIP	1uF		10V
C232	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C233	1-162-638-11	CERAMIC CHIP	1uF		16V
C234	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C235	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C237	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C239	1-115-156-11	CERAMIC CHIP	1uF		10V
C245	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C246	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C247	1-162-638-11	CERAMIC CHIP	1uF		16V
C250	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C301	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
C304	1-162-925-11	CERAMIC CHIP	68PF	5%	50V
C307	1-135-151-21	TANTALUM CHIP	4.7uF	20%	4V
C308	1-162-638-11	CERAMIC CHIP	1uF		16V
C309	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C312	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C316	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C318	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
C319	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C320	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C322	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C325	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C326	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C328	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C332	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C333	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C335	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C337	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C338	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C340	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C342	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C346	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

Ref. No.	Part No.	Description			Remark
C347	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C349	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C371	1-104-908-11	TANTAL. CHIP	47uF	20%	4V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C372	1-104-908-11	TANTAL. CHIP	47uF	20%	4V
C378	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C380	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C381	1-164-346-11	CERAMIC CHIP	1uF		16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C382	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C383	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C384	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C385	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C386	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C387	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C388	1-162-961-11	CERAMIC CHIP	330PF	10%	50V
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
C402	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C404	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C405	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C406	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C410	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C411	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C412	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C414	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C415	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C416	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C417	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C418	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C419	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C420	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C451	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C452	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C453	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C454	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C455	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C456	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C457	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C458	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C459	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C460	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C461	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C462	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C463	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C464	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C465	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C467	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C468	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C469	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C470	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C471	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C472	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C473	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V

Ref. No.	Part No.	Description			Remark
C474	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C475	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C476	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C478	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C479	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C480	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C481	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C483	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C484	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C485	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C486	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C487	1-162-957-11	CERAMIC CHIP	220PF	5%	50V
C488	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C489	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C501	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C502	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C503	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C504	1-162-922-11	CERAMIC CHIP	39PF	5%	50V
C506	1-115-156-11	CERAMIC CHIP	1uF		10V
C507	1-115-156-11	CERAMIC CHIP	1uF		10V
C509	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C511	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C512	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C513	1-115-156-11	CERAMIC CHIP	1uF		10V
C514	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C515	1-162-917-11	CERAMIC CHIP	15PF	5%	50V
C516	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C517	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C518	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C519	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C520	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C521	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C522	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C523	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C524	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C525	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C526	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C527	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C528	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C529	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C530	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C531	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
C552	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C553	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C554	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C555	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C556	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C557	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C558	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C559	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C560	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C561	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C562	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C563	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C564	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
C565	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C566	1-115-156-11	CERAMIC CHIP	1uF		10V
C567	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C569	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V

Ref. No.	Part No.	Description			Remark
C570	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C571	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
C572	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
C605	1-135-177-21	TANTALUM CHIP	1uF	20%	20V (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)
C607	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C610	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C611	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C612	1-119-749-11	TANTAL. CHIP	33uF	20%	4V
C613	1-162-638-11	CERAMIC CHIP	1uF		16V
C615	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C616	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C617	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C618	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C619	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C620	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C621	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C622	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C623	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C624	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C625	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C626	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C627	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C628	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C629	1-162-917-11	CERAMIC CHIP	15PF	5%	50V
C630	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C636	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C637	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C751	1-135-201-11	TANTALUM CHIP	10uF	20%	4V (TR713E/TRV46E)
C752	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V (TR713E/TRV46E)
C753	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR713E/TRV46E)
C754	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V (TR713E/TRV46E)
C755	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V (TR713E/TRV46E)
C756	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR713E/TRV46E)
C757	1-135-201-11	TANTALUM CHIP	10uF	20%	4V (TR713E/TRV46E)
C758	1-109-982-11	CERAMIC CHIP	1uF	10%	10V (TR713E/TRV46E)
C759	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR713E/TRV46E)
C760	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V (TR713E/TRV46E)
C761	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR713E/TRV46E)
C762	1-164-668-11	CERAMIC CHIP	510PF	5%	50V (TR713E/TRV46E)
C763	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR713E/TRV46E)
C764	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V (TR713E/TRV46E)
C765	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR713E/TRV46E)
C766	1-109-982-11	CERAMIC CHIP	1uF	10%	10V (TR713E/TRV46E)
C767	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V (TR713E/TRV46E)

Ref. No.	Part No.	Description			Remark
C768	1-162-909-11	CERAMIC CHIP	4PF	0.25PF 50V (TR713E/TRV46E)	
C769	1-107-823-11	CERAMIC CHIP	0.47uF	10% 16V (TR713E/TRV46E)	
C770	1-107-823-11	CERAMIC CHIP	0.47uF	10% 16V (TR713E/TRV46E)	
C771	1-162-921-11	CERAMIC CHIP	33PF	5% 50V (TR713E/TRV46E)	
C772	1-109-982-11	CERAMIC CHIP	1uF	10% 10V (TR713E/TRV46E)	
C773	1-162-922-11	CERAMIC CHIP	39PF	5% 50V (TR713E/TRV46E)	
C774	1-109-982-11	CERAMIC CHIP	1uF	10% 10V (TR713E/TRV46E)	
C775	1-107-826-91	CERAMIC CHIP	0.1uF	10% 16V (TR713E/TRV46E)	
C776	1-162-970-11	CERAMIC CHIP	0.01uF	10% 25V (TR713E/TRV46E)	
C777	1-162-970-11	CERAMIC CHIP	0.01uF	10% 25V (TR713E/TRV46E)	
C778	1-162-970-11	CERAMIC CHIP	0.01uF	10% 25V (TR713E/TRV46E)	
C781	1-104-847-11	TANTAL. CHIP	22uF	20% 4V (TR713E/TRV46E)	
		< CONNECTOR >			
CN001	1-766-346-21	CONNECTOR, FFC/FPC 16P			
CN501	1-779-332-11	CONNECTOR, FFC/FPC 16P			
CN551	1-573-363-21	CONNECTOR, FFC/FPC 23P			
CN551	1-691-361-11	CONNECTOR, FFC/FPC (ZIF) 23P			
CN901	1-766-644-21	CONNECTOR, FFC/FPC 8P			
CN902	1-766-342-21	CONNECTOR, FFC/FPC 12P			
CN904	1-691-374-11	CONNECTOR, FFC/FPC 10P (TR713E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
CN905	1-766-646-21	CONNECTOR, FFC/FPC 10P			
CN906	1-766-342-21	CONNECTOR, FFC/FPC 12P			
CN908	1-766-345-21	CONNECTOR, FFC/FPC 15P			
CN908	1-774-639-21	CONNECTOR, FFC/FPC 15P			
CN909	1-764-703-11	CONNECTOR, FFC/FPC (LIF) 4P (TR515E/TR516E/TR713E/TRV36E/TRV46E)			
CN910	1-766-346-21	CONNECTOR, FFC/FPC 16P			
CN911	1-785-760-21	CONNECTOR, FFC/FPC (ZIF) 45P			
CN915	1-774-600-41	CONNECTOR, BOARD TO BOARD 70P			
CN916	1-766-348-21	CONNECTOR, FFC/FPC 18P			
		< DIODE >			
D002	8-719-073-01	DIODE MA111-(K8).S0 (TR515E/TR516E/TR713E/TRV36E/TRV46E)			
D201	8-719-055-86	DIODE KV1470TL1-3			
D202	8-719-055-86	DIODE KV1470TL1-3			
D371	8-719-073-01	DIODE MA111-(K8).S0 (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
D502	8-713-103-84	DIODE 1T379-01-T8A			
D551	8-719-073-01	DIODE MA111-(K8).S0			
D601	8-719-073-02	DIODE MA728-(K8).S0			
D602	8-719-073-02	DIODE MA728-(K8).S0			
D604	8-719-073-01	DIODE MA111-(K8).S0			
D608	8-719-073-01	DIODE MA111-(K8).S0			
D609	8-719-049-09	DIODE 1SS367-T3SONY			
D610	8-719-073-02	DIODE MA728-(K8).S0			

Ref. No.	Part No.	Description			Remark
		< FERRITE BEAD >			
FB001	1-216-864-11	METAL CHIP	0	5% 1/16W	
FB002	1-414-229-11	INDUCTOR CHIP	0uH		
FB003	1-216-864-11	METAL CHIP	0	5% 1/16W	
FB004	1-414-229-11	INDUCTOR CHIP	0uH		
FB201	1-414-228-11	INDUCTOR CHIP	0uH		
FB401	1-414-229-11	INDUCTOR CHIP	0uH		
FB502	1-216-864-11	METAL CHIP	0	5% 1/16W	
FB503	1-500-284-21	INDUCTOR CHIP	0uH		
FB504	1-500-284-21	INDUCTOR CHIP	0uH		
FB505	1-500-284-21	INDUCTOR CHIP	0uH		
		< IC >			
IC001	8-752-079-46	IC CXA2084R-T6			
IC151	8-752-075-46	IC CXA2030R-T6			
IC152	8-759-169-02	IC MB88344BPFV-G-BND-ER			
IC152	8-759-536-93	IC M62371GP-600D			
IC201	8-759-494-73	IC MB90097PFV-G-104-ER			
IC202	8-759-494-55	IC MB87F126DPFF-G-BND			
IC301	8-759-494-30	IC AN2984FH-EB			
IC371	8-759-494-52	IC BA7783FS-E2 (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
IC401	8-759-445-94	IC AK6480AM-E2			
IC402	8-759-574-45	IC MB91191PFF-G-130-BND-ER			
IC451	8-759-327-67	IC LB1950V-TLM			
IC452	8-759-327-62	IC TA8482FN-EL			
IC501	8-752-384-70	IC CXD2486R-T4			
IC502	8-759-534-77	IC AD9800JDSTRL			
IC551	8-759-444-87	IC NJM324V(TE2)			
IC552	8-759-492-31	IC MPC17A134VMEL			
IC602	8-759-424-79	IC S-8423YFS-T2			
IC603	8-759-536-72	IC TL1596CPWR			
IC604	8-759-574-83	IC S579225PZ-TEB			
IC751	8-759-498-52	IC LA9511W-TBM (TR713E/TRV46E)			
		< COIL >			
L001	1-414-406-11	INDUCTOR	220uH		
L002	1-412-952-11	INDUCTOR	12uH		
L003	1-414-406-11	INDUCTOR	220uH		
L004	1-414-754-11	INDUCTOR	10uH		
L005	1-412-948-11	INDUCTOR	5.6uH		
L006	1-412-963-11	INDUCTOR	100uH		
L008	1-412-280-31	INDUCTOR	330uH		
L009	1-410-656-11	INDUCTOR CHIP	150uH		
L010	1-410-657-21	INDUCTOR CHIP	180uH		
L011	1-412-956-21	INDUCTOR	27uH (TR515E/TR516E/TR713E/TRV36E/TRV46E)		
L012	1-412-955-11	INDUCTOR	22uH		
L013	1-412-944-11	INDUCTOR	2.7uH		
L015	1-412-951-11	INDUCTOR	10uH		
L016	1-412-946-11	INDUCTOR	3.9uH		
L018	1-410-656-11	INDUCTOR CHIP	150uH		
L019	1-412-957-11	INDUCTOR	33uH		
L204	1-410-658-31	INDUCTOR CHIP	220uH		
L205	1-412-955-11	INDUCTOR	22uH (TR515E/TR516E/TR713E/TRV36E/TRV46E)		
L205	1-412-957-11	INDUCTOR	33uH (TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)		
L206	1-412-945-11	INDUCTOR	3.3uH		
L502	1-216-295-91	SHORT	0		
L552	1-414-398-11	INDUCTOR	10uH		

Ref. No.	Part No.	Description	Remark
L602	1-414-754-11	INDUCTOR 10uH	
L751	1-412-948-11	INDUCTOR 5.6uH (TR713E/TRV46E)	
L752	1-412-957-11	INDUCTOR 33uH (TR713E/TRV46E)	
L753	1-412-957-11	INDUCTOR 33uH (TR713E/TRV46E)	
		< TRANSISTOR >	
Q001	8-729-047-19	TRANSISTOR 2SA1965-S-TL	
Q002	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3) (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
Q003	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q012	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q017	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q019	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q020	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q021	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q022	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3) (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
Q023	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q024	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q025	8-729-037-89	TRANSISTOR 2SC4627J-C(K8).S0 (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
Q027	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q028	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q029	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q030	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3) (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
Q032	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q033	8-729-047-19	TRANSISTOR 2SA1965-S-TL	
Q034	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q036	8-729-037-89	TRANSISTOR 2SC4627J-C(K8).S0	
Q038	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q039	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q040	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q041	8-729-230-72	TRANSISTOR 2SA1362-YG-EL	
Q042	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q043	8-729-047-19	TRANSISTOR 2SA1965-S-TL (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
Q044	8-729-037-74	TRANSISTOR UN9213J-(K8).SO (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
Q151	8-729-037-61	TRANSISTOR RN2104F(TPL3)	
Q153	8-729-040-77	TRANSISTOR 2SC5376-B(TE85L)	
Q202	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q203	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q204	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q205	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q208	8-729-037-74	TRANSISTOR UN9213J-(K8).SO (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
Q213	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3) (TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)	
Q214	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3) (TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)	
Q215	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3) (TR315E/TR415E/TR425E/TR515E/TR713E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)	
Q216	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)(TR516E)	
Q217	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q302	8-729-042-74	TRANSISTOR UN9216J-(K8).SO	
Q302	8-729-045-78	TRANSISTOR RN1110F(TPL3)	
Q305	8-729-037-63	TRANSISTOR UN9115J-(K8).SO	
Q306	8-729-037-76	TRANSISTOR UN9215J-(K8).SO	
Q308	8-729-037-61	TRANSISTOR RN2104F(TPL3)	
Q309	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	

Ref. No.	Part No.	Description	Remark
Q309	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q371	8-729-042-74	TRANSISTOR UN9216J-(K8).SO	
Q371	8-729-045-78	TRANSISTOR RN1110F(TPL3)	
Q452	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q452	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q453	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q453	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q454	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q455	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q456	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q501	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q551	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q552	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q553	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q607	8-729-041-43	TRANSISTOR HN1L02FU(TE85R)	
Q608	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3) (TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)	
Q609	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3) (TR713E/TRV46E)	
Q610	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
Q610	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q611	8-729-037-74	TRANSISTOR UN9213J-(K8).SO (TR713E/TRV46E)	
Q620	8-729-042-58	TRANSISTOR UN9111J-(K8).SO	
		< RESISTOR >	
R001	1-216-864-11	METAL CHIP 0 5% 1/16W	
R002	1-216-864-11	METAL CHIP 0 5% 1/16W	
R003	1-216-803-11	METAL CHIP 33 5% 1/16W (TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)	
R003	1-216-806-11	RES,CHIP 56 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
R004	1-216-818-11	METAL CHIP 560 5% 1/16W	
R005	1-216-809-11	METAL CHIP 100 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
R006	1-216-825-11	METAL CHIP 2.2K 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
R007	1-216-829-11	METAL CHIP 4.7K 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)	
R008	1-216-814-11	METAL CHIP 270 5% 1/16W	
R009	1-216-813-11	METAL CHIP 220 5% 1/16W	
R014	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R015	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R020	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R021	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R022	1-216-295-91	SHORT 0	
R023	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R025	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R026	1-216-816-11	METAL CHIP 390 5% 1/16W	
R027	1-216-816-11	METAL CHIP 390 5% 1/16W	
R029	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R031	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R032	1-216-816-11	METAL CHIP 390 5% 1/16W	
R033	1-216-816-11	METAL CHIP 390 5% 1/16W	
R034	1-216-864-11	METAL CHIP 0 5% 1/16W	
R035	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R037	1-216-824-11	METAL CHIP 1.8K 5% 1/16W	
R038	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R039	1-216-824-11	METAL CHIP 1.8K 5% 1/16W	
R040	1-216-864-11	METAL CHIP 0 5% 1/16W	
R043	1-216-833-11	METAL CHIP 10K 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)	

Ref. No.	Part No.	Description			Remark
R045	1-216-845-11	METAL CHIP	100K	5%	1/16W
R046	1-216-821-11	METAL CHIP	1K	5%	1/16W
R047	1-216-864-11	METAL CHIP	0	5%	1/16W
R048	1-216-864-11	METAL CHIP	0	5%	1/16W
R049	1-216-833-11	METAL CHIP	10K	5%	1/16W
R050	1-216-837-11	METAL CHIP	22K	5%	1/16W
R051	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R052	1-216-833-11	METAL CHIP	10K	5%	1/16W
R055	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R056	1-216-855-11	METAL CHIP	680K	5%	1/16W
R057	1-216-819-11	METAL CHIP	680	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R057	1-216-864-11	METAL CHIP	0	5%	1/16W
		(TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)			
R058	1-216-853-11	METAL CHIP	470K	5%	1/16W
R059	1-216-821-11	METAL CHIP	1K	5%	1/16W
R060	1-216-837-11	METAL CHIP	22K	5%	1/16W
R061	1-216-833-11	METAL CHIP	10K	5%	1/16W
R062	1-216-818-11	METAL CHIP	560	5%	1/16W
R063	1-216-817-11	METAL CHIP	470	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R063	1-216-818-11	METAL CHIP	560	5%	1/16W
		(TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)			
R064	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R064	1-216-864-11	METAL CHIP	0	5%	1/16W
		(TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)			
R065	1-216-833-11	METAL CHIP	10K	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R066	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R067	1-216-817-11	METAL CHIP	470	5%	1/16W
R068	1-216-817-11	METAL CHIP	470	5%	1/16W
R069	1-216-864-11	METAL CHIP	0	5%	1/16W
R072	1-216-864-11	METAL CHIP	0	5%	1/16W
R073	1-216-821-11	METAL CHIP	1K	5%	1/16W
R074	1-216-816-11	METAL CHIP	390	5%	1/16W
R075	1-216-817-11	METAL CHIP	470	5%	1/16W
R076	1-216-816-11	METAL CHIP	390	5%	1/16W
R077	1-216-814-11	METAL CHIP	270	5%	1/16W
		(TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)			
R078	1-216-817-11	METAL CHIP	470	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R079	1-216-817-11	METAL CHIP	470	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R080	1-216-821-11	METAL CHIP	1K	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R081	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R082	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R083	1-216-864-11	METAL CHIP	0	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R085	1-216-833-11	METAL CHIP	10K	5%	1/16W
R087	1-216-821-11	METAL CHIP	1K	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R088	1-216-864-11	METAL CHIP	0	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R092	1-216-809-11	METAL CHIP	100	5%	1/16W
R093	1-216-833-11	METAL CHIP	10K	5%	1/16W
R094	1-216-814-11	METAL CHIP	270	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R095	1-216-839-11	METAL CHIP	33K	5%	1/16W
R096	1-216-813-11	METAL CHIP	220	5%	1/16W
R098	1-216-817-11	METAL CHIP	470	5%	1/16W
R099	1-216-817-11	METAL CHIP	470	5%	1/16W

Ref. No.	Part No.	Description			Remark
R101	1-216-837-11	METAL CHIP	22K	5%	1/16W
R102	1-216-834-11	METAL CHIP	12K	5%	1/16W
R103	1-216-816-11	METAL CHIP	390	5%	1/16W
R104	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R105	1-216-814-11	METAL CHIP	270	5%	1/16W
		(TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)			
R105	1-216-819-11	METAL CHIP	680	5%	1/16W
		(TR515E/TR516E/TR713E/TRV36E/TRV46E)			
R106	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R107	1-216-833-11	METAL CHIP	10K	5%	1/16W
R109	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R110	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R112	1-216-833-11	METAL CHIP	10K	5%	1/16W
R113	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R152	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R167	1-216-803-11	METAL CHIP	33	5%	1/16W
R170	1-216-804-11	METAL CHIP	39	5%	1/16W
R175	1-216-836-11	METAL CHIP	18K	5%	1/16W
R177	1-216-821-11	METAL CHIP	1K	5%	1/16W
R179	1-216-815-11	METAL CHIP	330	5%	1/16W
R183	1-218-876-11	RES,CHIP	16K	0.50%	1/16W
R184	1-218-847-11	RES,CHIP	1K	0.50%	1/16W
R185	1-216-295-91	SHORT	0		
R186	1-216-295-91	SHORT	0		
R187	1-216-295-91	SHORT	0		
R188	1-216-864-11	METAL CHIP	0	5%	1/16W
R189	1-216-295-91	SHORT	0		
R190	1-216-864-11	METAL CHIP	0	5%	1/16W
R202	1-216-833-11	METAL CHIP	10K	5%	1/16W
R203	1-216-814-11	METAL CHIP	270	5%	1/16W
R205	1-216-835-11	METAL CHIP	15K	5%	1/16W
R206	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R208	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R210	1-216-809-11	METAL CHIP	100	5%	1/16W
R211	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R212	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R214	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R215	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R216	1-216-811-11	METAL CHIP	150	5%	1/16W
R217	1-216-864-11	METAL CHIP	0	5%	1/16W
R218	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
		(TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R219	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
		(TR315E/TR415E/TR425E/TR515E/TR713E/TRV16E/TRV26E/TRV27E/ TRV27EP/TRV36E/TRV46E)			
R220	1-216-815-11	METAL CHIP	330	5%	1/16W
		(TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R222	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
					(TR516E)
R223	1-216-821-11	METAL CHIP	1K	5%	1/16W
R224	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R225	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
		(TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R226	1-216-820-11	METAL CHIP	820	5%	1/16W
R227	1-216-811-11	METAL CHIP	150	5%	1/16W
R228	1-216-813-11	METAL CHIP	220	5%	1/16W
R229	1-216-805-11	METAL CHIP	47	5%	1/16W
R230	1-216-812-11	METAL CHIP	180	5%	1/16W
R231	1-216-812-11	METAL CHIP	180	5%	1/16W
R232	1-216-815-11	METAL CHIP	330	5%	1/16W
		(TR516E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			

Ref. No.	Part No.	Description			Remark
R233	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R234	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R235	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R236	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R237	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R238	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R239	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R240	1-216-857-11	METAL CHIP	1M	5%	1/16W
R241	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R242	1-216-845-11	METAL CHIP	100K	5%	1/16W
R243	1-216-845-11	METAL CHIP	100K	5%	1/16W
R244	1-216-845-11	METAL CHIP	100K	5%	1/16W
R245	1-216-840-11	METAL CHIP	39K	5%	1/16W
R246	1-216-835-11	METAL CHIP	15K	5%	1/16W
R247	1-216-817-11	METAL CHIP	470	5%	1/16W
R248	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R249	1-216-833-11	METAL CHIP	10K	5%	1/16W
R251	1-216-833-11	METAL CHIP	10K	5%	1/16W
R252	1-216-821-11	METAL CHIP	1K	5%	1/16W
R253	1-216-845-11	METAL CHIP	100K	5%	1/16W
R254	1-216-864-11	METAL CHIP	0	5%	1/16W
R255	1-216-833-11	METAL CHIP	10K	5%	1/16W
R257	1-216-295-91	SHORT	0		
R258	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R259	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R260	1-216-295-91	SHORT	0		
R261	1-216-295-91	SHORT	0		
R262	1-216-295-91	SHORT	0		
R263	1-216-295-91	SHORT	0		
R264	1-216-295-91	SHORT	0		
R265	1-216-864-11	METAL CHIP	0	5%	1/16W
R266	1-216-864-11	METAL CHIP	0	5%	1/16W
R267	1-216-864-11	METAL CHIP	0	5%	1/16W
R303	1-216-817-11	METAL CHIP	470	5%	1/16W
R304	1-216-817-11	METAL CHIP	470	5%	1/16W
R308	1-216-864-11	METAL CHIP	0	5%	1/16W
R311	1-216-841-11	METAL CHIP	47K	5%	1/16W
R313	1-216-864-11	METAL CHIP	0	5%	1/16W
	(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E)				
R314	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R317	1-216-845-11	METAL CHIP	100K	5%	1/16W
R318	1-216-845-11	METAL CHIP	100K	5%	1/16W
R321	1-216-843-11	METAL CHIP	68K	5%	1/16W
R322	1-216-845-11	METAL CHIP	100K	5%	1/16W
R323	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
R325	1-218-903-11	RES,CHIP	220K	0.50%	1/16W
R331	1-216-820-11	METAL CHIP	820	5%	1/16W
R371	1-216-821-11	METAL CHIP	1K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R374	1-216-809-11	METAL CHIP	100	5%	1/16W
R375	1-216-834-11	METAL CHIP	12K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R376	1-216-834-11	METAL CHIP	12K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R377	1-216-834-11	METAL CHIP	12K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R378	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R379	1-216-852-11	METAL CHIP	390K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				

Ref. No.	Part No.	Description			Remark
R382	1-216-837-11	METAL CHIP	22K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R383	1-216-837-11	METAL CHIP	22K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R384	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R385	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R386	1-216-849-11	METAL CHIP	220K	5%	1/16W
	(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
R388	1-216-864-11	METAL CHIP	0	5%	1/16W
	(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)				
R389	1-216-864-11	METAL CHIP	0	5%	1/16W
	(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)				
R402	1-216-821-11	METAL CHIP	1K	5%	1/16W
R403	1-216-845-11	METAL CHIP	100K	5%	1/16W
R404	1-216-845-11	METAL CHIP	100K	5%	1/16W
R405	1-216-845-11	METAL CHIP	100K	5%	1/16W
R406	1-216-845-11	METAL CHIP	100K	5%	1/16W
R407	1-216-845-11	METAL CHIP	100K	5%	1/16W
R409	1-216-845-11	METAL CHIP	100K	5%	1/16W
R410	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R412	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R413	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R414	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R415	1-216-821-11	METAL CHIP	1K	5%	1/16W
R417	1-216-821-11	METAL CHIP	1K	5%	1/16W
R419	1-216-839-11	METAL CHIP	33K	5%	1/16W
R420	1-216-833-11	METAL CHIP	10K	5%	1/16W
R421	1-216-833-11	METAL CHIP	10K	5%	1/16W
R424	1-216-841-11	METAL CHIP	47K	5%	1/16W
R425	1-216-853-11	METAL CHIP	470K	5%	1/16W
R426	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R427	1-216-841-11	METAL CHIP	47K	5%	1/16W
R428	1-216-841-11	METAL CHIP	47K	5%	1/16W
R429	1-216-811-11	METAL CHIP	150	5%	1/16W
R430	1-216-813-11	METAL CHIP	220	5%	1/16W
R431	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R432	1-216-845-11	METAL CHIP	100K	5%	1/16W
R433	1-216-845-11	METAL CHIP	100K	5%	1/16W
R434	1-216-853-11	METAL CHIP	470K	5%	1/16W
R435	1-216-853-11	METAL CHIP	470K	5%	1/16W
R440	1-216-841-11	METAL CHIP	47K	5%	1/16W
R441	1-216-845-11	METAL CHIP	100K	5%	1/16W
R442	1-216-845-11	METAL CHIP	100K	5%	1/16W
R443	1-216-295-91	SHORT	0		
R452	1-217-671-11	METAL CHIP	1	5%	1/10W
R453	1-217-671-11	METAL CHIP	1	5%	1/10W
R454	1-217-671-11	METAL CHIP	1	5%	1/10W
R455	1-216-833-11	METAL CHIP	10K	5%	1/16W
R456	1-216-833-11	METAL CHIP	10K	5%	1/16W
R457	1-216-833-11	METAL CHIP	10K	5%	1/16W
					(TR713E/TRV46E)
R458	1-216-808-11	METAL CHIP	82	5%	1/16W
R459	1-216-864-11	METAL CHIP	0	5%	1/16W
R460	1-216-864-11	METAL CHIP	0	5%	1/16W
R461	1-216-853-11	METAL CHIP	470K	5%	1/16W
R462	1-216-853-11	METAL CHIP	470K	5%	1/16W
R463	1-216-853-11	METAL CHIP	470K	5%	1/16W
R464	1-216-851-11	METAL CHIP	330K	5%	1/16W

Ref. No.	Part No.	Description			Remark
R465	1-216-845-11	METAL CHIP	100K	5%	1/16W
R466	1-216-841-11	METAL CHIP	47K	5%	1/16W
R467	1-216-833-11	METAL CHIP	10K	5%	1/16W
R468	1-216-833-11	METAL CHIP	10K	5%	1/16W
R469	1-216-841-11	METAL CHIP	47K	5%	1/16W
R470	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R471	1-216-833-11	METAL CHIP	10K	5%	1/16W
R472	1-216-837-11	METAL CHIP	22K	5%	1/16W
R473	1-216-841-11	METAL CHIP	47K	5%	1/16W
R474	1-216-817-11	METAL CHIP	470	5%	1/16W
R475	1-216-838-11	METAL CHIP	27K	5%	1/16W
R476	1-216-817-11	METAL CHIP	470	5%	1/16W
R477	1-216-864-11	METAL CHIP	0	5%	1/16W
R479	1-216-833-11	METAL CHIP	10K	5%	1/16W
R480	1-216-833-11	METAL CHIP	10K	5%	1/16W
R481	1-216-864-11	METAL CHIP	0	5%	1/16W
R482	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R483	1-216-836-11	METAL CHIP	18K	5%	1/16W
R484	1-217-671-11	METAL CHIP	1	5%	1/10W
R485	1-217-671-11	METAL CHIP	1	5%	1/10W
R486	1-216-845-11	METAL CHIP	100K	5%	1/16W
R487	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R488	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R490	1-216-023-00	METAL CHIP	82	5%	1/10W
R502	1-216-798-11	RES,CHIP	12	5%	1/16W
R503	1-216-798-11	RES,CHIP	12	5%	1/16W
R504	1-216-845-11	METAL CHIP	100K	5%	1/16W
R506	1-216-857-11	METAL CHIP	1M	5%	1/16W
R508	1-216-809-11	METAL CHIP	100	5%	1/16W
R509	1-216-864-11	METAL CHIP	0	5%	1/16W
R510	1-216-809-11	METAL CHIP	100	5%	1/16W
R511	1-216-809-11	METAL CHIP	100	5%	1/16W
R512	1-216-853-11	METAL CHIP	470K	5%	1/16W
R513	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R514	1-216-821-11	METAL CHIP	1K	5%	1/16W
R515	1-216-864-11	METAL CHIP	0	5%	1/16W
R522	1-216-864-11	METAL CHIP	0	5%	1/16W
R525	1-216-864-11	METAL CHIP	0	5%	1/16W
R526	1-216-864-11	METAL CHIP	0	5%	1/16W
R529	1-216-864-11	METAL CHIP	0	5%	1/16W
R533	1-216-864-11	METAL CHIP	0	5%	1/16W
R534	1-216-864-11	METAL CHIP	0	5%	1/16W
R535	1-216-864-11	METAL CHIP	0	5%	1/16W
R536	1-216-864-11	METAL CHIP	0	5%	1/16W
R537	1-216-296-91	SHORT	0		
R551	1-216-841-11	METAL CHIP	47K	5%	1/16W
R554	1-216-843-11	METAL CHIP	68K	5%	1/16W
R555	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R556	1-216-001-00	METAL CHIP	10	5%	1/10W
R557	1-216-843-11	METAL CHIP	68K	5%	1/16W
R558	1-216-295-91	SHORT	0		
R560	1-216-821-11	METAL CHIP	1K	5%	1/16W
R561	1-216-853-11	METAL CHIP	470K	5%	1/16W
R562	1-216-849-11	METAL CHIP	220K	5%	1/16W
R563	1-216-853-11	METAL CHIP	470K	5%	1/16W
R564	1-216-853-11	METAL CHIP	470K	5%	1/16W
R565	1-216-833-11	METAL CHIP	10K	5%	1/16W
R566	1-216-835-11	METAL CHIP	15K	5%	1/16W
R567	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R569	1-216-825-11	METAL CHIP	2.2K	5%	1/16W

Ref. No.	Part No.	Description			Remark
R570	1-216-841-11	METAL CHIP	47K	5%	1/16W
R571	1-216-837-11	METAL CHIP	22K	5%	1/16W
R572	1-216-845-11	METAL CHIP	100K	5%	1/16W
R573	1-216-815-11	METAL CHIP	330	5%	1/16W
R574	1-216-821-11	METAL CHIP	1K	5%	1/16W
R575	1-216-821-11	METAL CHIP	1K	5%	1/16W
R576	1-216-821-11	METAL CHIP	1K	5%	1/16W
R577	1-216-833-11	METAL CHIP	10K	5%	1/16W
R579	1-216-821-11	METAL CHIP	1K	5%	1/16W
R582	1-216-864-11	METAL CHIP	0	5%	1/16W
R583	1-216-295-91	SHORT	0		
R584	1-216-295-91	SHORT	0		
R603	1-216-845-11	METAL CHIP	100K	5%	1/16W
R604	1-216-813-11	METAL CHIP	220	5%	1/16W
R605	1-216-841-11	METAL CHIP	47K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R606	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
					(TR713E/TRV46E)
R608	1-216-845-11	METAL CHIP	100K	5%	1/16W
R610	1-216-821-11	METAL CHIP	1K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R611	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
					(TR713E/TRV46E)
R612	1-216-853-11	METAL CHIP	470K	5%	1/16W
R613	1-216-821-11	METAL CHIP	1K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)			
R614	1-216-821-11	METAL CHIP	1K	5%	1/16W
					(TR713E/TRV46E)
R618	1-216-853-11	METAL CHIP	470K	5%	1/16W
R619	1-216-853-11	METAL CHIP	470K	5%	1/16W
R620	1-216-853-11	METAL CHIP	470K	5%	1/16W
R621	1-216-853-11	METAL CHIP	470K	5%	1/16W
R622	1-216-853-11	METAL CHIP	470K	5%	1/16W
R624	1-216-853-11	METAL CHIP	470K	5%	1/16W
R625	1-216-845-11	METAL CHIP	100K	5%	1/16W
R627	1-216-853-11	METAL CHIP	470K	5%	1/16W
R628	1-216-841-11	METAL CHIP	47K	5%	1/16W
R629	1-216-833-11	METAL CHIP	10K	5%	1/16W
R630	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R631	1-216-845-11	METAL CHIP	100K	5%	1/16W
R632	1-216-857-11	METAL CHIP	1M	5%	1/16W
R633	1-216-853-11	METAL CHIP	470K	5%	1/16W
R634	1-216-853-11	METAL CHIP	470K	5%	1/16W
R635	1-216-857-11	METAL CHIP	1M	5%	1/16W
R636	1-216-857-11	METAL CHIP	1M	5%	1/16W
R637	1-216-845-11	METAL CHIP	100K	5%	1/16W
R638	1-216-845-11	METAL CHIP	100K	5%	1/16W
R639	1-216-845-11	METAL CHIP	100K	5%	1/16W
R640	1-216-845-11	METAL CHIP	100K	5%	1/16W
R641	1-216-845-11	METAL CHIP	100K	5%	1/16W
R642	1-216-821-11	METAL CHIP	1K	5%	1/16W
R643	1-216-857-11	METAL CHIP	1M	5%	1/16W
R644	1-216-841-11	METAL CHIP	47K	5%	1/16W
R645	1-216-845-11	METAL CHIP	100K	5%	1/16W
R646	1-216-853-11	METAL CHIP	470K	5%	1/16W
R647	1-216-853-11	METAL CHIP	470K	5%	1/16W
R648	1-216-853-11	METAL CHIP	470K	5%	1/16W
R649	1-216-857-11	METAL CHIP	1M	5%	1/16W
R650	1-219-570-11	RES,CHIP	10M	5%	1/16W
R651	1-216-845-11	METAL CHIP	100K	5%	1/16W
R652	1-216-853-11	METAL CHIP	470K	5%	1/16W

Ref. No.	Part No.	Description			Remark
R653	1-216-853-11	METAL CHIP	470K	5%	1/16W
R654	1-216-817-11	METAL CHIP	470	5%	1/16W
R655	1-216-853-11	METAL CHIP	470K	5%	1/16W
R666	1-216-821-11	METAL CHIP	1K	5%	1/16W
R667	1-216-821-11	METAL CHIP	1K	5%	1/16W
R668	1-216-821-11	METAL CHIP	1K	5%	1/16W
R669	1-216-821-11	METAL CHIP	1K	5%	1/16W
R670	1-216-821-11	METAL CHIP	1K	5%	1/16W
R671	1-216-821-11	METAL CHIP	1K	5%	1/16W
R672	1-216-821-11	METAL CHIP	1K	5%	1/16W
R673	1-216-821-11	METAL CHIP	1K	5%	1/16W
R675	1-216-821-11	METAL CHIP	1K	5%	1/16W
R676	1-216-821-11	METAL CHIP	1K	5%	1/16W
R677	1-216-821-11	METAL CHIP	1K	5%	1/16W
R678	1-216-821-11	METAL CHIP	1K	5%	1/16W
R679	1-216-821-11	METAL CHIP	1K	5%	1/16W
R680	1-216-845-11	METAL CHIP	100K	5%	1/16W
R681	1-216-821-11	METAL CHIP	1K	5%	1/16W
R682	1-216-821-11	METAL CHIP	1K	5%	1/16W
R683	1-216-821-11	METAL CHIP	1K	5%	1/16W
R684	1-216-821-11	METAL CHIP	1K	5%	1/16W
R685	1-216-821-11	METAL CHIP	1K	5%	1/16W
R686	1-216-821-11	METAL CHIP	1K	5%	1/16W
R687	1-216-821-11	METAL CHIP	1K	5%	1/16W
R689	1-216-864-11	METAL CHIP	0	5%	1/16W
R691	1-216-845-11	METAL CHIP	100K	5%	1/16W
R692	1-216-853-11	METAL CHIP	470K	5%	1/16W
R693	1-216-821-11	METAL CHIP	1K	5%	1/16W
R695	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
		(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)			
R697	1-216-854-11	METAL CHIP	560K	5%	1/16W
R726	1-216-864-11	METAL CHIP	0	5%	1/16W
R752	1-216-841-11	METAL CHIP	47K	5%	1/16W
					(TR713E/TRV46E)
R753	1-216-841-11	METAL CHIP	47K	5%	1/16W
					(TR713E/TRV46E)
R755	1-216-837-11	METAL CHIP	22K	5%	1/16W
					(TR713E/TRV46E)
R756	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
					(TR713E/TRV46E)
R757	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
					(TR713E/TRV46E)
R758	1-216-833-11	METAL CHIP	10K	5%	1/16W
					(TR713E/TRV46E)
R759	1-216-833-11	METAL CHIP	10K	5%	1/16W
					(TR713E/TRV46E)
R760	1-216-835-11	METAL CHIP	15K	5%	1/16W
					(TR713E/TRV46E)
R761	1-216-857-11	METAL CHIP	1M	5%	1/16W
					(TR713E/TRV46E)
R763	1-218-879-11	RES,CHIP	22K	0.50%	1/16W
					(TR713E/TRV46E)
R764	1-216-815-11	METAL CHIP	330	5%	1/16W
					(TR713E/TRV46E)
R765	1-216-821-11	METAL CHIP	1K	5%	1/16W
					(TR713E/TRV46E)
R766	1-216-821-11	METAL CHIP	1K	5%	1/16W
					(TR713E/TRV46E)
R767	1-216-817-11	METAL CHIP	470	5%	1/16W
					(TR713E/TRV46E)
R768	1-216-847-11	METAL CHIP	150K	5%	1/16W
					(TR713E/TRV46E)
R770	1-216-847-11	METAL CHIP	150K	5%	1/16W
					(TR713E/TRV46E)
R771	1-216-818-11	METAL CHIP	560	5%	1/16W
					(TR713E/TRV46E)
R772	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
					(TR713E/TRV46E)
R773	1-216-817-11	METAL CHIP	470	5%	1/16W
					(TR713E/TRV46E)
R774	1-216-840-11	METAL CHIP	39K	5%	1/16W
					(TR713E/TRV46E)
R775	1-216-864-11	METAL CHIP	0	5%	1/16W
		(TR315E/TR415E/TR425E/TR515E/TR516E/TRV16E/TRV26E/TRV27E/			
					TRV27EP/TRV36E)
R916	1-216-864-11	METAL CHIP	0	5%	1/16W
					(TR516E)
R916	1-216-864-11	METAL CHIP	0	5%	1/16W
		(TR315E/TR415E/TR425E/TR515E/TR516E/TR713E)			
R917	1-216-833-11	METAL CHIP	10K	5%	1/16W
		(TR315E/TR415E/TR425E/TR515E/TR516E)			
R917	1-216-837-11	METAL CHIP	22K	5%	1/16W
					(TR713E/TRV36E)
R917	1-216-841-11	METAL CHIP	47K	5%	1/16W
		(TRV16E/TRV26E/TRV27E/TRV27EP/TRV46E)			
R918	1-216-845-11	METAL CHIP	100K	5%	1/16W
R919	1-216-841-11	METAL CHIP	47K	5%	1/16W
		(TR713E/TRV16E/TRV26E/TRV27E/TRV27EP)			
R919	1-216-842-11	METAL CHIP	56K	5%	1/16W
					(TRV36E/TRV46E)
R919	1-216-845-11	METAL CHIP	100K	5%	1/16W
		(TR315E/TR415E/TR425E/TR515E/TR516E)			
R920	1-216-833-11	METAL CHIP	10K	5%	1/16W
					(TR516E)
R920	1-216-837-11	RES,CHIP	22K	5%	1/16W
					(TR515E)
R920	1-216-841-11	METAL CHIP	47K	5%	1/16W
					(TR315E/TR415E/TR425E)
R920	1-216-843-11	METAL CHIP	68K	5%	1/16W
					(TRV36E/TRV46E)
R920	1-216-845-11	METAL CHIP	100K	5%	1/16W
		(TR713E/TRV16E/TRV26E/TRV27E/TRV27EP)			
R921	1-216-800-11	RES,CHIP	18	5%	1/16W
					(TR515E/TR713E/TRV36E/TRV46E)
R922	1-217-671-11	METAL CHIP	1	5%	1/10W
R923	1-217-671-11	METAL CHIP	1	5%	1/10W
R924	1-216-821-11	METAL CHIP	1K	5%	1/16W
R925	1-216-821-11	METAL CHIP	1K	5%	1/16W
R928	1-216-821-11	METAL CHIP	1K	5%	1/16W
R929	1-216-864-11	METAL CHIP	0	5%	1/16W

< TRANSFORMER >

T902	1-431-915-11	TRANSFORMER ASSY, FLYBACK (M)
		(TR515E/TR713E/TRV36E/TRV46E:A1,A2,E,U,E1,H,A,E2)

< VIBRATOR >

X401	1-760-655-41	VIBRATOR, CRYSTAL (20MHz)
X501	1-760-321-11	VIBRATOR, CRYSTAL (28.375MHz)
X601	1-760-458-21	VIBRATOR, CERAMIC (20MHz)
X602	1-760-458-21	VIBRATOR, CRYSTAL (32.768kHz)

Ref. No.	Part No.	Description			Remark
	A-7066-774-A	VF-99 BOARD, COMPLETE			
		**********			
	(TR315E/TR415E/TR425E/TR515E/TR713E/TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E)				
		(Ref. No. 10,000 Series)			
		< CAPACITOR >			
C901	1-107-854-11	TANTAL. CHIP	68uF	20%	6.3V
C902	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C903	1-135-145-11	TANTALUM CHIP	0.47uF	10%	35V
C904	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C905	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
C906	1-162-638-11	CERAMIC CHIP	1uF		16V
C907	1-104-563-11	FILM CHIP	0.1uF	5%	16V
C908	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C909	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
⚠C910	1-163-017-91	CERAMIC CHIP	0.0047uF	5%	50V (TYPE 3)
⚠C910	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V (TYPE 2)
⚠C911	1-163-019-00	CERAMIC CHIP	0.0068uF	10%	50V
C912	1-107-854-11	TANTAL. CHIP	68uF	20%	6.3V
C913	1-135-145-11	TANTALUM CHIP	0.47uF	10%	35V
C914	1-113-984-11	TANTAL. CHIP	1.5uF	20%	35V
C915	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C916	1-164-611-11	CERAMIC CHIP	0.001uF	10%	500V
		< CONNECTOR >			
CN901	1-573-506-41	CONNECTOR, FPC (NON ZIF) 4P			
* CN902	1-580-057-11	PIN, CONNECTOR 4P			
		< DIODE >			
D901	8-719-951-21	DIODE PR1102W-TR			
D903	8-719-404-50	DIODE MA111-TX			
D905	8-719-073-03	DIODE MA8082-TX			
		< IC >			
IC901	8-759-196-14	IC BA7149F-E2			
		< COIL >			
L901	1-412-031-11	INDUCTOR CHIP 47uH			
L902	1-410-387-11	INDUCTOR CHIP 33uH			
⚠L903	1-411-759-11	COIL, FERRITE (HLC)(K)(TYPE 2)			
⚠L903	1-411-697-11	COIL, FERRITE (HLC)(TYPE 3)			
		< TRANSISTOR >			
Q901	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX			
Q902	8-729-106-68	TRANSISTOR 2SD1615-T1GLGK			
Q903	8-729-216-31	TRANSISTOR 2SA1163G-TE85L			
Q904	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX			
		< RESISTOR >			
R901	1-216-817-11	METAL CHIP	470	5%	1/16W
R902	1-216-817-11	METAL CHIP	470	5%	1/16W
R903	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R904	1-216-833-11	METAL CHIP	10K	5%	1/16W
R905	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R906	1-216-813-11	METAL CHIP	220	5%	1/16W (TYPE 3)
R906	1-216-823-11	METAL CHIP	1.5K	5%	1/16W (TYPE 2)
R907	1-216-845-11	METAL CHIP	100K	5%	1/16W
R908	1-216-852-11	METAL CHIP	390K	5%	1/16W
R909	1-216-833-11	METAL CHIP	10K	5%	1/16W
R910	1-216-835-11	METAL CHIP	15K	5%	1/16W
R911	1-216-160-00	RES,CHIP	27	5%	1/8W
R912	1-216-857-11	METAL CHIP	1M	5%	1/16W
R916	1-218-881-11	RES,CHIP	27K	0.50%	1/16W
R917	1-218-893-11	RES,CHIP	82K	0.50%	1/16W
R918	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R919	1-216-843-11	METAL CHIP	68K	5%	1/16W
R920	1-216-837-11	METAL CHIP	22K	5%	1/16W
R921	1-216-795-11	RES,CHIP	6.8	5%	1/16W (TYPE 3)
R921	1-216-800-11	RES,CHIP	18	5%	1/16W (TYPE 2)
R922	1-216-847-11	METAL CHIP	150K	5%	1/16W
R923	1-216-857-11	METAL CHIP	1M	5%	1/16W
R924	1-216-862-11	RES,CHIP	2.7M	5%	1/16W
R925	1-216-862-11	RES,CHIP	2.7M	5%	1/16W
R926	1-216-821-11	METAL CHIP	1K	5%	1/16W
R927	1-216-821-11	METAL CHIP	1K	5%	1/16W
R928	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R929	1-216-818-11	METAL CHIP	560	5%	1/16W
R930	1-216-791-11	METAL CHIP	3.3	5%	1/16W
R931	1-217-671-11	METAL CHIP	1	5%	1/10W
R932	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
		< VARIABLE RESISTOR >			
RV903	1-238-852-11	RES, ADJ, CERMET 470			
RV904	1-238-862-11	RES, ADJ, CERMET 1M			
		< TRANSFORMER >			
⚠T901	1-453-124-11	TRANSFORMER ASSY, FLYBACK (TYPE 3)			
⚠T902	1-431-915-11	TRANSFORMER ASSY, FLYBACK (M) (TYPE 2)			
		< FLEXIBLE BOARD >			
⚠W901	1-540-019-42	SOCKET ASSY, CRT			

	A-7073-437-A	VF-119 BOARD, COMPLETE (TR516E)			
		**********			
		(Ref. No. 10,000 Series)			
		< CAPACITOR >			
C5401	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C5402	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5403	1-135-179-21	TANTAL. CHIP	2.2uF	20%	16V
C5404	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5405	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5406	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5407	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C5408	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C5409	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C5410	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5411	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C5413	1-107-686-11	TANTAL. CHIP	4.7uF	20%	16V
C5414	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5415	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C5416	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description			Remark
C5417	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5418	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C5419	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C5420	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C5421	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C5422	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C5423	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5424	1-165-112-11	CERAMIC CHIP	0.33uF		16V
C5427	1-165-112-11	CERAMIC CHIP	0.33uF		16V
C5429	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
		< CONNECTOR >			
CN5401	1-766-350-21	CONNECTOR, FFC/FPC 20P			
CN5402	1-691-380-21	CONNECTOR, FFC/FPC 16P			
		< DIODE >			
D5401	8-713-102-80	DIODE 1T369-01-T8A			
D5402	8-719-062-16	DIODE 01ZA8.2(TPL3)			
		< FERRITE BEAD >			
FB5405	1-500-238-22	FERRITE 0UH			
		< IC >			
IC5401	8-759-546-65	IC CXA8115AR-T4			
IC5402	8-759-364-05	IC M62376GP-65AD			
IC5404	8-752-392-33	IC CXD2458R-T4			
		< COIL >			
L5401	1-414-754-11	INDUCTOR	10uH		
L5402	1-414-754-11	INDUCTOR	10uH		
L5403	1-412-959-11	INDUCTOR	47uH		
L5404	1-412-949-21	INDUCTOR	6.8uH		
		< RESISTOR >			
R5401	1-216-864-11	METAL CHIP	0	5%	1/16W
R5403	1-216-864-11	METAL CHIP	0	5%	1/16W
R5405	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5408	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5409	1-216-839-11	METAL CHIP	33K	5%	1/16W
R5415	1-216-864-11	METAL CHIP	0	5%	1/16W
R5416	1-216-864-11	METAL CHIP	0	5%	1/16W
R5417	1-216-864-11	METAL CHIP	0	5%	1/16W
R5420	1-216-843-11	METAL CHIP	68K	5%	1/16W
R5421	1-216-839-11	METAL CHIP	33K	5%	1/16W
R5422	1-216-840-11	METAL CHIP	39K	5%	1/16W
R5423	1-216-853-11	METAL CHIP	470K	5%	1/16W
R5424	1-216-840-11	METAL CHIP	39K	5%	1/16W
R5425	1-216-843-11	METAL CHIP	68K	5%	1/16W
R5426	1-216-839-11	METAL CHIP	33K	5%	1/16W
R5427	1-216-840-11	METAL CHIP	39K	5%	1/16W
R5428	1-216-839-11	METAL CHIP	33K	5%	1/16W
R5429	1-216-864-11	METAL CHIP	0	5%	1/16W
R5431	1-216-809-11	METAL CHIP	100	5%	1/16W
R5432	1-216-809-11	METAL CHIP	100	5%	1/16W
R5435	1-216-809-11	METAL CHIP	100	5%	1/16W
R5437	1-216-864-11	METAL CHIP	0	5%	1/16W
R5439	1-216-864-11	METAL CHIP	0	5%	1/16W
R5440	1-218-905-11	RES,CHIP	270K	0.50%	1/16W
R5441	1-218-875-11	RES,CHIP	15K	0.50%	1/16W
R5444	1-216-840-11	METAL CHIP	39K	5%	1/16W
R5446	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5447	1-216-833-11	METAL CHIP	10K	5%	1/16W
R5448	1-216-839-11	METAL CHIP	33K	5%	1/16W
R5449	1-216-864-11	METAL CHIP	0	5%	1/16W
R5452	1-216-821-11	METAL CHIP	1K	5%	1/16W
R5458	1-216-864-11	METAL CHIP	0	5%	1/16W
R5460	1-216-864-11	METAL CHIP	0	5%	1/16W
R5473	1-216-864-11	METAL CHIP	0	5%	1/16W
R5476	1-216-864-11	METAL CHIP	0	5%	1/16W

A-7073-438-A VF-120 BOARD, COMPLETE (TR516E)
****
(Ref. No. 10,000 Series)

Ref. No.	Part No.	Description			Remark
		< CAPACITOR >			
C5302	1-104-916-11	TANTAL. CHIP	6.8uF	20%	20V
C5303	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C5304	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5305	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C5306	1-164-676-11	CERAMIC CHIP	2200PF	5%	16V
C5307	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C5308	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C5309	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5310	1-164-217-11	CERAMIC CHIP	150PF	5%	50V
C5311	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5312	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C5313	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C5314	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
		< CONNECTOR >			
CN5301	1-691-346-11	CONNECTOR, FFC/FPC (ZIF) 8P			
CN5302	1-691-513-11	CONNECTOR, BOARD TO BOARD 12P			
		< DIODE >			
D5301	8-719-043-70	DIODE MA6S121-(TX)			
D5302	8-719-056-49	DIODE 1SS370(TE85L)			
		< IC >			
IC5301	8-759-097-75	IC MB3789PFV-G-BND-ER			
		< COIL >			
L5301	1-412-031-11	INDUCTOR CHIP 47uH			
		< TRANSISTOR >			
Q5301	8-729-028-81	TRANSISTOR RN2305-TE85L			
Q5304	8-729-403-35	TRANSISTOR UN5113-TX			
Q5305	8-729-402-42	TRANSISTOR UN5213-TX			
		< RESISTOR >			
R5301	1-216-809-11	METAL CHIP	100	5%	1/16W
R5304	1-218-901-11	RES,CHIP	180K	0.50%	1/16W
R5305	1-218-887-11	RES,CHIP	47K	0.50%	1/16W
R5306	1-216-843-11	METAL CHIP	68K	5%	1/16W
R5307	1-216-838-11	METAL CHIP	27K	5%	1/16W
R5308	1-216-847-11	METAL CHIP	150K	5%	1/16W
R5309	1-216-841-11	METAL CHIP	47K	5%	1/16W
R5310	1-216-842-11	METAL CHIP	56K	5%	1/16W
R5311	1-216-850-11	METAL CHIP	270K	5%	1/16W
R5312	1-216-843-11	METAL CHIP	68K	5%	1/16W

Ref. No.	Part No.	Description			Remark
R5313	1-216-842-11	METAL CHIP	56K	5%	1/16W
R5314	1-216-850-11	METAL CHIP	270K	5%	1/16W
R5315	1-216-833-11	METAL CHIP	10K	5%	1/16W
R5316	1-216-851-11	METAL CHIP	330K	5%	1/16W
R5317	1-216-848-11	METAL CHIP	180K	5%	1/16W
R5318	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R5321	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5322	1-216-853-11	METAL CHIP	470K	5%	1/16W
R5324	1-216-864-11	METAL CHIP	0	5%	1/16W

	A-7073-787-A	VL-21 BOARD, COMPLETE ********** (TR515E/TR516E/TR713E) (Ref. No. 2,000 Series)
	A-7073-808-A	VL-22 BOARD, COMPLETE (TRV36E/TRV46E) ********** (Ref. No. 3,000 Series)
		< CAPACITOR >
C151	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V (TR515E/TR516E/TR713E/TRV36E/TRV46E)
C153	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (TR515E/TR516E/TR713E/TRV36E/TRV46E)
		< CONNECTOR >
CN151	1-764-703-11	CONNECTOR, FFC/FPC (LIF) 4P (TR515E/TR516E/TR713E/TRV36E/TRV46E)
		< COIL >
L151	1-416-344-11	INDUCTOR 10uH (TR515E/TR516E/TR713E/TRV36E/TRV46E)
		< TRANSISTOR >
Q151	8-729-043-94	TRANSISTOR CPH3106-PM-TL (TR515E/TR516E/TR713E/TRV36E/TRV46E)
Q152	8-729-028-26	TRANSISTOR 2SK1829(TE85L) (TR515E/TR516E/TR713E/TRV36E/TRV46E)
		< RESISTOR >
R151	1-216-864-11	METAL CHIP 0 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)
R152	1-216-813-11	METAL CHIP 220 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)
R153	1-216-821-11	METAL CHIP 1K 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)
R154	1-216-845-11	METAL CHIP 100K 5% 1/16W (TR515E/TR516E/TR713E/TRV36E/TRV46E)

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS **********	
67	1-475-619-11	SWITCH BLOCK, CONTROL (SS-8500)	
73	1-418-215-21	SWITCH BLOCK, CONTROL (FK-8500) (TR415E/TR425E/TR515E/TRV26E/TRV27E/TRV27EP/TRV36E)	
73	1-418-215-61	SWITCH BLOCK, CONTROL (FK-8500) (TR713E/TRV46E:AEP,UK,EE,NE,RU)	
73	1-475-617-11	SWITCH BLOCK, CONTROL (FK-8500) (TR315E/TR516E/TRV16E)	
73	1-475-617-21	SWITCH BLOCK, CONTROL (FK-8500) (TRV46E:E,HK,AUS,CN,JE)	
151	1-475-620-11	SWITCH BLOCK, CONTROL (MF-8500)	
157	1-790-334-11	CABLE, FLEXIBLE FLAT (FFC-257F)	
209	1-668-957-11	FP-621 FLEXIBLE BOARD	
210	1-672-454-11	FP-58 FLEXIBLE BOARD (for Video light models)	
211	1-672-453-11	FP-56 FLEXIBLE BOARD	
212	1-668-956-11	FP-620 FLEXIBLE BOARD (TR713E & TRV series)	
254	1-672-455-11	FP-57 FLEXIBLE BOARD (for Color view finder models)	
308	1-783-241-11	CABLE, FLEXIBLE FLAT (FFC-235) (for B/W view finder models)	
358	1-668-963-21	FP-642 FLEXIBLE BOARD (for TRV series)	
359	1-959-271-11	HARNESS (PD-108) (for TRV series)	
401	8-848-722-01	DEVICE, LENS LSV-600A (SOC)	
409	1-758-133-21	FILTER BLOCK, OPTICAL	
412	1-668-959-11	FP-623 FLEXIBLE BOARD	
760	1-658-213-11	FP-355 FLEXIBLE BOARD	
762	1-657-786-13	FP-221 FLEXIBLE BOARD	
764	1-658-214-11	FP-356 FLEXIBLE BOARD	
803	1-657-785-11	FP-248 FLEXIBLE BOARD (DEW SENSOR)	
817	1-657-784-11	FP-220 FLEXIBLE BOARD	
D001	8-719-988-42	DIODE GL453	
IC401	A-7030-961-A	CCD BLOCK ASSY (207 SERVICE) (Except TR713E/TRV46E)	
IC401	A-7030-962-A	CCD BLOCK ASSY (243 SERVICE) (TR713E/TRV46E)	
J001	1-565-276-31	JACK, ULTRA SMALL 1P (LANC)	
J901	1-694-384-11	TERMINAL BOARD, BATTERY	
LCD901	1-803-355-21	MODULE, CRYSTAL INDICATION	
LCD902	8-753-023-37	LCX024AK-4/5 COMPLE (for Color view finder models)	
LCD903	A-7093-473-A	INDICATION LCD BLOCK ASSY	
M901	A-7048-875-A	DRUM ASSY (DGH-0E2A-R)	
M902	8-835-531-32	CAPSTAN ASSY	
M903	X-3945-401-1	MOTOR ASSY, DC (LOADING)	
M905	1-763-047-11	MOTOR, FOCUS STEPPING	
M906	1-763-046-11	MOTOR, ZOOM STEPPING	
MIC901	1-542-312-11	MICROPHONE	
⚠ND801	1-517-752-11	TUBE, FLUORESCENT, COLD CATHODE (for TRV series)	
⚠ND5351	1-517-325-21	LAMP, FLUORESCENT (0.55 INCH) (for Color view finder models)	
S001	1-692-614-11	SWITCH, PUSH (3 KEY) (Hi8 MP, ME/MP, REC PROOF)	
S002	1-572-688-11	SWITCH, PUSH (1 KEY)(C.C. LOCK)	
S003	1-572-688-11	SWITCH, PUSH (1 KEY) (EJECT)	
S901	1-762-436-15	SWITCH, ROTARY (ENCODER)	
SE451	1-803-041-11	SENSOR, ANGULAR VELOCITY (YAW) (TR713E/TRV46E)	
SE452	1-803-041-21	SENSOR, ANGULAR VELOCITY (PITCH) (TR713E/TRV46E)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
SP901	1-504-753-41	SPEAKER (2.8 CM) (for TRV series)	
⚠VL901	1-517-760-11	LIGHT, VIDEO (for Video light models)	
⚠V901	1-452-673-61	CRT ASSY (M01KXX90WB) (for B/W view finder models)	

ACCESSORIES
****

	1-467-574-21	REMOTE COMMANDER (RMT-708) (TR425E/TR515E/TR516E/TR713E/TRV27E/TRV27EP/TRV36E/TRV46E)	
⚠	1-475-599-11	ADAPTOR, AC (AC-L10)	
⚠	1-569-008-21	ADAPTOR, CONVERSION 2P (E,HK models only : TR315E/TR516E/TRV16E/TRV46E & TRV27EP)	
⚠	1-573-291-11	ADAPTOR, CONVERSION 21P (AEP,UK,EE,NE,RU models only : TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/TRV36E/TRV46E)	
⚠	1-573-865-11	ADAPTOR, CONVERSION 2P (JE model only : TR315E/TRV46E)	
	1-696-862-21	CORD, CONNECTION (A/V CONNECTING CABLE (Monaural) 1.5M)	
⚠	1-575-131-11	CORD, POWER (E model only : TR315E/TR516E/TRV16E/TRV27EP/TRV46E)	
⚠	1-690-827-11	CORD SET, POWER (AEP,EE,NE,RU models only : TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/TRV36E/TRV46E)	
⚠	1-696-819-11	CORD, POWER (AUS model only : TR315E/TR516E/TRV16E/TRV46E)	
⚠	1-775-843-21	CORD, POWER (with Filter) (UK models only : TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/TRV36E/TRV46E)	
⚠	1-782-476-11	CORD, POWER (CN model only : TR315E/TR516E/TRV16E/TRV46E)	
⚠	1-783-374-11	CORD, POWER (HK model only : TR315E/TR516E/TRV16E/TRV46E)	
	1-790-073-11	CORD, POWER 2P (JE model only : TR315E/TRV46E)	
	3-865-334-11	MANUAL, INSTRUCTION (English,Russian) (UK,EE,NE,RU models only : TR415E/TR425E/TR515E/TR713E)	
	3-865-334-21	MANUAL, INSTRUCTION (Spanish,Portuguese) (AEP model only : TR415E/TR425E/TR515E/TR713E)	
	3-865-334-31	MANUAL, INSTRUCTION (German,Italian) (AEP model only : TR415E/TR425E/TR515E/TR713E)	
	3-865-334-41	MANUAL, INSTRUCTION (French,Dutch) (AEP model only : TR415E/TR425E/TR515E/TR713E)	
	3-865-334-51	MANUAL, INSTRUCTION (Polish,Swedish) (E model only : TR415E/TR425E/TR515E/TR713E)	
	3-865-335-11	MANUAL, INSTRUCTION (English,Russian) (TR315E/TR516E)	
	3-865-335-21	MANUAL, INSTRUCTION (French,German) (TR315E : E,HK,CN,JE/TR516E)	
	3-865-335-31	MANUAL, INSTRUCTION (Arabic,Persia) (E,CN models only : TR315E/TR516E)	
	3-865-335-41	MANUAL, INSTRUCTION (Chinese) (HK model only : TR315E/TR516E)	
	3-865-335-51	MANUAL, INSTRUCTION (Chinese) (TR315E : E,CN,JE/TR516E)	
	3-865-336-11	MANUAL, INSTRUCTION (English,Russian) (UK,EE,NE,RU models only : TRV26E/TRV27E/TRV36E/TRV46E)	
	3-865-336-21	MANUAL, INSTRUCTION (Spanish,Portuguese) (AEP model only : TRV26E/TRV27E/TRV36E/TRV46E)	
	3-865-336-31	MANUAL, INSTRUCTION (German,Italian) (AEP model only : TRV26E/TRV27E/TRV36E/TRV46E)	
	3-865-336-41	MANUAL, INSTRUCTION (French,Dutch) (AEP model only : TRV26E/TRV27E/TRV36E/TRV46E)	
	3-865-336-51	MANUAL, INSTRUCTION (Polish,Swedish) (E model only : TRV26E/TRV27E/TRV36E/TRV46E)	
	3-865-337-11	MANUAL, INSTRUCTION (English,Russian) (TRV16E/TRV27EP/TRV46E:E,HK,AUS,CN,JE)	
	3-865-337-21	MANUAL, INSTRUCTION (French,German) (TRV16E:E,HK,CN/TRV27EP/TRV46E:E,HK,JE)	
	3-865-337-31	MANUAL, INSTRUCTION (Arabic,Persia) (TRV16E:E,CN/TRV27EP/TRV46E:E)	
	3-865-337-41	MANUAL, INSTRUCTION (Chinese) (HK model only : TRV16E/TRV46E)	
	3-865-337-51	MANUAL, INSTRUCTION (Chinese) (TRV16E:E,CN/TRV27EP/TRV46E:E,CN,JE)	
	3-987-015-01	BELT (S), SHOULDER	
	3-988-960-01	BAG (8500), CARRYING (TRV27EP)	
	A-7094-141-A	NP-F330 BATTERY PACK	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Take a copy CAMERA COLOR REPRODUCTION FRAME and Parts reference sheets with a clear sheet for use.

FOR CAMERA COLOR REPRODUCTION ADJUSTMENT

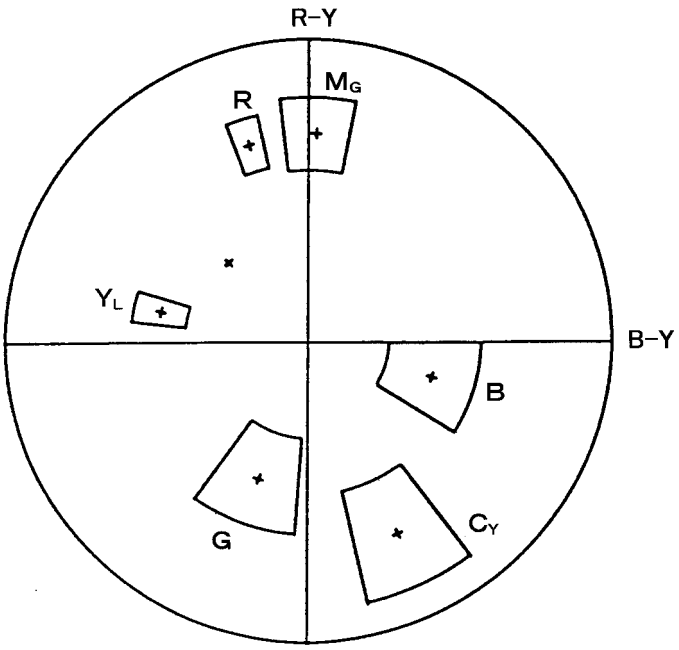

CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E

< PARTS REFERENCE SHEET >

You can find the parts position of mount locations applying to boards of a set.

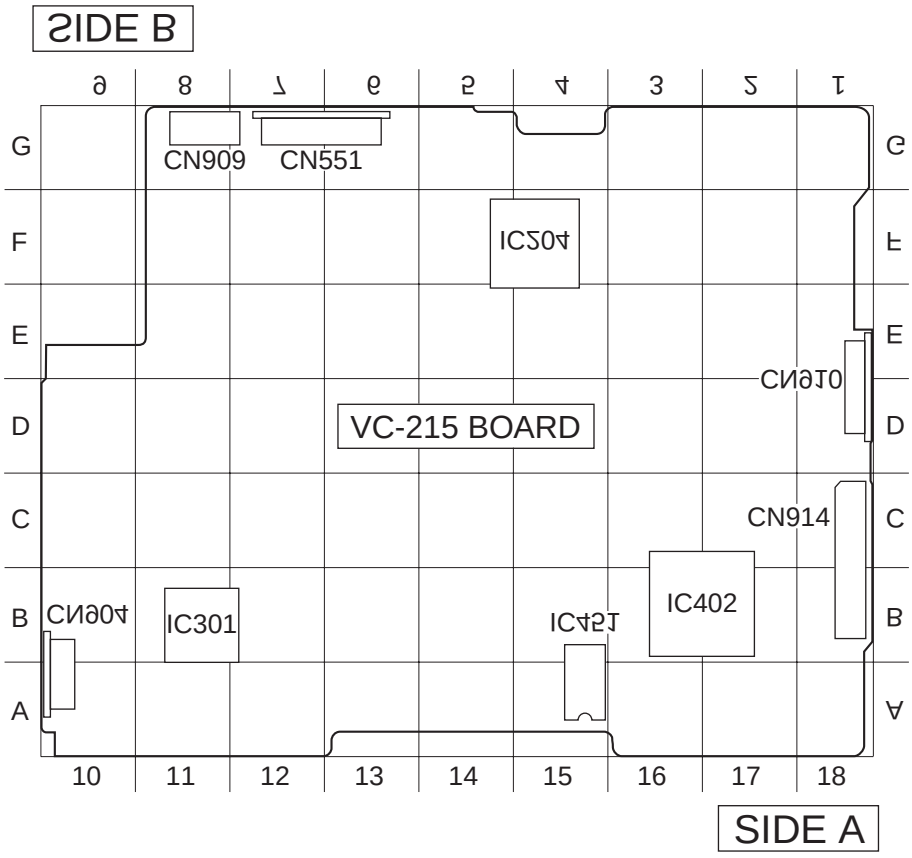

CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E

CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E
CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E

9-974-129-11

Sony Corporation
Personal A&V Products Company

99A0978-1
Printed in Japan © 1999. 1
Published by Quality Engineering Dept. (Shinagawa)